

# Service Manual

Portable Video Cassette Recorder

**Panasonic** **VHS**

## NV-100

Electronic Tuner/Timer Unit

## NV-V10

AC Adaptor

## NV-B11

Wired Remote Controller


## NV-A13

Wireless Remote Controller


## NV-A17




NV-V100

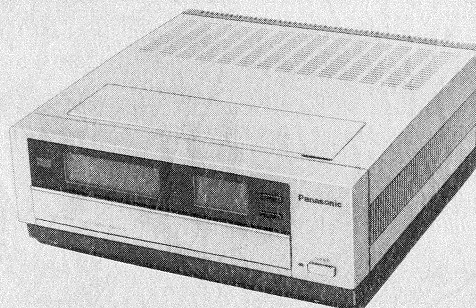

NV-V10

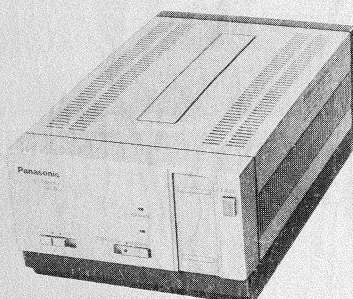

NV-B11

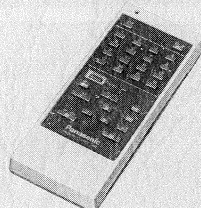

NV-A13



NV-A17

NV-100 Portable Deck

**Vol. 1**

*Summary  
Operating  
Instructions*

**Vol. 2**

*Mechanical Adjustment  
Procedures  
Electrical Adjustment  
Procedures*

**Vol. 3**

*Block Diagrams  
Schematic Diagrams*

**Vol. 4**

*Exploded Views  
Replacement Parts List*

**Vol. 5** NV-V10 Electronic Tuner/Timer Unit

**Vol. 6** NV-B11 AC Adaptor

**Vol. 7** NV-A13 Wired Remote Controller

**Vol. 8** NV-A17 Wireless Remote Controller

V 233.274.

**VHS**

**Panasonic**

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan

# Service Manual

Portable Video Cassette Recorder

**Vol. 1**
**Panasonic VHS**
**NV-100** <sup>-E</sup><sub>-B</sub><sub>-EG</sub>

## Summary Operating Instructions



### SPECIFICATIONS

Power Source: DC 12V  
Power Consumption: Approx. 6.7W at Play mode  
Video Recording

System: 2 rotary heads, helical scanning system  
Tape Speed: 23.39mm/s  
Tape Format: Tape width 12.7mm high density tape  
Record/Playback Time: 240 min. with NV-E240  
FF/REW Time: Less than 6.5 min. with NV-E180

#### VIDEO

Television System: CCIR: 625 lines, 50 fields PAL colour signal  
(PAL/D.D.R SECAM colour signal: NV-100EG only)  
Modulation System: Luminance: FM azimuth recording  
Colour signal: converted subcarrier phase shift recording  
Input Level: VIDEO IN (BNC): 1.0Vp-p, 75Ω unbalanced  
Output Level: VIDEO OUT (BNC): 1.0Vp-p, 75Ω unbalanced  
RF Modulated: UHF channel 36 (± 4), 75Ω unbalanced

#### AUDIO

Input Level: MIC IN (M3): -70dB, more than 600Ω unbalanced  
10 pin input, Multi input: -20dB, 2.2kΩ unbalanced  
Output Level: LINE OUT (RCA): -6dB, 600Ω unbalanced  
Earphone: -10dB, 200Ω unbalanced  
Audio Track: 1 track

#### Video Horizontal

Resolution: Colour: more than 240 lines  
Signal-to-Noise Ratio: Video: more than 40dB  
Audio: more than 43dB

#### Audio Frequency

Response: 80Hz—10kHz

#### Operating Room

Temperature: 0°C—40°C  
Operating Humidity: 35%—80%  
Weight: 3.8kg (with internal battery pack)  
Dimensions: 236(W) × 92(H) × 242(D)mm  
Standard Accessories: 1 pc. Video Cassette Tape

2 pcs. DIN-RF coaxial cable  
1 pc. Audio Input Attenuator  
1 pc. Earphone  
1 pc. Carrying Case

#### Optional Accessories: Video cassette tape:

NV-E240 Approx. 344m, 240 min.  
NV-E180 Approx. 258m, 180 min.  
NV-E120 Approx. 174m, 120 min.  
NV-E90 Approx. 130m, 90 min.  
NV-E60 Approx. 88m, 60 min.  
NV-E30 Approx. 45m, 30 min.

Battery Pack, LCS2012E  
Video Tuner/Timer Adaptor, NV-V10  
AC Adaptor, NV-B11  
Wireless Remote Controller, NV-A17  
Wired Remote Controller, NV-A13  
Car Battery Cord, NV-C12  
Video Camera  
Microphone

Weight and dimensions shown are approximate.  
Specifications are subject to change without notice.

**Panasonic**
**Matsushita Electric Trading Co., Ltd.**

P.O. Box 288, Central Osaka Japan



# INTRODUCTION

*This service manual contains technical information which will allows service technicians to understand and service the Panasonic portable PAL VHS Video Tape Recorder Model NV-100.*

*The NV-100 has many special features as shown below.*

*These features in addition to the basic PAL VHS Format make the unit an ideal one for your culture and entertainment.*

## CONTENTS

|                                      |            |
|--------------------------------------|------------|
| <b>SYSTEM FEATURES .....</b>         | <b>1-1</b> |
| <b>CONTROLS AND COMPONENTS .....</b> | <b>1-2</b> |
| <b>CAMERA RECORDING .....</b>        | <b>1-4</b> |
| <b>SYSTEM CONNECTIONS .....</b>      | <b>1-5</b> |

# SYSTEM FEATURES

## 1. Compact and light weight

This truly compact and lightweight Video Cassette Recorder is the result of such developments as simplified construction, the reduction in size of various mechanical parts, and the use of ICs (integrated circuitry).

## 2. Four hour recording

New system for high-density recording allows up to 4 hours of recording on a single NV-E240 tape.

## 3. Multi-motion playback

In addition to playback at normal speed, you can operate multi-motion playback as follows.

|               |                                                   |
|---------------|---------------------------------------------------|
| CUE/REVIEW    | forward and reverse at about 5 times normal speed |
| STILL-FRAME   | to view a single scene                            |
| FINE-SLOW     | for noiseless slow-motion                         |
| FRAME ADVANCE | to watch frame-by-frame playback                  |

## 4. Fine-editing function

The Recorder eliminates the editing problem common to ordinary VTRs. When the pause is used during recording, the tape will automatically rewind slightly to reduce this break to a minimum of interference.

## 5. Insert Recording

The Recorder enables you to substitute your desired picture for a previously recorded tape at any segment.

## 6. Three way power

The Recorder can be operated with a Battery Pack, the Tuner unit, the AC Adaptor or a car battery.

**When the unit is used together with an optional tuner (NV-V10).**

## 7. Watch one channel while recording another

The tuner allows the recording of a programme that you don't want to miss while watching another programme.

## 8. Unattended recording

The Programmable Tuner/Timer enables you to preset the Portable Video Cassette Recorder to record a TV programmes while you are away up to 4 programmes within a period of 14 days.

## 9. One-Touch Timer Recording

The Tuner enables you to do impromptu timer recordings at any time. Just select the channel and push the One Touch Record Button for 30, 60, 90 or 120 minutes of recording.


## 10. Optional Remote Controller

Operations may be performed from a distance with the Wired, Wireless Remote Controller.




# CONTROLS AND COMPONENTS

## TOP and FRONT

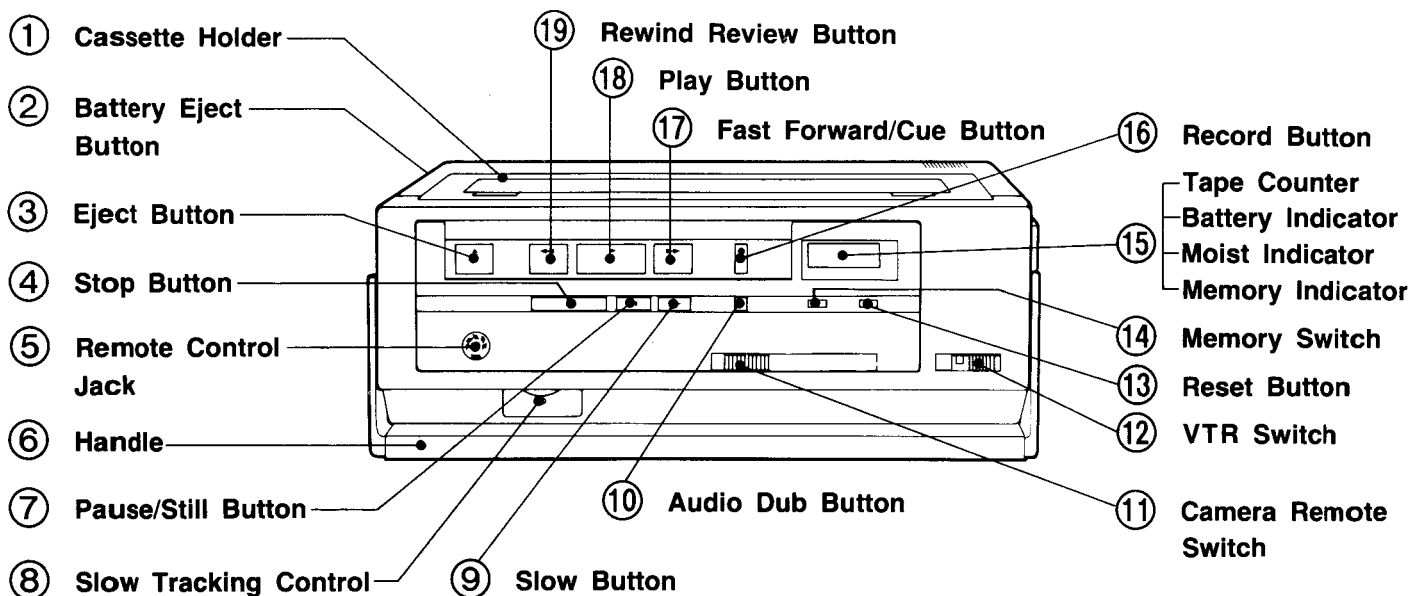

## SIDE VIEW

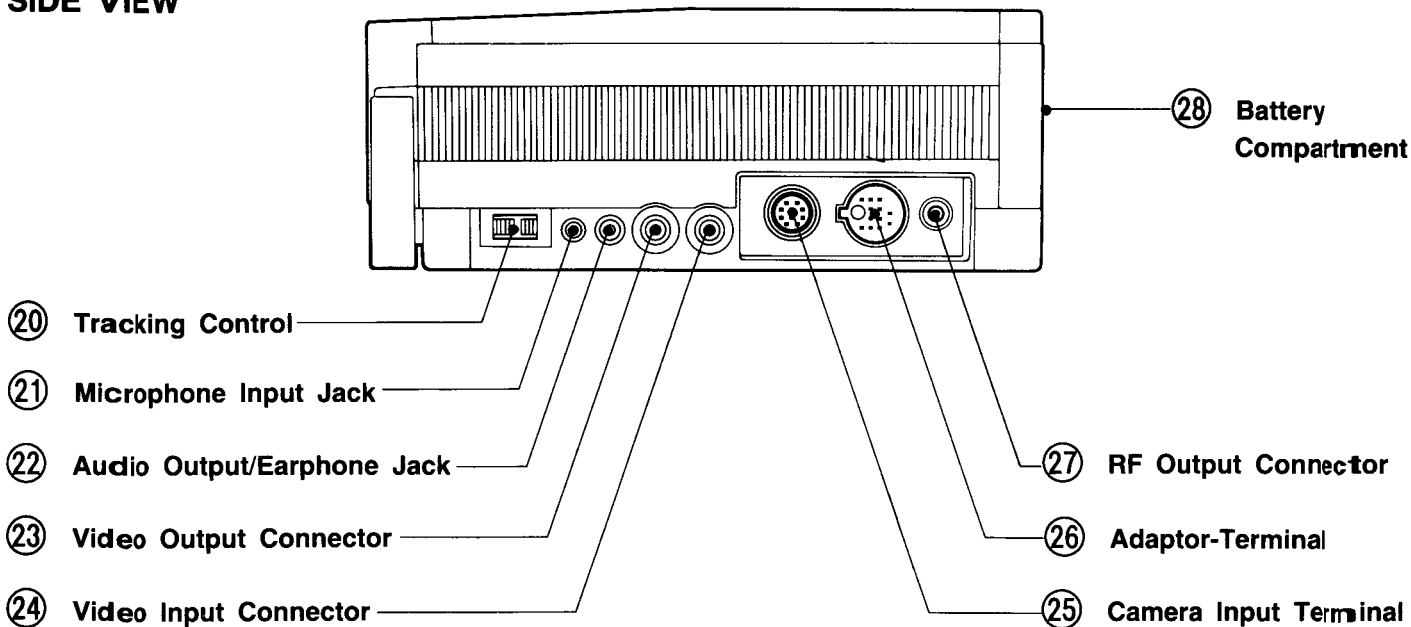

## TOP and FRONT

- ① **Cassette Holder**
- ② **Battery Eject Button**  
To remove the Battery, press this button.
- ③ **Eject Button**  
Press this button to insert or to remove cassette. It is not possible to eject the cassette while the tape is moving or while power is off.
- ④ **Stop Button**  
Press this button to stop the tape.
- ⑤ **Remote Control Jack**  
For connecting the Wired Remote Control unit.
- ⑥ **Handle**

⑦ **Pause/Still Button**

Press this button to temporarily stop the tape movement in either the recording or playback mode. During playback, a still-frame picture is produced when the pause is in use. Press again to release pause.

⑧ **Slow Tracking Control**

This is used when noise appears on the picture during slow, still picture or frame-by-frame playback operations.

⑨ **Slow Button**

Press this button for slow-motion playback of tapes recorded.

⑩ **Audio Dub Button**

When this button is pressed simultaneously with the Play Button during playback, sound from another source can be recorded on the tape in place of the original sound. (The original sound will be erased.)

⑪ **Camera Remote Switch**

When camera recording, this switch must be set to REMOTE. Set it to NORMAL at other times.

⑫ **VTR Switch**

This switch is used to turn the VTR deck on and off.

⑬ **Reset Button**

Pressing this button causes the Tape Counter to return to "0000".

⑭ **Memory Switch**

When this switch is in the "ON" position, the tape will stop when the Tape Counter reaches "0000" during fast forward and rewind.

⑮ **Tape Counter**

By beginning the recording at "0000" subsequent playback will be more convenient.

**Battery Indicator**

This indicates the remaining battery charge.

**Moist Indicator**

If condensation occurs in the VTR, the Moist Indicator will flash on and off to 3 seconds when the VTR is turned on and the VTR will be turned off automatically. In this case, wait until the lamp no longer flashes when the Power Switch is turned on again.

**Memory Indicator**

"M" is indicated when the Memory Switch is ON.

⑯ **Record Button**

Recording is started by pressing this button and the Play Button at the same time.

⑰ **Fast Forward/Cue Button**

Press this button to move the tape forward rapidly. During the play mode pressing this button will allow you to view the tape in the forward direction at about 5 times the recorded tape speed.

⑱ **Play Button**

Press this button to play back recorded tapes.

⑲ **Rewind/Review Button**

Press this button to rewind tapes. During the play mode pressing this button will allow you to view the tape in reverse at about 5 times the recorded tape speed.

## SIDE VIEW

⑳ **Tracking Control**

Use this control during playback if the image is partially obscured by bands of noise.



Noisy Picture

㉑ **Microphone Input Jack**

For connecting an Audio Input Attenuator (included). This is useful for recording and audio dubbing.

㉒ **Audio Output/Earphone Jack**

For connection to a monitor TV, another VTR, audio tape recorder or earphone.

㉓ **Video Output Connector**

For connection to a monitor TV or another VTR.

㉔ **Video Input Connector**

For connection from another VTR.

㉕ **Camera Input Terminal**

For connection of a portable video camera (optional).

㉖ **Adaptor-Terminal**

This can be used to connect the Recorder to the Tuner, the AC Adaptor or the Car Battery Cord with a single connection.

㉗ **RF Output Connector**

For connection to a TV. This connector is the signal output connector from the RF Converter.

㉘ **Battery Compartment**


Place for LCS-2012E battery fits.

# CAMERA RECORDING

The Recorder may be used with an optional Panasonic video camera, and will also work with most other video cameras with a 10-pin camera cable.

**First** The Camera Remote Switch must be set to ON.

## Indoor Camera Recording Connection

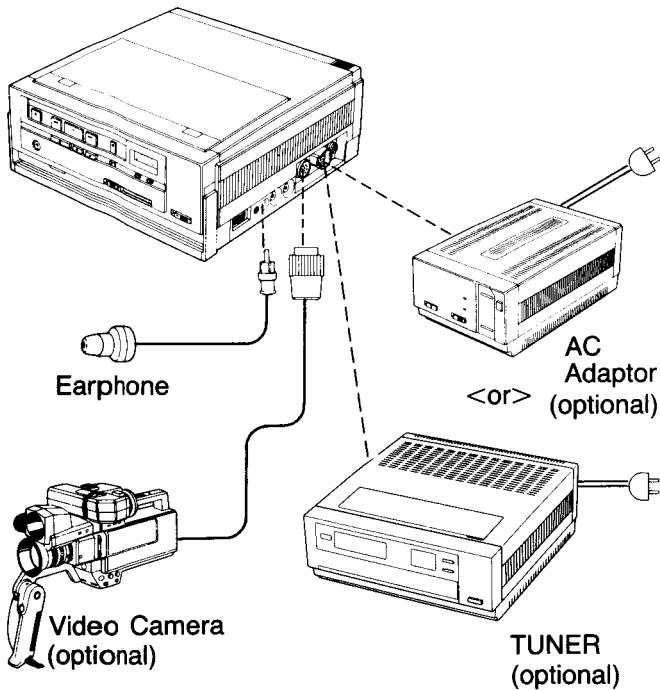

- When you make a camera recording with a video camera designed for this portable VTR, make certain that the VIDEO IN jack of the VTR is free, or the camera remote system will not function.
- If you want to review the tape you have recorded immediately, you can do so with the electronic viewfinder of the camera.


### Earphone

You can listen to the sound by connecting the Earphone to Audio Output/Earphone Jack on the Recorder.

### NOTE:

If the Battery Pack is used for camera recording, no picture will be monitored on your TV.

## Outdoor Camera Recording Connection

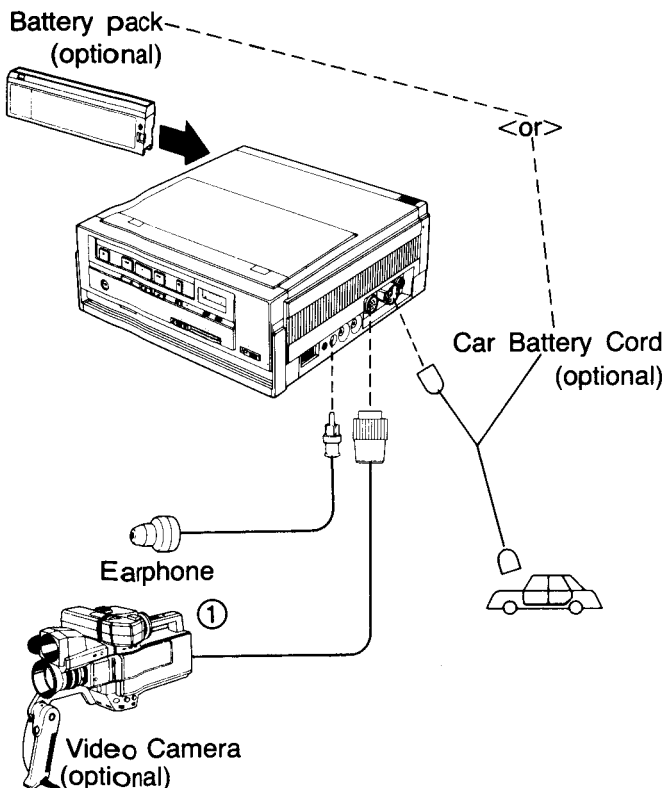

- ① Make any necessary adjustments on the camera. Refer to the operating instructions of the camera you are using or of the camera designed specially for this Recorder on how to handle the camera and how to start and stop camera recording.

- If you want to review the tape you have recorded immediately, you can do so with the electronic viewfinder of the camera.

- When using the Battery Pack, make sure the Power is OFF, then insert the Battery Pack. Be sure to check the Battery Indicator after turning the Power ON.


# SYSTEM CONNECTIONS

## For PLAYBACK—Recorded Tape

TV programme can't be recorded with this connection.

### ■ Using AC Adaptor/NV-B11 (optional)

(Refer to the Operating instructions of NV-B11.)

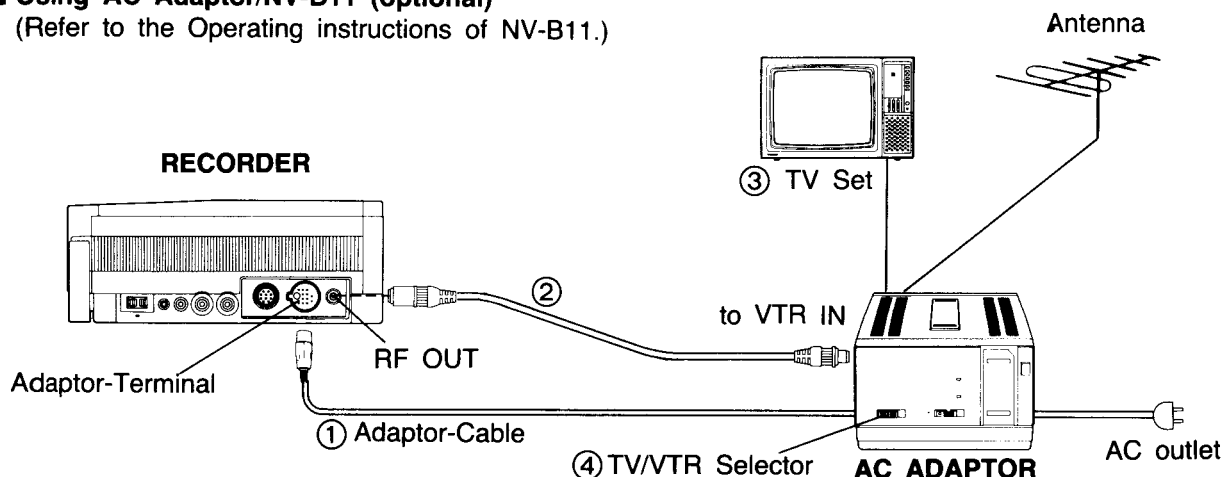

Connect the VTR, TV set and AC adaptor as shown in the figure above. Make sure all the equipment is connected properly.



- ① Connect the AC ADAPTOR cable to the Adaptor terminal of the recorder.
- ② Connect RF OUT terminal to VTR IN on the AC ADAPTOR for playback or for watching TV, using the DIN RF cable.
- ③ Turn TV on and select a channel for RF Output.
- ④ Set the TV/VTR Selector to VTR to watch the playback of a video recording. To watch normal TV programme, set the selector to TV.

### ■ Using Tuner/NV-V10 (optional)

(Refer to the Operating Instructions of NV-V10.)

#### NOTE:

If the Video/Camera Input Terminals are connected simultaneously, the two video signals will be super-imposed.

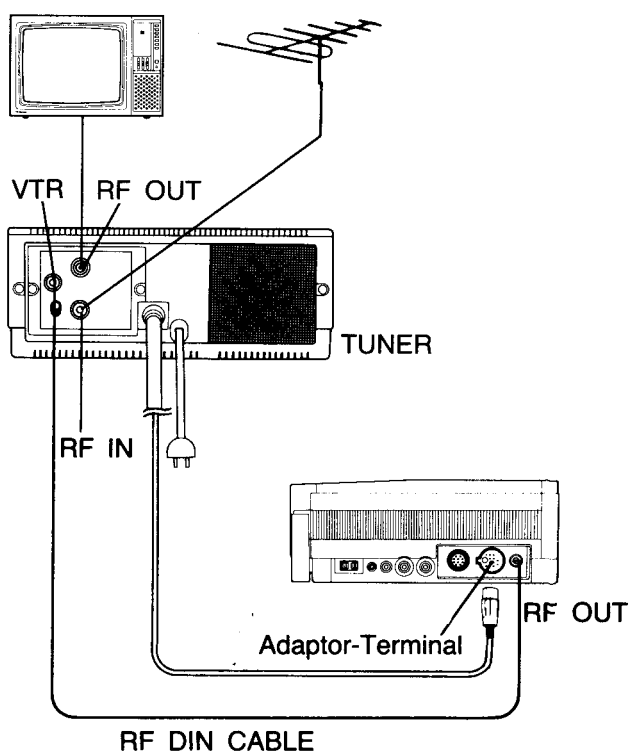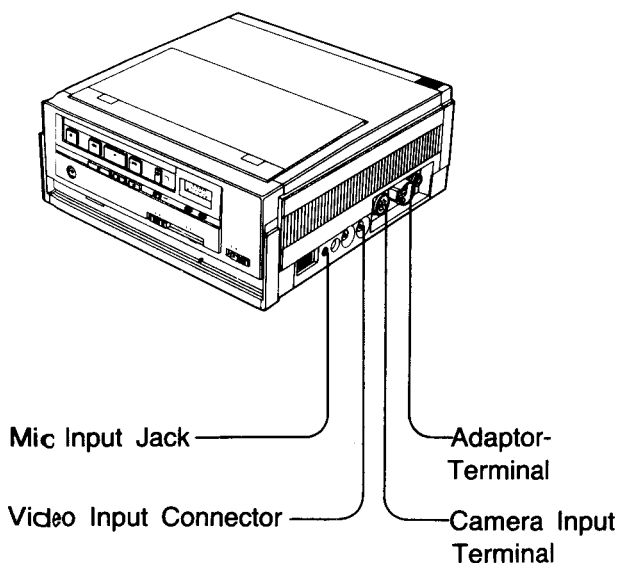



**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

Portable Video Cassette Recorder

**Vol. 2****Panasonic VHS****NV-100**  
-E  
-B  
-EG

## *Mechanical Adjustment Procedures Electrical Adjustment Procedures*



### SPECIFICATIONS

Power Source: DC 12V  
 Power Consumption: Approx. 6.7W at Play mode  
 Video Recording

System: 2 rotary heads, helical scanning system

Tape Speed: 23.39mm/s  
 Tape Format: Tape width 12.7mm high density tape  
 Record/Playback Time: 240 min. with NV-E240  
 FF/REW Time: Less than 6.5 min. with NV-E180

#### VIDEO

Television System: CCIR: 625 lines, 50 fields PAL colour signal  
 (PAL/D.D.R SECAM colour signal: NV-100EG only)  
 Modulation System: Luminance: FM azimuth recording  
 Colour signal: converted subcarrier phase shift recording

Input Level: VIDEO IN (BNC): 1.0Vp-p,  
 75 $\Omega$  unbalanced

Output Level: VIDEO OUT (BNC): 1.0Vp-p,  
 75 $\Omega$  unbalanced  
 RF Modulated: UHF channel 36 ( $\pm 4$ ),  
 75 $\Omega$  unbalanced

#### AUDIO

Input Level: MIC IN (M3): -70dB, more than 600 $\Omega$  unbalanced  
 10 pin input, Multi input: -20dB,  
 2.2k $\Omega$  unbalanced

Output Level: LINE OUT (RCA): -6dB,  
 600 $\Omega$  unbalanced

Earphone: -10dB, 200 $\Omega$  unbalanced  
 Audio Track: 1 track

#### Video Horizontal

Resolution: Colour: more than 240 lines

Signal-to-Noise Ratio: Video: more than 40dB  
 Audio: more than 43dB

#### Audio Frequency

Response: 80Hz—10kHz

#### Operating Room

Temperature: 0°C—40°C

Operating Humidity: 35%—80%

Weight: 3.8kg (with internal battery pack)

Dimensions: 236(W)  $\times$  92(H)  $\times$  242(D)mm

Standard Accessories: 1 pc. Video Cassette Tape  
 2 pcs. DIN-RF coaxial cable  
 1 pc. Audio Input Attenuator  
 1 pc. Earphone  
 1 pc. Carrying Case

#### Optional Accessories:

Video cassette tape:  
 NV-E240 Approx. 344m, 240 min.  
 NV-E180 Approx. 258m, 180 min.  
 NV-E120 Approx. 174m, 120 min.  
 NV-E90 Approx. 130m, 90 min.  
 NV-E60 Approx. 88m, 60 min.  
 NV-E30 Approx. 45m, 30 min.  
 Battery Pack, LCS2012E  
 Video Tuner/Timer Adaptor, NV-V10  
 AC Adaptor, NV-B11  
 Wireless Remote Controller, NV-A17  
 Wired Remote Controller, NV-A13  
 Car Battery Cord, NV-C12  
 Video Camera  
 Microphone

Weight and dimensions shown are approximate.  
 Specifications are subject to change without notice.

# Panasonic

Matsushita Electric Trading Co., Ltd.

P.O. Box 288, Central Osaka Japan

# CONTENTS

|                                                          |       |
|----------------------------------------------------------|-------|
| SPECIFICATIONS .....                                     | Cover |
| MECHANICAL ADJUSTMENT PROCEDURES .....                   | 2- 1  |
| DISASSEMBLY OF CABINET PARTS .....                       | 2- 1  |
| 1. DISASSEMBLY FLOWCHART .....                           | 2- 1  |
| 2. DISASSEMBLY METHOD .....                              | 2- 1  |
| ADJUSTMENT PROCEDURES .....                              | 2- 4  |
| 1. REPLACEMENT OF UPPER CYLINDER UNIT .....              | 2- 4  |
| 2. REPLACEMENT OF D.D. CYLINDER UNIT .....               | 2- 4  |
| 3. CONFIRMATION OF BRAKE TORQUE .....                    | 2- 6  |
| 4. CONFIRMATION OF TAKEUP TORQUE .....                   | 2- 6  |
| 5. POSITION ADJUSTMENT OF TENSION POST .....             | 2- 7  |
| 6. MEASUREMENT OF AND ADJUSTMENT OF BACK TENSION .....   | 2- 7  |
| 7. HEIGHT ADJUSTMENT OF REEL TABLES .....                | 2- 8  |
| 8. HEIGHT ADJUSTMENT OF TAPE GUIDE POSTS .....           | 2- 9  |
| 9. HEIGHT ADJUSTMENT OF PULL-OUT POST .....              | 2-10  |
| 10. TAPE INTERCHANGEABILITY ADJUSTMENT .....             | 2-10  |
| 11. TENSION ADJUSTMENT OF TIMING BELT .....              | 2-13  |
| 12. ADJUSTMENT OF F.G. HEAD GAP .....                    | 2-13  |
| 13. CONFIRMATION / ADJUSTMENT OF THRUST GAP .....        | 2-14  |
| 14. ASSEMBLY AND ADJUSTMENT OF GEARS AND RODS .....      | 2-15  |
| 15. POSITION ADJUSTMENT OF CASSETTE UP HOLDER .....      | 2-18  |
| 16. ADJUSTMENT OF LEAF SWITCHES .....                    | 2-18  |
| 17. POSITION ADJUSTMENT OF RECORDING SAFETY SWITCH ..... | 2-19  |
| Servicing Fixtures & Tools .....                         | 2-20  |
| ELECTRICAL ADJUSTMENT PROCEDURES .....                   | 2-21  |
| 1. Test Equipment .....                                  | 2-21  |
| 2. Adjustment Procedures .....                           | 2-21  |
| 2-1. A.V.R. Section .....                                | 2-21  |
| 2-2. System Control Section .....                        | 2-22  |
| 2-3. Servo Section .....                                 | 2-22  |
| 2-4. Audio Section .....                                 | 2-26  |
| 2-5. Video Section .....                                 | 2-27  |
| LOCATION OF TEST POINTS AND CONTROLS .....               | 2-30  |

# MECHANICAL ADJUSTMENT PROCEDURES

## DISASSEMBLY OF CABINET PARTS

### 1. DISASSEMBLY FLOWCHART

This flowchart indicates disassembly steps of the cabinet parts and the Bottom P.C.B.s in order to gain access to the items necessary for servicing. When reassembling, perform the steps in the reverse order. The bottom plate can be removed individually.

#### Notes:

1. When removing the front panel, work with care so as not to break the locking portions.
2. Adjustments are required if the Cassette Up Holder was replaced.

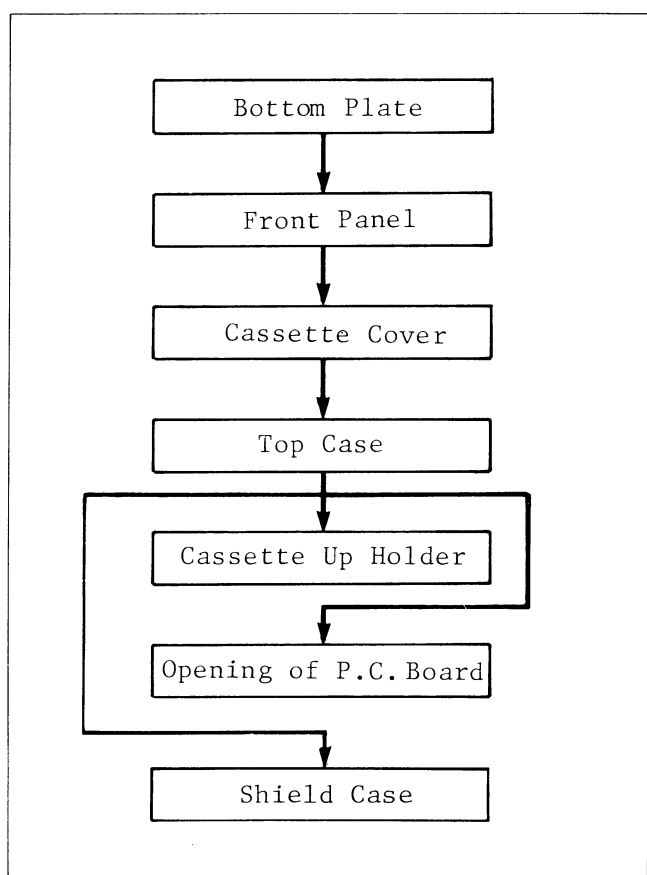


Fig. M1 Disassembly Flowchart

### 2. DISASSEMBLY METHOD

#### Notes:

- a. Place the cloth or any other soft materials under the P.C. Boards or deck for preventing them being damaged while servicing.
- b. When reinstalling, ensure the connectors are connected and any electrical components are not damaged.

#### 2-1. Removal of the Bottom Plate

1. Place the deck upside down so the bottom plate faces upward.
2. Remove 4 screws (A). Then remove the bottom case by lifting the rear portion of it.

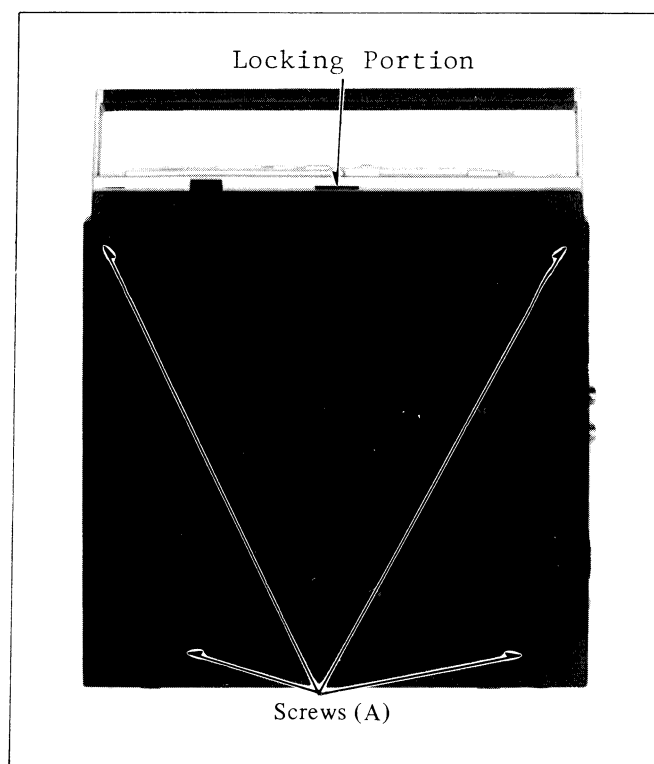


Fig. M2 Removal of the Bottom Plate

#### Note:

When reinstalling, first insert the locking portion into the slot of the front panel.

## 2-2. Removal of the Front Panel

1. Remove the CAMERA/REMOTE switch knob, unlock the locking portions and hold the both right and left ends of the front panel. Then carefully lift and turn the top portion of it to remove. And remove the connectors (P23 and Earth line).

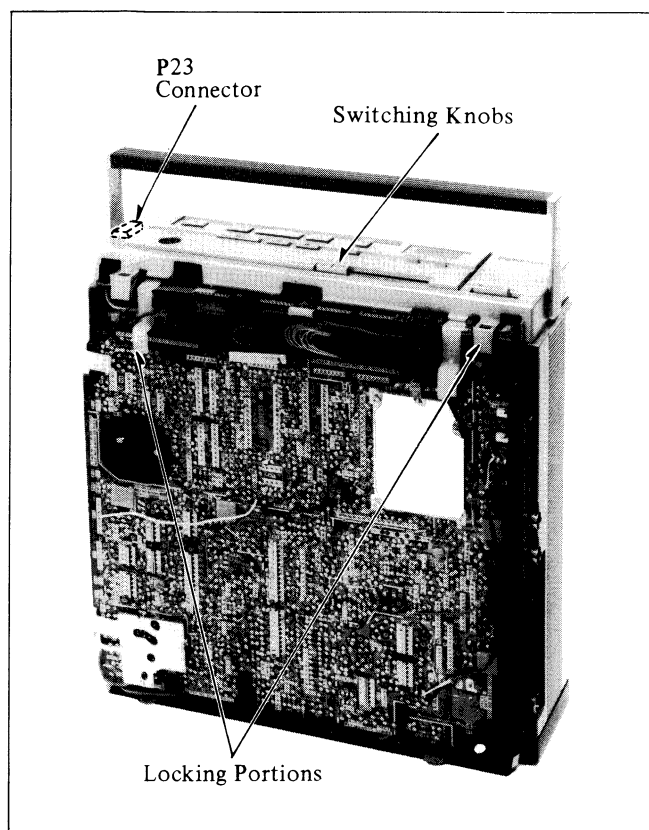


Fig. M3. Removal of the Front Panel

### Note:

Work this step with extreme care for not being damaged on the locking portions.

## 2-3. Removal of the Cassette Cover

Supply the power to the deck and turn it on. Then press the EJECT button to raise the cassette up holder. Remove 2 rubbers and 2 screws (B). Then carefully lift and turn the front portion of it to remove. Pay attention for not being damaged on the locking portions.

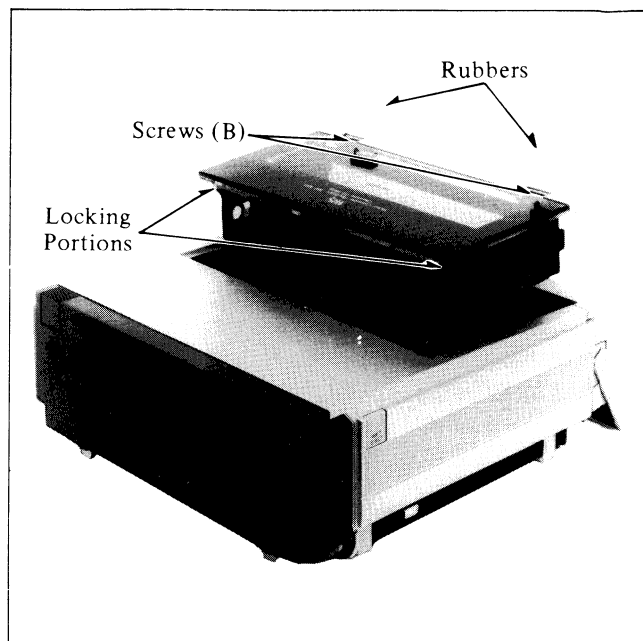


Fig. M4. Removal of the Cassette Cover

### Note:

When reinstalling, first suit the locking portions of the cassette holder unit.

## 2-4. Removal of the Top Case

1. First confirm that the battery is inside the battery compartment or not. If it is, take the battery out.
2. Remove 2 screws (C). Then remove the top case.

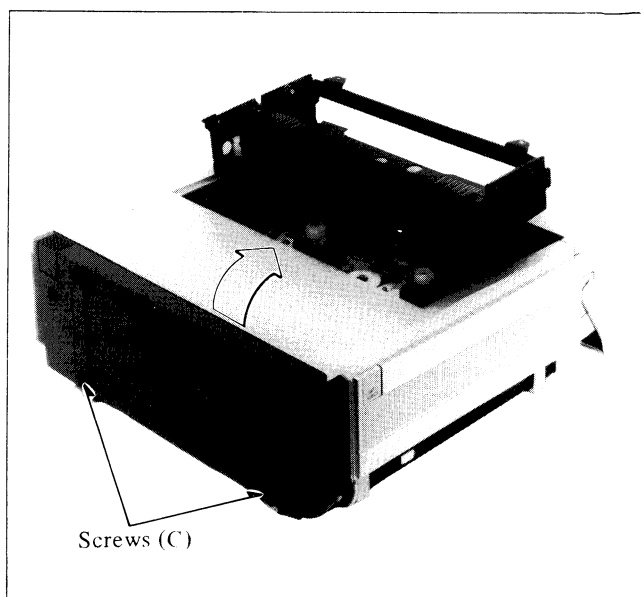


Fig. M5. Removal of the Top Case

## 2-5. Removal of the Cassette Up Holder

Remove 2 connectors P40 and P41. Then unlock the 2 locking portions and open the Front P.C. Board. Then remove 6 screws (D), and remove the cassette up holder.

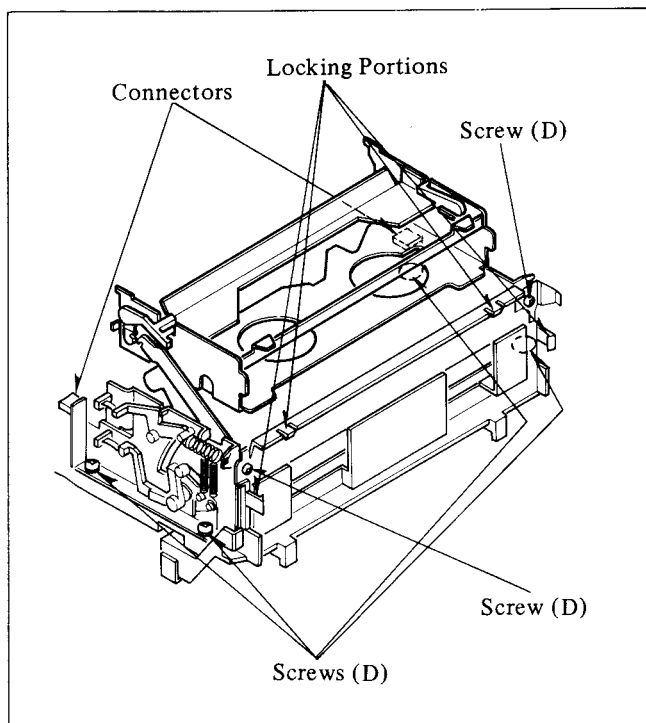


Fig. M6. Removal of the Cassette Up Holder

### Note:

When this part was removed or replaced the final adjustment is required. Refer to "ADJUSTMENT OF CASSETTE UP HOLDER" section.

## 2-6. Opening of the P.C. Board

Unlock the 6 locking portions, remove the plastic rivet and disconnect the connector P1 then open the P.C. Board.

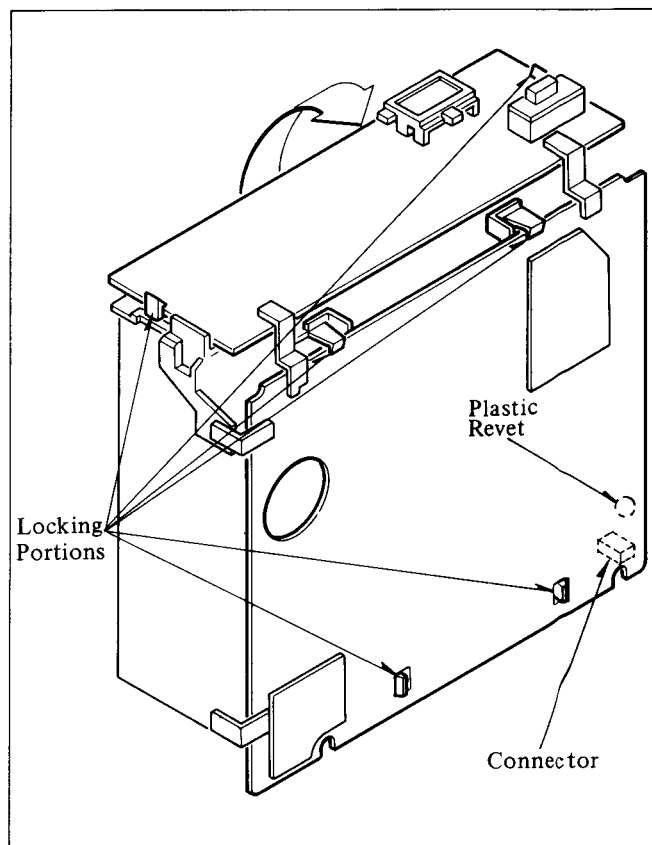


Fig. M7. Opening of the P.C. Board

## 2-7. Removal of the Shield Case

Remove the 2 screws (E) and the plastic rivet. Then carefully lift it up to remove.

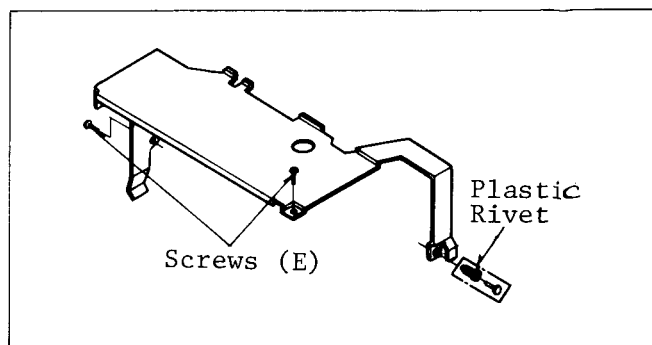


Fig. M8. Removal of the Shield Case

## ADJUSTMENT PROCEDURES

### 1. REPLACEMENT OF UPPER CYLINDER UNIT

Work with extreme care when removing or replacing the upper cylinder unit. Do not touch video heads during servicing.

1. Unsolder the 4 wires which are color-coded to matching wires on the head relay board.
2. Remove the 2 screws and gently lift the upper cylinder unit from the shaft.

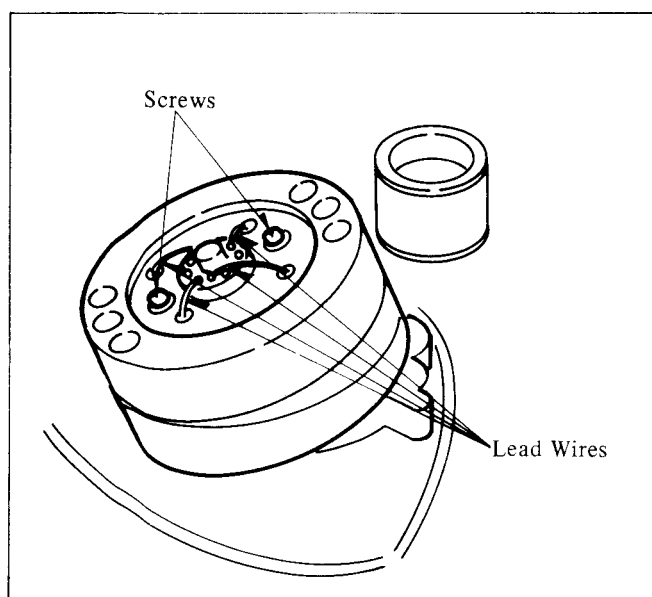


Fig. M9. Replacement of Upper Cylinder Unit--(1)

3. Before reinstalling a new unit, clean the DD cylinder shaft and the surface that engages with on the upper cylinder with a soft cloth dampened with freon liquid.



Fig. M10. Replacement of Upper Cylinder Unit--(2)

4. Install new unit so that the color cord of the head relay board. Tighten the 2 screws and resolder the 4 wires to the head relay board.

#### Note:

Upon completion of replacement, confirm performance. And if required, perform "TAPE INTERCHANGEABILITY ADJUSTMENT".

### 2. REPLACEMENT OF D.D. CYLINDER UNIT

Work with extreme care when removing or replacing the DD cylinder unit. Do not touch video heads during servicing.

1. Disconnect the connector cover on P001 and 2 connectors P001 (on top side) and P002 (on bottom side) from the DD cylinder unit.
2. Remove the screw (A) and discharge angle.
3. Remove the DD cylinder unit and cylinder cover by removing 5 screws (B).



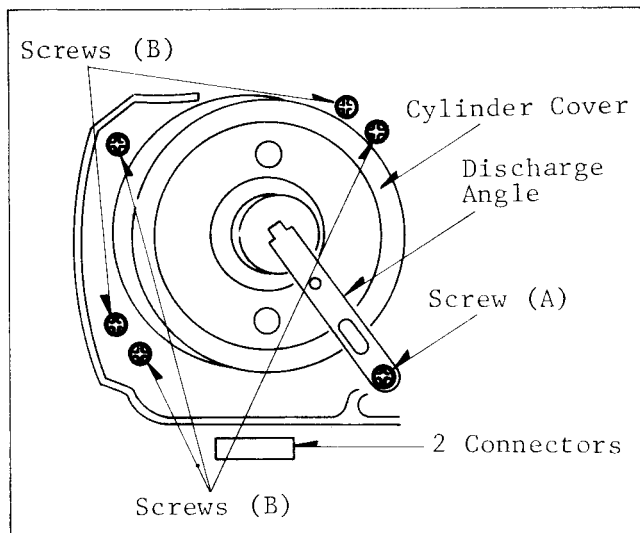


Fig. M11. Replacement of D.D. Cylinder Unit-(1)

**Note:**

Since there is very little clearance between DD cylinder unit and chassis, remove the DD cylinder unit gently and carefully.

4. Reinstall the new DD cylinder unit, restore the wires and connect the P001 and P002.

**Notes:**

1. When reinstall the New DD Cylinder unit, fit the new DD cylinder unit to the chassis by turn counterclockwise it.

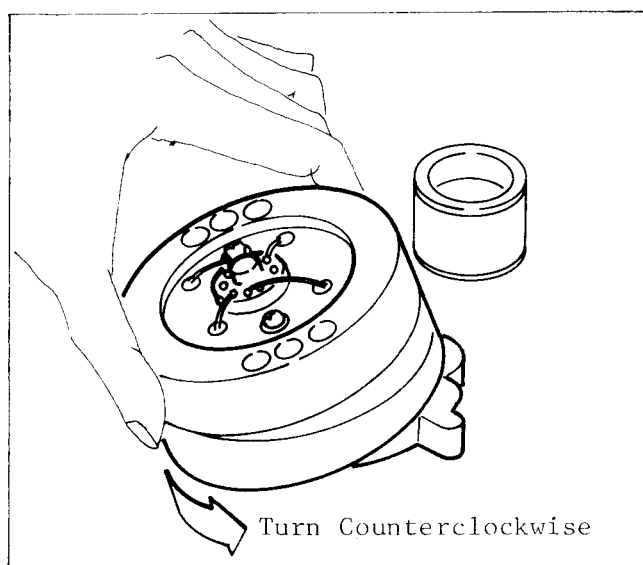


Fig. M12. Replacement of D.D. Cylinder Unit - (2)

2. Upon completion of replacement, confirm performance. If any further maintenance is required, perform "TAPE INTERCHANGEABILITY ADJUSTMENT".

### 3. CONFIRMATION OF BRAKE TORQUE

#### Equipment Required:

Dial Torque Gauge ..... VFK0133  
Adaptor for Gauge ..... VFK0134

1. Attach the adaptor to the torque gauge and place the deck in STOP mode.
2. Place the torque gauge on the reel table. The weight of gauge should not rest on the reel table.

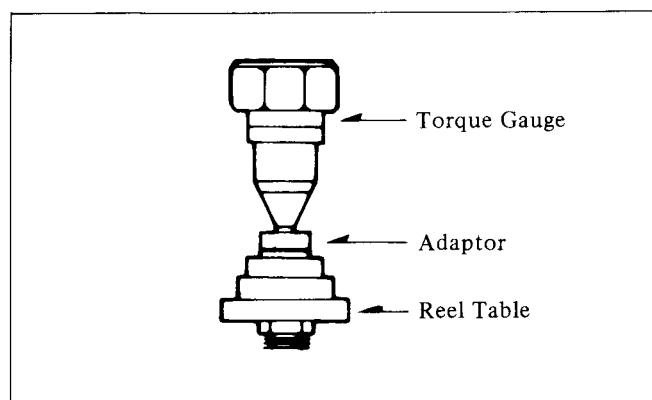


Fig. M13. Confirmation of Brake Torque--(1)

3. Turn torque gauge in either direction indicated in the Fig. M15 and read the gauge when the brake begins slipping.

#### Note:

If proper brake torque can not be obtained, clean the rotating surface of reel table with a soft cloth and recheck torque before replacing brake drum.

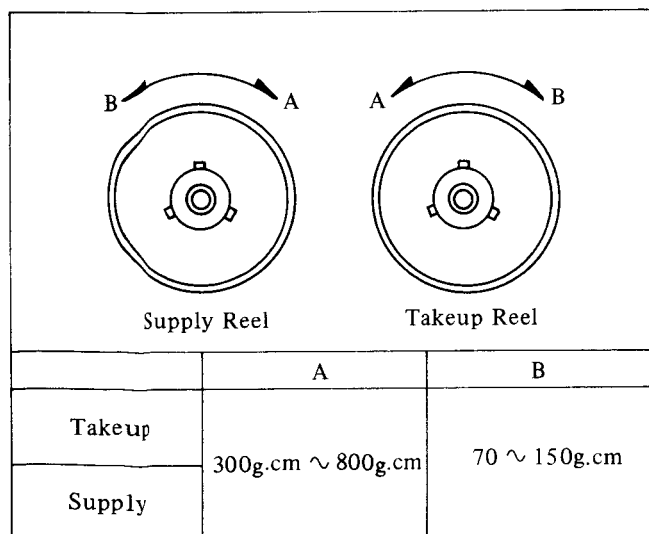


Fig. M14. Confirmation of Brake Torque--(2)

### 4. CONFIRMATION OF TAKE-UP TORQUE

#### Equipment Required:

Dial Torque Gauge ..... VFK0133  
Adaptor for Gauge ..... VFK0134

#### Specifications:

in PLAY mode .....  $125 \pm 20\text{g.cm}$   
in FF mode ..... more than 400g.cm  
in REW mode ..... more than 400g.cm  
in REV mode .....  $170 \pm 25\text{g.cm}$

1. Attach the adaptor to the torque gauge.
2. Cover the take-up and supply phototransistors with black tape. Lower the cassette up holder (without cassette cover), and turn power switch on.
3. Place the torque gauge on the take-up reel table, push the play button and read torque on the gauge. Repeat in FF mode by pushing the FF button.

#### Note:

While measuring, the weight of the gauge should not rest on the reel table.

4. Set the torque gauge on the supply reel table, press the rewind button to check REW mode torque.
5. Repeat in REV mode by pushing the REV button in playback mode.
6. Remove the black tape that covered the phototransistors.

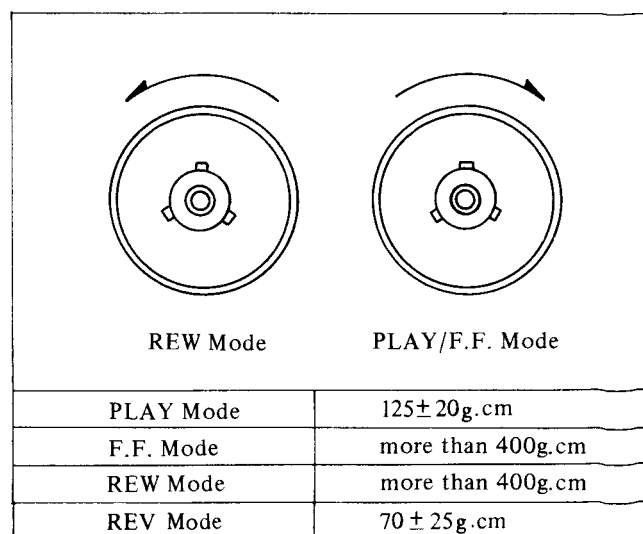


Fig. M15. Confirmation of Takeup Torque

## 5. POSITION ADJUSTMENT OF TENSION POST

### Equipment Required:

Tension Post Adjustment Plate

..... VFK0241

Fine Adjustment Screwdriver

..... VFK0136

1. Cover the phototransistor with black tape. Lower the cassette up holder (without cassette cover), and turn power switch on.
2. Push the play button for loading. As soon as the loading is completed, disconnect the Adaptor Connector.
3. Then remove the cassette up holder.
4. Place the adjustment plate over the reels and slightly loosen the screw (A) securing the tension band bracket.
5. Insert the fine adjustment screwdriver into the hole and move the tension band bracket in either of direction so that the tension post just touches the adjustment plate. The tension post removes from the adjustment plate by turning the fine adjustment screwdriver counterclockwise. Then turn it clockwise until the tension post just touches the adjustment plate and tighten the mounting screw.

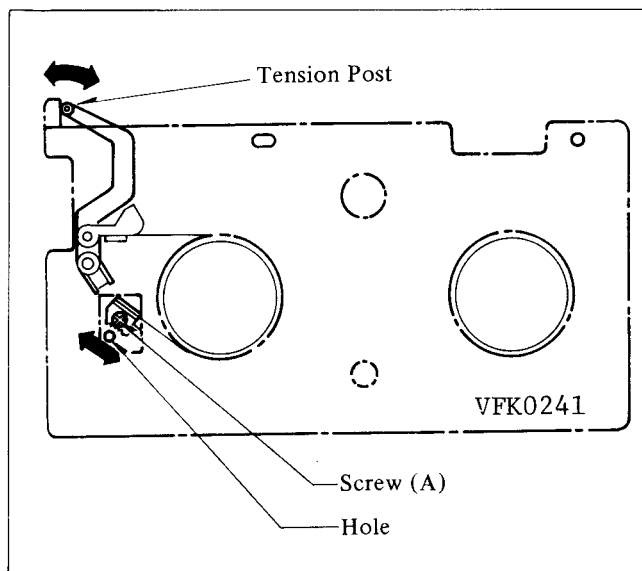


Fig. M16. Position Adjustment of Tension Post

## 6. MEASUREMENT AND ADJUSTMENT OF BACK TENSION

### A. Measurement Procedure

### Equipment Required:

Back Tension Meter

..... Tentelometer  
Model T2-H7-UM  
Purchase Locally

VHS Cassette Tape .... 120 Minutes tape  
Specification: 25 ~ 30g

1. Pull the erase head in the direction indicated by the arrow and hold it by adhesive tape.
2. Play back the cassette tape from its beginning and wait until tape running has stabilized. (for approx. 10 to 20sec)
3. Insert tension meter in tape path and confirm reading.
4. If the reading is out of spec., continuously perform the adjustment procedure.

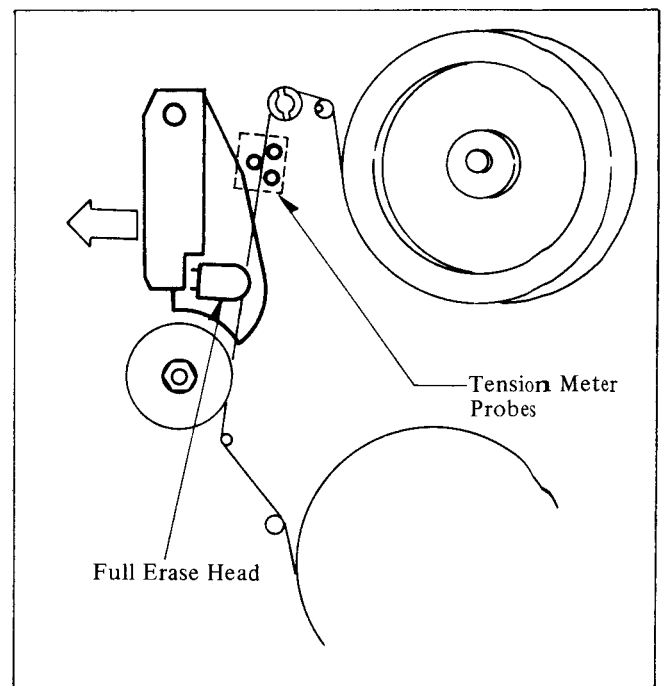


Fig. M17. Measurement of Back Tension

### Notes:

1. Make sure that the three probes of the meter are all in good contact with tape, but out of contact with any part while measuring.
2. It is recommended to be measured three times as tension meter is very sensitive.

B. Adjustment Procedure

Equipment Required:

Fine Adjustment Screwdriver

..... VFK0136

- 1. Loosen a screw (A) and insert the fine adjustment screwdriver into the hole (B).
- 2. Turn the screwdriver in either of direction indicated by the arrow to obtain the specified tension. Turn the screwdriver clockwise to lower tension, counterclockwise to raise it.

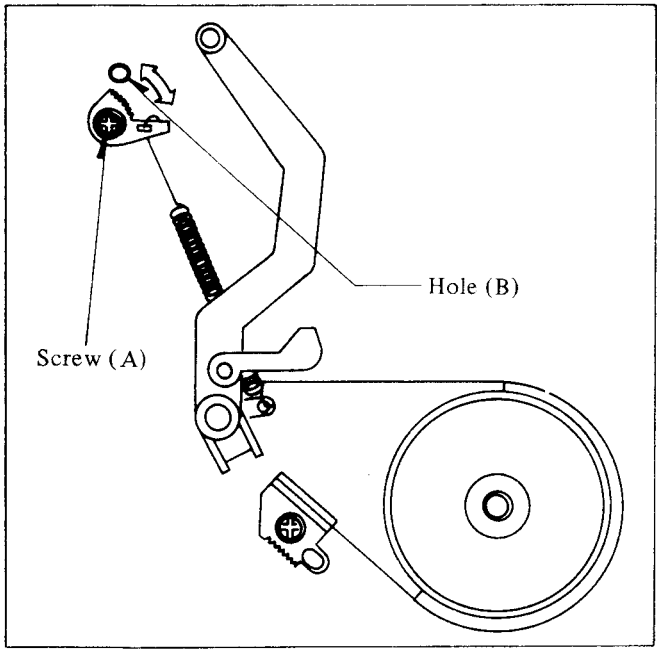


Fig. M18. Adjustment of Back Tension

- 3. Tighten the screw (A) and verify tension with the meter once again.

Note:

Upon completion of adjustment, remove the adhesive tape.

7. HEIGHT ADJUSTMENT OF REEL TABLES

Equipment Required:

Post Adjustment Plate ..... VFK0191

Reel Table Height Gauge ..... VFK0190

Specification ..... ±0.1mm

\* Cut-out surface of VFK0191 is reference of height of reel tables and their height are measured based on this reference.

- 1. Place the post adjustment plate over the reels, and put the gauge on it. Set the gauge to zero "0" with the condition that the foot scraper of the gauge touches the cut-out portion of the plate.

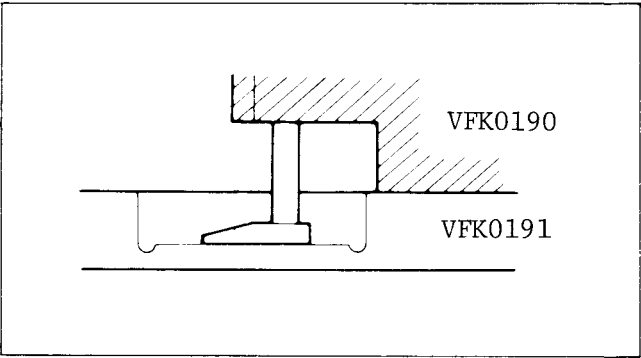


Fig. M19. Height Adjustment of Reel Tables--(1)

- 2. Then measure the top portion of reel table and confirm the difference against the condition just performed in former step. Do same for the other reel table.

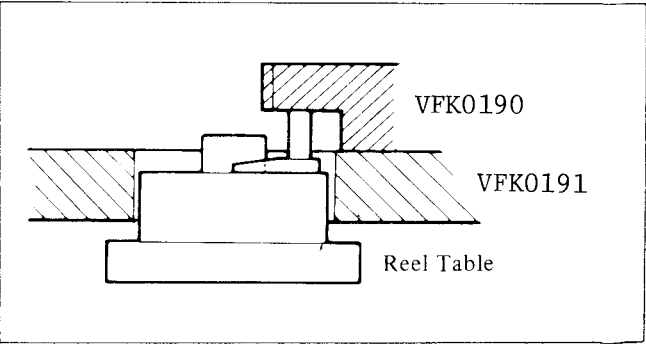


Fig. M20. Height Adjustment of Reel Tables--(2)

- 3. If the difference of reading of gauge between height at cut-out portion of VFK0191 and the height of reel tables is more than 0.1mm (higher or lower), adjust the height of reel to obtain the specified height.
- 4. For adjustment, change the poly slider washer located under the reel table. The washer is available in three sizes of thickness, t = 0.13mm, 0.25mm and 0.5mm.

## 8. HEIGHT ADJUSTMENT OF TAPE GUIDE POSTS

### Equipment Required:

Hex. Wrench (0.9mm) ..... VFK0146  
 Post Adjustment Plate ..... VFK0191  
 Reel Table Height Gauge ..... VFK0190  
 Nut Driver (5.5mm) ... Purchase Locally  
 Post Adjustment Screwdriver  
 ..... VFK0137

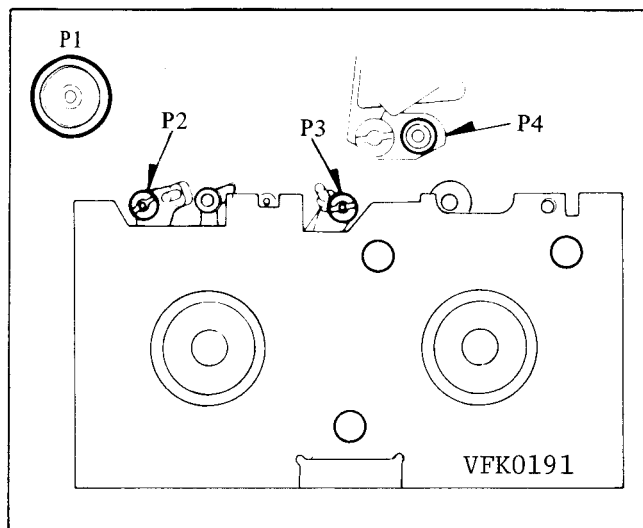


Fig. M21. Height Adjustment of Tape Guide Posts—(1)

1. First install the post adjustment plate and lower all posts so that the condition as shown. (Lower end of post, tape guide, should be lower than foot of gauge.) Loosen a hex. screw located on the lower portion of posts (P2 & P3) then turn the top of the posts with post adjustment screwdriver.

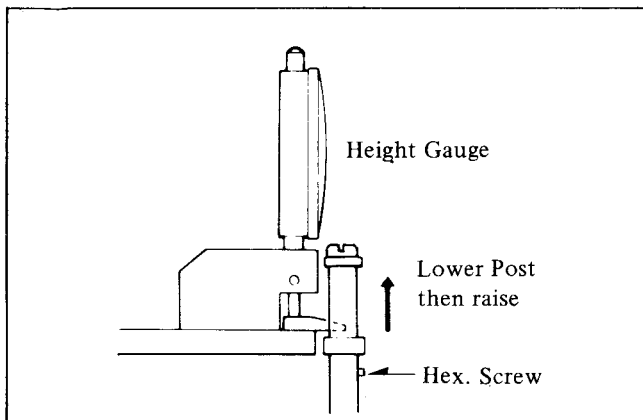


Fig. M22. Height Adjustment of Tape Guide Posts—(2)

2. Place the height gauge on the adjustment plate and fit the foot of gauge to the post. The condition to fit the foot of gauge should be as shown.  
 (The foot of gauge should be fully lowered till it touches the plate.)

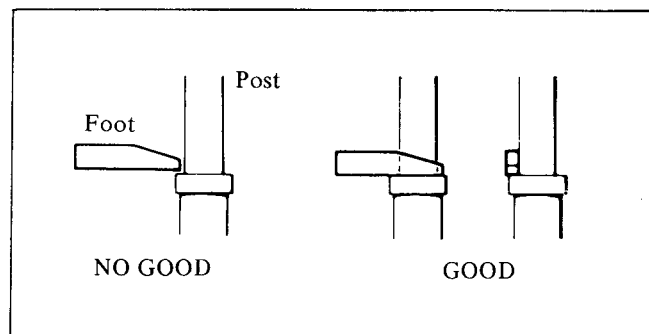


Fig. M23. Height Adjustment of Tape Guide Posts—(3)

3. Set the height gauge to zero and slowly raise the post until it just touches the foot of gauge. For adjustment of P1 & P4, use the nut driver.

### Note:

Upon completion of adjustment, tighten hex. screws on P2 and P3 and install the post cap on P4. When the post cap on P4 is reinstalled, the direction of it should be as shown below viewing from the direction indicated by the arrow.

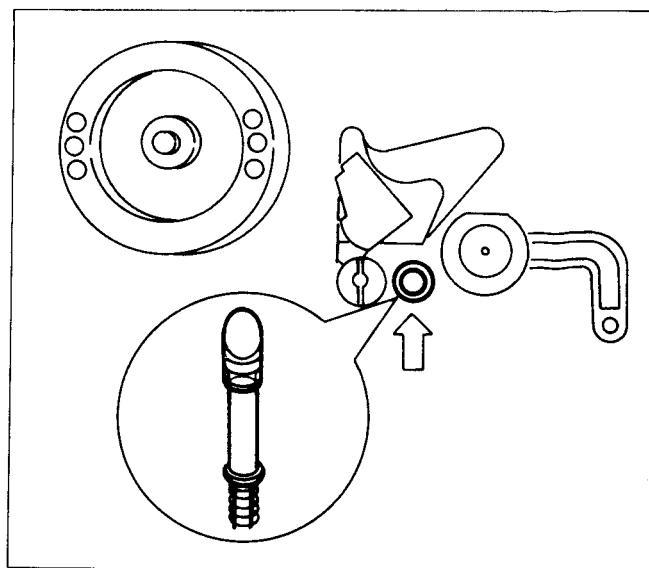


Fig. M24. Height Adjustment of Tape Guide Posts—(4)

## 9. HEIGHT ADJUSTMENT OF PULL OUT POST

### Notes:

1. The adjustment should be performed after the adjustment of P4 as the spec. is based on height of P4.
2. The adjustment should be performed in the Loading completion mode.
3. Unless the replacement or adjustment of this post is completed, remove the Adaptor-Connector.

### Equipment Required:

Post Adjustment Plate ..... VFK0191  
 Reel Table Height Gauge ..... VFK0190  
 Nut Driver (5.5mm) ... Purchase Locally  
 Specification: 0.02mm ~ 0.06mm

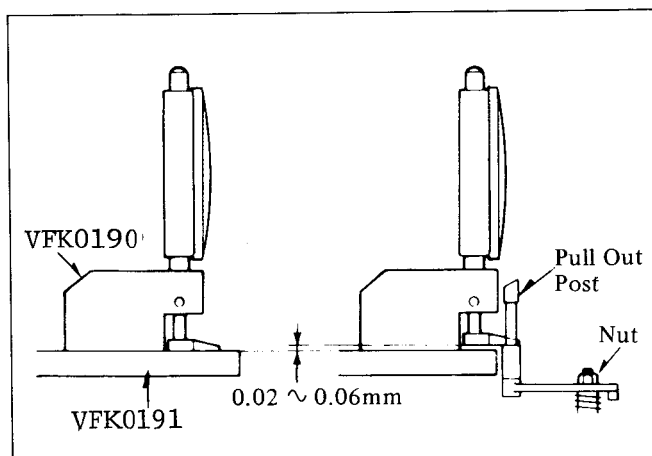


Fig. M25. Height Adjustment of Pull Out Post

1. Turn power switch on, cover the take-up and supply phototransistors with black tape, press the cassette up holder down and push the play button for loading.
2. As soon as loading is completed, disconnect the Adaptor-Connector and remove the cassette up holder.
3. Place the post adjustment plate, put the reel table height gauge on the plate and set height gauge to zero with condition the foot touches on the height adjustment plate.
4. Slightly lower the post by turning the nut clockwise. Fit the foot to the post so that the condition becomes as shown in Fig. M25.

5. Then slowly and slightly turn the nut till the gauge reads specified height.
6. Reinstall the cassette up holder and remove the black tape that covered the phototransistors and reconnect for unloading.

## 10. TAPE INTERCHANGEABILITY ADJUSTMENT

### Note:

To perform these adjustment/confirmation procedures, make sure that the tracking control is set into the detent (fixed) position.

### Equipment Required:

Alignment Tape ..... VFM8100H3D  
 Post Adjustment Screwdriver ..... VFK0137  
 H-Position Adjustment Screwdriver ..... VFK0189  
 Hex. Wrench (0.9mm) ..... VFK0146  
 Hex. Wrench (1.5mm) ..... VFK75  
 Nut Driver (5.5mm) ..... Purchase Locally  
 Oscilloscope

### 10-1. Confirmation of Tape Travel

1. Playback a cassette tape and confirm that the tape travels without curling at the edges of the tape.

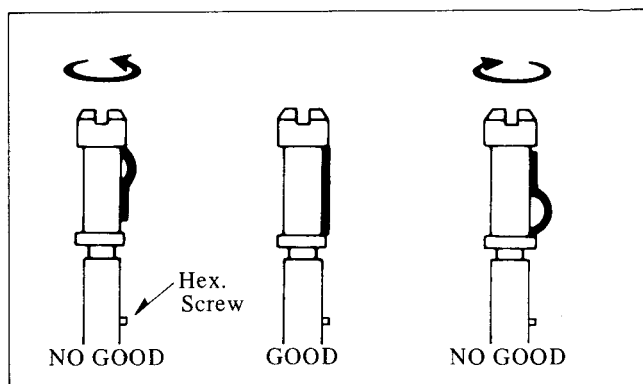


Fig. M26. Confirmation of Tape Travel

2. If curling is apparent, adjust the height of posts by turning the top of post with the post adjustment screwdriver (for P2 & P3).

**Note:**

Before turning P2 and P3, slightly loosen a hex. screw.

## 10-2. Confirmation of A/C Head Height

**Note:**

Unless the A/C Head is replaced, this procedure should not be performed.

1. Looking at the lower edge of the control head with the tape running, ensure that the lower edge of the tape runs along the lower edge of the control head. If it doesn't, slightly turn the nut (A) in either direction to correct. Clockwise to lower the head and counterclockwise to raise it.

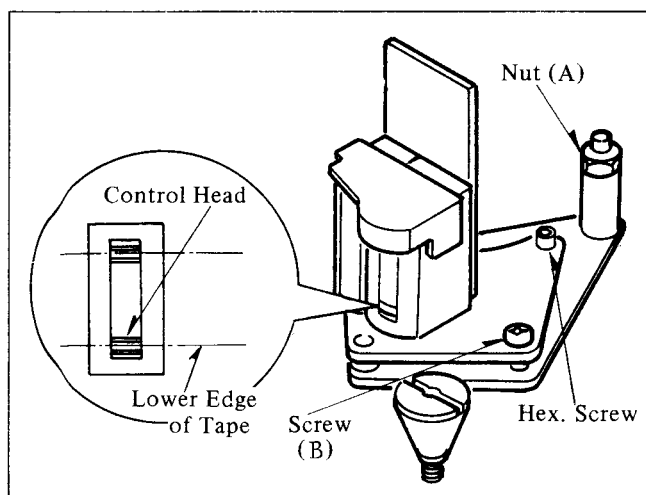


Fig. M27. Confirmation of A/C Head Height

## 10-3. Adjustment of A/C Head Height

1. Connect the oscilloscope to the audio output on the right side of the deck.
2. Playback the monoscope portion (6kHz, Audio) of the alignment tape, VFM8100H3D.

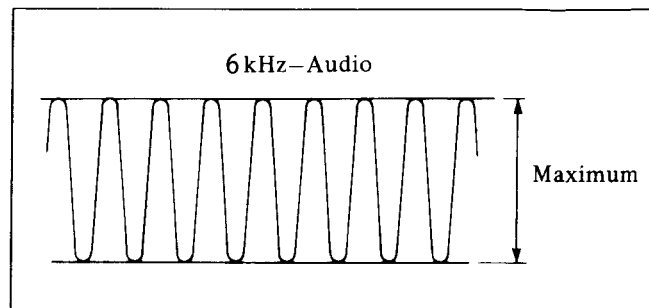


Fig. M28. Adjustment of A/C Head Height

3. Adjust the screw (B) on the head base so the output level becomes maximum.

## 10-4. Confirmation of A/C Head Tilt

**Note:**

Unless P4 is adjusted, (See Fig. M25) this procedure should not be performed. Playback the tape and confirm that the tape runs between lower and top limiters of the post. If the lower edge or top edge of the tape turns with waving or frilling, then correct the tilt of the A/C Head by turning hex. screw. (A hex. screw is shown in Fig. M27.)

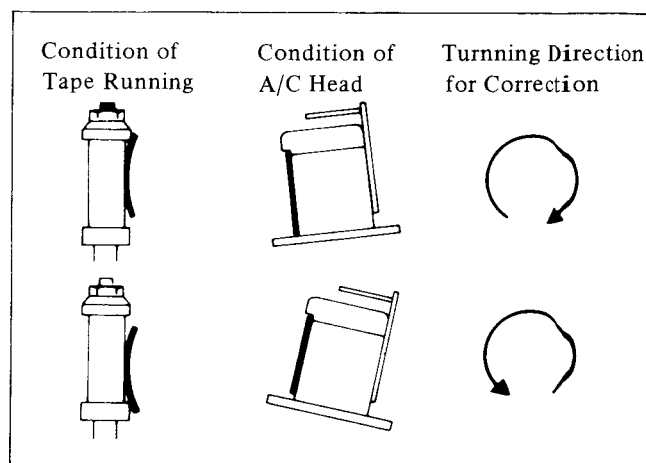


Fig. M29. Confirmation of Tilt of A/C Head

#### 10-5. Horizontal Position Adjustment of A/C Head

1. Set the tracking control to the detent (fixed) position. Connect the oscilloscope to the Test Point (TP3009).
2. Playback the monoscope portion of the alignment tape and confirm the envelope figure.
3. If adjustment is required, set the H-position adjustment screwdriver into the slot of the adjustment nut and rotate in either direction to obtain maximum envelope output.

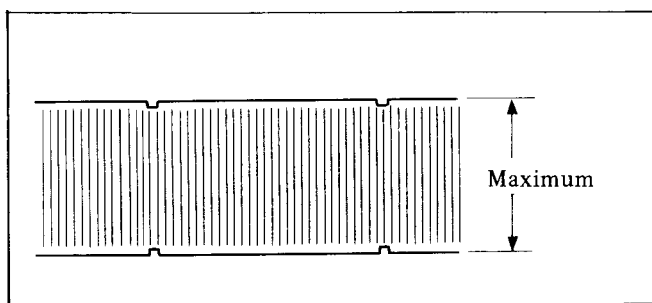


Fig. M30. Horizontal Position Adjustment of A/C Head(1)

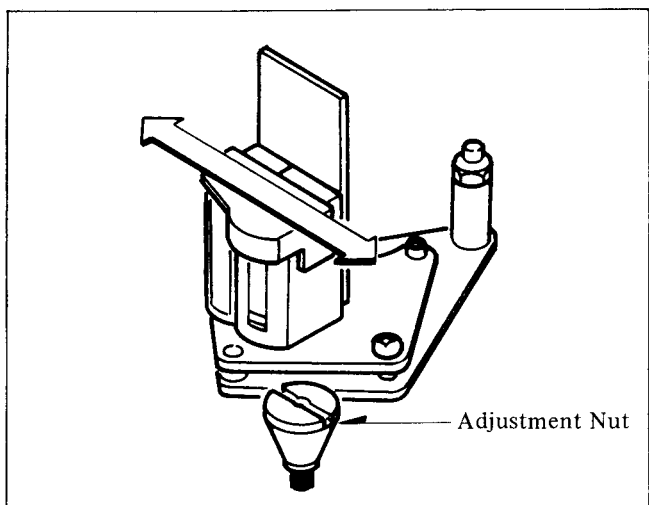


Fig. M31. Horizontal Position Adjustment of A/C Head(2)

#### 10-6. Confirmation/Adjustment of Envelope Output

1. Set the tracking control in the detent (fixed) position. Connect the oscilloscope to Test Point (TP3009).

2. Playback the monoscope portion of the alignment tape VFM8080H2, adjust posts P2 and P3 while watching the scope display so that RF envelope on the scope becomes as flat as possible.

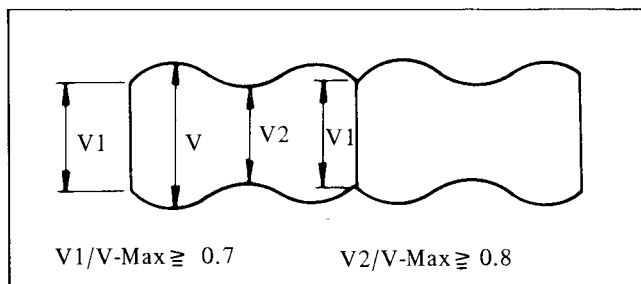


Fig. M32. Confirmation of Envelope Output

3. If the scope display is as follows, adjust the height of P2 shown in Fig. M21.

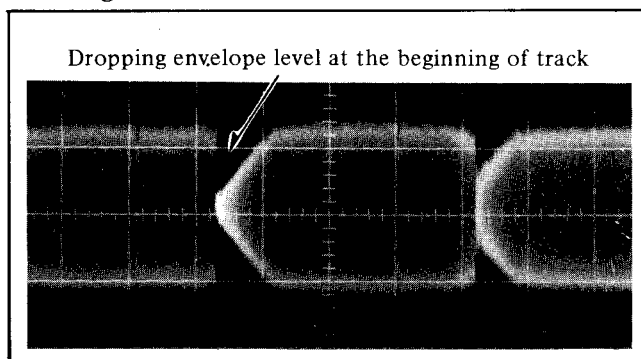


Fig. M33. Adjustment of Envelope Output-(1)

4. If the scope display is as follows, adjust the height of P3 shown in Fig. M21.

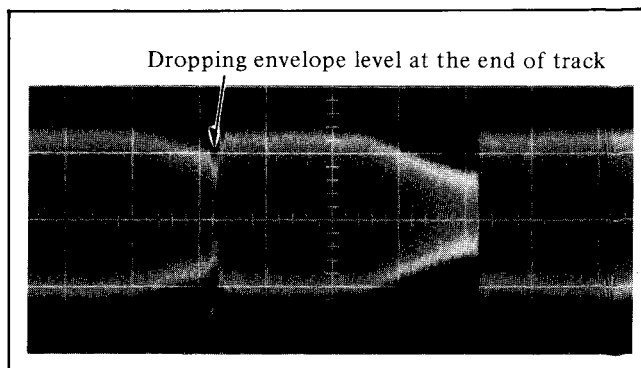


Fig. M34. Adjustment of Envelope Output-(2)

5. The scope display with P2 and P3 adjusted correctly should be as shown in Fig. M35.



Envelope is adjusted properly

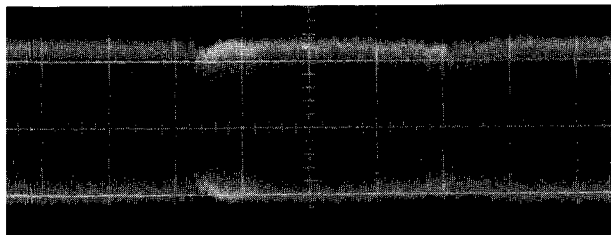


Fig. M35. Adjustment of Envelope Output-(3)

- When adjustment is required, turn slowly and wait for servo lock. Be sure the tape travels over the post as shown.

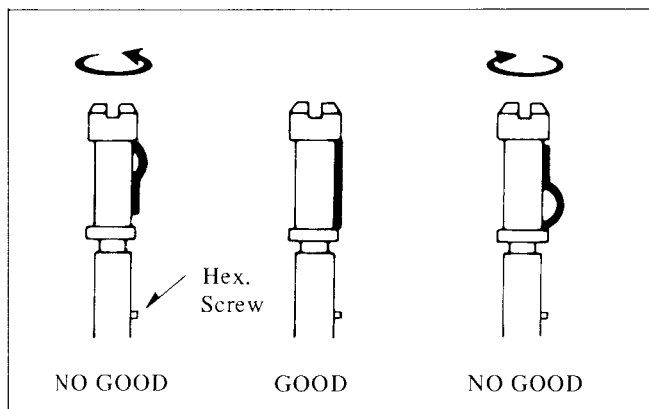


Fig. M36. Adjustment of Envelope Output-(4)

## 11. TENSION ADJUSTMENT OF TIMING BELT


Equipment Required:

Fan-type Tension Gauge ..... VFK66

Specification:  $300 \pm 100g$


- Loosen a screw (A), remove the spring (A) and push the Idler Pressure Lever by the fan-type tension gauge.
- When the gauge reads the specified pressure, tighten a screw (A).
- Reinstall the spring (A).

Spring (A)

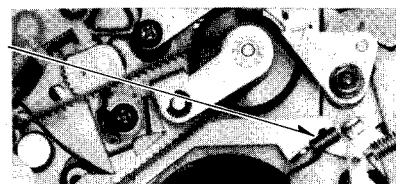

Fan-type  
Tension Gauge

Screw (A)

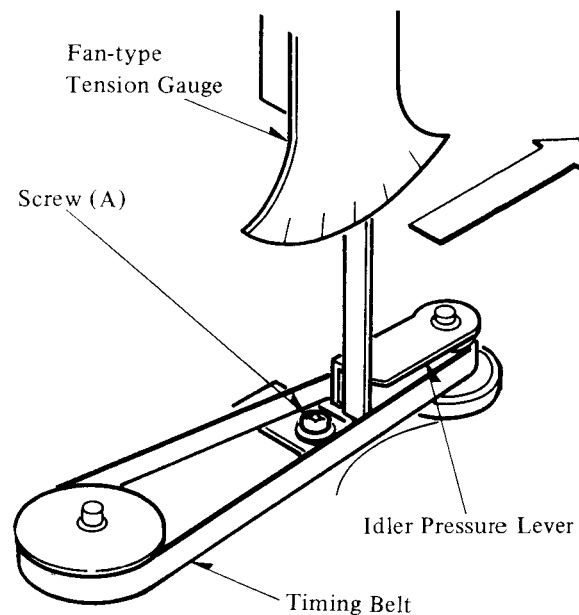

Idler Pressure Lever

Timing Belt

Fig. M37. Tension Adjustment of Timing Belt

## 12. ADJUSTMENT OF FG HEAD GAP

Equipment Required:

Fine Adjustment Screwdriver .... VFK0136

Specification:  $0.12 \pm 0.02mm$

- Remove 2 screws (A) and thrust angle unit, then remove the sub plate, 5 screws (B) and stator unit.

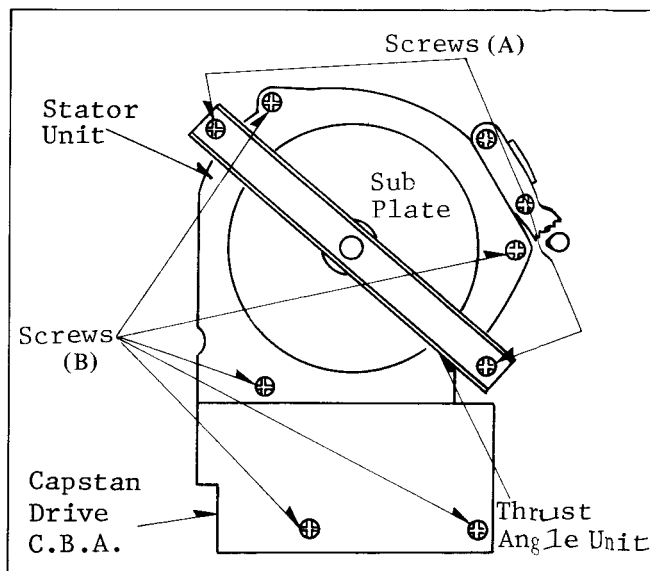


Fig. M38. Adjustment of F.G. Head Gap-(1)

2. Slightly loosen the 2 screws (C) and set the fine adjustment screwdriver into the hole (D).

Turn screwdriver counterclockwise until the FG head touches the rotor and just slightly turn it clockwise so the gap becomes as specified.

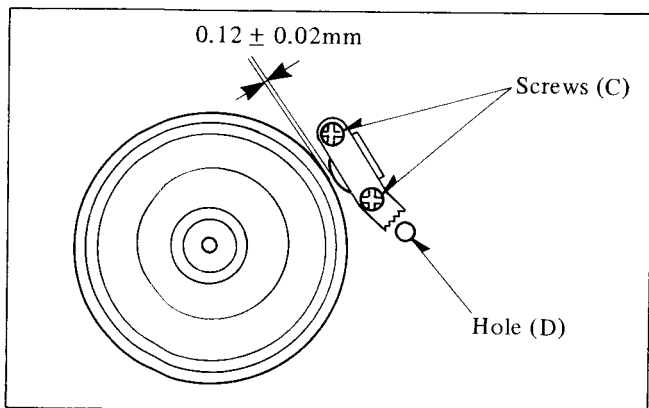


Fig. M36. Adjustment of F.G. Head Gap-(2)

c.f.

Instead of this method, the cover page of this volume can be alternative because the thickness is approx. 0.12mm.

#### Notes:

1. Do not touch the circumferential surface of rotor with any tool, and keep any magnetizable material away from the rotor magnet.
2. When reinstalling the stator unit, install it concentrically with boss of rotor.

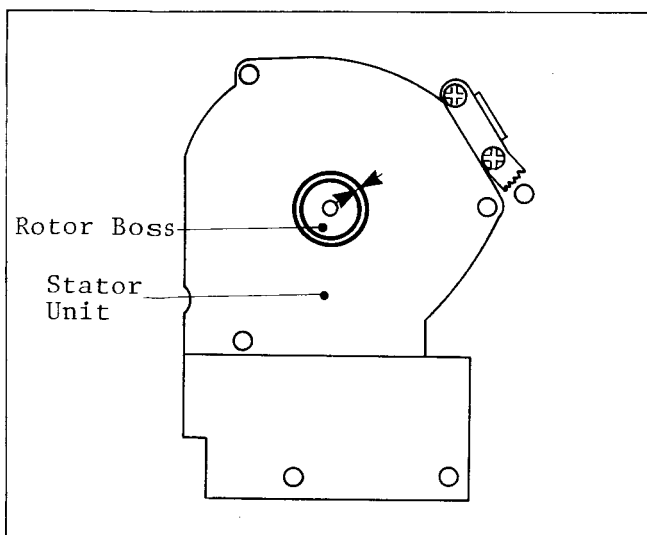


Fig. M40. Adjustment of F.G. Head Gap-(3)

### 13. CONFIRMATION/ADJUSTMENT OF THRUST GAP

#### Equipment Required:

Reel Table Height Gauge ..... VFK0190

Specification: 0.01 ~ 0.10mm

1. Place the height gauge on the thrust angle, and set the gauge to zero "0".
2. Next, push the capstan shaft by your finger, and confirm the thrust gap.
3. If the gap is out of specification, then adjust the thrust boss by turning it clockwise or counterclockwise.

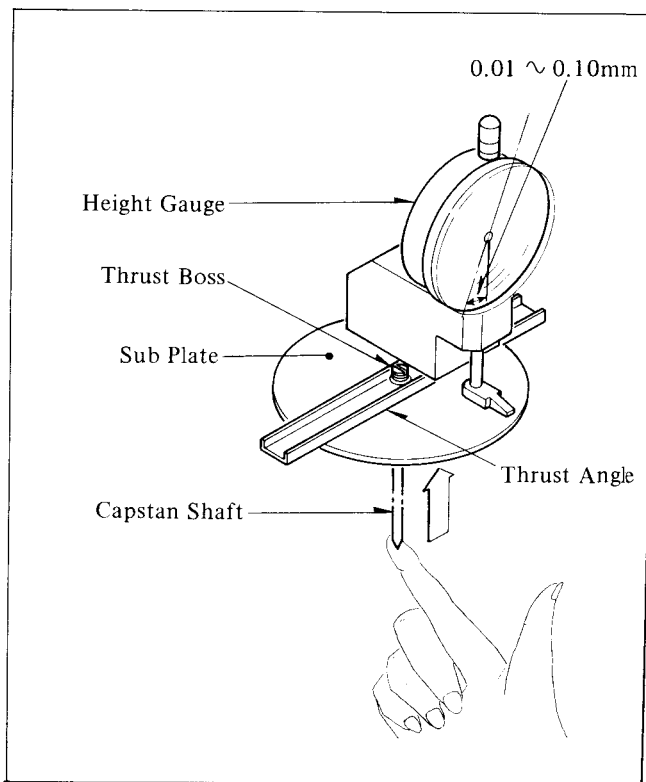


Fig. M41. Confirmation/Adjustment of Thrust Gap-(1)

#### 14. ASSEMBLY AND ADJUSTMENT OF GEARS AND RODS

1. Install the supply and take-up loading arm units so that the projection (A) on the take-up loading gear aligns with the delta "Δ" mark (B) on the supply loading gear. Then install the 2 retaining rings. Ensure that the loading arm units is still in the fully unloaded condition.

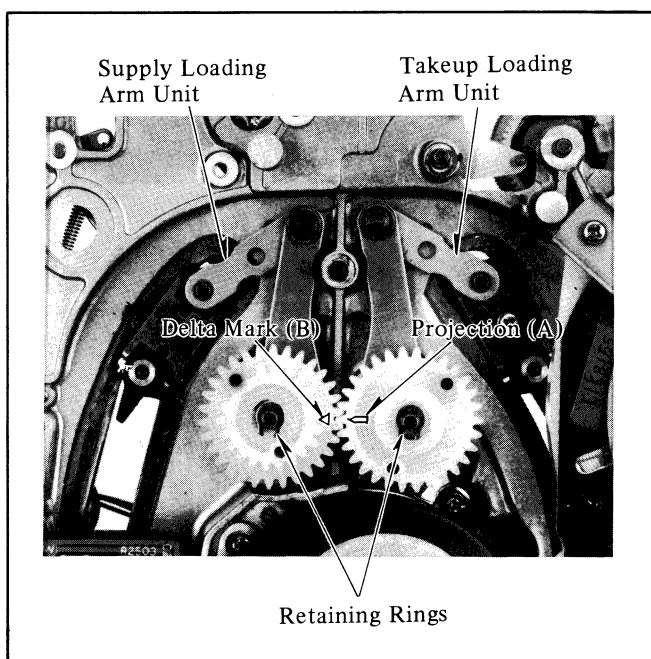


Fig. M42. Assembly and Adjustment of Gears and Rods-(1)

**Note:**

Pay attention that the washers are remaining under the loading gears.

2. Install the sector gear (II). Next install the sector gear (III) so that the convex on the sector gear (III) fits in with the concave on the sector gear (II). Then install the retaining ring.

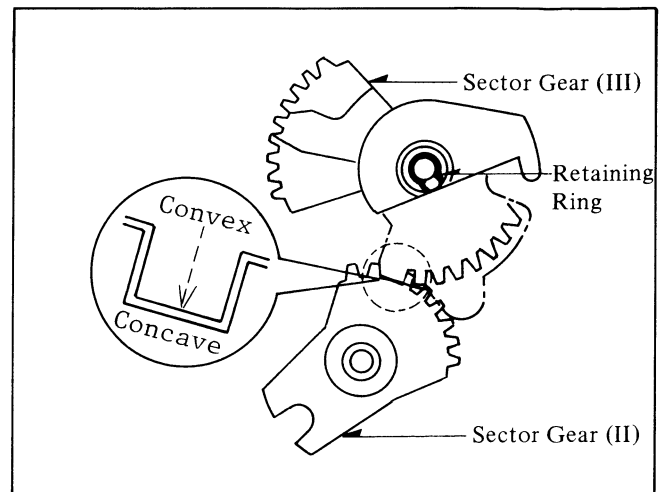


Fig. M43. Assembly and Adjustment of Gears and Rods-(2)

Next, align the delta "Δ" mark (C) on the sector gear (III), rib (D) on the sector gear (II) and the shaft (E) as they are on one line.

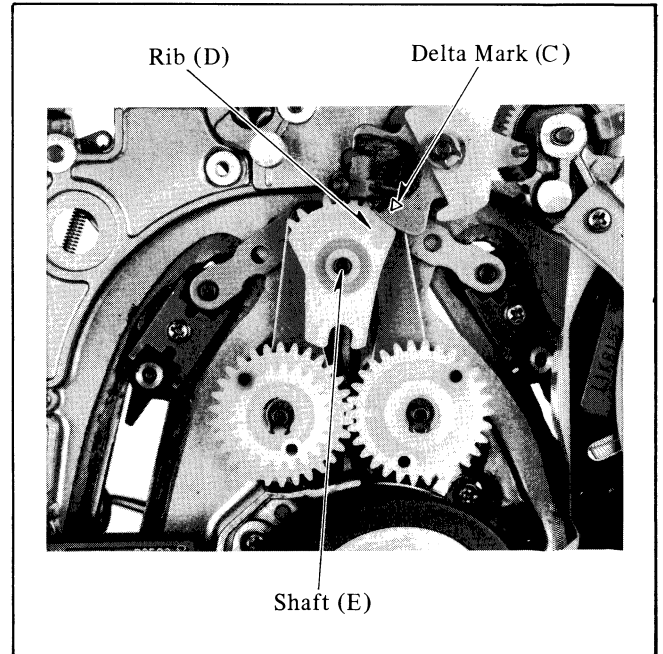


Fig. M44. Assembly and Adjustment of Gears and Rods-(3)

Then install the sector gear (I) so that the hole (F) on the sector gear (I) aligns with the projection (G) on the supply loading gear. Then install the retaining ring.

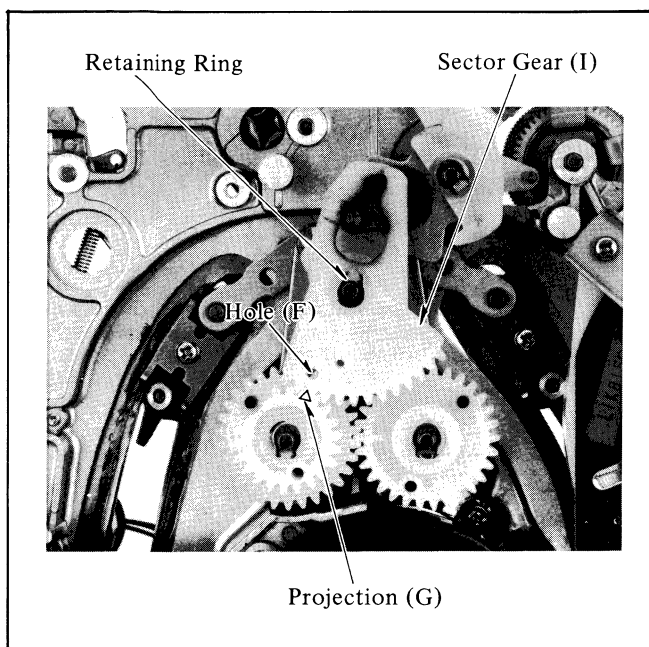


Fig. M45. Assembly and Adjustment of Gears and Rods-(4)

3. Install the sub cam gear so that the hole on gear meets the hole on the chassis.

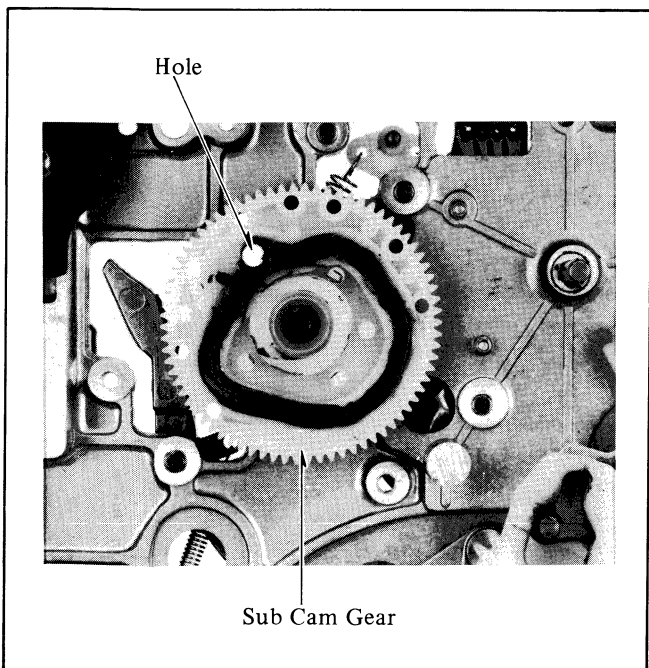


Fig. M46. Assembly and Adjustment of Gears and Rods-(5)

4. Install the 4 washers. And install the sub rod unit so that the pin on the sub rod unit fits into the sub cam gear.

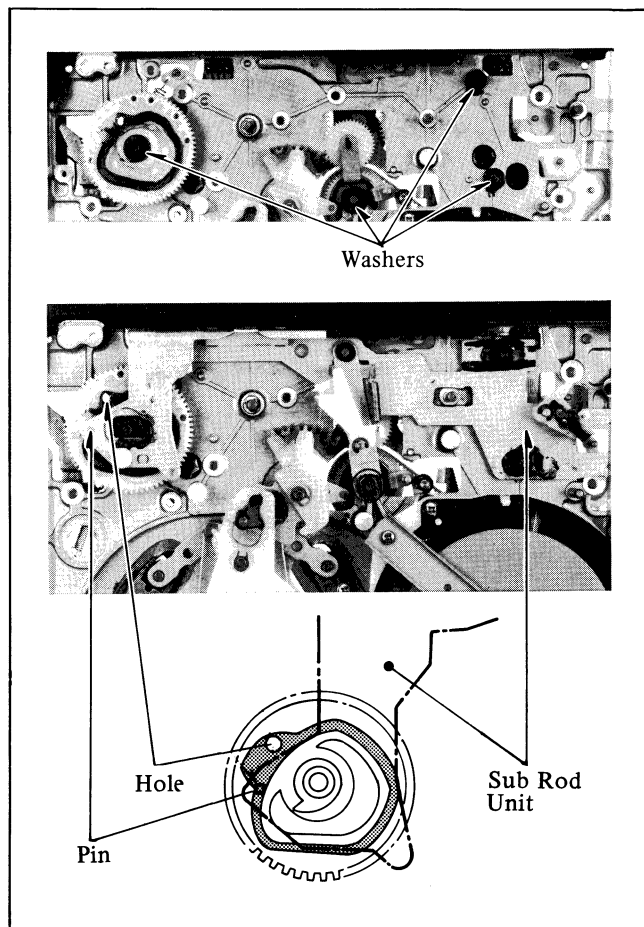


Fig. M47. Assembly and Adjustment of Gears and Rods-(6)

Then install the 4 washers, 2 retainings and 2 springs (H).

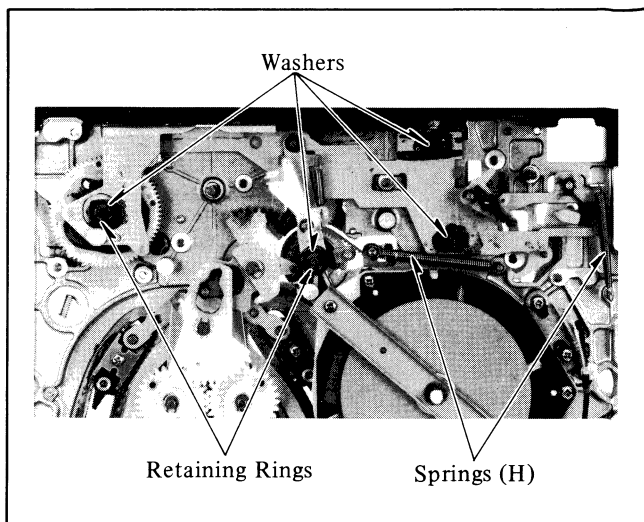


Fig. M48. Assembly and Adjustment of Gears and Rods-(7)

5. Confirm the sub cam gear is keeping the condition described in step 3. Then, install the main cam gear so that the hole (J) on the main cam gear aligns with the hole (K) on the sub cam gear.

And install the washer.

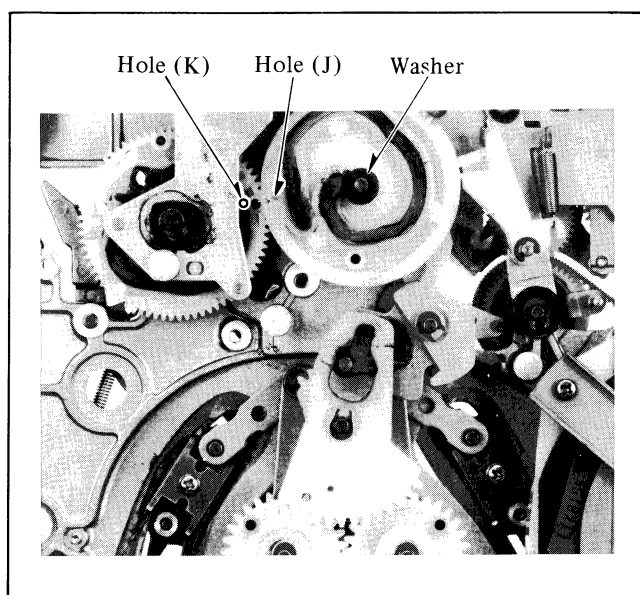


Fig. M49. Assembly and Adjustment of Gears and Rods—(8)

6. Install the main rod unit so that the pin (L) on the main rod unit fits into the part (M) on the sub rod unit. Then install 3 washers and 4 retaining rings.

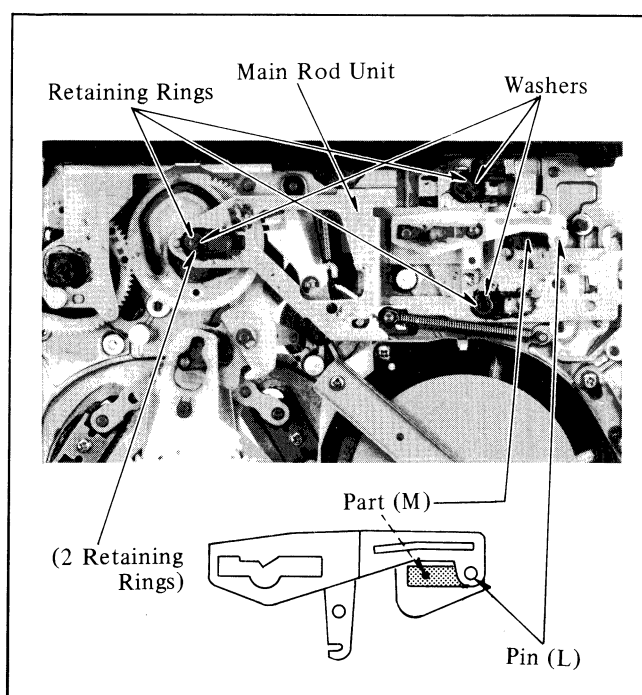


Fig. M50. Assembly and Adjustment of Gears and Rods—(9)

7. Confirm the sub cam gear is keeping the condition described in step 3. Then, install the eject stopper unit, screw (N), spring (P), eject kick lever unit, retaining ring and spring (Q).

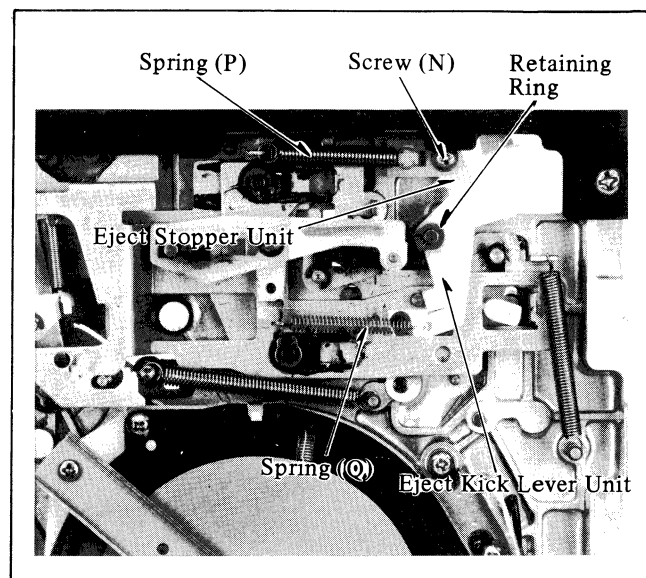


Fig. M51. Assembly and Adjustment of Gears and Rods—(10)

**Note:**

Do not transform the springs when installing them.

8. Confirm the sub cam gear is keeping the condition described in step 3. Rotate the gear on the rotary switch so that it becomes click (detent) position, then install the switch with 2 screws (R).

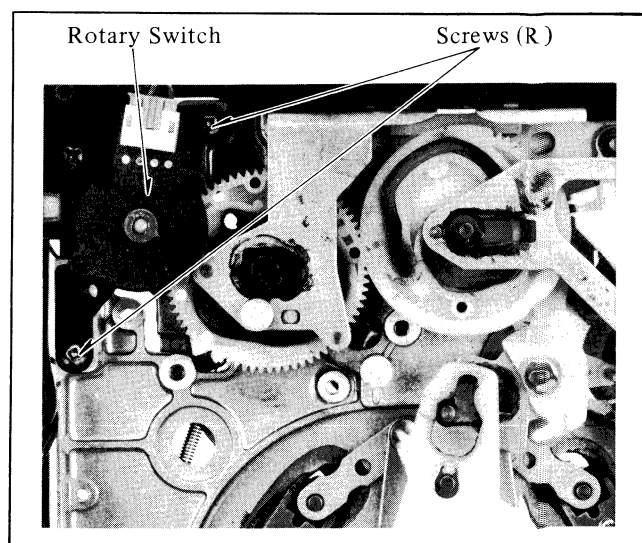


Fig. M52. Assembly and Adjustment of Gears and Rods—(11)

**Note:**

There is one click point per 4 rotations.

9. Rotate the sub cam gear counter-clockwise by your finger and make short loading. Then rotate it clockwise till the deck becomes the STOP condition. Then, install the loading motor with 3 screws (S) and connect the connector.

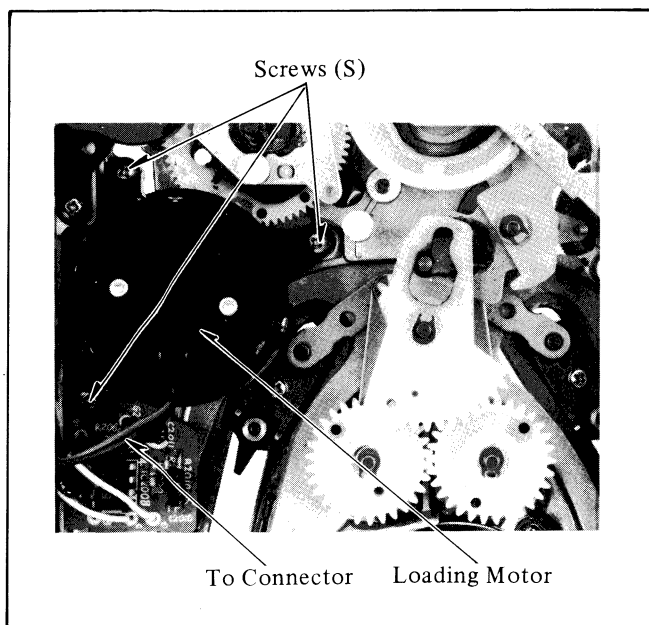


Fig. M53. Assembly and Adjustment of Gears and Rods—(12)

#### 15. POSITION ADJUSTMENT OF CASSETTE UP HOLDER

##### Equipment Required:

Cassette Holder Fixture ..... VFK0240

1. Supply power to the deck and make EJECT condition. Then turn power off.
2. Remove 2 screws (A) and loosen 4 screws (B).
3. Insert the fixture and push it all the way in until it touches the tabs on the cassette holder. Hold the fixture and cassette holder together with your hand, then slowly lower it while watching all holes and cut-outs until the cassette holder latches.
4. Press the center portion of the fixture and adjust the position so as to clear the reels, then tighten 4 screws (B). And tighten 2 screws (A).

5. Supply power again and ensure smooth movement by repeatedly pressing down and ejecting the cassette holder.

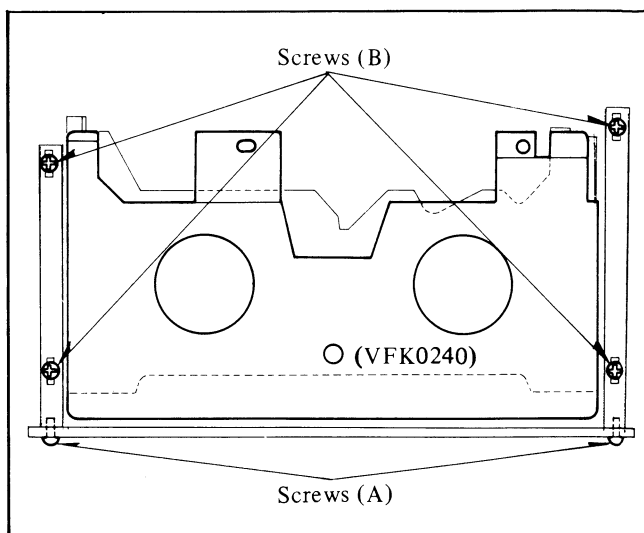


Fig. M54. Position Adjustment of Cassette Up Holder

#### 16. ADJUSTMENT OF LEAF SWITCHES

##### Equipment Required:

Leaf Switch Adjustment Fixture

..... VFK0239

Fine Adjustment Screwdriver

..... VFK0136

1. Remove the Cassette Up Protector (plastic cover) on the leaf switches.
2. Set the fixture to the lock roller pin and lower edge of cassette up holder.
3. Slightly loosen screw (A) and insert the adjustment screwdriver to the hole (B).
4. Adjust the gap (C) so that the up lever and down lever just touches with leaf switches by turning adjustment screwdriver, then tighten screw (A).
5. Upon completion of adjustment, confirm the condition of leaf switches. (See Fig. M56.)

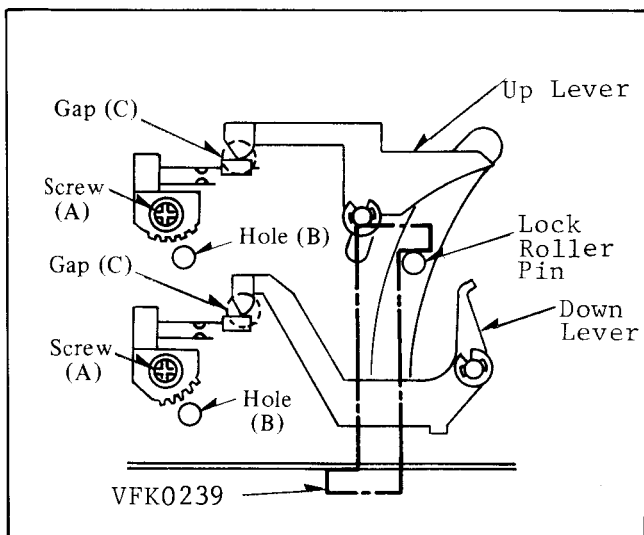


Fig. M55. Adjustment of Leaf Switches

| Leaf Switches<br>Cassette Up Holder | Up Side Leaf Switch | Down Side Leaf Switch |
|-------------------------------------|---------------------|-----------------------|
| UP                                  | ON                  | ON                    |
| DOWN                                | OFF                 | ON                    |

Fig. M56. Confirmation of Leaf Switch

## 17. POSITION ADJUSTMENT OF RECORDING SAFETY SWITCH

### Equipment Required:

Cassette Holder Fixture ..... VFK0240

Hex. Wrench (0.9mm) ..... VFK0146

1. Place the fixture in place over the reel tables.
2. Insert the hex. wrench into the hex. screw. Turn hex. wrench in either direction till the switch closes.

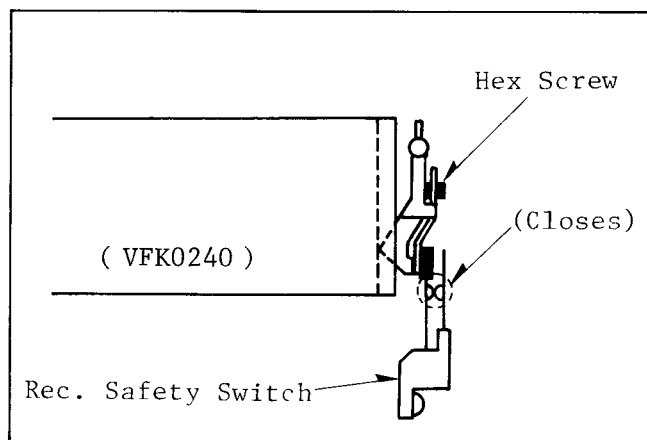


Fig. M57. Position Adjustment of Recording Safety Switch-(1)

### Note:

When cassette with an erase tab is used, the switch closes, and without a tab, it opens.


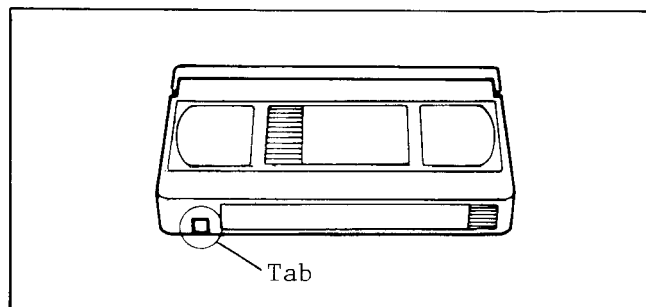


Fig. M58. Position Adjustment of Recording Safety Switch-(2)

## Servicing Fixtures & Tools

VFM8100H3D VHS Alignment Tape

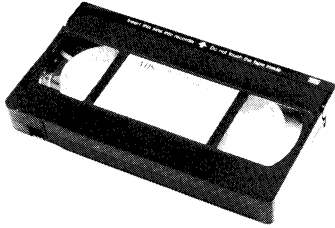


VFK0137 Post Adjustment Screwdriver




VFK0189 H-Position Adj Fixture




Back Tension Meter  
(Tentelometer, Made in U.S.A.)

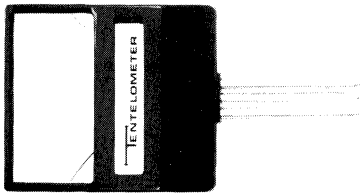


VFK0191 Post Adjustment Plate

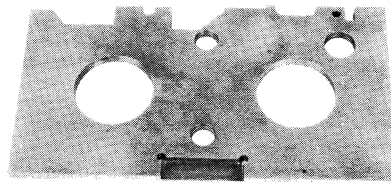


VFK0240 Cassette Holder Fixture

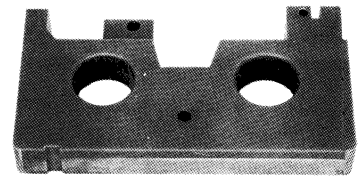


VFK0133 Dial Torque Gauge  
VFK0180 (Plastic Clamper Only)

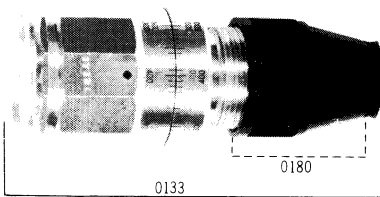

VFK0190 Reel Table Height Fixture

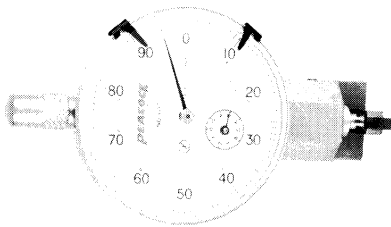


VFK0248 Solder Iron  
VFK0249 Transformer

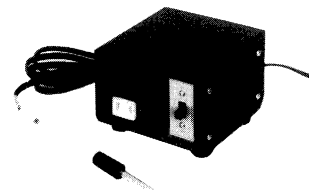

VFK0134 Adaptor for VFK0133




VFK0241 Tension Post Adj. Plate

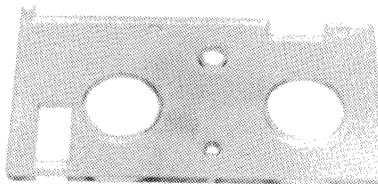


VFK27 Head Cleaning Stick




VFK0239 Leaf Switch Adj. Fixture

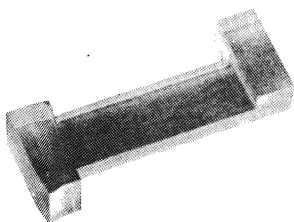

VFK0144 Retaining Ring Remover  
(3mmφ)

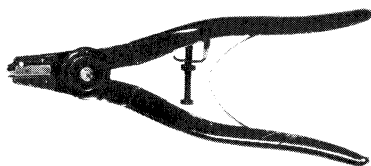

MOR265 Morlytone Grease

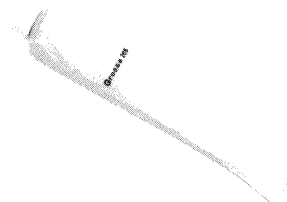


VFK0136 Fine Adjustment  
Screwdriver (3mmφ)



VFK0146 Hex. Wrench (0.9mm)  
VFK76 Hex. Wrench (1.5mm)



VFK66 Fan-type Tension Gauge

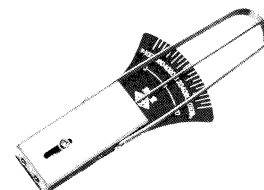



# ELECTRICAL ADJUSTMENT PROCEDURES

This section provides complete electrical adjustment procedures which may be required for electric circuits of portable VHS video cassette recorder.

## 1. TEST EQUIPMENT

To perform the electrical adjustments completely, the following equipment is required.

1. DVM (Digital Volt Meter)  
Voltage Range: 0.001 - 50V
2. Dual-trace Oscilloscope  
Voltage Range : 0.05 - 50V/Div.  
Frequency Range: DC - 10MHz  
Probes: 10:1, 1:1
3. Frequency Counter  
Frequency Range: 0 - 10MHz
4. Signal Generator  
Sinewave: 0 - 10MHz
5. Sweep Generator  
Frequency Range: 0 - 10MHz
6. Color TV Receiver or Monitor
7. Plastic Tip Driver
8. VHS Alignment Tape  
VFM8100H3D

## 2. ADJUSTMENT PROCEDURES

Note: Components and Test Points in each section are series numbers. But for, easy alignment only the last numbers are used on P.C. Board.

These adjustment procedures consist of the following sections.

|                                 | <u>SERIES</u>    |
|---------------------------------|------------------|
| 1. A.V.R. Section .....         | 1000             |
| 2. System Control Section ..... | 6000             |
| 3. Servo Section .....          | 2000             |
| 4. Audio Section .....          | 4000             |
| 5. Video Section ..             | Luminance . 3000 |
|                                 | Chrominance 8000 |

### 2-1. A.V.R. Section

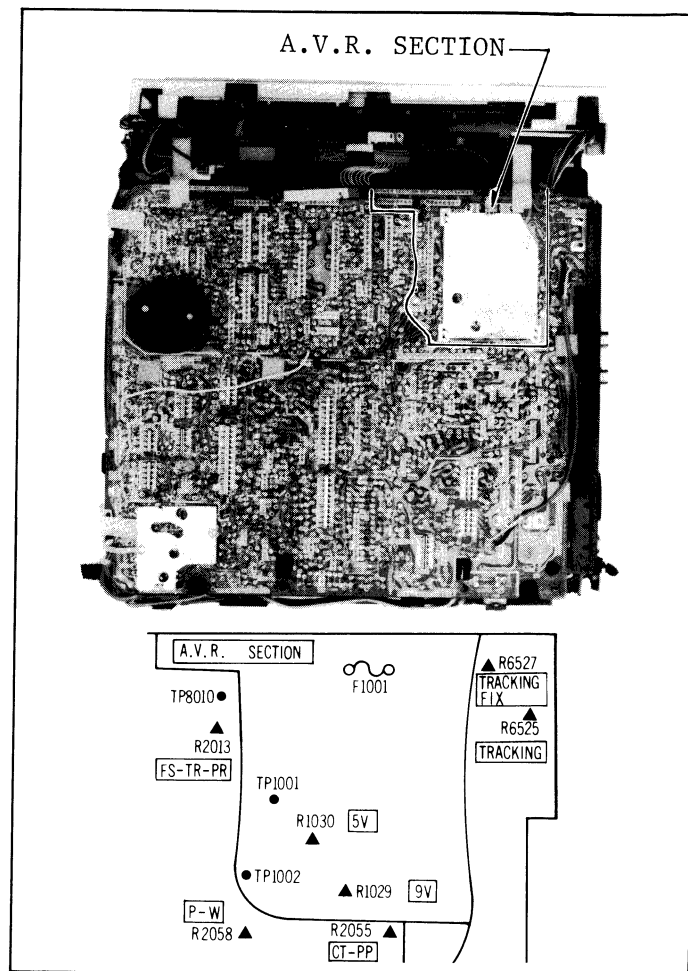


Fig. E1

#### 2-1-1. +9V, +5V Regulator Adjustment

Test Points: TP1001, TP1002

Adjustments: R1029 (+9V), R1030 (+5V)

1. Connect the Multi-Connector to the deck so that  $+12V \pm 0.5V$  is supplied to the deck.
2. Place the deck in PLAY mode.
3. Connect the DVM to TP1001 on the A.V.R. Section.
4. Adjust the +9V ADJ. (R1029) on the same section so that the voltage at TP1001 is  $9.1 \pm 0.1V$  DC. Remove the DVM.
5. Connect the DVM to TP1002 on the same section.
6. Adjust the +5V ADJ. (R1030) on the same section so that the voltage at TP1002 is  $5.1 \pm 0.1V$  DC.
7. Remove the DVM.

## 2-2. System Control Section

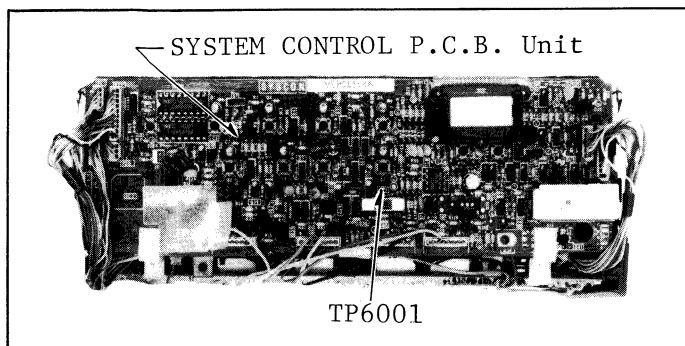


Fig. E2

### 2-2-1. Under Cut Voltage Adjustment

Test Point: TP6001

Adjustment: R6088 (UNDER CUT)

1. Do not supply any video and audio signals to the deck.
2. Do not connect the Multi-Connector to the deck.
3. Turn the UNDER CUT (R6088) on the System Control Board fully counter-clockwise from parts side.
4. Set the DC Voltage Regulator output voltage to  $+12 \pm 0.1V$  DC, and this output voltage connects to the battery terminal of the deck.

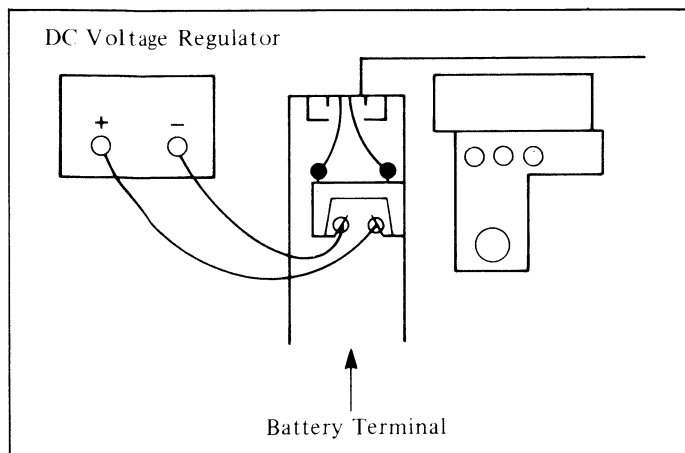


Fig. E3

5. Connect the scope to TP6001 on the same board and connect the DVM to the battery terminal of the deck.
6. Turn the power switch of the deck to on.
7. Insert a cassette and place the deck in Rec•Play mode.
8. Adjust the DC Voltage Regulator so that the voltage is  $10.6 \pm 0.1V$  DC.

9. Then, slowly turn the UNDER CUT (R6088) clockwise till the DC voltage change from High to Low at TP6001.
10. Confirm that the "1" mark is indicated (flash) on the LCD counter for 3sec. Then the power switch of the deck is automatically turned OFF.

## 2-3. Servo Section


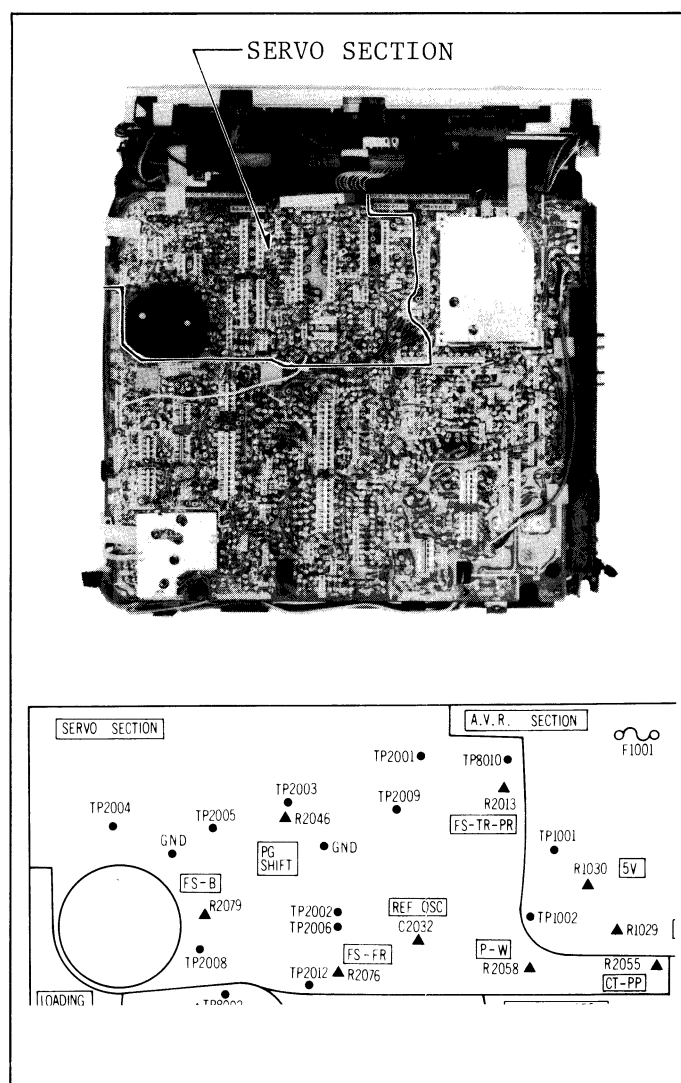


Fig. E4

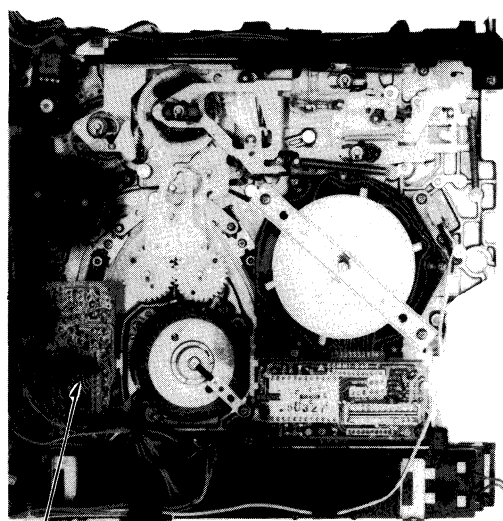

—CYLINDER MOTOR DRIVE C.B.A.

▲  
R2515

CYLINDER MOTOR DRIVE

Fig. E5

### 2-3-1. 4.43MHz Crystal Oscillator Adjustment

Test Point: TP2006

Adjustment: C2032 (4.43MHz OSC)

1. Do not supply any video signal to the video input on the right side panel.
2. Supply +12V DC voltage, but do not use the Tuner unit.
3. Set the deck in STOP mode.
4. Connect the frequency counter to TP2006 on the Servo section.
5. Adjust the 4.43MHz OSC (C2032) on the same section so that the frequency is  $4433619 \pm 20\text{Hz}$ .

### 2-3-2. PG Shifter Adjustment

Test Points: TP2003, TP3008

Adjustment: R2046 (PG SHIFT)

1. Playback the alignment tape. (VFM8100H3D).
2. Connect the scope CH1 to TP2003 on the Servo section and CH2 to TP3008 on the Luminance section. Use TP2003 to trigger the scope.
3. Set the scope to the CHOP mode, then expand the V-Sync portion.
4. Adjust PG SHIFT (R2046) on the Servo section so that the head switching point becomes  $6H \pm 1H$  before the start of V-Sync portion.
5. Change the slope selector on the scope from "+" to "-" and make sure that the difference between rising edge and falling edge is less than  $10\mu\text{sec}$ .

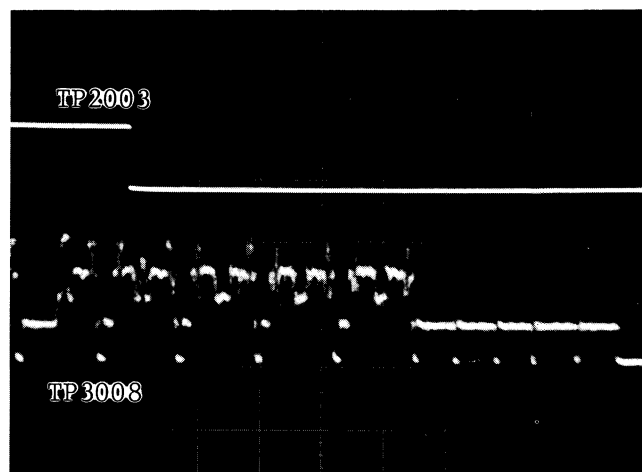


Fig. E6 (Up) 5V/50 $\mu\text{sec}$ .div.

(Down) 1V/50 $\mu\text{sec}$ .div.

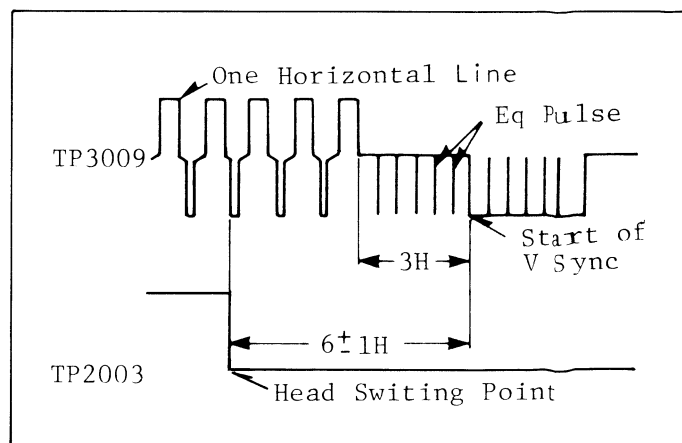


Fig. E7

### 2-3-3. Tracking Fix Adjustment

Test Points: TP2003, TP2005

Adjustment: R6526 (TRACKING FIX)

1. Supply video signal to the video input on the right side panel of the deck and make a recording for a few minutes.
2. Playback the just recorded portions, and connect the scope CH1 to TP2003 and CH2 to TP2005 both on the Servo section.
3. Set the scope to CHOP mode, and adjust TRACKING FIX (R6526) on the same section so that the "T" period becomes  $0.4 \pm 0.4\text{msec}$ .

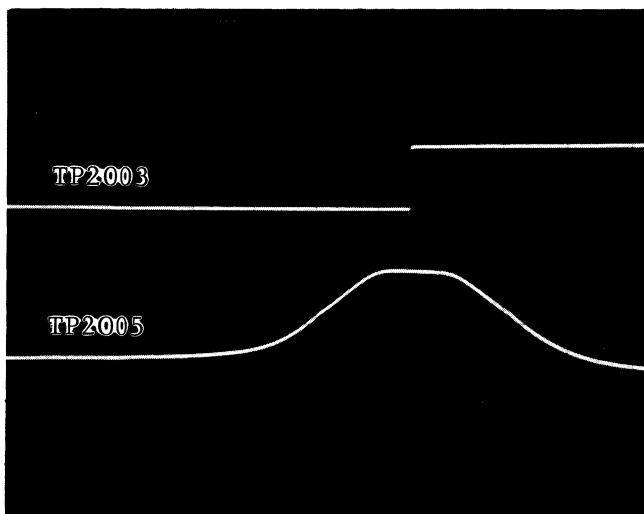


Fig. E8 (Up) 5V/0.1sec.div.  
(Down) 1V/0.1sec.div.

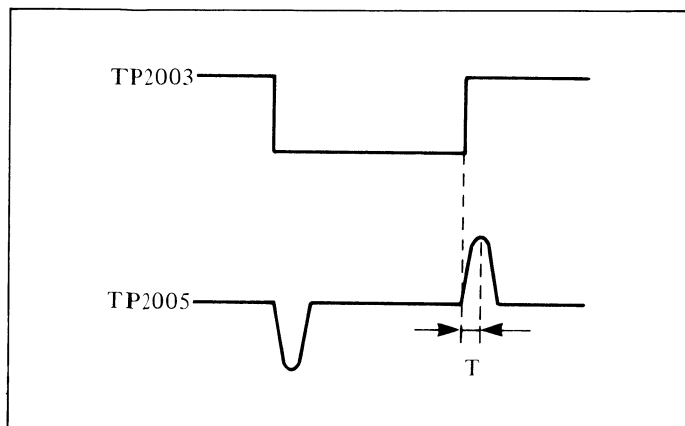


Fig. E9

### 2-3-4. Fine Slow Brake Adjustment

Test Points: TP2007, TP2008, TP2011

Adjustment: R2079 (F.S.B)

\* Note Do not remove P23 connector on the System Control P.C.Board Unit.

1. Supply video signal to the video input on the right side panel of the deck, and make a recording for a few minutes.
2. Connect the scope CH1 to TP2008, CH2 to TP2011 and EXT TRIG to TP2007 on the Servo section.
3. Set the scope to CHOP mode, and playback the just recorded portions.
4. Press the Slow button and adjust F.S.B (R2079) on the same section so that the FG pulse is disappeared in "T" period, as shown below.

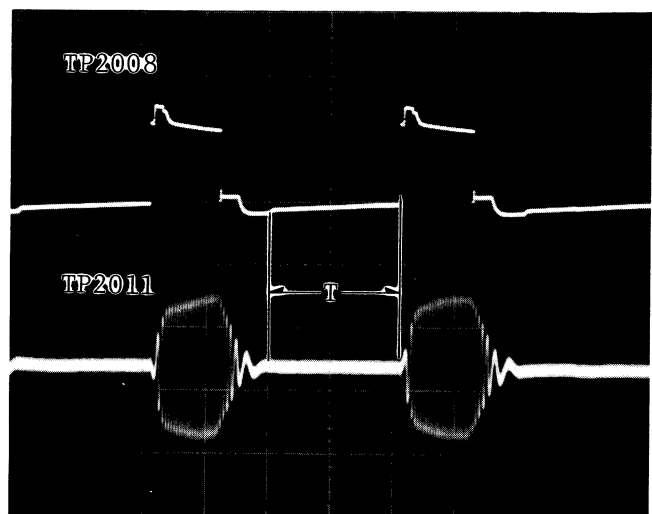


Fig. E10 (Up) 1V/50msec.div.  
(Down) 50mV/50msec.div.

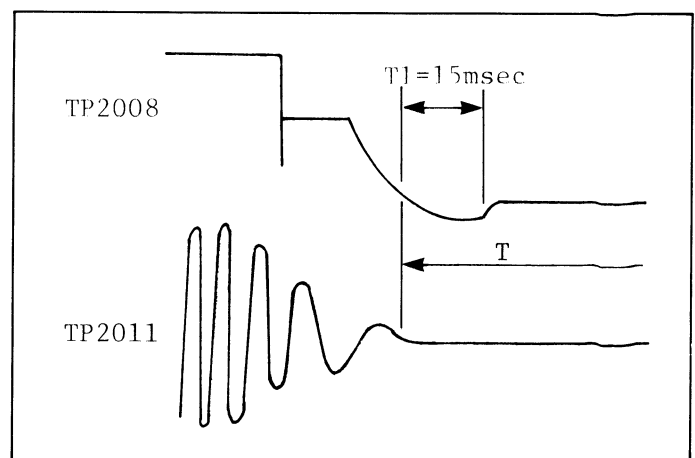


Fig. E11

### 2-3-5. Artificial V-Sync Adjustment

Test Points: TP2003, TP2012

Adjustments: R2055 (V-A), R2058 (V-B)

1. Supply video signal to the video input on the right side panel of the deck and make a recording for a few minutes.
2. Connect the scope CH1 to TP2003 and CH2 to TP2012 both on the Servo section.
3. Playback the just recorded portions and press the Pause button.
4. Adjust V-B (R2058) and V-A (R2055) both on the same section so that the waveforms are as shown in Fig. E12.
5. If V-dancing is appeared on the TV monitor after adjustment, then slowly turn the R2055 till the V-dancing is disappeared.

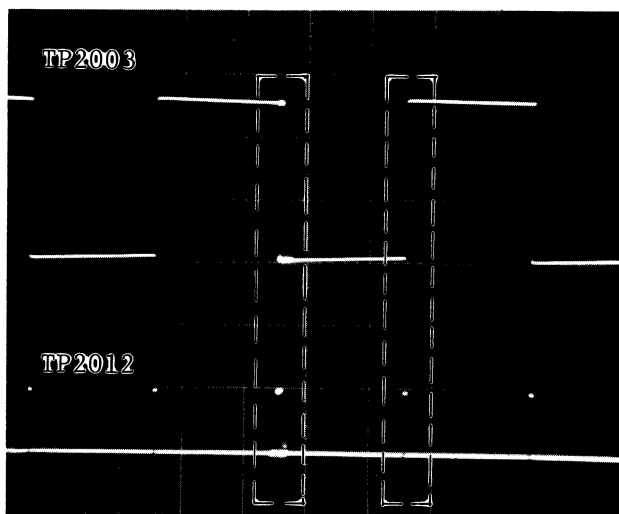


Fig. E12 (Up) 2V/10msec.div.  
(Down) 2V/10msec.div.

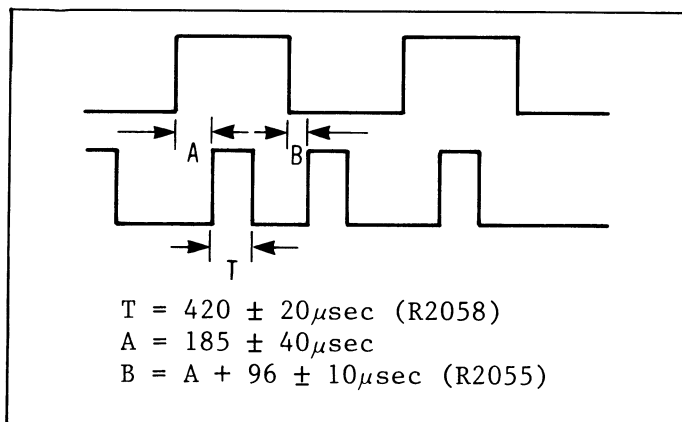


Fig. E13

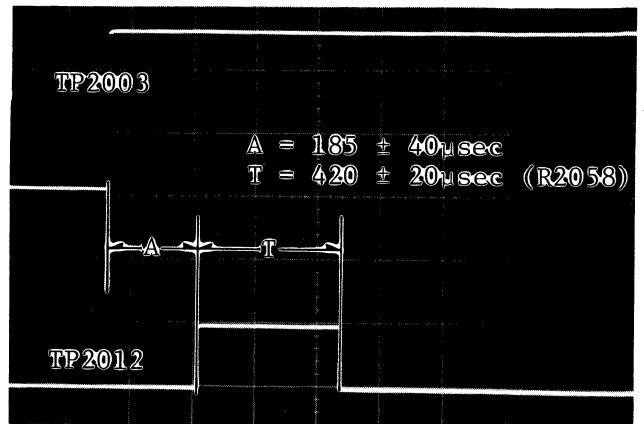


Fig. E14 (Up) 2V/0.2msec.div.  
(Down) 2V/0.2msec.div.

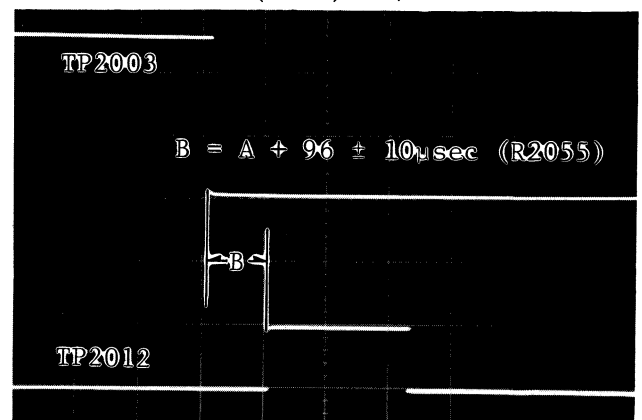


Fig. E15 (Up) 2V/0.2msec.div.  
(Down) 2V/0.2msec.div.

### 2-3-6. Adjustments of Fine Slow Speed and Fine Slow Tracking


Test Point: Pin (17) of IC2001

Adjustments: R2013 (F.S. TR)

R2067 (F.S.S.)

1. Supply colour bar signal to the video input on the right side panel of the unit, and make a recording for a few minutes.
2. Playback the just recorded portions, and disconnect the P6023 connector P6023 for Slow Tracking VR on the System Control P.C.B.
3. Connect the frequency counter to pin (17) of IC2001 in the Servo section and press the SLOW button on the System Control P.C. Board.
4. Adjust F.S.S. (R2067) on the Servo section so that the indication of frequency counter becomes  $492\text{Hz} \pm 2\text{Hz}$ .
5. Again connect the connector P6023 for Slow Tracking VR and set the Slow Tracking VR on the front panel to center detent position.
6. Adjust F.S.TR (R2013) on the Servo section so that the noise band on the TV monitor becomes minimum.

## 2-4. Audio Section

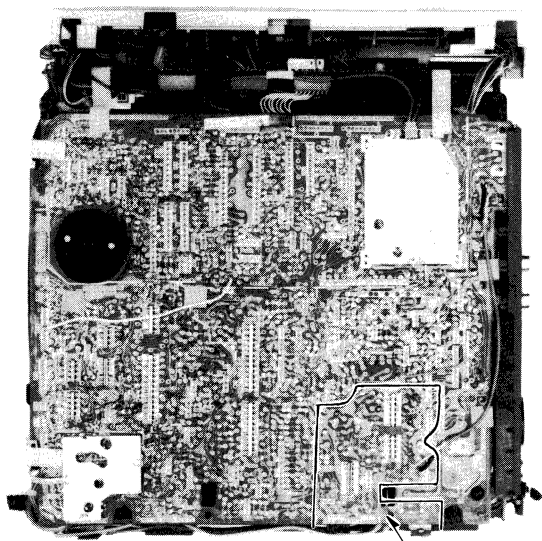

AUDIO SECTION

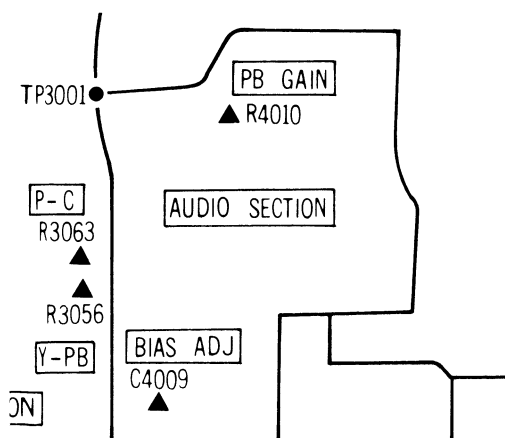


Fig. E16

### 2-4-1. Bias Current Adjustment

Test Points: A/C Head Test Pins

Adjustment: C4009 (BIAS CURR)

1. Do not supply any audio signal to the deck.
2. Connect the DVM between A/C Head Test Pins.
3. Place the deck in REC.PLAY mode, and adjust BIAS OSC (C4009) on the Audio section so that the indication of DVM is  $4.1\text{mVrms} \pm 0.1\text{mVrms}$ .

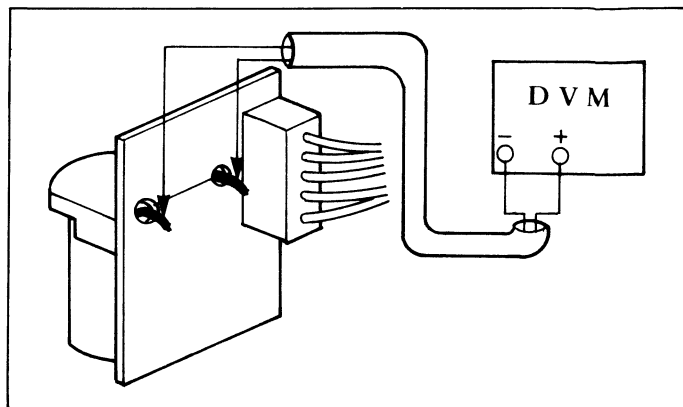


Fig. E17

### 2-4-2. Audio Playback Gain Adjustment

Test Point: LINE OUT connector

Adjustment: R4010 (P.B. GAIN)

1. Connect the Audio Connector (Supplied Accessory: VJP1164) as shown below.

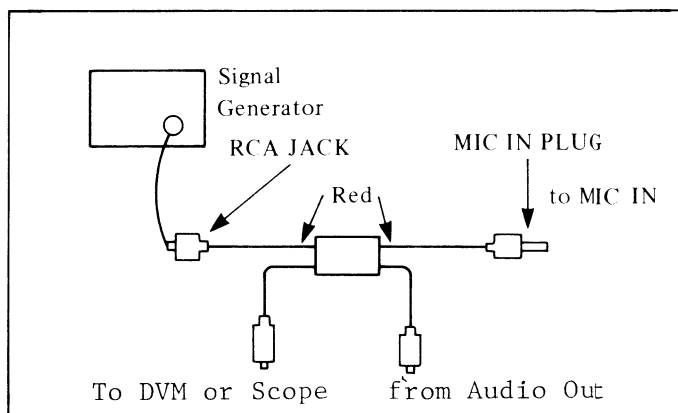


Fig. E18

2. Set the Sine Wave Generator output so that the indication of D.V.M. becomes  $200\text{mVrms}$  in Rec.Play mode.
3. Make a recording for a few minutes.
4. Playback the just recorded portions, and adjust P.B. Gain (R4010) on the Audio section so that the level of audio line output is  $200\text{mVrms}$  ( $565\text{mVp-p}$ ).

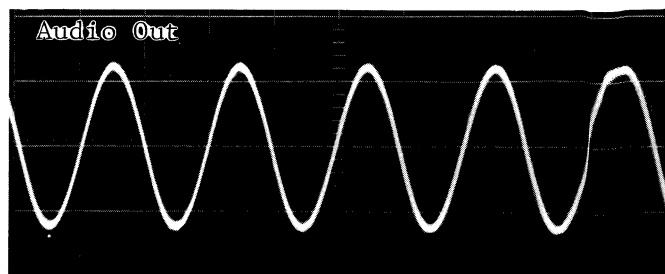


Fig. E19  $0.2\text{V}/0.5\text{msec.div.}$

## 2-5. Video Section

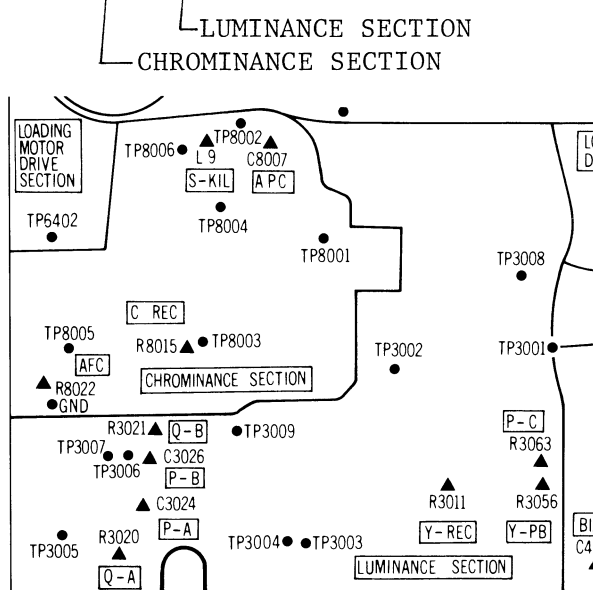
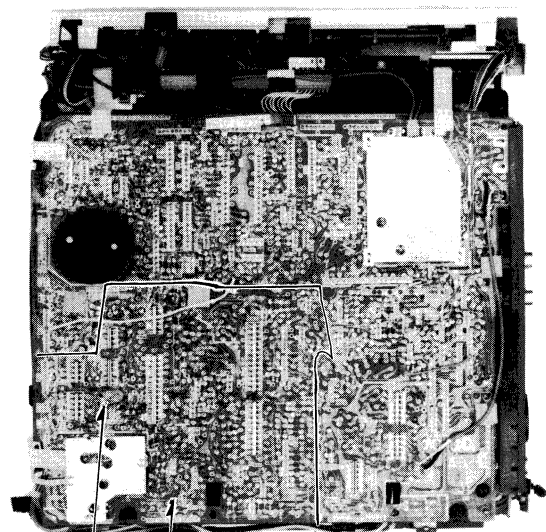


Fig. E20

### 2-5-1. AFC Adjustment

Test Point: TP8005

Adjustment: R8022 (AFC)

1. Do not supply any video signal to the deck, and place the deck in REC.PLAY mode.
2. Connect the frequency counter to TP8005 on the Chrominance section.
3. Adjust AFC (R8022) on the same section so that the frequency is  $15.625 \pm 0.05\text{kHz}$ .

### 2-5-2. APC Adjustment

Test Point: TP8001

Adjustment: C8007

1. Do not supply any video signal to the deck, and place the deck in REC.PLAY mode.
2. Connect the jumper wire between TP8002 and GND through the  $10\text{k}\Omega$  resistor. Connect the jumper wire between TP8004 and GND. There are on the Chrominance section.
3. Connect the frequency counter to TP8001 on the same section.
4. Adjust APC (C8007) on the same section so that the frequency is  $4433619 \pm 50\text{Hz}$ .

### 2-5-3. SECAM Killer Adjustment (For NV-100EG)

Test Point: TP8006

Adjustment: L8009 (SECAM KILL)

1. Supply SECAM colour bar signal to the video input on the right side panel of the deck, and place the deck in REC.PLAY mode.
2. Connect the scope to TP8006 on the Chrominance section.
3. Adjust SECAM KILL (L8009) on the same section so that the waveform at TP8006 becomes maximum.

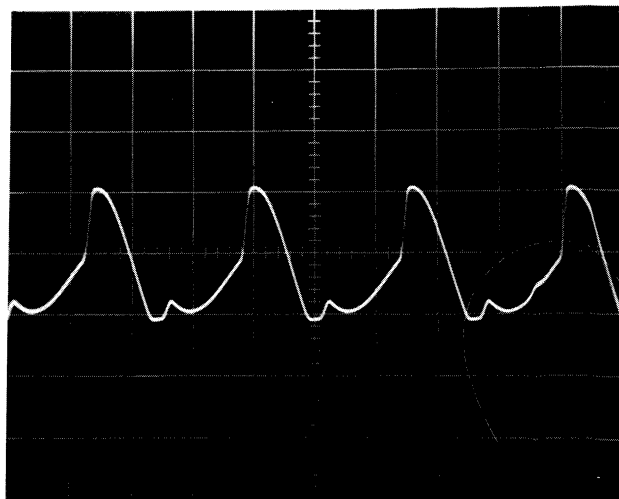


Fig. E21 1V/50μsec.div.

#### 2-5-4. Chroma Rec Current Adjustment

Test Points: TP3006 (GND), TP3007 (HOT)

Adjustments: R3011 (REC FM)  
R8015 (REC CHROMA)

1. Supply colour bar signal to the video input on the right side panel of the deck.
2. Place the deck in REC.PLAY mode.
3. Connect the scope between TP3006 (GND) and TP3007 (HOT) both on the Luminance section.
4. Turn the REC FM (R3011) fully counterclockwise, because REC FM signal is minimum.
5. Adjust REC CHROMA (R8015) on the Chrominance section so that the cyan portion of the chroma signal becomes  $32 \pm 2\text{mVp-p}$ .

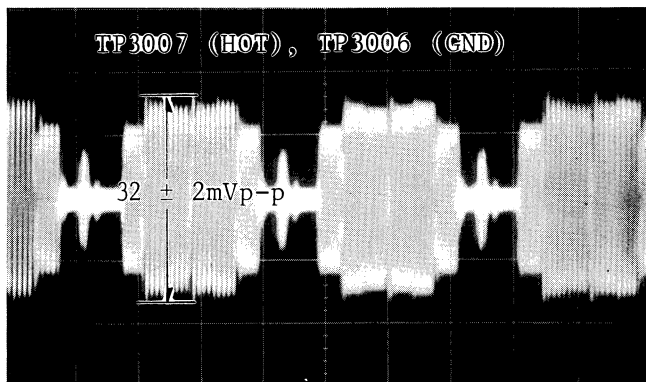


Fig. E22 10mV/20μsec.div.

6. Adjust REC FM (R3011) on the Chrominance section so that the Sync-Tip portion of FM signal becomes  $150 \pm 5\text{mVp-p}$ .

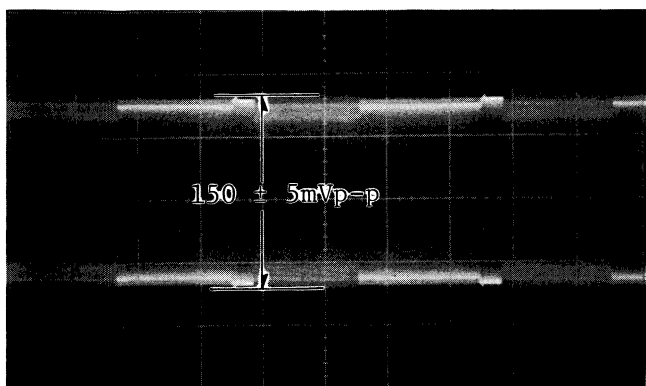


Fig. E23 50mV/5msec.div.

#### 2-5-5. Head Amp Peak Adjustment

Test Point: TP3009

Adjustments: R3020 (Q-A), R3021 (Q-B)  
C3024 (PEAK-A)  
C3026 (PEAK-B)

1. Do not supply any video signal to the deck.
2. Turn the Q-A (R3020) and Q-B (R3021) both on the Luminance section to center.
3. Adjust the level of sweep generator to 28mV at 4.9MHz portion.
4. Connect the sweep generator to TP3005 on the Luminance section. And put the marker on 4.9MHz.
5. Cover the supply and takeup photo transistors with two pieces of black paper and place the unit in the PLAY/PAUSE mode without a tape.
6. Connect the scope to TP3009 on the same section.
7. Adjust PEAK-A (C3024) and PEAK-B (C3026) both on the same section so that the peaks on the scope becomes 4.9MHz portions.
8. Adjust R3020 and R3021 so that the CH A and CH B waveforms are balanced and 200mVp-p.

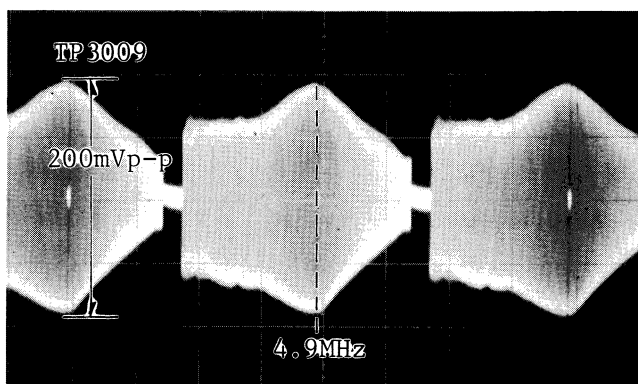


Fig. E24 50mV/5msec.div.

#### 2-5-6. Frequency Response Adjustment

Test Points: TP3007 (HOT), TP3006 (GND)  
TP3009

Adjustments: R3020 (Q-A), R3021 (Q-B)

1. Insert the cassette tape and place the deck in REC.PLAY mode.
2. Connect the jumper between TP3003 and GND both on the Luminance section.
3. Connect the scope between TP3006 (GND) and TP3007 (HOT) both on the same section.



4. Connect the sync-output of sweep generator to the video input on the right side panel of the deck, and connect the sweep signal output to TP3004 on the same section.
5. Put the marker of sweep output at 2MHz, 3.8MHz and 4.9MHz and set the output level of 3.8MHz portion for 150mVp-p on the scope.

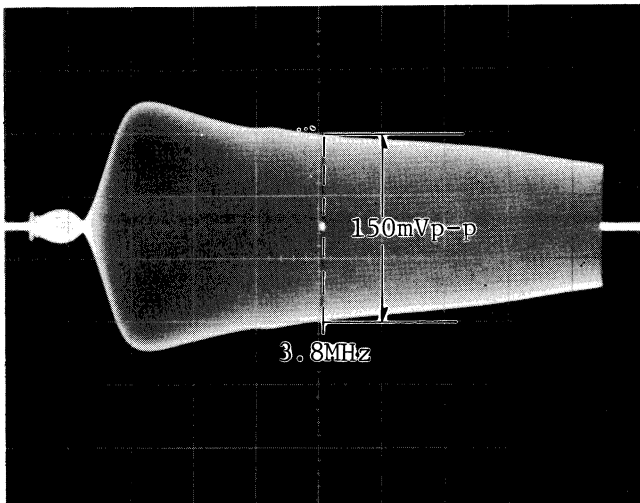


Fig. E25 50mV/2msec.div.

6. Remove the jumper wire, sweep generator and scope after few minutes passed.
7. Connect the scope to TP3009 on the same section.
8. Playback the just recorded portions, and adjust Q-A (R3020) and Q-B (R3021) both on the same section so that the 2MHz portions and 4.9MHz portions are as shown below.

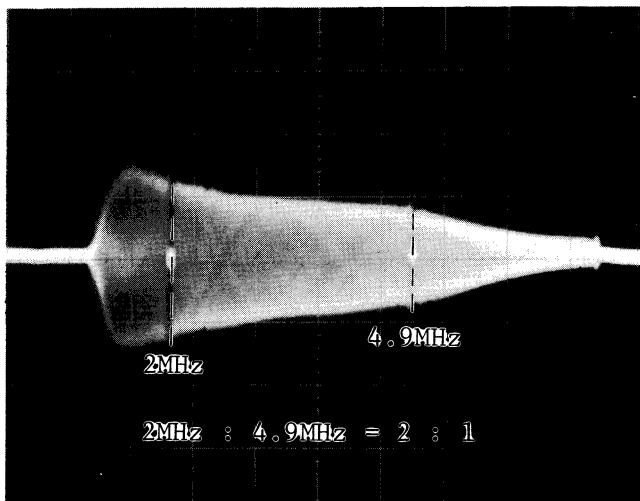


Fig. E26 50mV/2msec.div.

#### 2-5-7. Playback Level Adjustment



Test Point: TP3008

Adjustments: R3063 (PICTURE)  
R3056 (Y-PB)



1. Supply colour bar signal to the video input on the right side panel of the deck and make a recording for a few minutes.
2. Playback the just recorded portions and connect the 75Ω terminator to the video output of the deck.
3. Turn the PICTURE (R3063) on the Luminance section for center.
4. Connect the scope to TP3008 on the same section, and adjust Y-PB (R3056) on the same section so that the level of waveform is  $2.0 \pm 0.1$  Vp-p.

## LOCATION OF TEST POINT & CONTROLS



## MAIN P.C.B. UNIT (VEP03137A/VEP03137B)

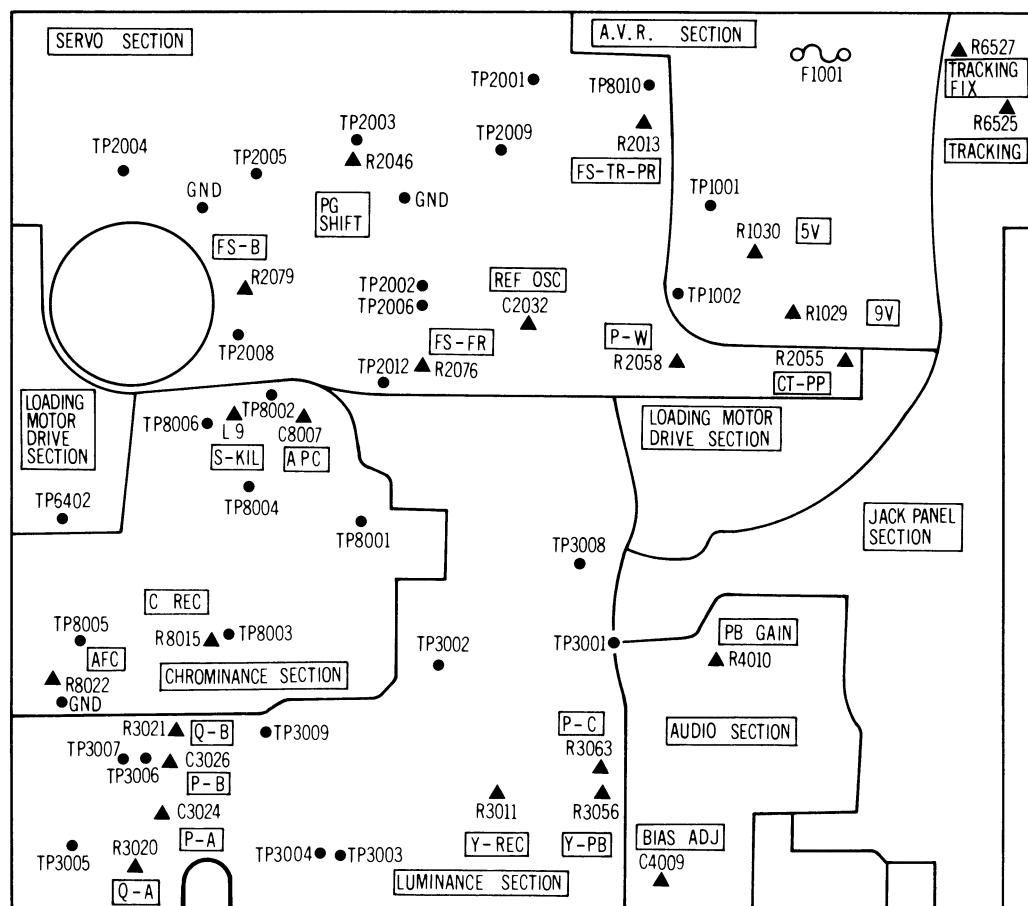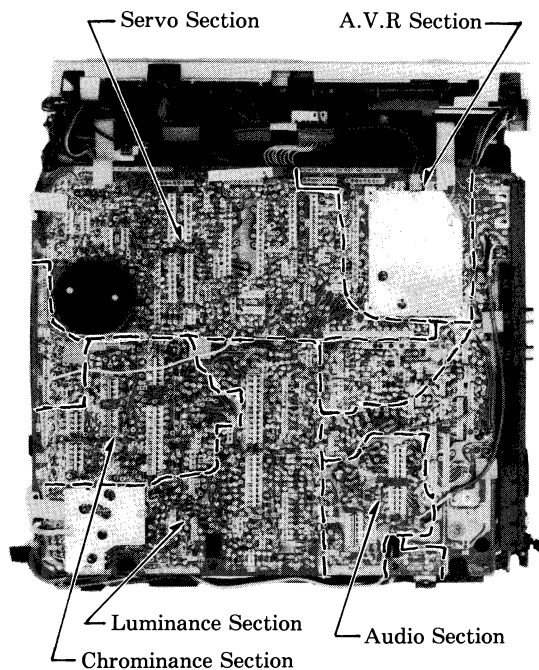

## SYSTEM CONTROL P.C.B. UNIT (VEP06164A)

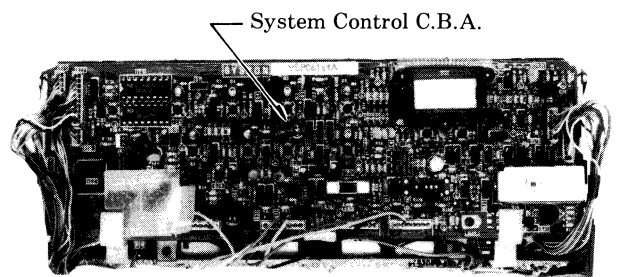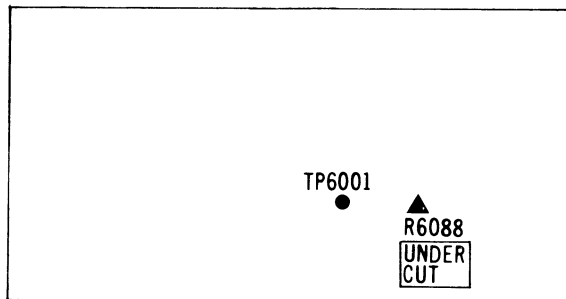

## CYLINDER MOTOR DRIVE P.C.B. UNIT (VEP02148B)

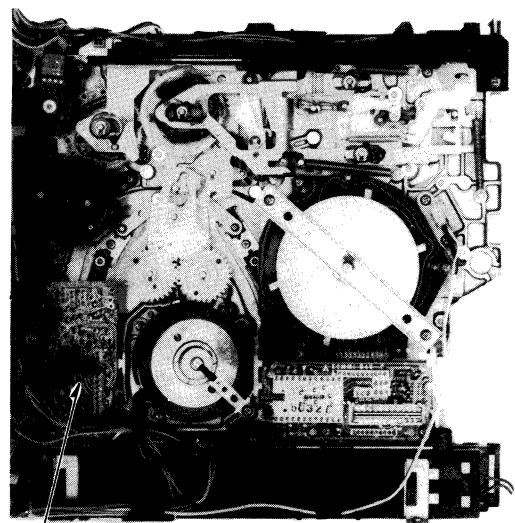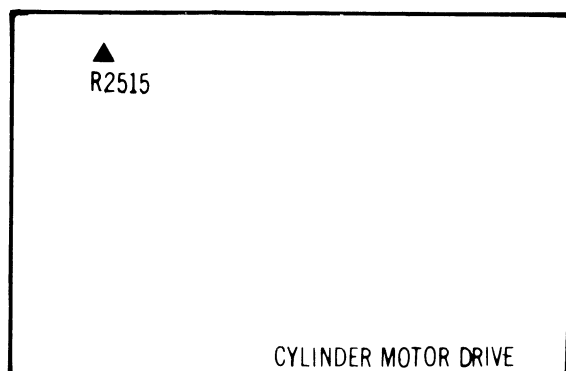

**Panasonic**  
**MATSUSHITA ELECTRIC**

**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

Portable Video Cassette Recorder

**Vol. 3**
**Panasonic VHS**
**NV-100** <sup>-E</sup><sub>-B</sub><sub>-EG</sub>

*Block Diagrams*  
*Schematic Diagrams*



## SPECIFICATIONS

Power Source: DC 12V  
Power Consumption: Approx. 6.7W at Play mode  
Video Recording

System: 2 rotary heads, helical scanning system  
Tape Speed: 23.39mm/s  
Tape Format: Tape width 12.7mm high density tape  
Record/Playback Time: 240 min. with NV-E240  
FF/REW Time: Less than 6.5 min. with NV-E180

### VIDEO

Television System: CCIR: 625 lines, 50 fields PAL colour signal  
(PAL/D.D.R SECAM colour signal: NV-100EG only)  
Modulation System: Luminance: FM azimuth recording  
Colour signal: converted subcarrier phase shift recording  
Input Level: VIDEO IN (BNC): 1.0Vp-p, 75Ω unbalanced  
Output Level: VIDEO OUT (BNC): 1.0Vp-p, 75Ω unbalanced  
RF Modulated: UHF channel 36 (±4), 75Ω unbalanced

### AUDIO

Input Level: MIC IN (M3): -70dB, more than 600Ω unbalanced  
10 pin input, Multi input: -20dB, 2.2kΩ unbalanced  
Output Level: LINE OUT (RCA): -6dB, 600Ω unbalanced  
Earphone: -10dB, 200Ω unbalanced  
Audio Track: 1 track

### Video Horizontal

Resolution: Colour: more than 240 lines  
Signal-to-Noise Ratio: Video: more than 40dB  
Audio: more than 43dB

### Audio Frequency

Response: 80Hz—10kHz

### Operating Room

Temperature: 0°C—40°C  
Operating Humidity: 35%—80%  
Weight: 3.8kg (with internal battery pack)  
Dimensions: 236(W) × 92(H) × 242(D)mm  
Standard Accessories: 1 pc. Video Cassette Tape

2 pcs. DIN-RF coaxial cable  
1 pc. Audio Input Attenuator  
1 pc. Earphone  
1 pc. Carrying Case

### Optional Accessories: Video cassette tape:

NV-E240 Approx. 344m, 240 min.  
NV-E180 Approx. 258m, 180 min.  
NV-E120 Approx. 174m, 120 min.  
NV-E90 Approx. 130m, 90 min.  
NV-E60 Approx. 88m, 60 min.  
NV-E30 Approx. 45m, 30 min.

Battery Pack, LCS2012E  
Video Tuner/Timer Adaptor, NV-V10  
AC Adaptor, NV-B11  
Wireless Remote Controller, NV-A17  
Wired Remote Controller, NV-A13  
Car Battery Cord, NV-C12  
Video Camera  
Microphone

Weight and dimensions shown are approximate.  
Specifications are subject to change without notice.


**Panasonic**
**Matsushita Electric Trading Co., Ltd.**

P.O. Box 288, Central Osaka Japan

# CONTENTS


|                                                        |       |
|--------------------------------------------------------|-------|
| SPECIFICATIONS .....                                   | Cover |
| BLOCK DIAGRAM .....                                    | 3- 1  |
| OVERALL .....                                          | 3- 1  |
| A.V.R. ....                                            | 3- 2  |
| JACK PANEL .....                                       | 3- 3  |
| MODE BY MODE IC TIMING CHART .....                     | 3- 4  |
| SYSTEM CONTROL .....                                   | 3- 5  |
| CHROMINANCE PROCESS .....                              | 3- 6  |
| LUMINANCE PROCESS .....                                | 3- 7  |
| SERVO .....                                            | 3- 8  |
| RF CONVERTER .....                                     | 3- 8  |
| A.V.R. SECTION SCHEMATIC DIAGRAM .....                 | 3- 9  |
| JACK PANEL SECTION SCHEMATIC DIAGRAM .....             | 3-10  |
| LOADING MOTOR DRIVE SECTION SCHEMATIC DIAGRAM .....    | 3-11  |
| MAIN P.C.B. UNIT .....                                 | 3-11  |
| AUDIO SECTION SCHEMATIC DIAGRAM .....                  | 3-12  |
| MAIN P.C.B. UNIT .....                                 | 3-12  |
| LUMINANCE & CHROMINANCE SECTION SCHEMATIC DIAGRAM..... | 3-13  |
| SERVO SECTION SCHEMATIC DIAGRAM .....                  | 3-14  |
| CYLINDER MOTOR DRIVE SCHEMATIC DIAGRAM .....           | 3-14  |
| CAPSTAN MOTOR DRIVE SCHEMATIC DIAGRAM .....            | 3-14  |
| MAIN P.C.B. UNIT .....                                 | 3-15  |
| CAPSTAN MOTOR DRIVE P.C.B. UNIT .....                  | 3-15  |
| CYLINDER MOTOR DRIVE P.C.B. UNIT .....                 | 3-15  |
| SYSTEM CONTROL CIRCUIT .....                           | 3-16  |
| RF CONVERTER UNIT (NV-100E/EG;ENC17553).....           | 3-18  |
| RF CONVERTER UNIT (NV-100B;ENC17554) .....             | 3-18  |
| SMALL CIRCUIT BOARD .....                              | 3-20  |
| CIRCUIT BOARD LAYOUT .....                             | 3-22  |
| INTERCONNECTION SCHEMATIC DIAGRAM .....                | 3-23  |

# OVERALL BLOCK DIAGRAM

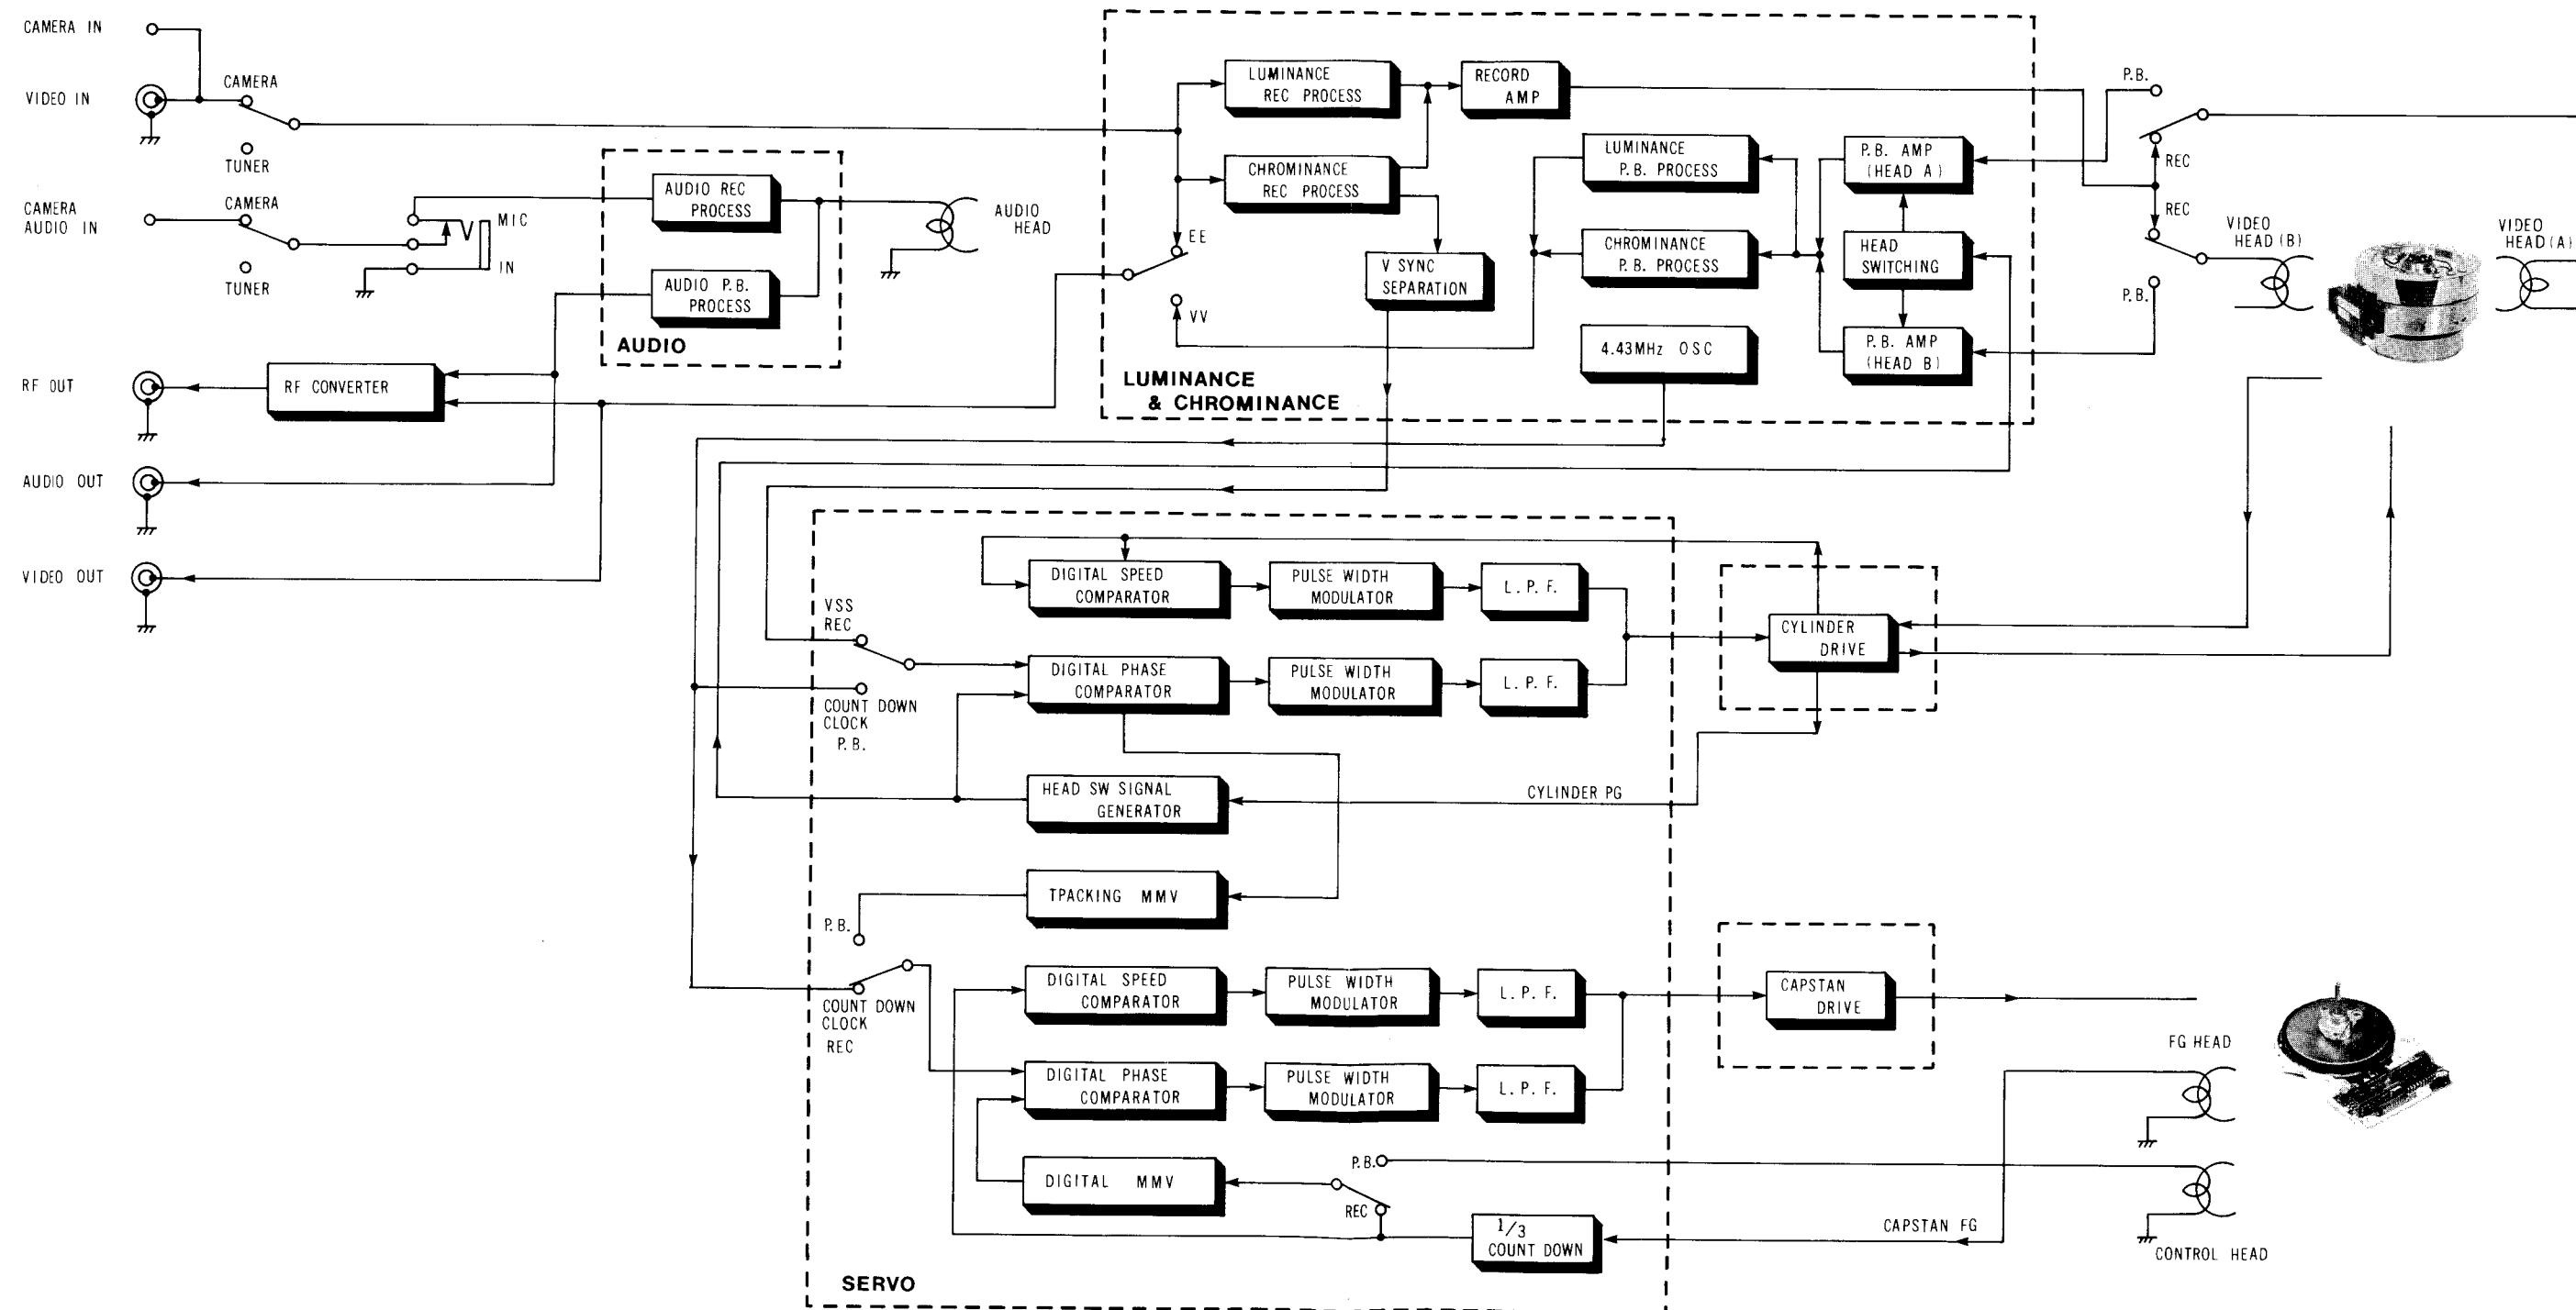




# A.V.R. BLOCK DIAGRAM

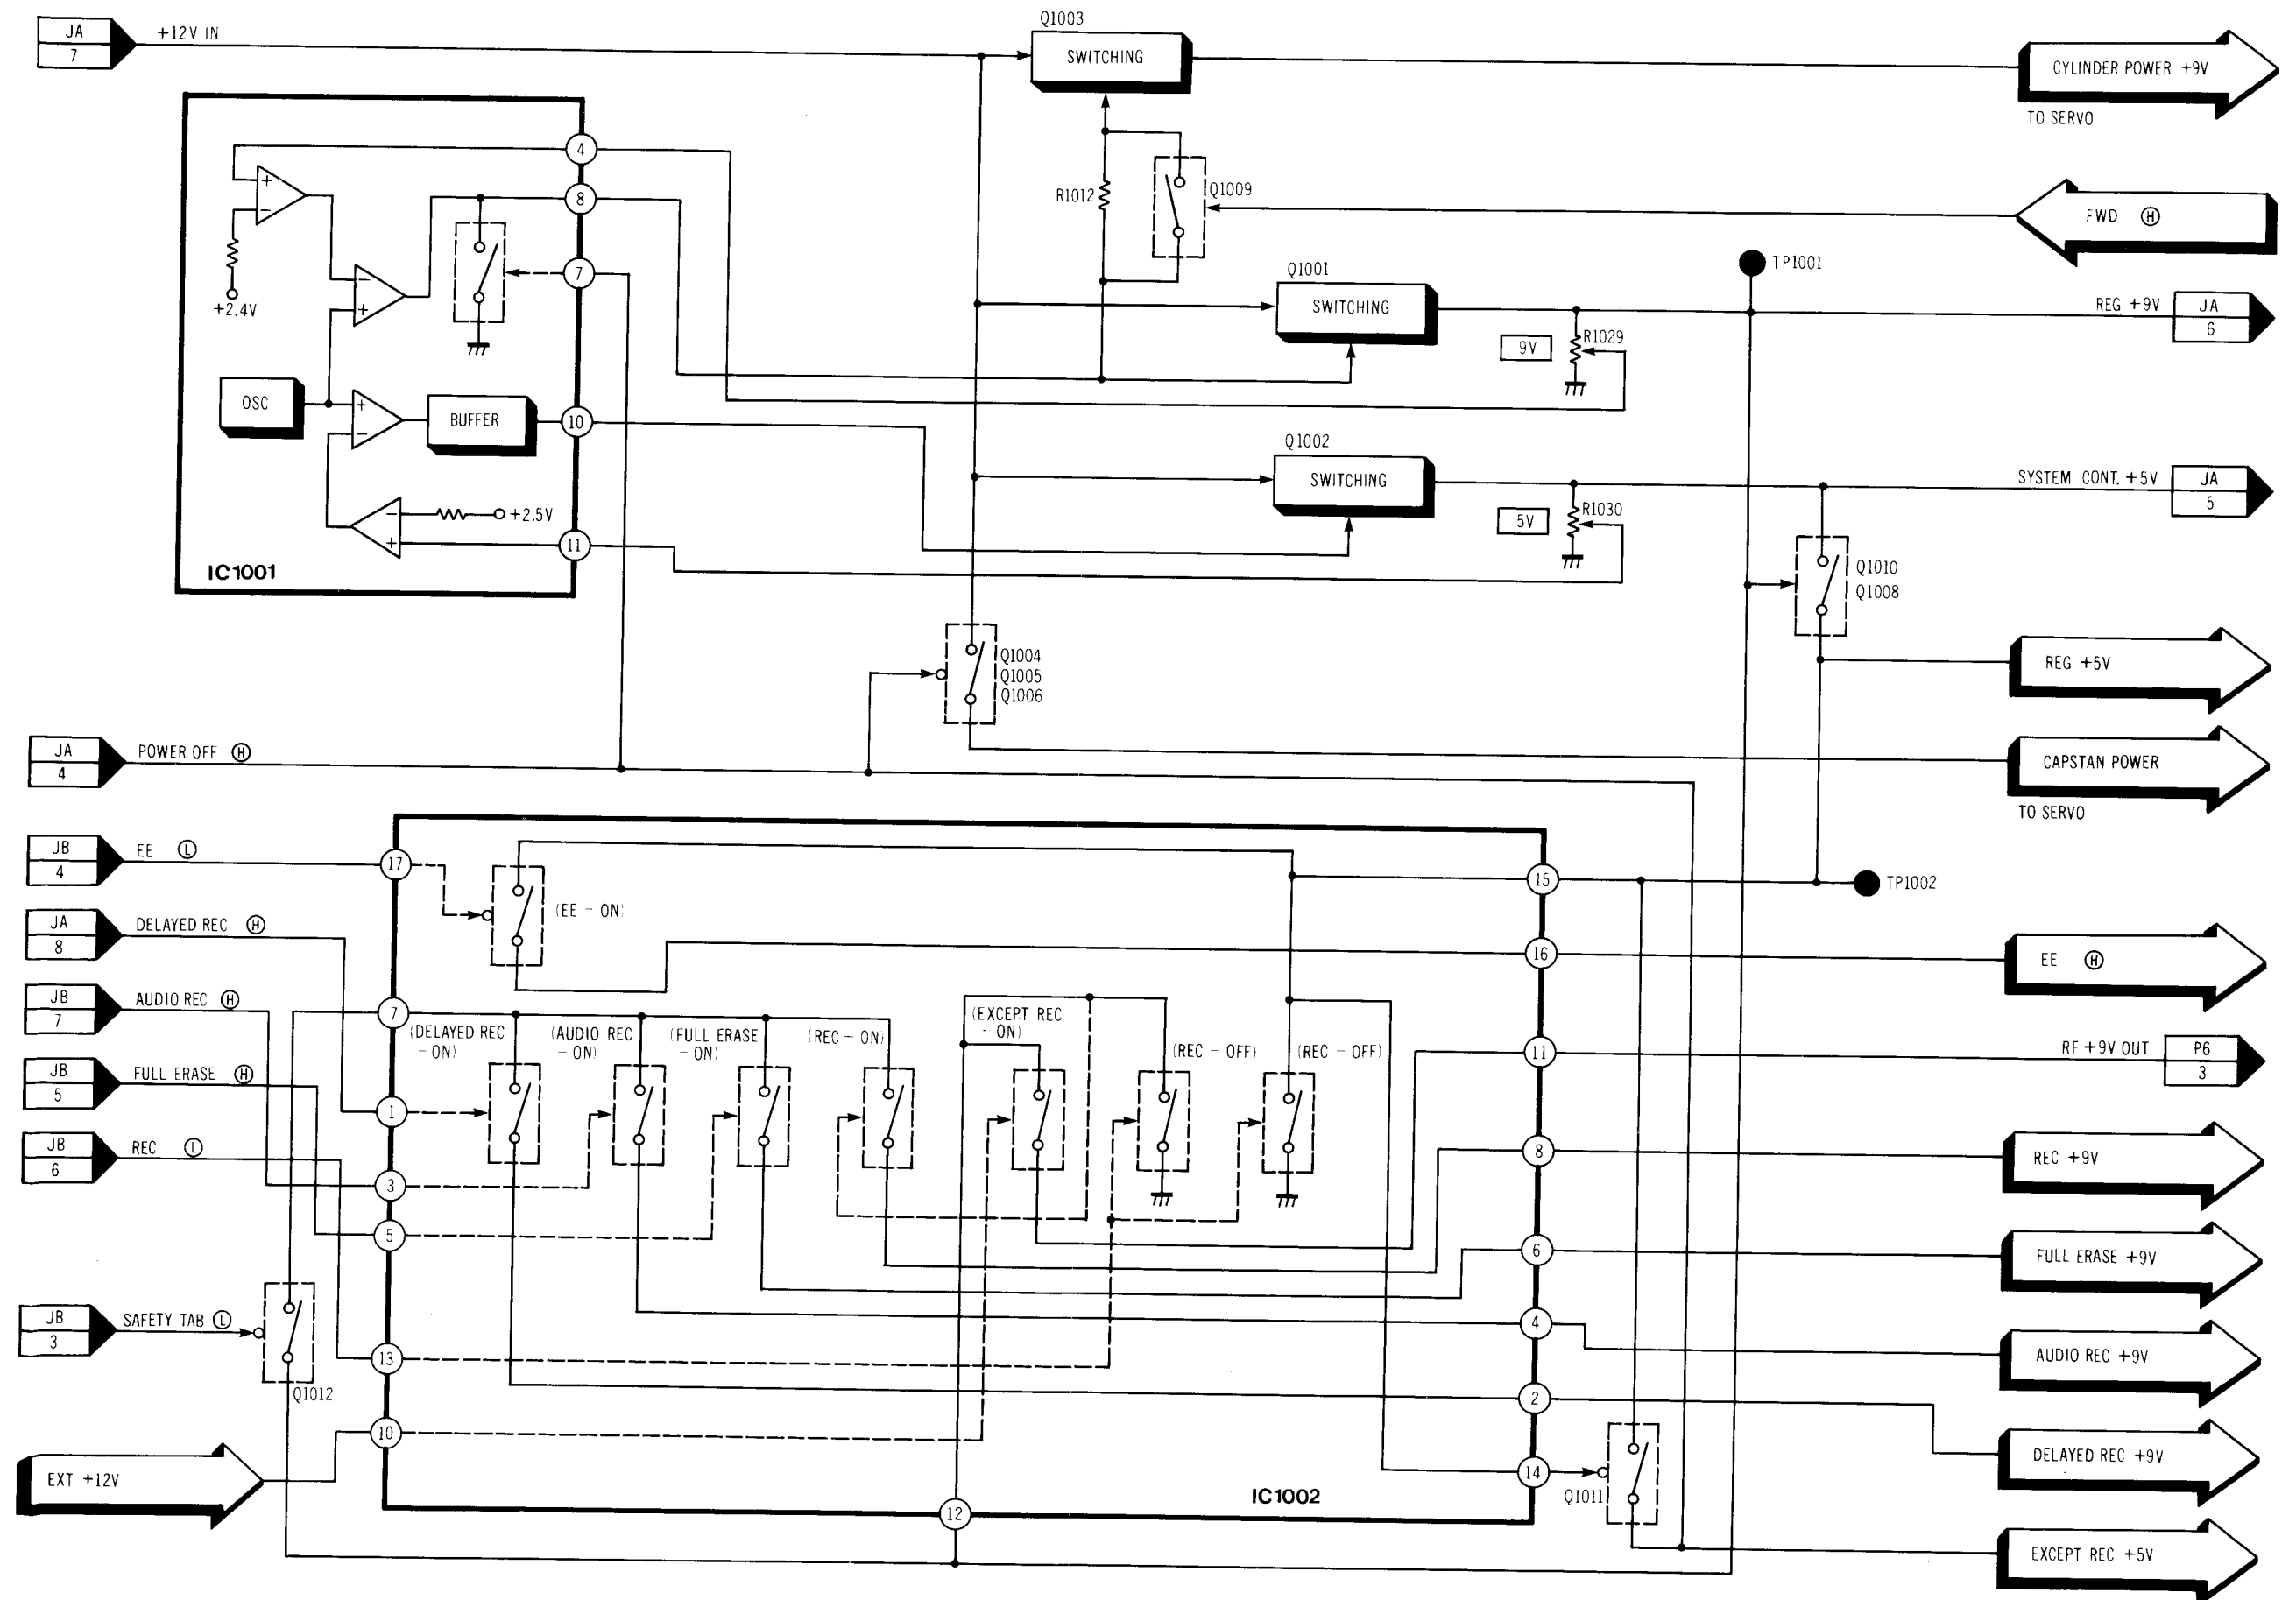


# JACK PANEL BLOCK DIAGRAM

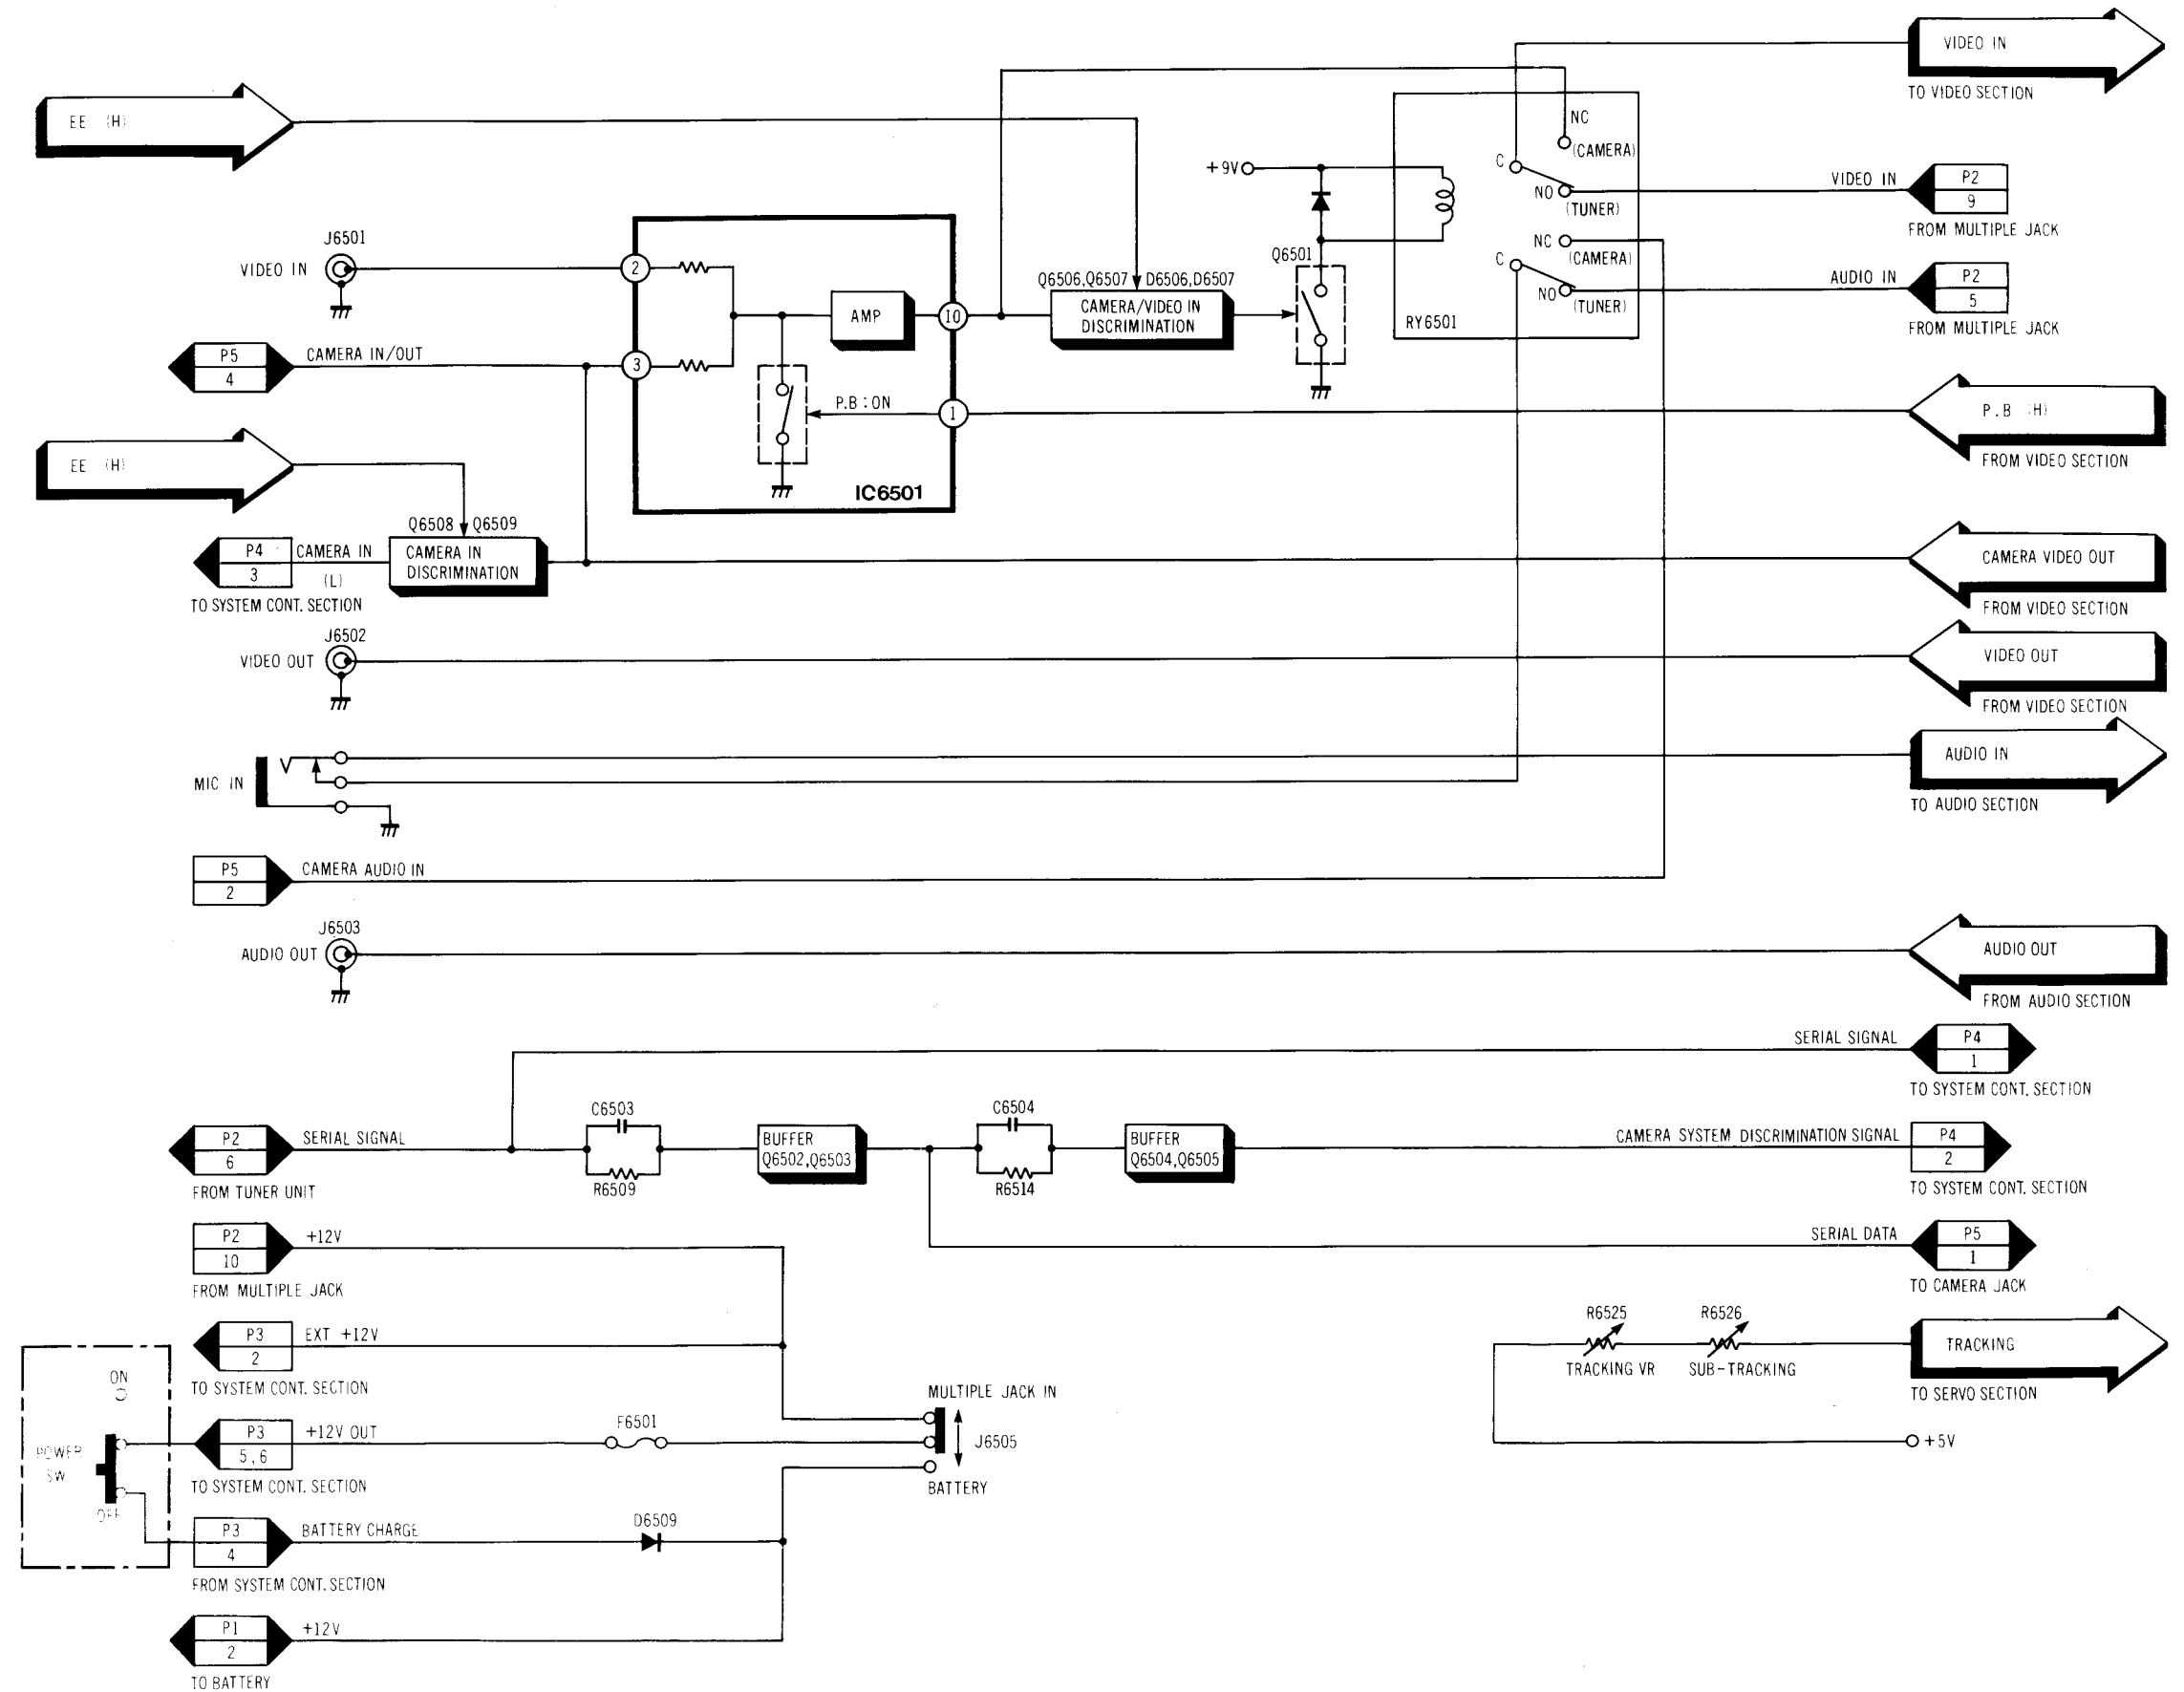


# MODE BY MODE IC TIMING CHART


1. STOP → PLAY

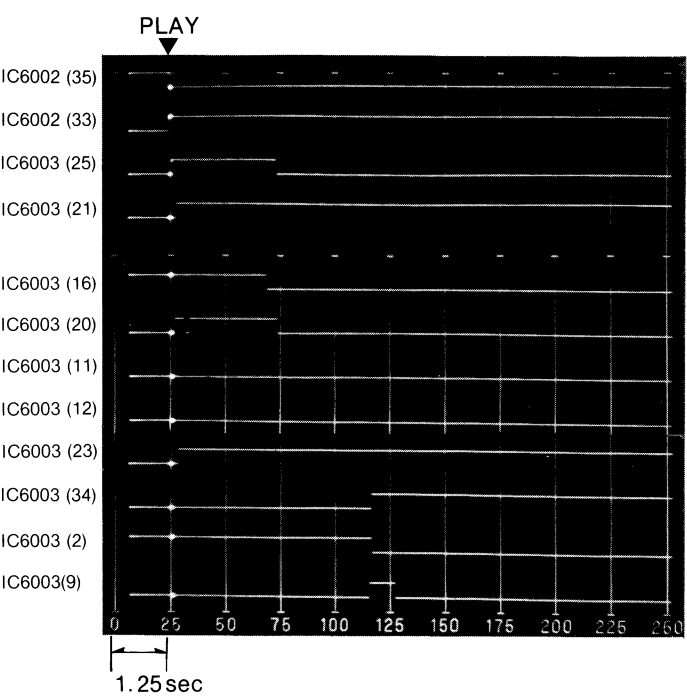


2. PLAY → STOP

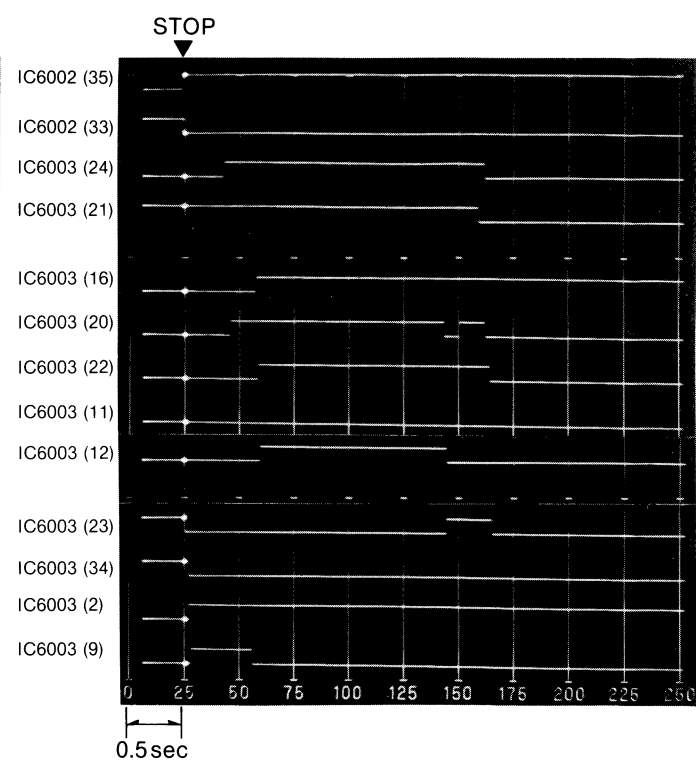


3. STOP → F.F.

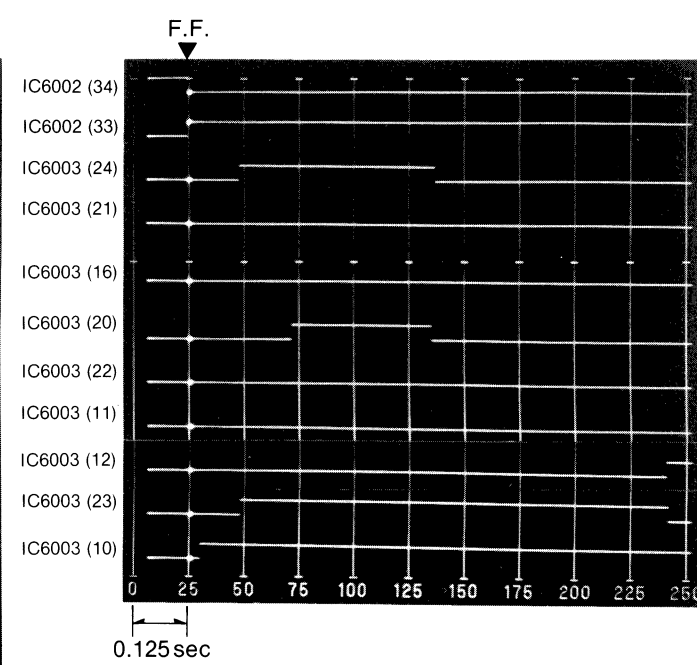


4. F.F. → STOP

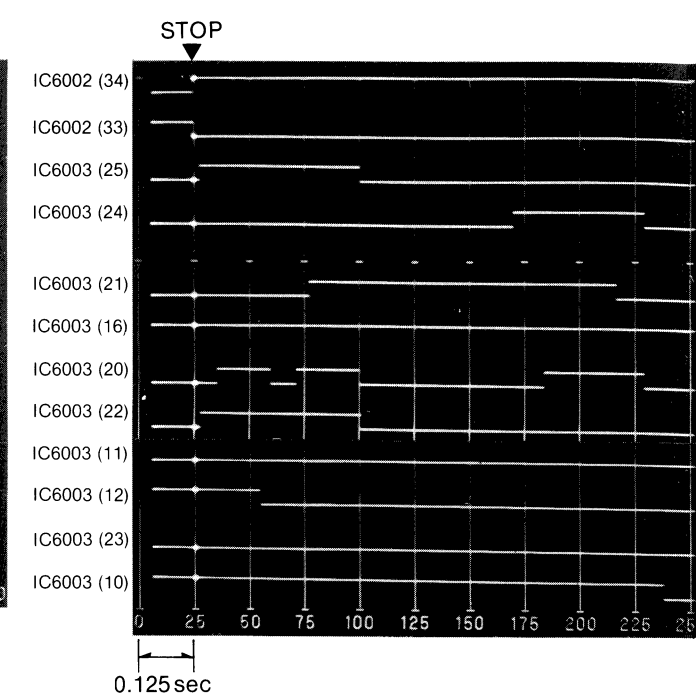


5. STOP

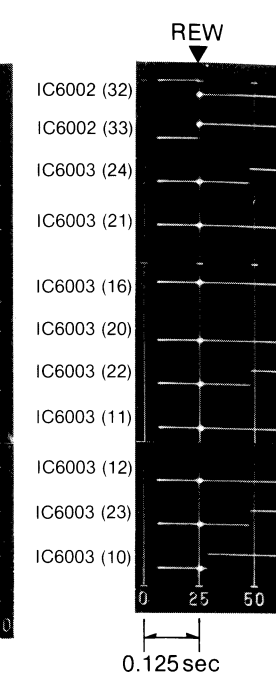


6. REW → STOP

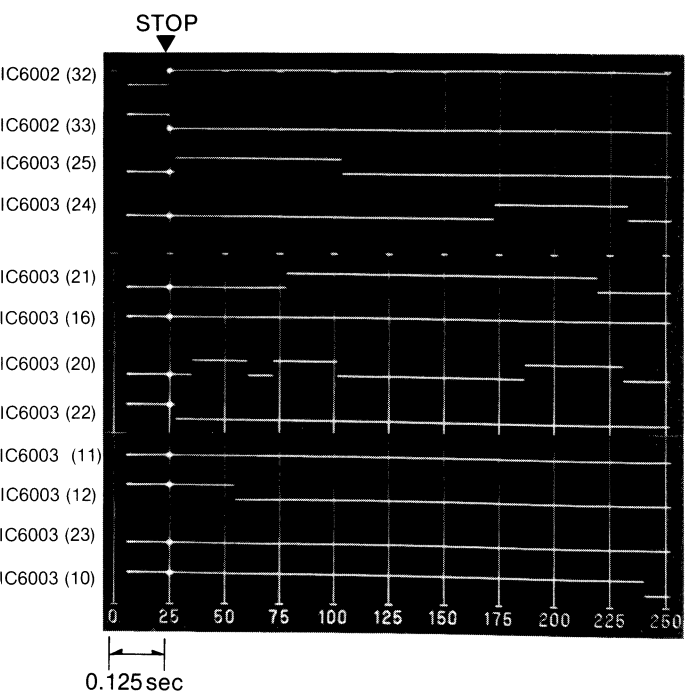


7. STOP → EJECT

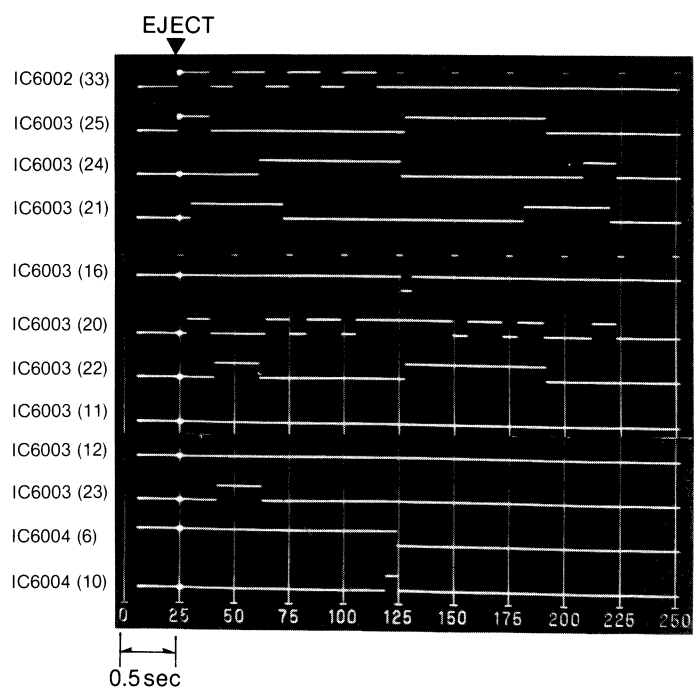


8. REC • PLAY → REC • PAUSE

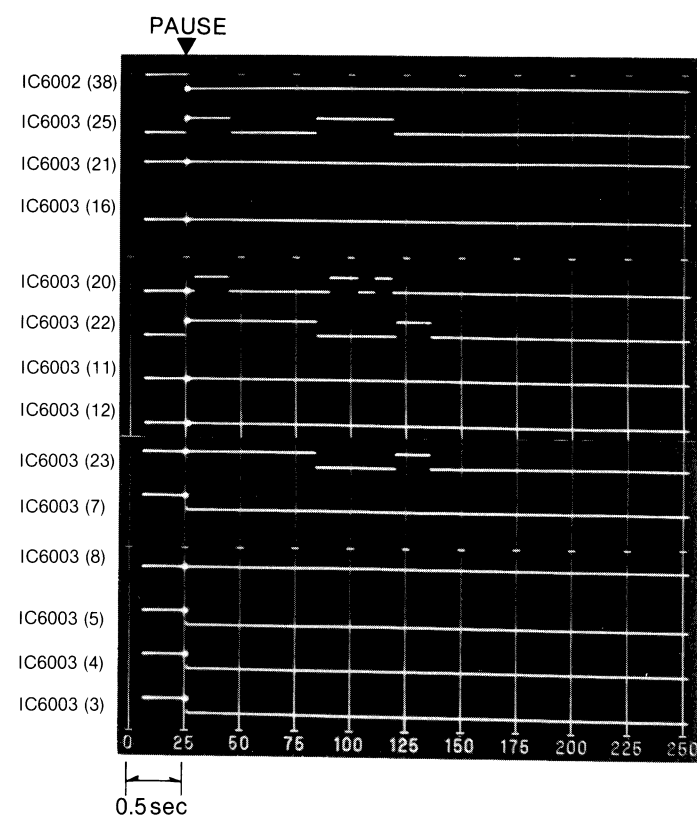


9. REC • PAUSE → REC • PLAY

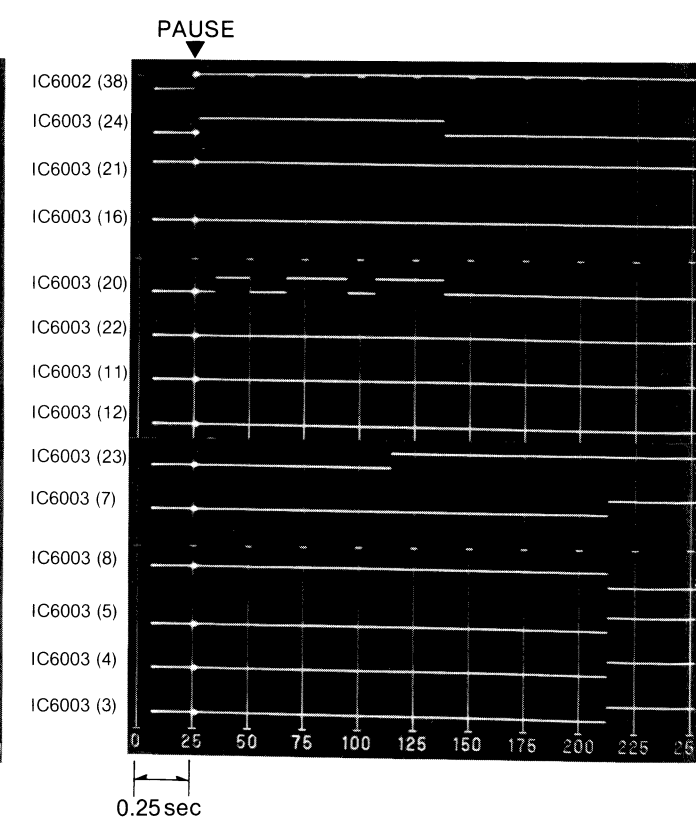


10. PLAY

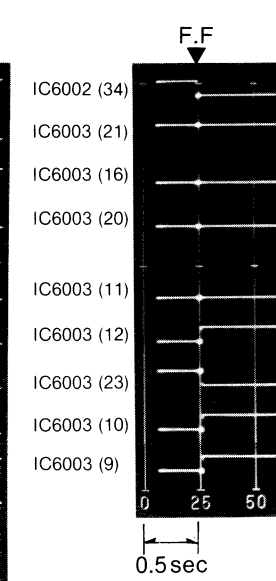


### 3. STOP → F.F.

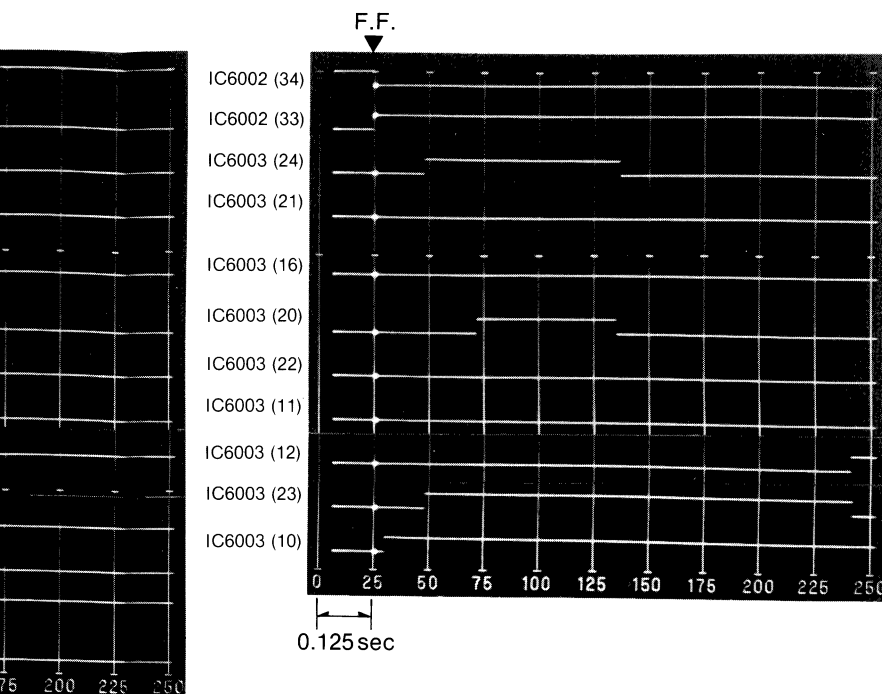


### 4. F.F. → STOP

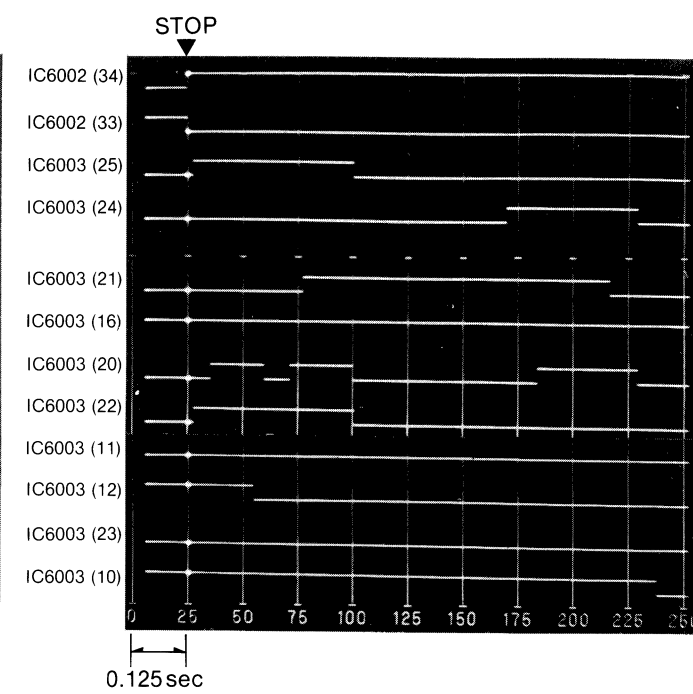


### 5. STOP → REW

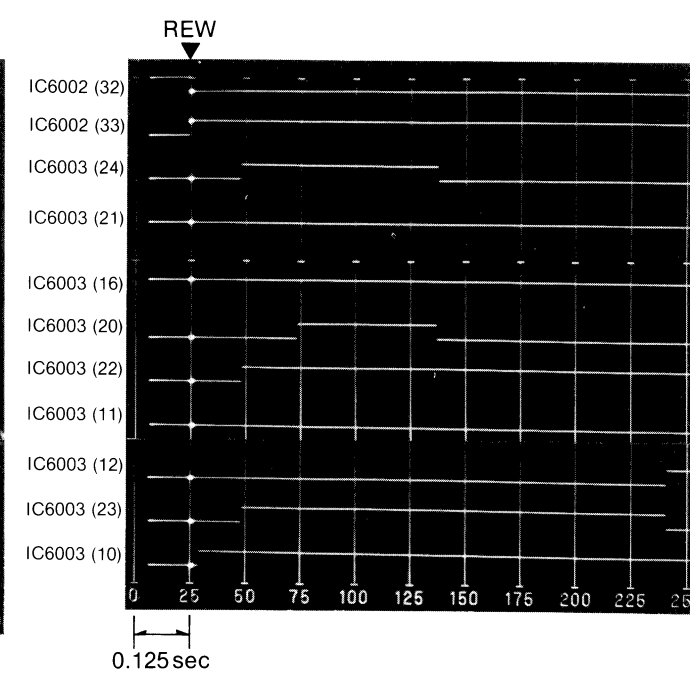


### 8. REC • PLAY → REC • PAUSE

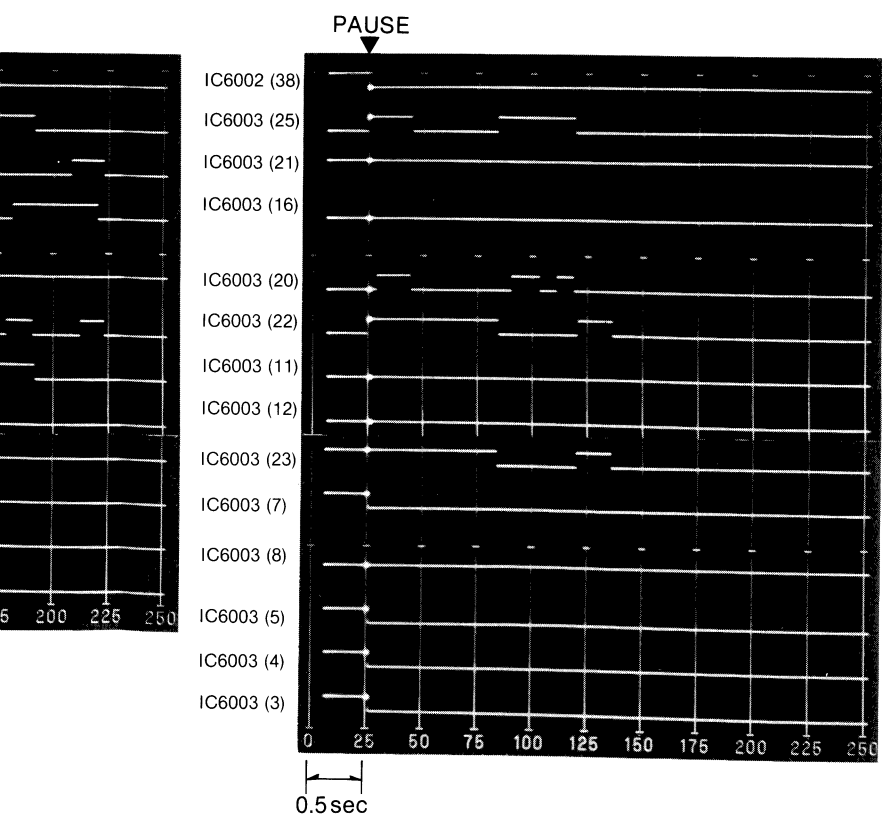


### 9. REC • PAUSE → REC • PLAY

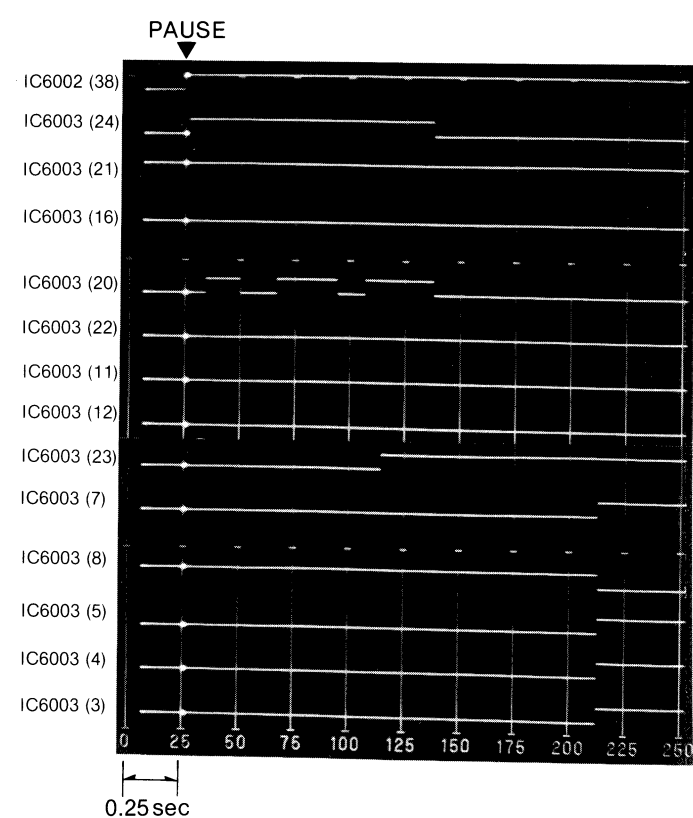


### 10. PLAY → CUE → PLAY

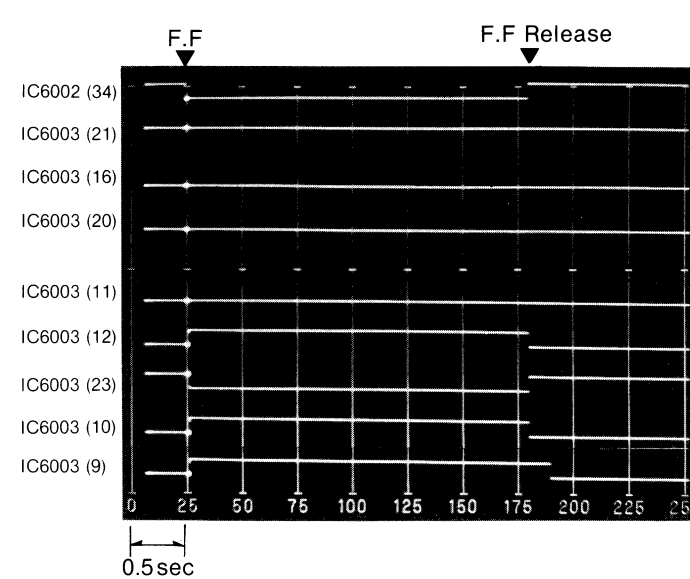


### 11. PLAY → REVIEW → PLAY

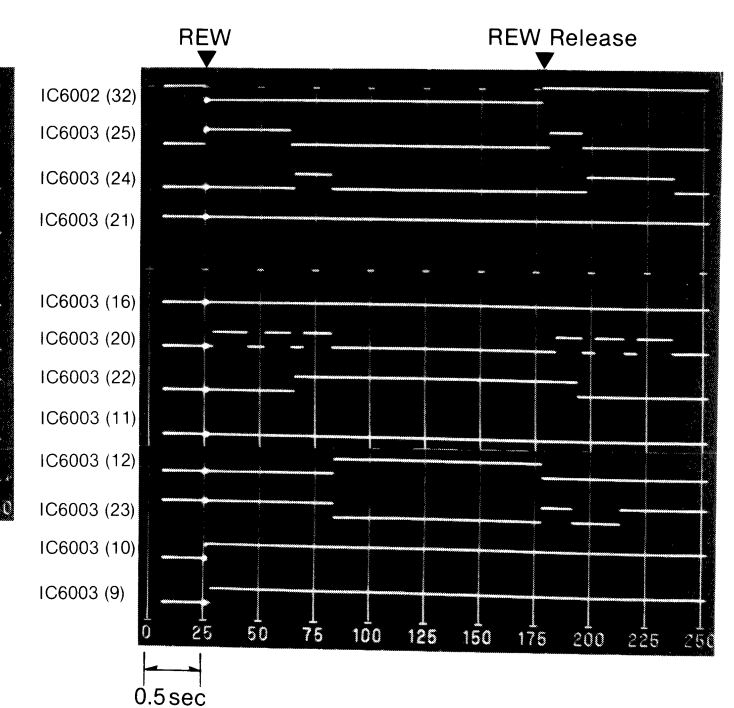


## SYSTEM CONTROL BLOCK DIAGRAM

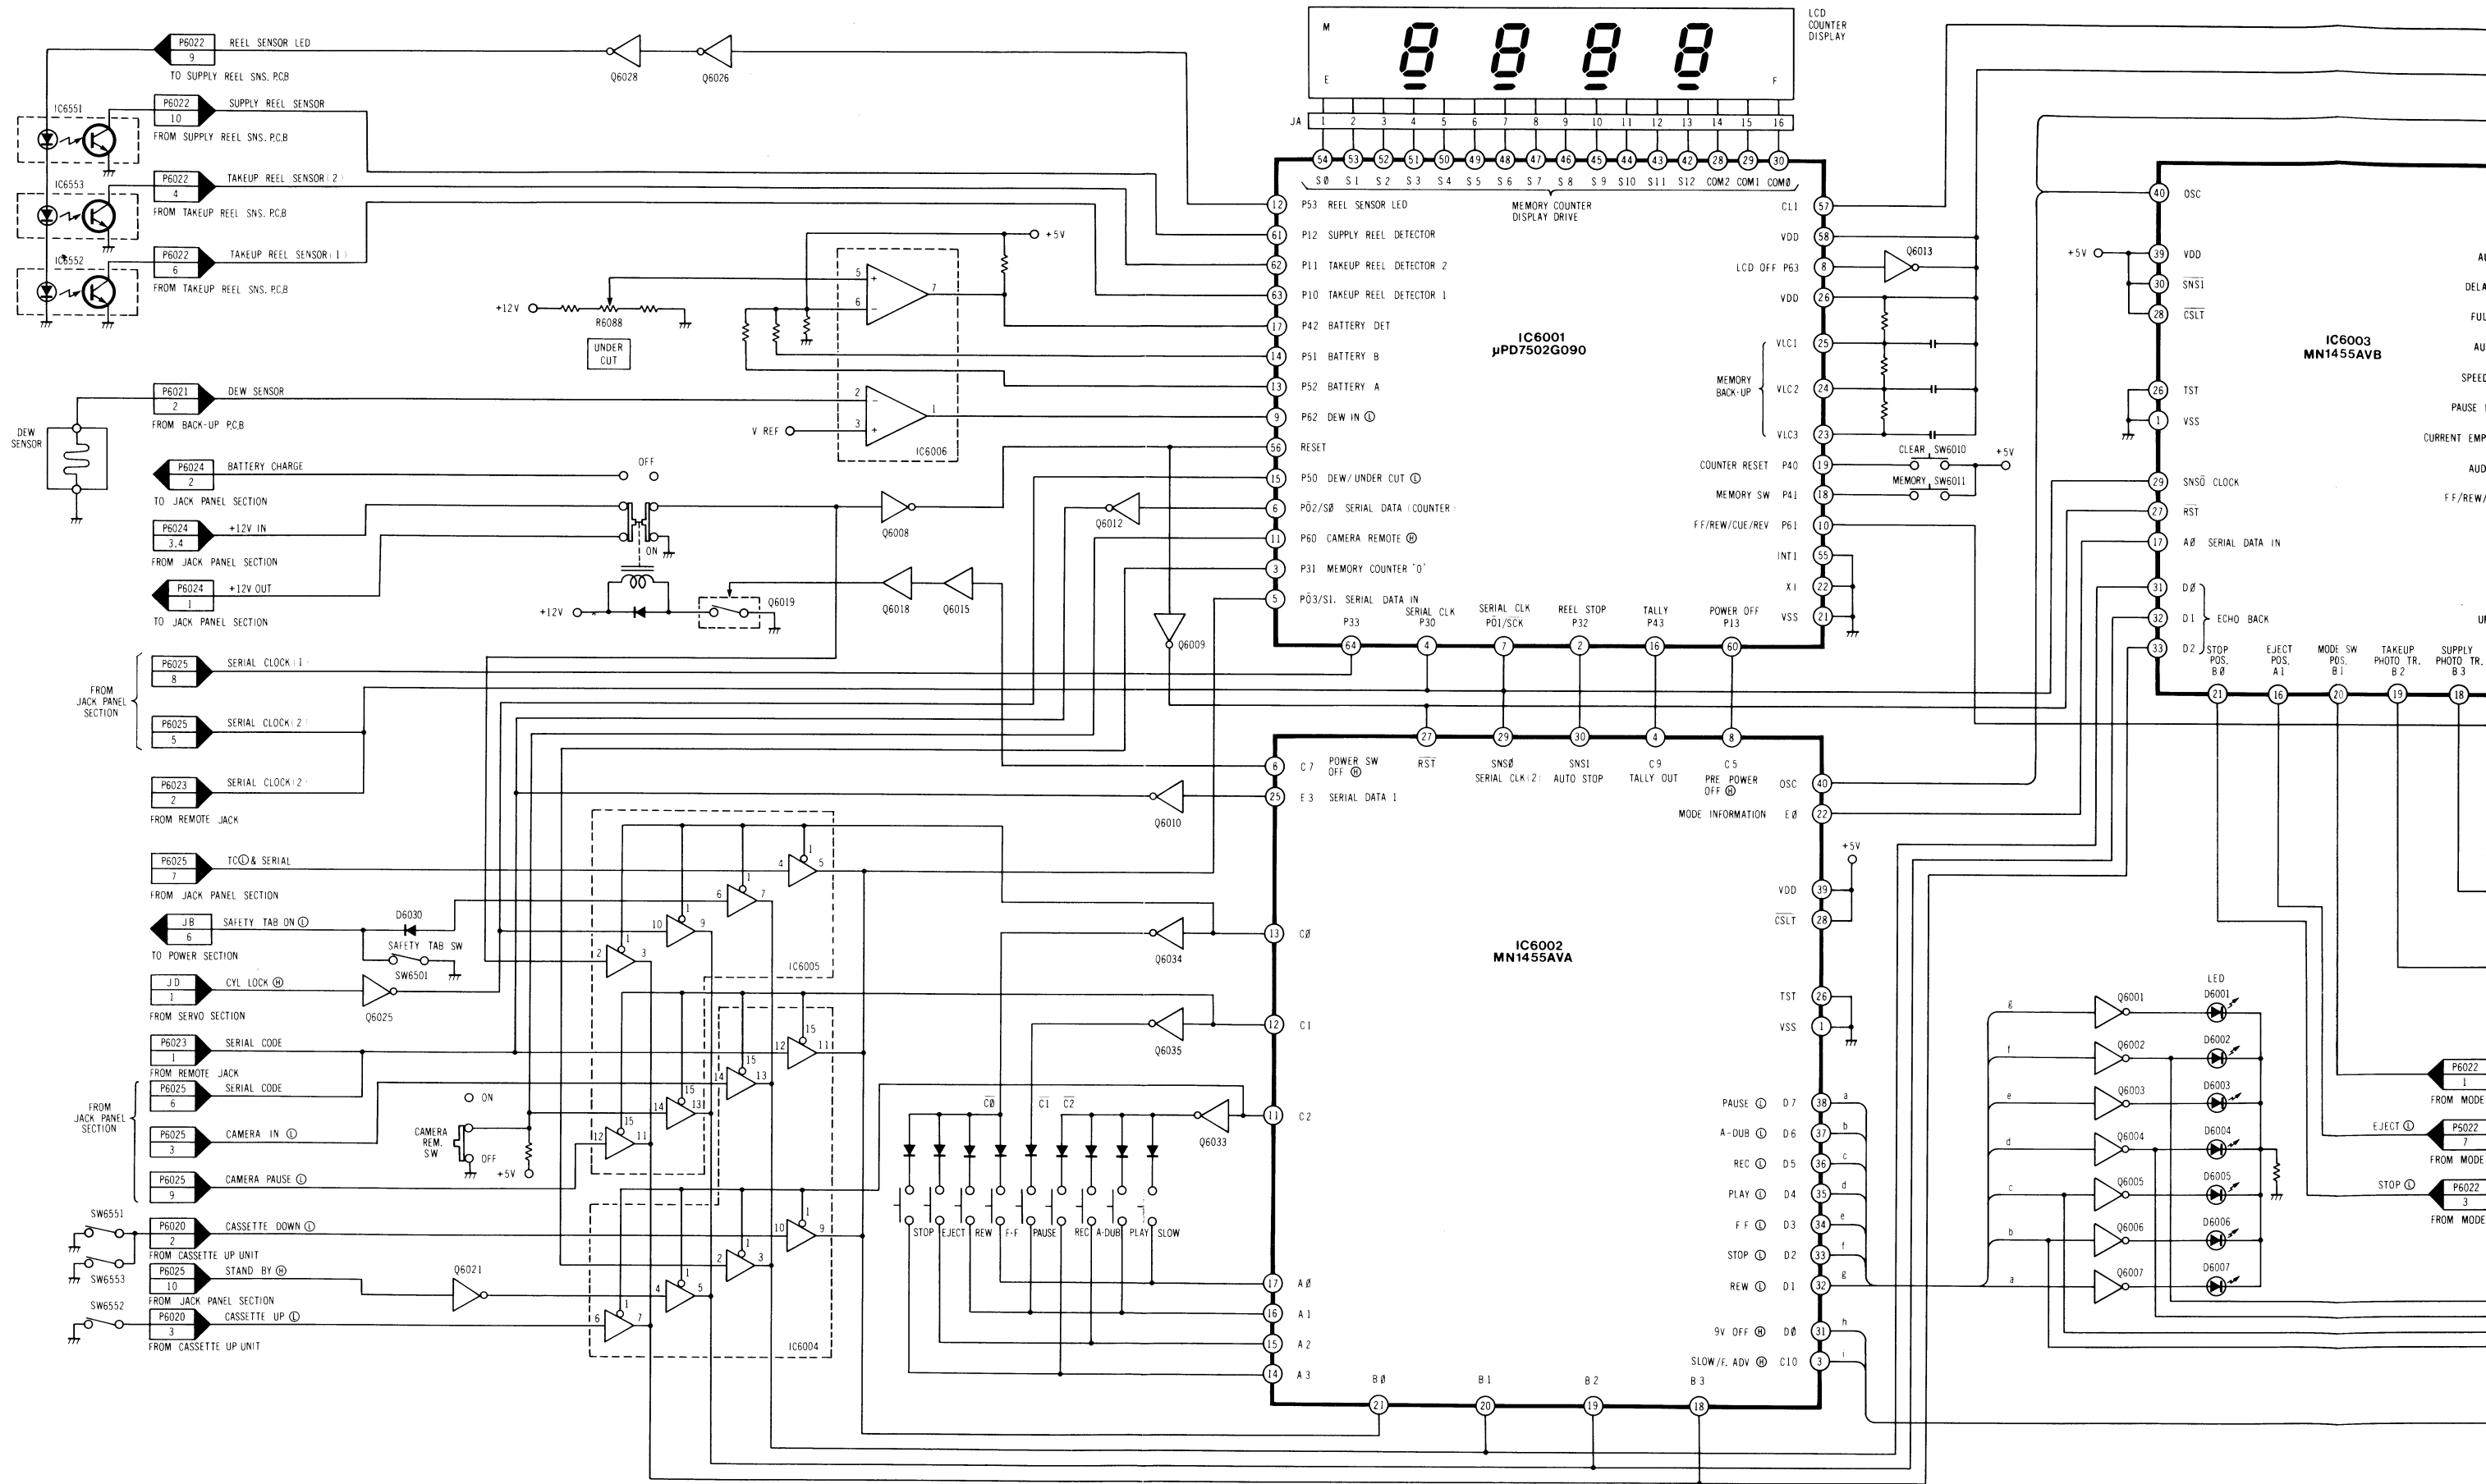

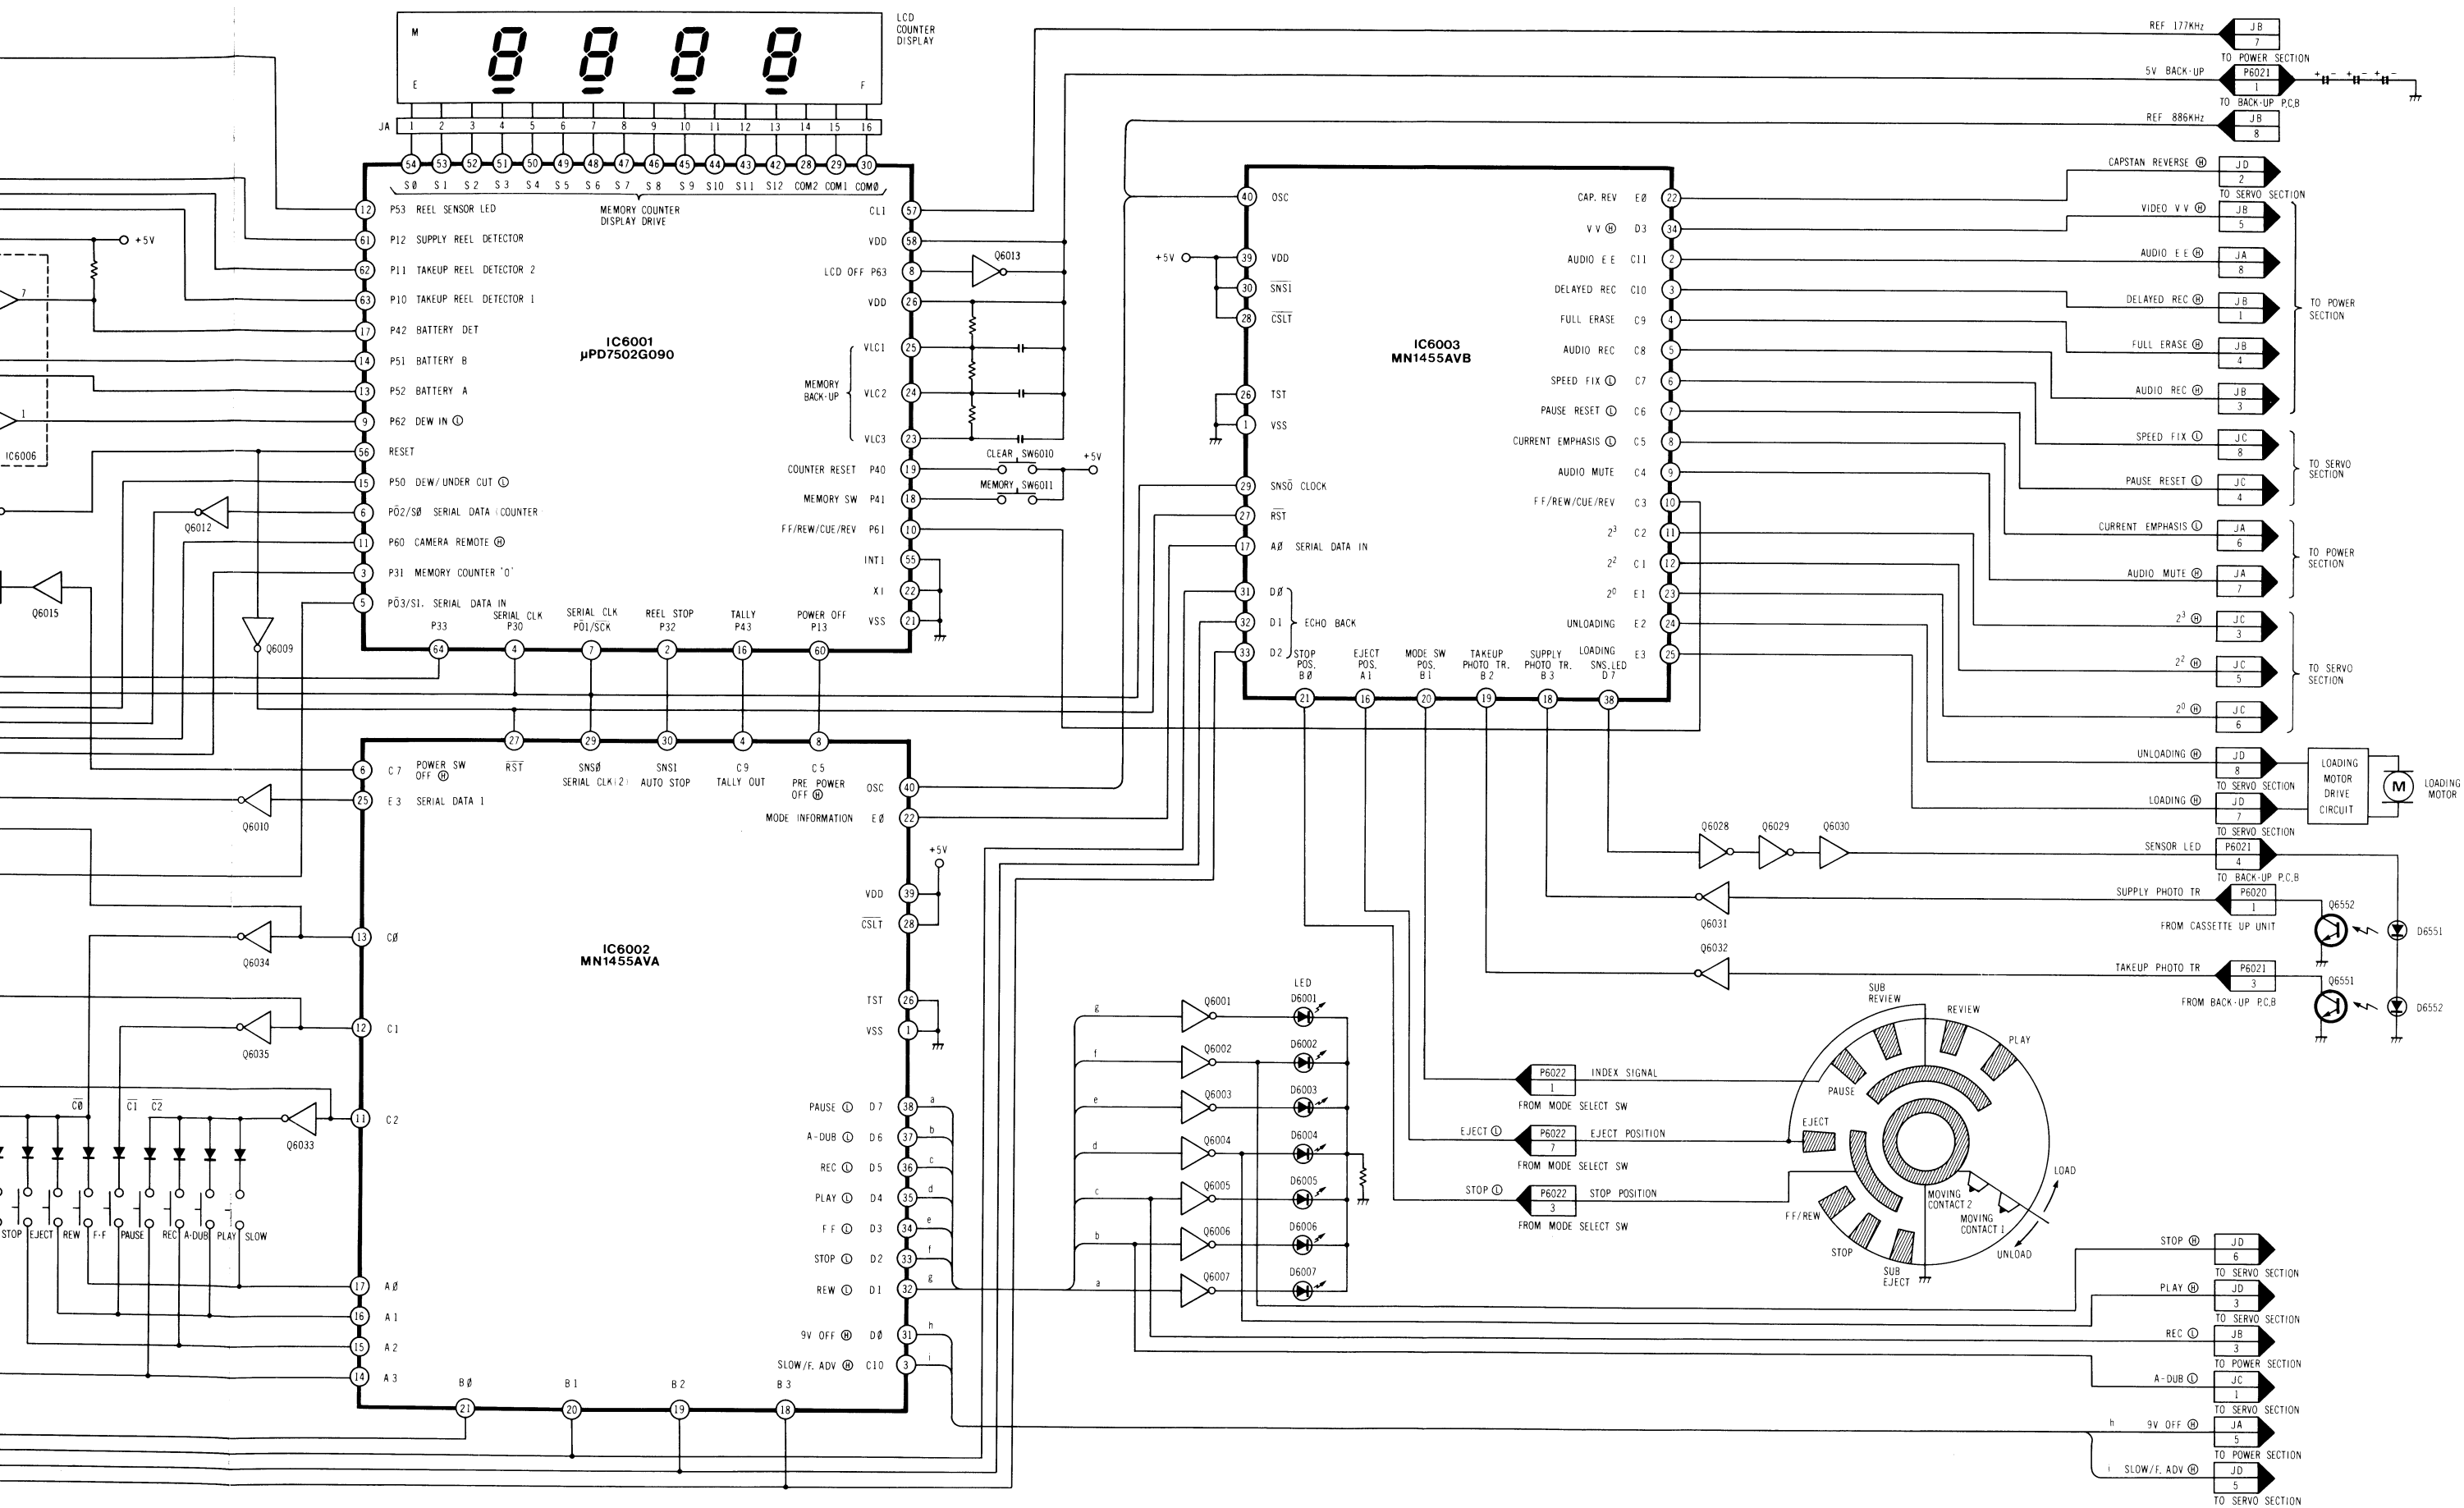




# CHROMINANCE PROCESS BLOCK DIAGRAM

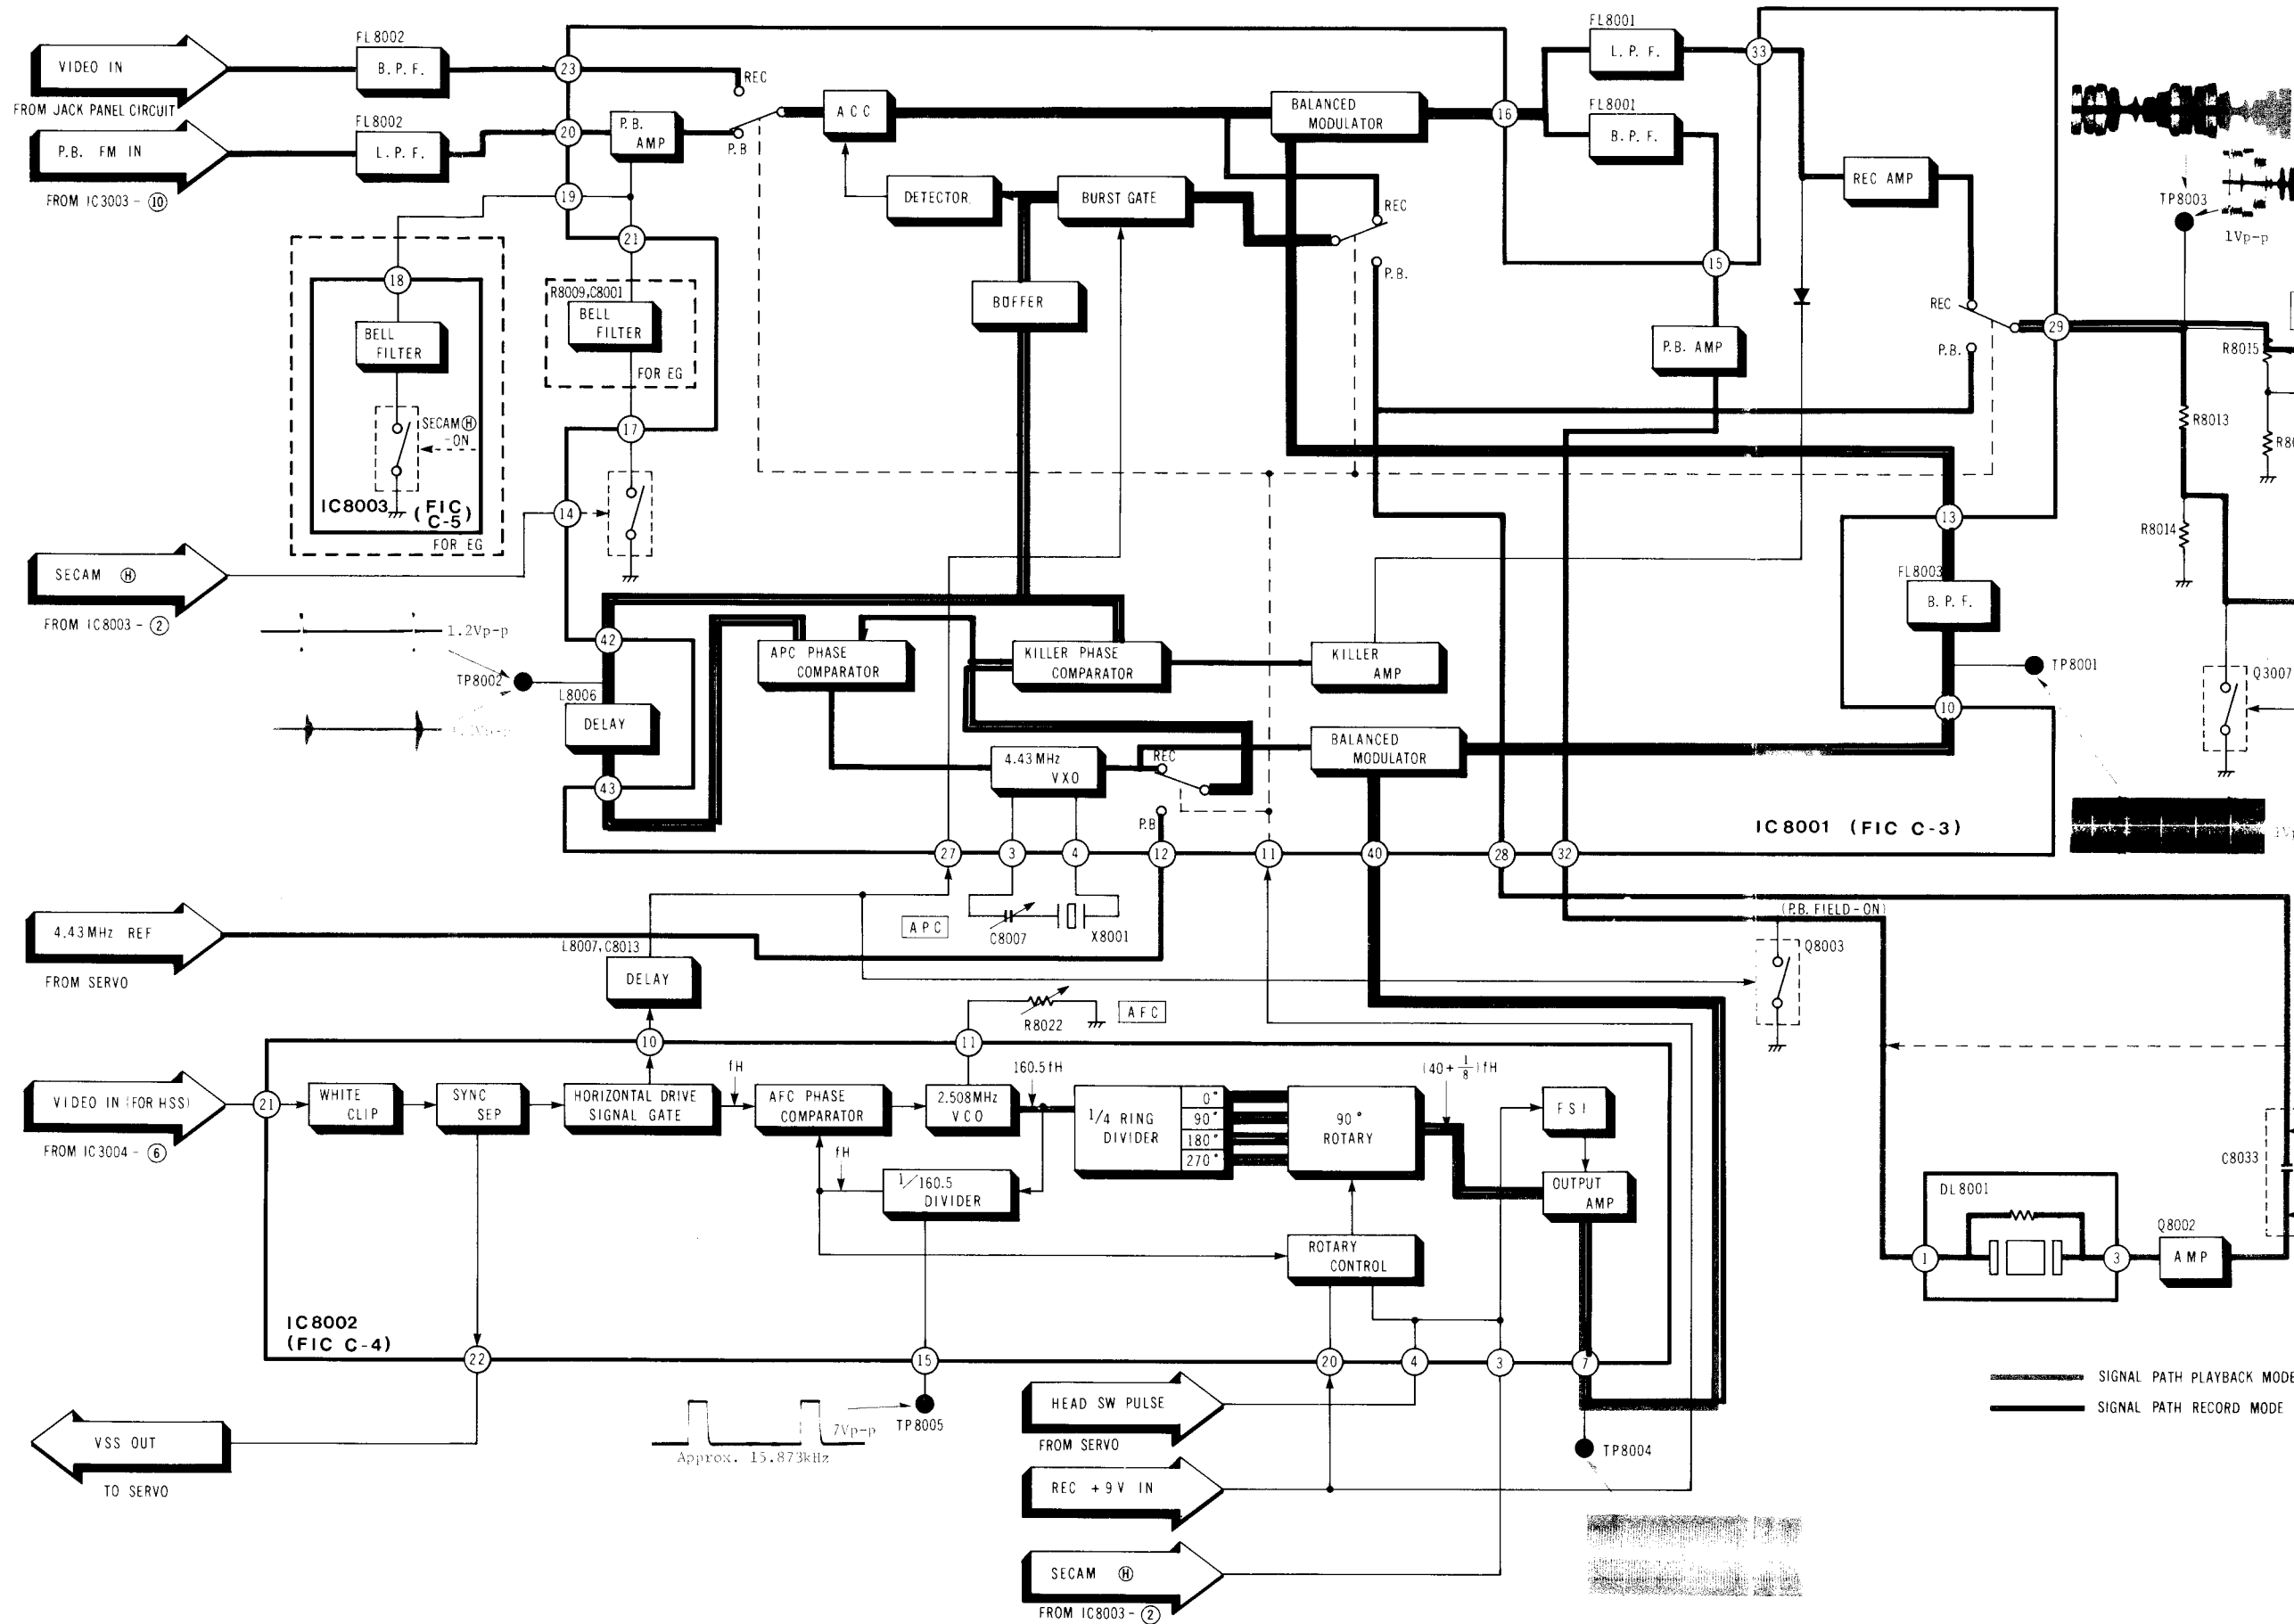







LUMINANCE PROCESS BLOCK DIAGRAM


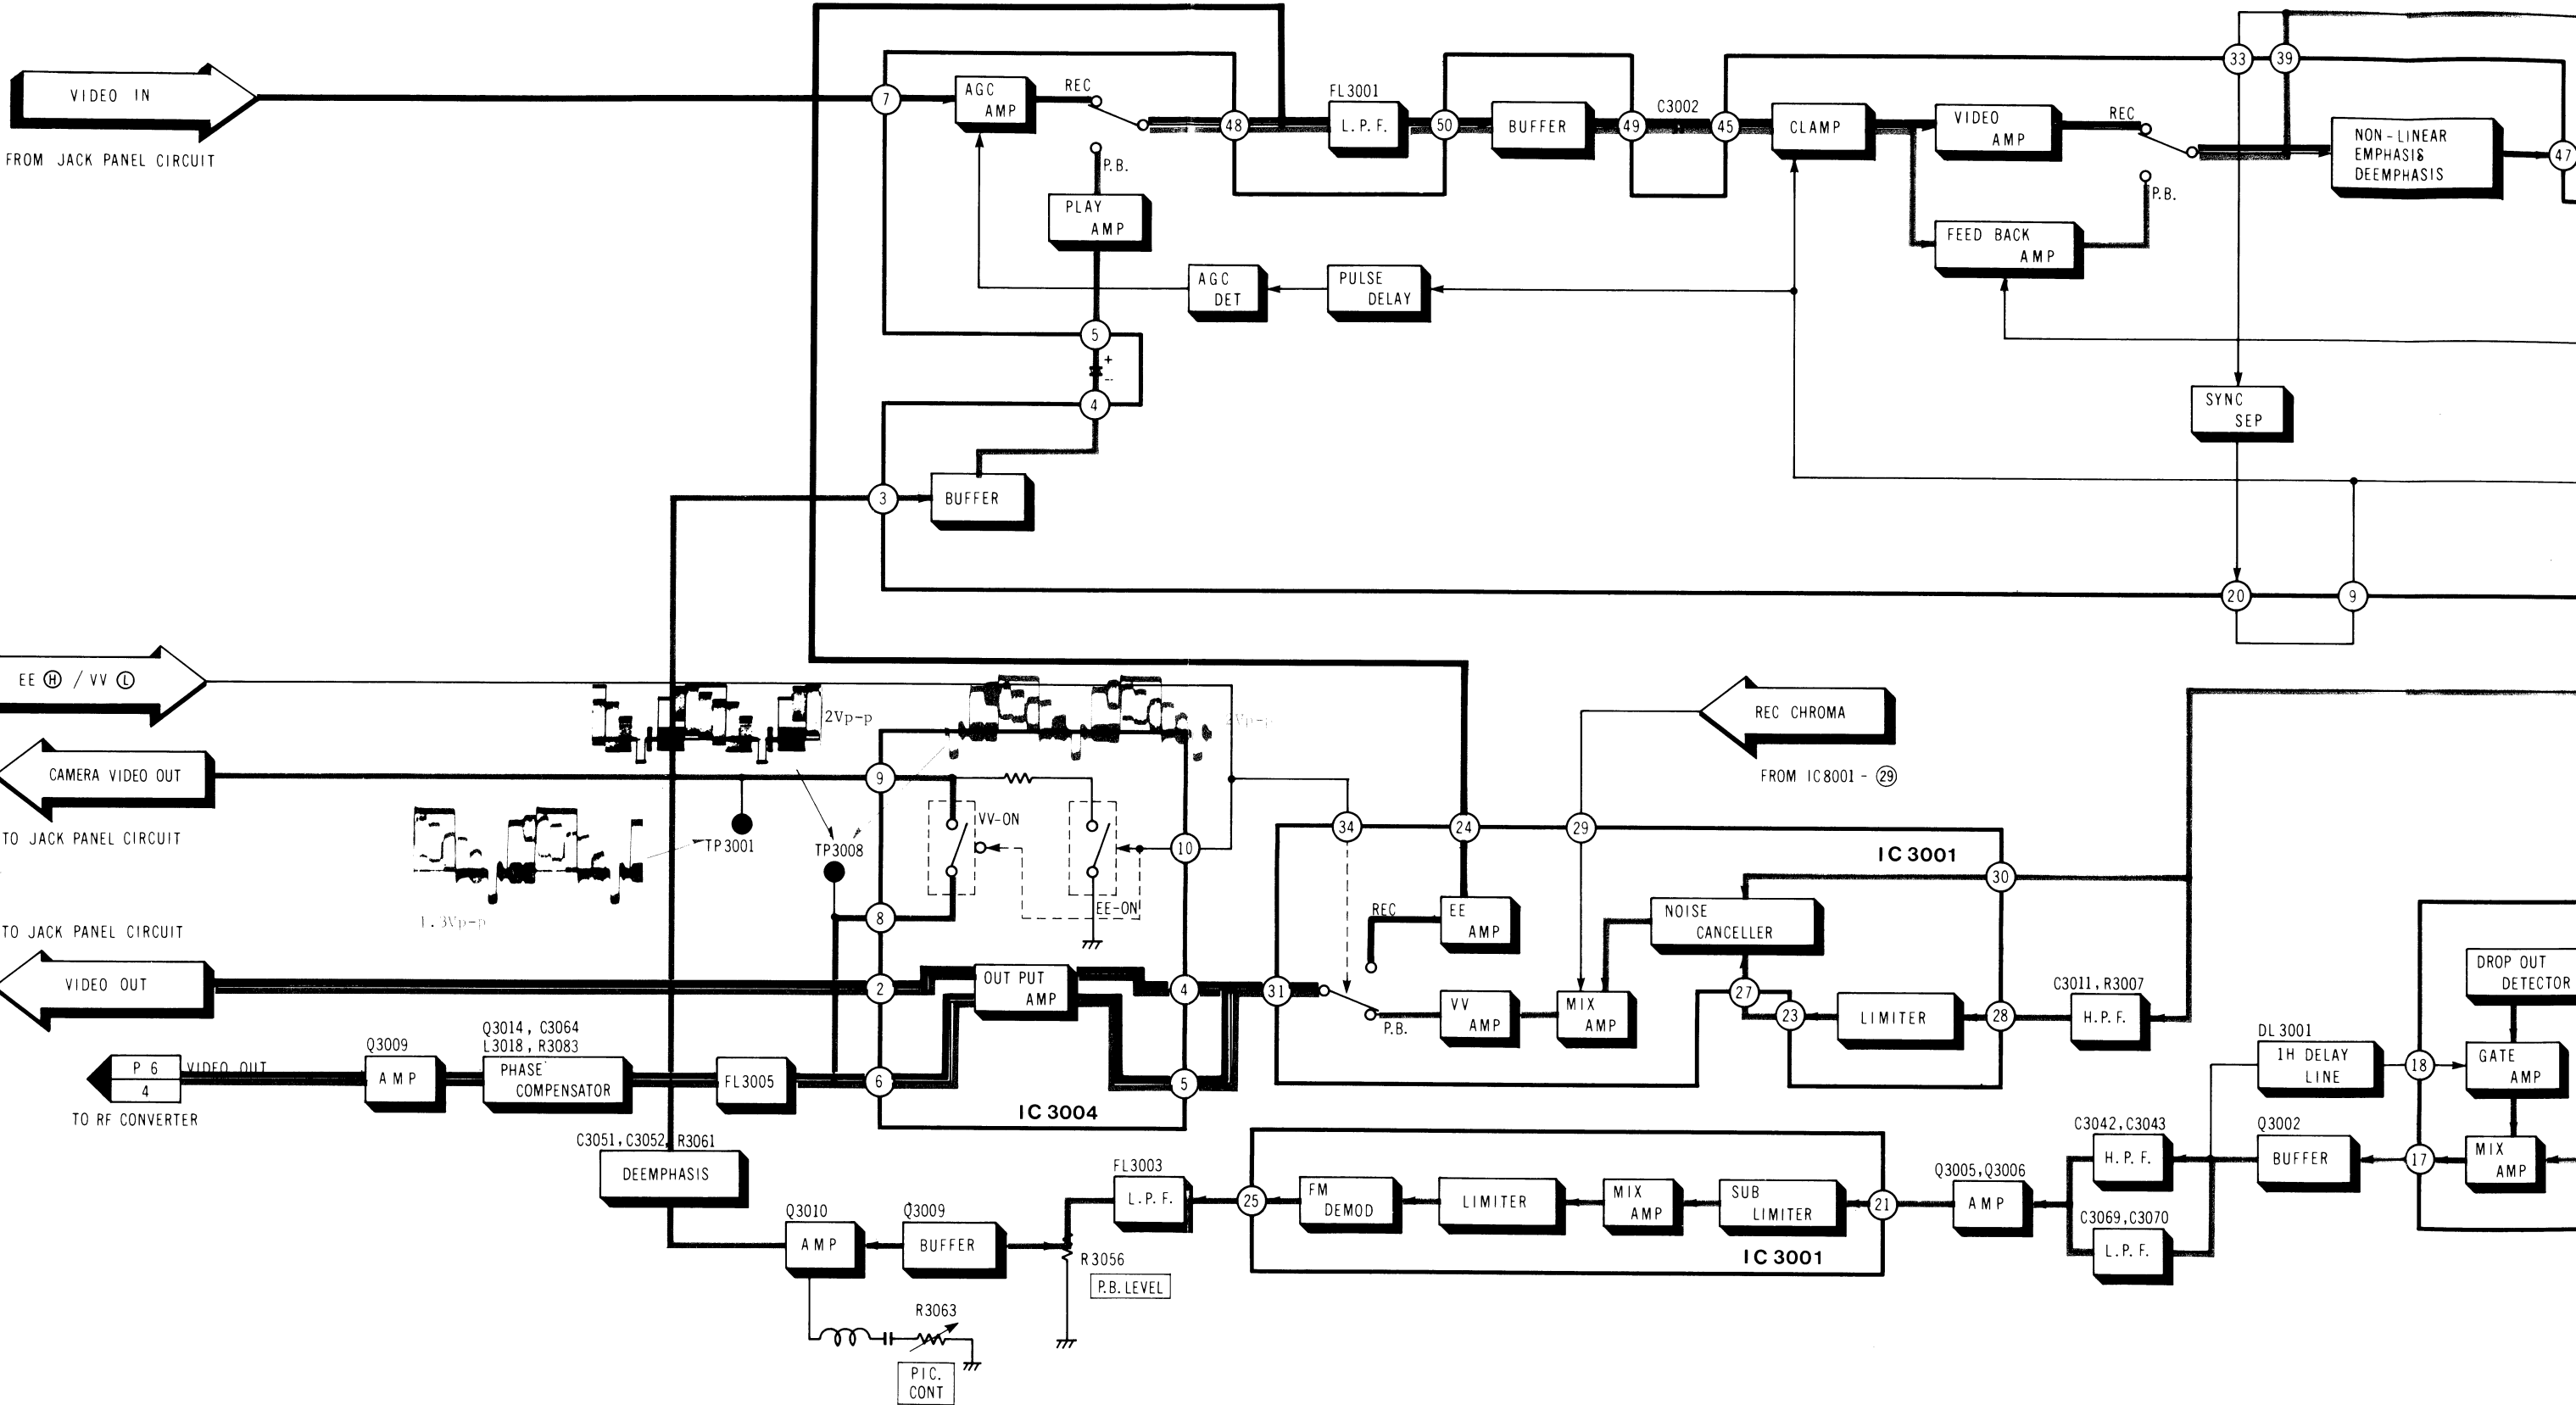


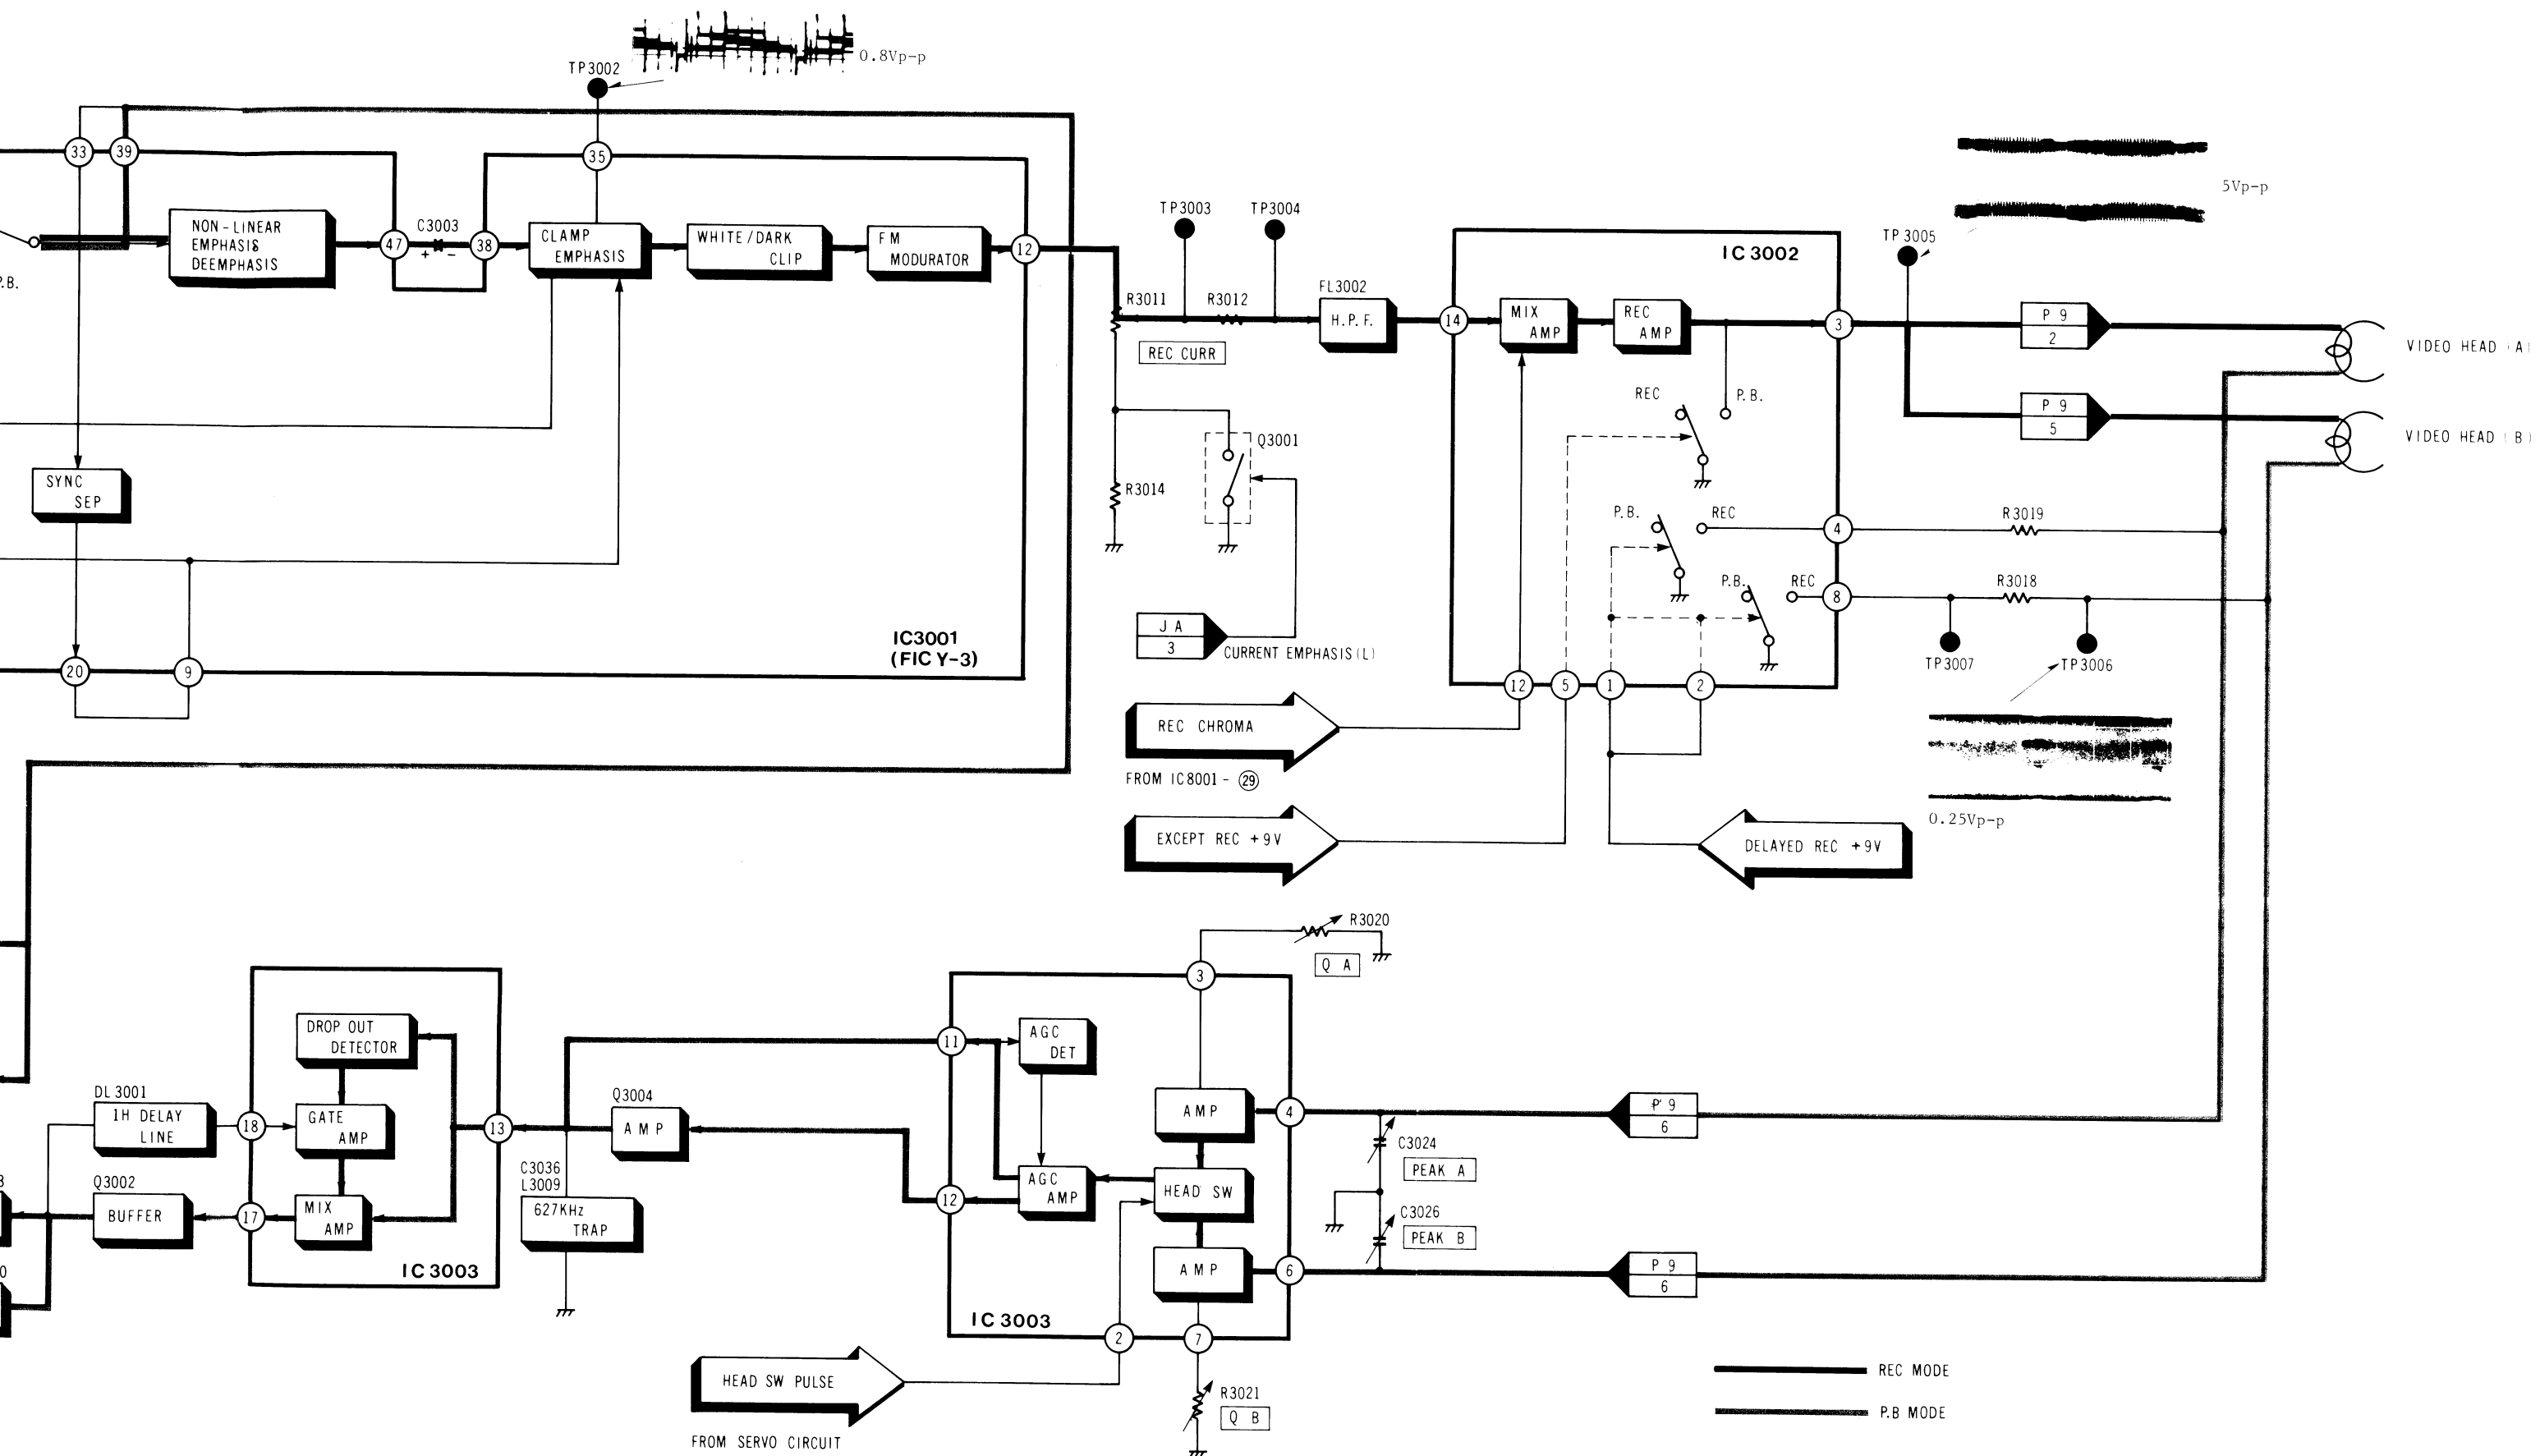


## SERVO BLOCK DIAGRAM

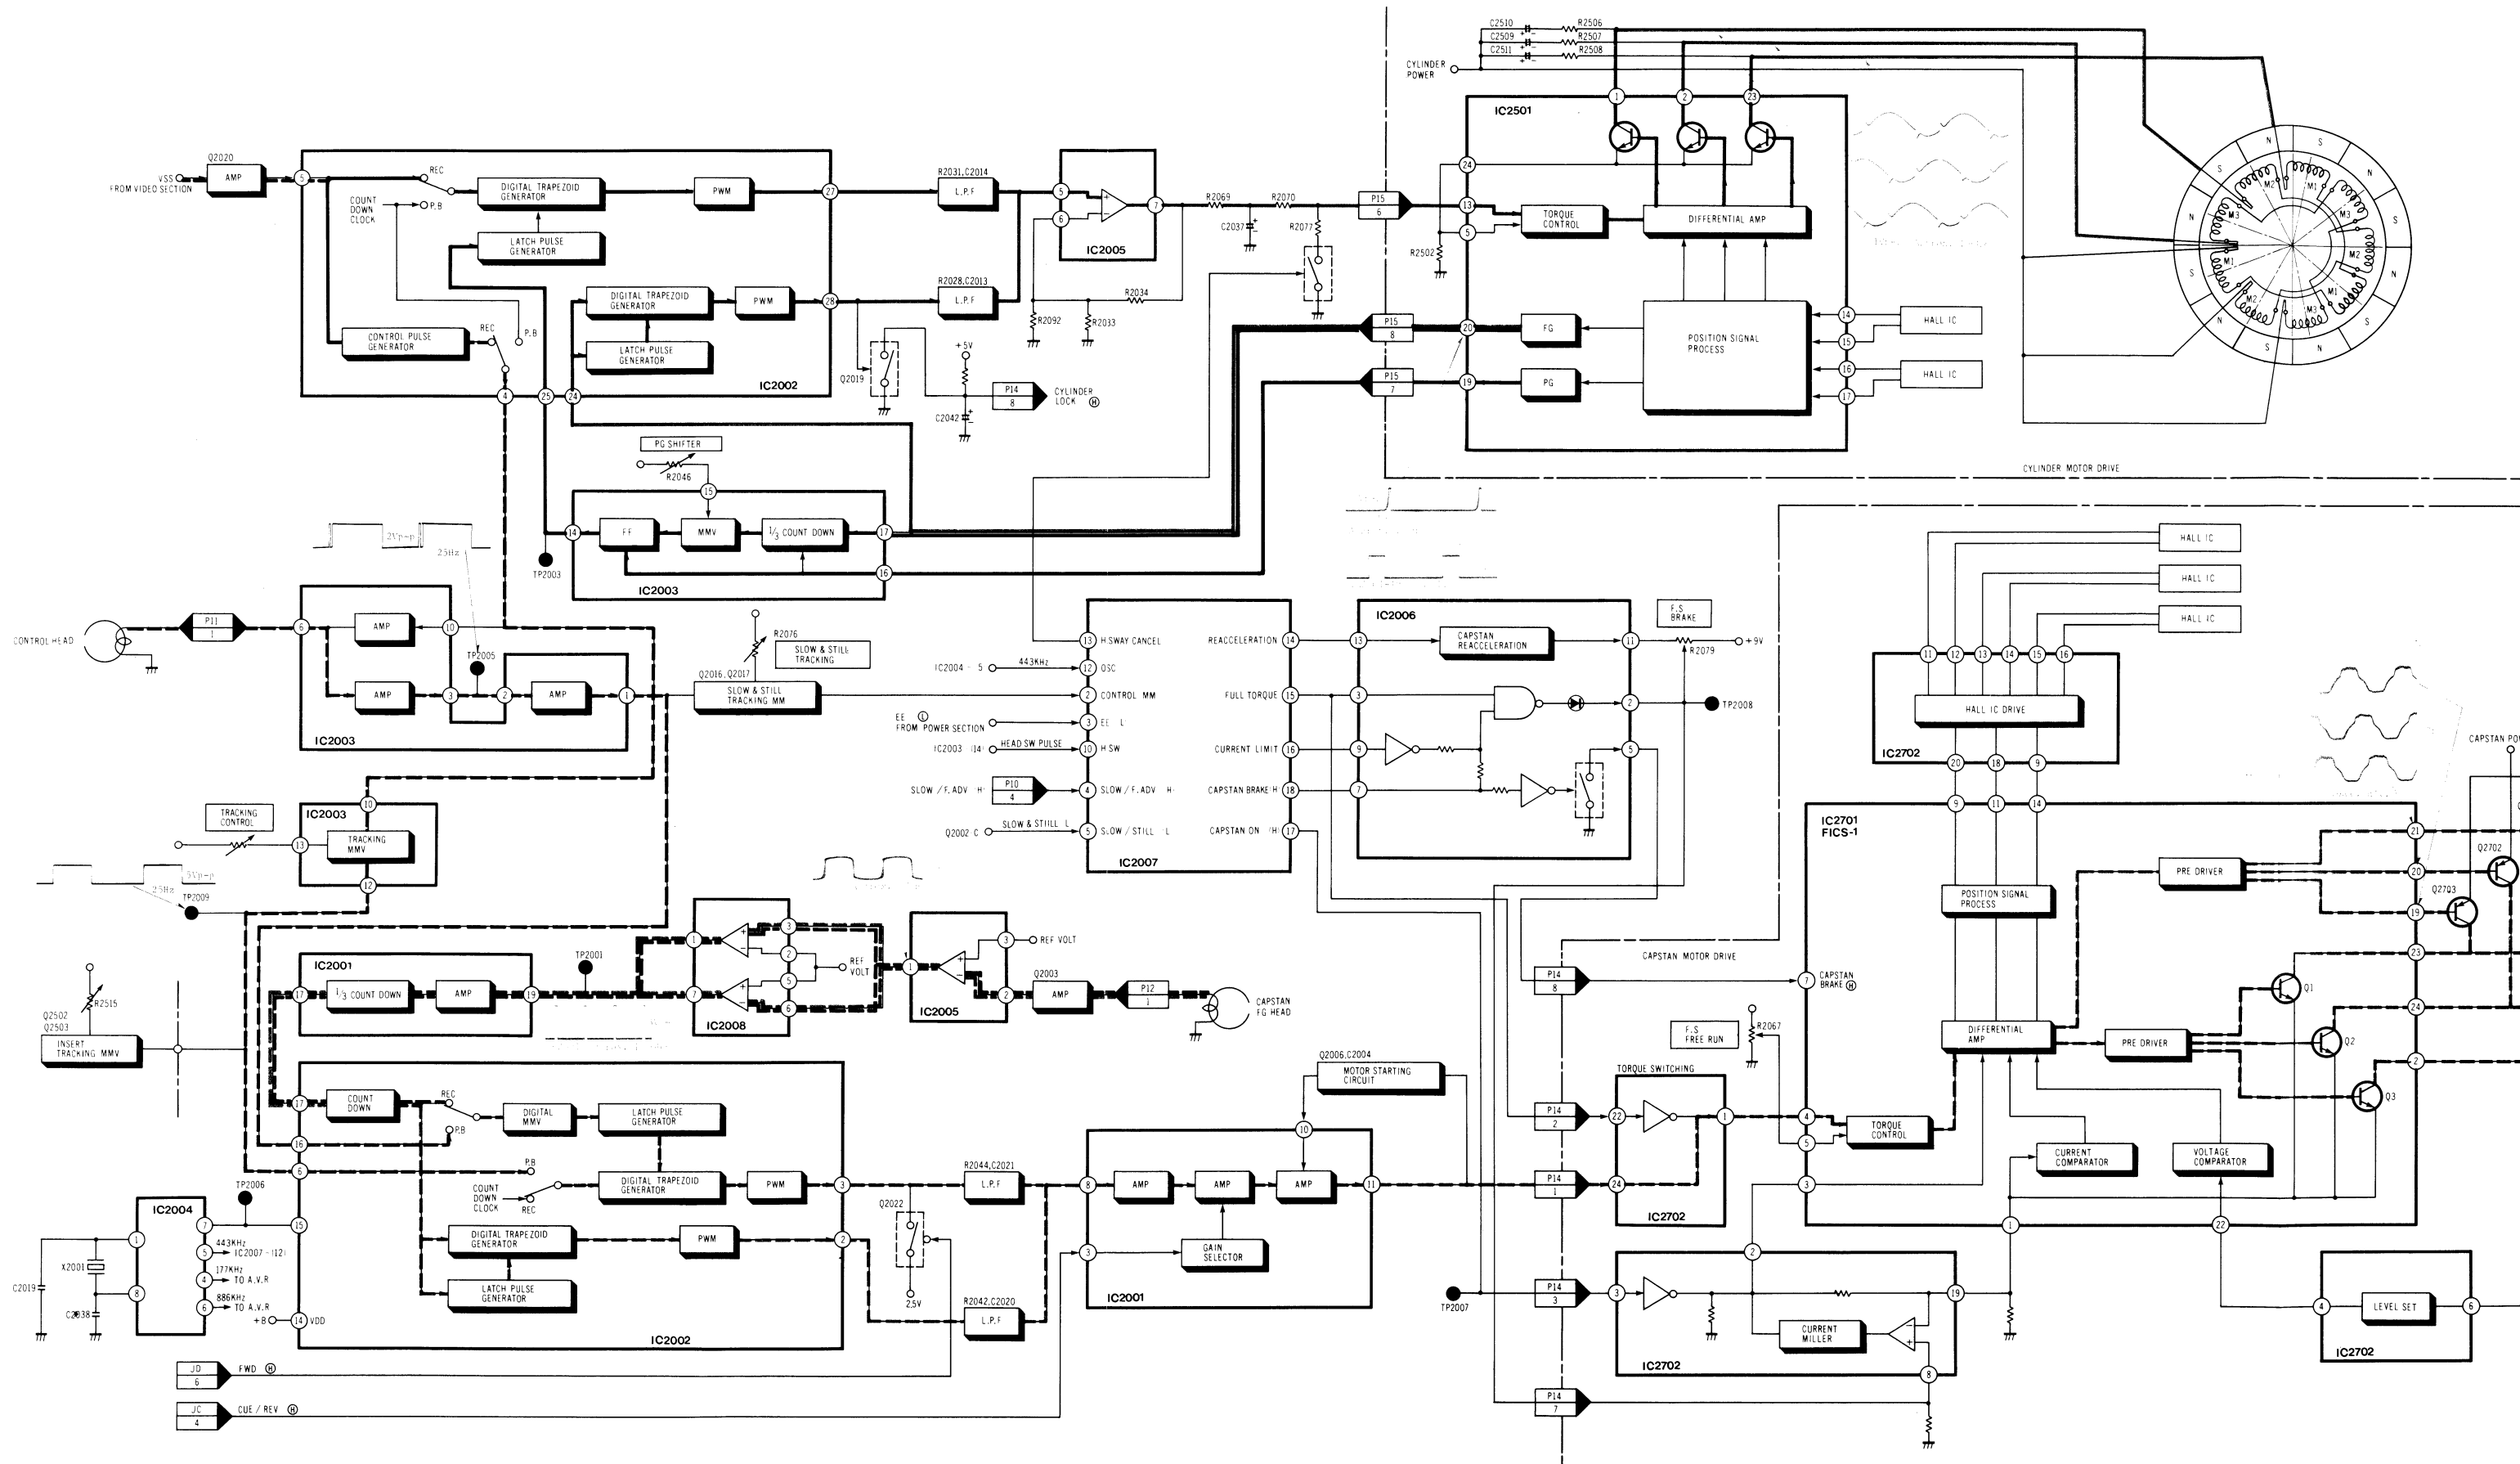

RF CONVERTER BLOCK DIAGRAM

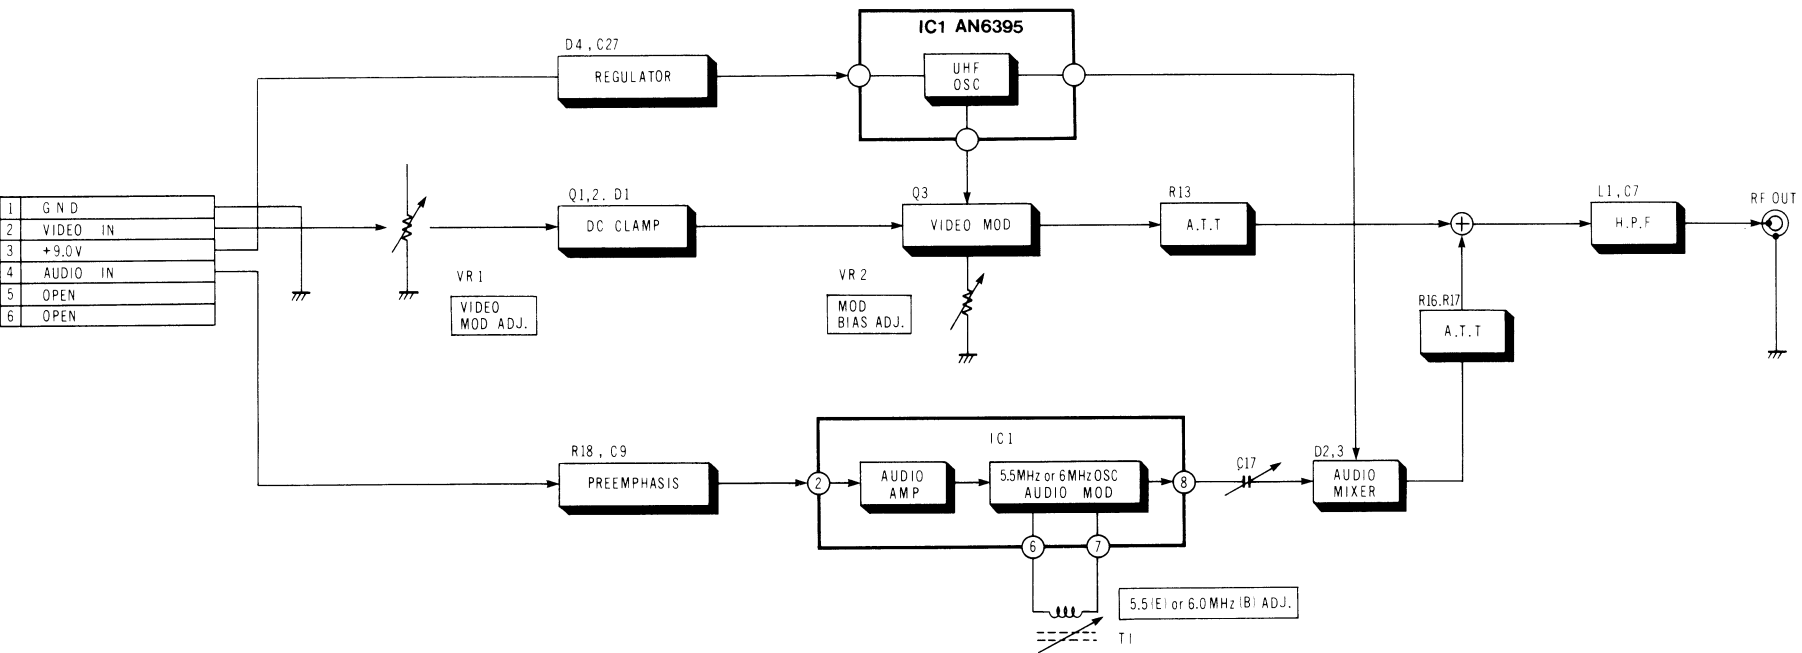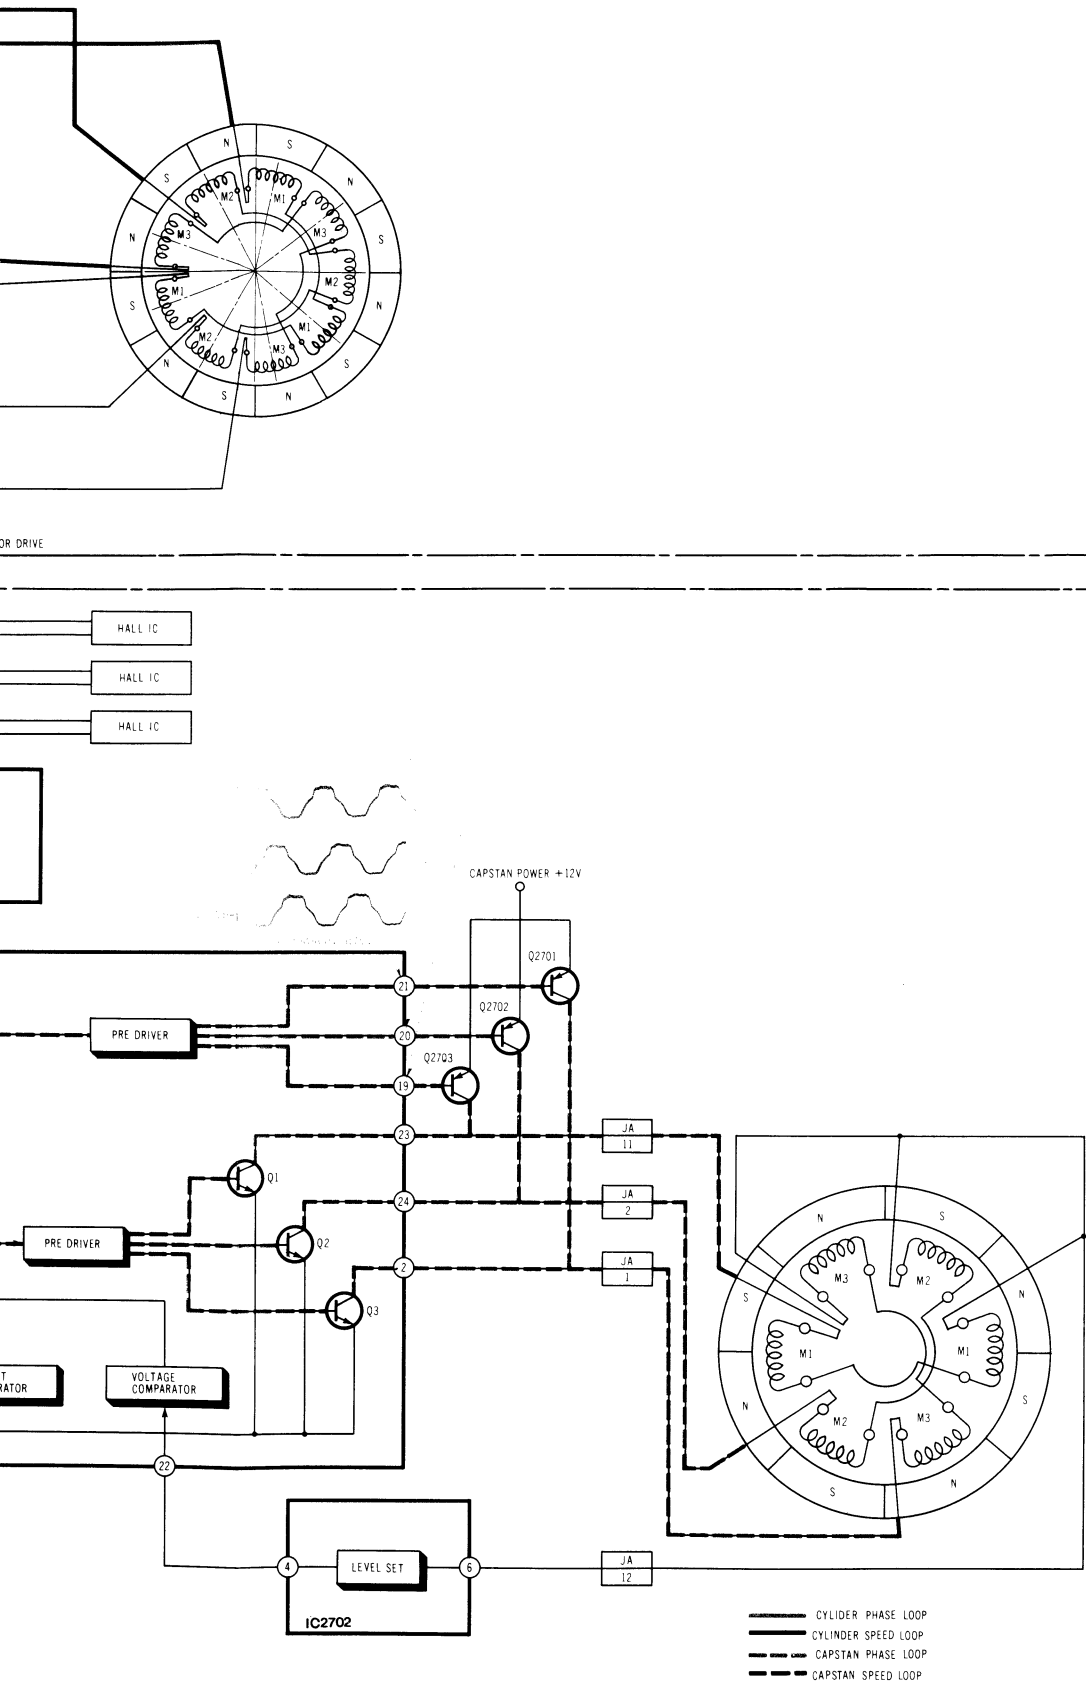

A vertical scale with five horizontal tick marks. The marks are labeled A, B, C, D, and E from bottom to top. The labels are in a bold, sans-serif font.

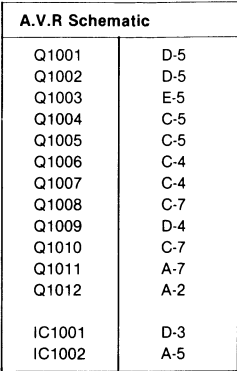

[illegible]

|        |     |
|--------|-----|
| Q6501  | E-3 |
| Q6502  | C-3 |
| Q6503  | C-4 |
| Q6504  | C-4 |
| Q6505  | C-5 |
| Q6506  | C-5 |
| Q6507  | C-7 |
| Q6508  | D-7 |
| Q6509  | D-8 |
| IC6501 | E-5 |

|    |               | J6506  |    |
|----|---------------|--------|----|
| P5 |               | CAMERA |    |
|    | SERIAL SIG    | 1      | 3  |
|    | AUDIO IN      | 2      | 7  |
|    | GND           | 3      | 8  |
|    | CAMERA IN/OUT | 4      | 1  |
|    | GND           | 5      | 2  |
|    | GND           | 6      | 9  |
|    | STAND-BY      | 7      | 5  |
|    | CAMERA PAUSE  | 8      | 6  |
|    | CLOCK I       | 9      | 4  |
|    | 12V OUT       | 10     | 10 |


| P4 TO SYSTEM CONTROL    |  |    |
|-------------------------|--|----|
| SERIAL SIG              |  | 1  |
| TC ① & SERIAL           |  | 2  |
| CAMERA IN ①             |  | 3  |
| CAMERA STAND-BY         |  | 4  |
| CAMERA PAUSE            |  | 5  |
| CLOCK I                 |  | 6  |
| CLOCK II                |  | 7  |
| SAF. TAB. ONE TOUCH REC |  | 8  |
| ANTENNA SW / CH LOCK    |  | 9  |
| GND                     |  | 10 |

| MULTI CONNECTION |                          |
|------------------|--------------------------|
| 1                | HEATER +20V              |
| 2                | +12V IN                  |
| 3                | GND                      |
| 4                | SAFT. TAB. ONE TOUCH REC |
| 5                | GND                      |
| 6                | GND                      |
| 7                | ANTENNA SW               |
| 8                | CLOCK II                 |
| 9                | SERIAL SIGNAL            |
| 10               | VIDEO IN                 |
| 11               | _____                    |
| 12               | GND                      |
| 13               | AUDIO IN                 |



| CAMERA CONNECTION |                     |
|-------------------|---------------------|
| 1                 | CAMERA VIDEO IN/OUT |
| 2                 | GND                 |
| 3                 | SERIAL SIGNAL       |
| 4                 | CLOCK I             |
| 5                 | CAMERA STANDBY      |
| 6                 | CAMERA PAUSE        |
| 7                 | AUDIO IN            |
| 8                 | GND                 |
| 9                 | GND                 |
| 10                | 12V OUT             |



**A**



**MAIN** (A.V.R., SERVO, LUMINANCE & CHROMINANCE, AUDIO, LOADING MOTOR)  
**[VEP03137A; NV-100E/B: VEP03137B; NV-100EG]**

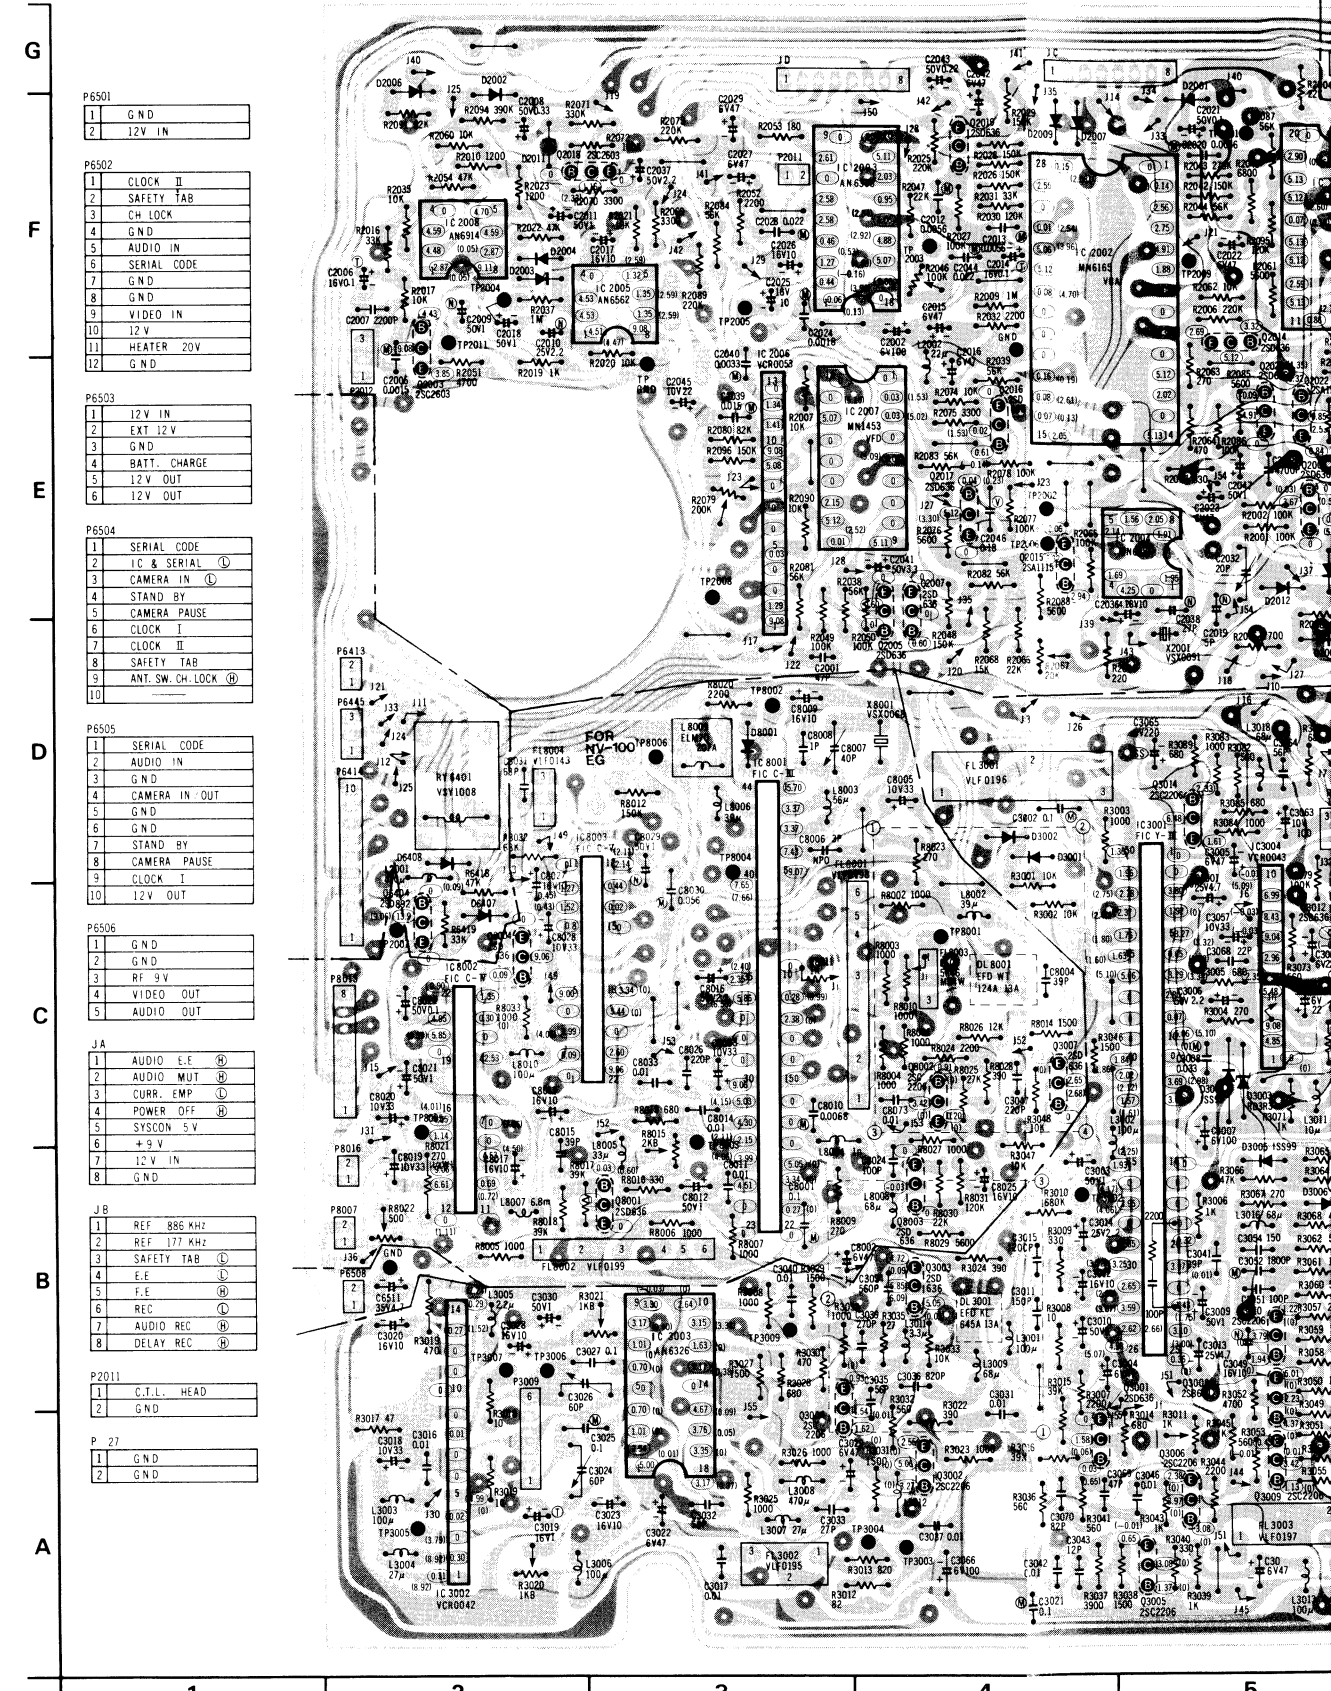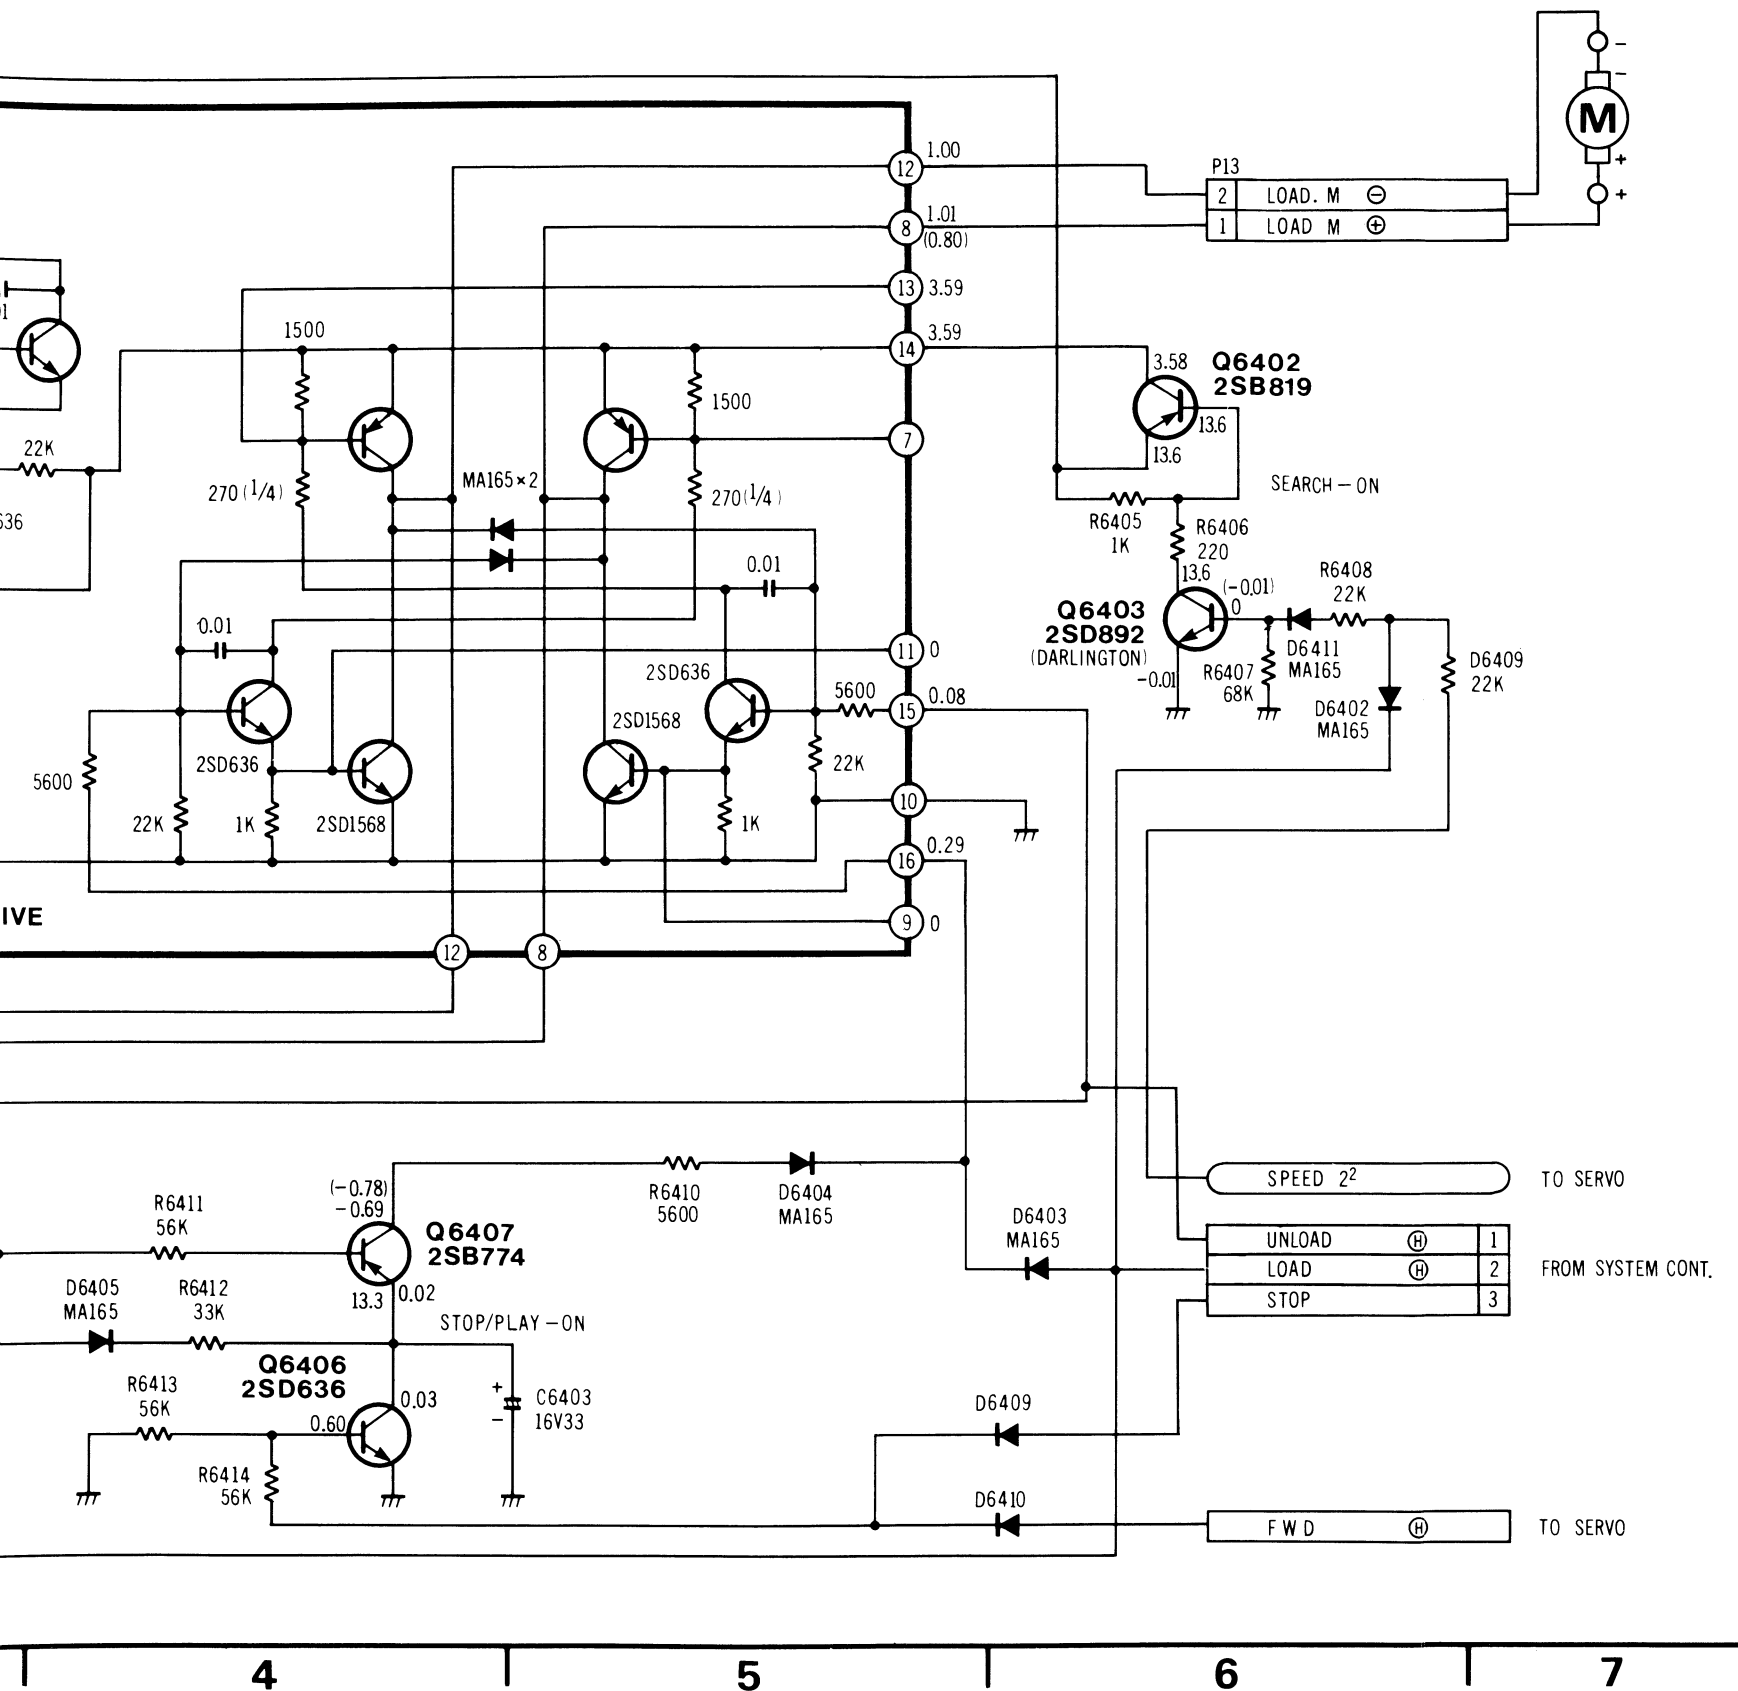




# MAIN (A.V.R., SERVO, LUMINANCE & CHROMINANCE, AUDIO, LOADING MOTOR DRIVE AND JACK PANEL SECTION) P.C.B UNIT

## [VEP03137A; NV-100E/B: VEP03137B; NV-100EG]

NOTE: UNLESS OTHERWISE SPECIFIED,  
UNLESS OTHERWISE SPECIFIED.



P6501

|   |        |
|---|--------|
| 1 | GND    |
| 2 | 12V IN |

P6502

|    |             |
|----|-------------|
| 1  | CLOCK II    |
| 2  | SAFETY TAB  |
| 3  | CH LOCK     |
| 4  | GND         |
| 5  | AUDIO IN    |
| 6  | SERIAL CODE |
| 7  | GND         |
| 8  | VIDEO IN    |
| 10 | 12V         |
| 11 | HEATER 20V  |
| 12 | GND         |

P6503

|   |              |
|---|--------------|
| 1 | 12V IN       |
| 2 | EXT 12V      |
| 3 | GND          |
| 4 | BATT. CHARGE |
| 5 | 12V OUT      |
| 6 | 12V OUT      |

P6504

|    |                   |
|----|-------------------|
| 1  | SERIAL CODE       |
| 2  | IC & SERIAL       |
| 3  | CAMERA IN         |
| 4  | STAND BY          |
| 5  | CAMERA PAUSE      |
| 6  | CLOCK I           |
| 7  | CLOCK II          |
| 8  | SAFETY TAB        |
| 10 | ANT. SW. CH. LOCK |

P6505

|    |               |
|----|---------------|
| 1  | SERIAL CODE   |
| 2  | AUDIO IN      |
| 3  | GND           |
| 4  | CAMERA IN/OUT |
| 5  | GND           |
| 6  | GND           |
| 7  | STAND BY      |
| 8  | CAMERA PAUSE  |
| 9  | CLOCK I       |
| 10 | 12V OUT       |

P6506

|   |           |
|---|-----------|
| 1 | GND       |
| 2 | GND       |
| 3 | RF 9V     |
| 4 | VIDEO OUT |
| 5 | AUDIO OUT |

J.A

|   |           |
|---|-----------|
| 1 | AUDIO E.E |
| 2 | AUDIO MUT |
| 3 | CURR. EMP |
| 4 | POWER OFF |
| 5 | SYSCON 5V |
| 6 | +9V       |
| 7 | 12V IN    |
| 8 | GND       |

J.B


|   |             |
|---|-------------|
| 1 | REF 885 KHZ |
| 2 | REF 177 KHZ |
| 3 | SAFETY TAB  |
| 4 | E.E         |
| 5 | F.E         |
| 6 | REC         |
| 7 | AUDIO REC   |
| 8 | DELAY REC   |

P2011

|   |             |
|---|-------------|
| 1 | C.T.L. HEAD |
| 2 | GND         |

P 27

|   |     |
|---|-----|
| 1 | GND |
| 2 | GND |

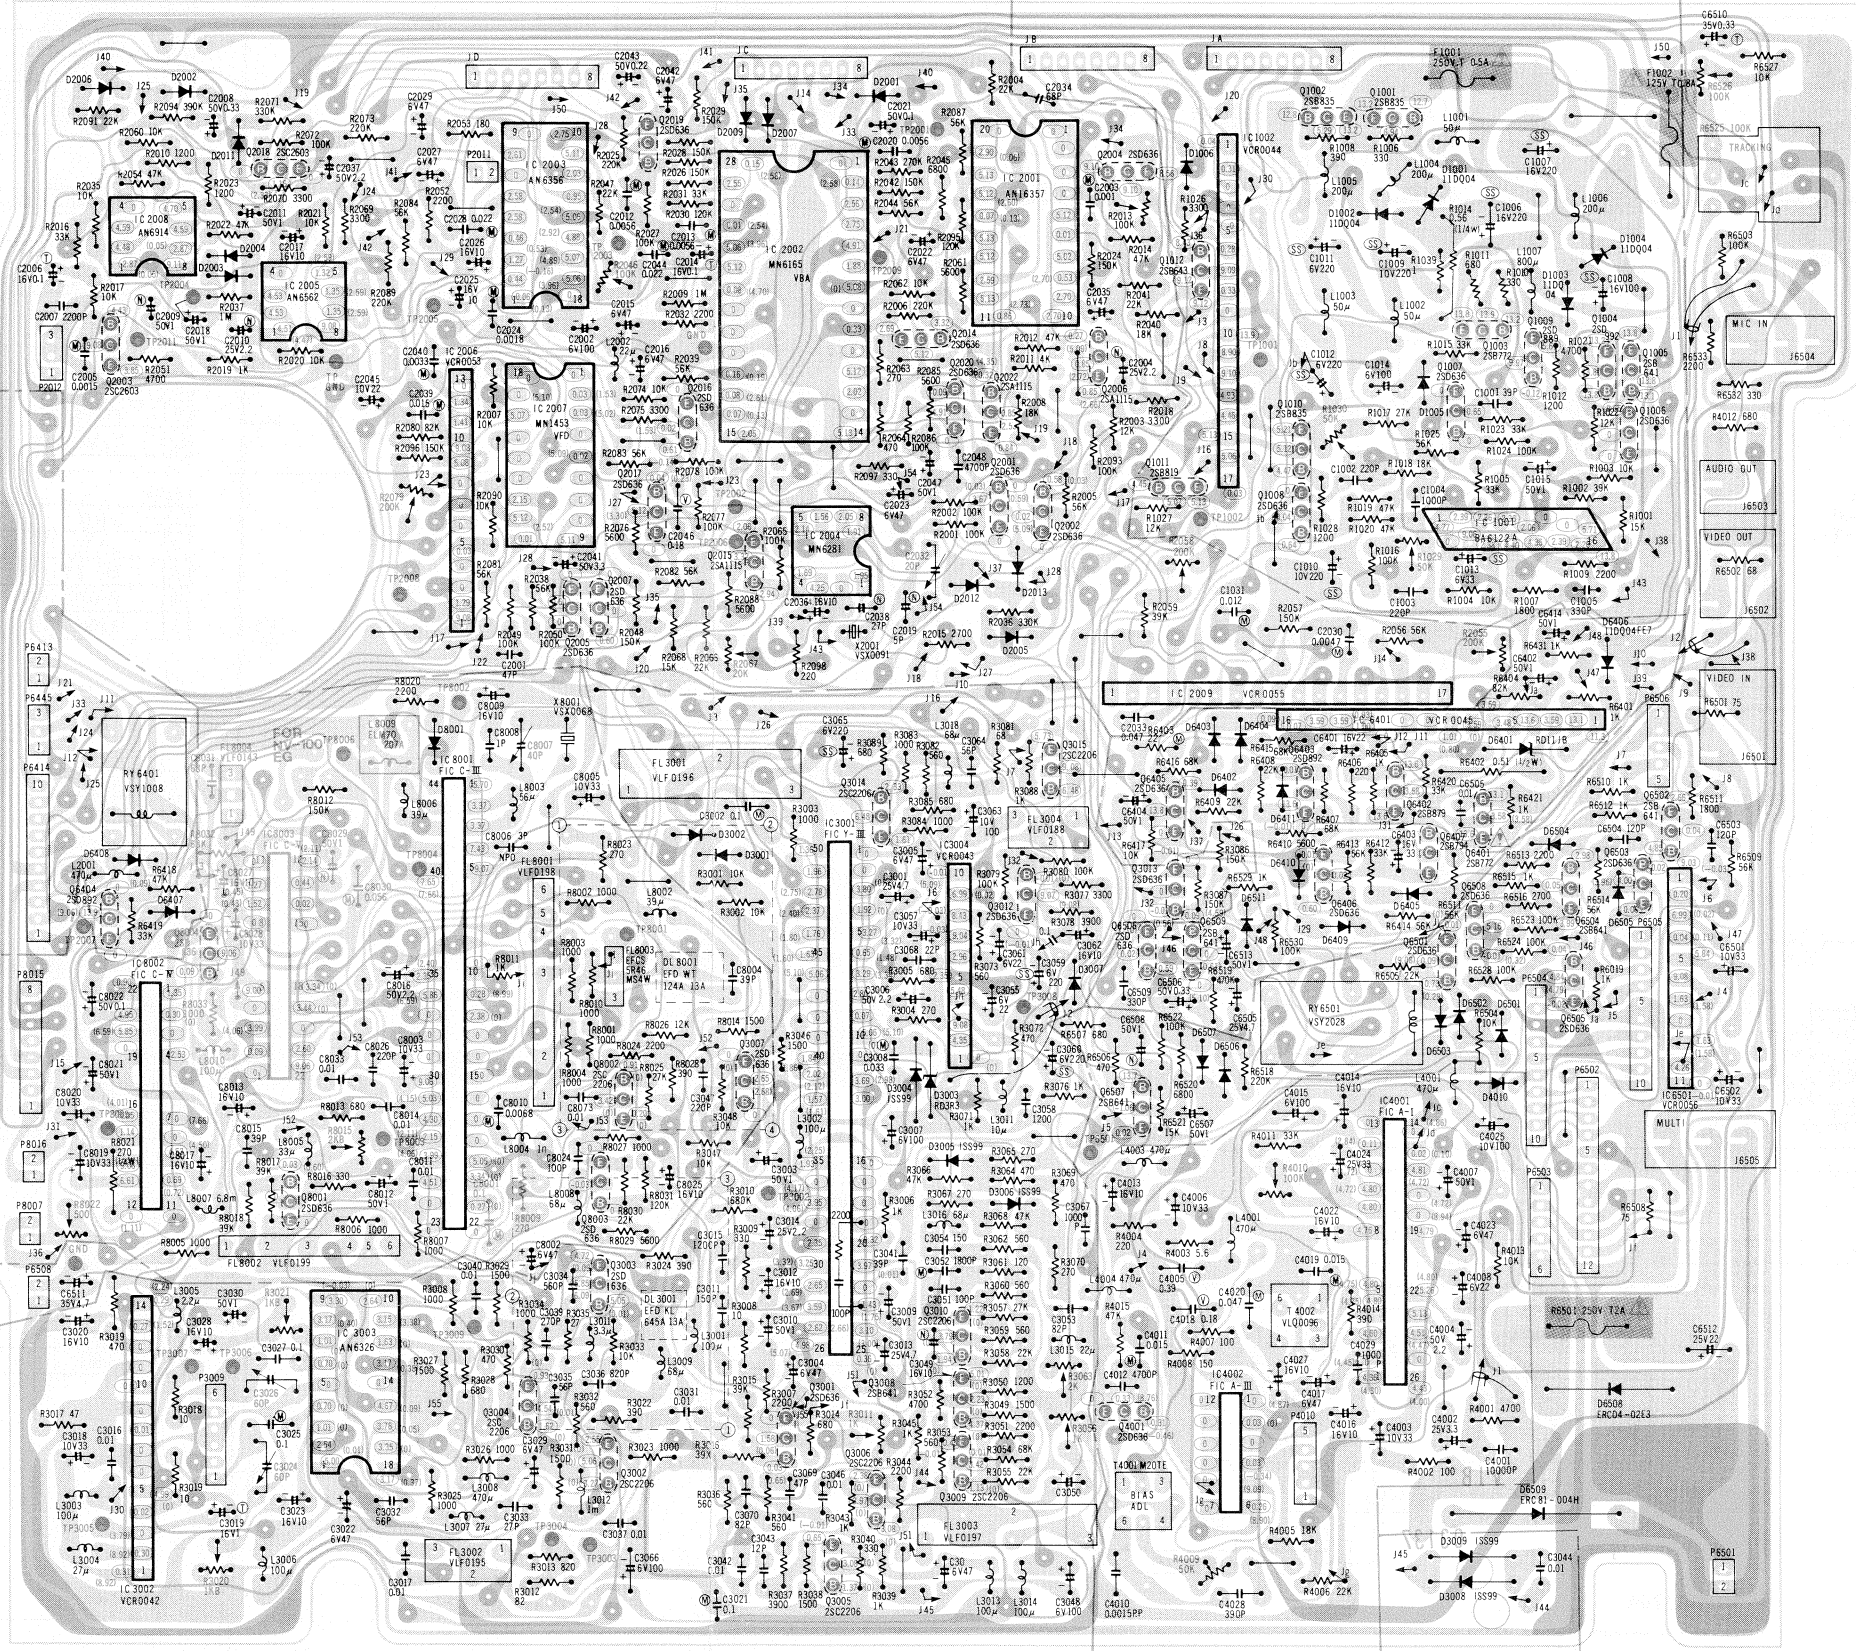

MAIN P.C.B

| A.V.R Section |     |
|---------------|-----|
| Q1001         | F-7 |
| Q1002         | F-6 |
| Q1003         | E-7 |
| Q1004         | E-7 |
| Q1005         | E-7 |
| Q1006         | E-7 |
| Q1007         | E-7 |
| Q1008         | E-6 |
| Q1009         | E-7 |
| Q1010         | E-6 |
| Q1011         | E-6 |
| Q1012         | E-6 |
| IC1001        | E-7 |
| IC1002        | E-6 |

MAIN P.C.B

| Jack Panel Section |     |
|--------------------|-----|
| Q6501              | C-7 |
| Q6502              | C-8 |
| Q6503              | C-8 |
| Q6504              | C-7 |
| Q6505              | C-7 |
| Q6506              | C-6 |
| Q6507              | B-6 |
| Q6508              | C-7 |
| Q6509              | C-6 |
| IC6501             | C-8 |

P4010

|   |                |
|---|----------------|
| 1 | A.E HEAD       |
| 2 | GND            |
| 3 | GND            |
| 4 | AUDIO HEAD (R) |
| 5 | AUDIO HEAD (L) |

P3009

|   |           |
|---|-----------|
| 1 | VIDEO (Y) |
| 2 | VIDEO (S) |
| 3 | GND       |
| 4 | GND       |
| 5 | VIDEO (P) |
| 6 | VIDEO (W) |

P6508

|   |            |
|---|------------|
| 1 | HEATER 20V |
| 2 | GND        |

P8007

|   |        |
|---|--------|
| 1 | GND    |
| 2 | F.E 9V |

P8016

|   |              |
|---|--------------|
| 1 | GND          |
| 2 | LOAD BACK UP |

P8015

|   |                |
|---|----------------|
| 1 | GND            |
| 2 | FWD            |
| 3 | CYL POWER      |
| 4 | 9V             |
| 5 | TORQUE CONTROL |
| 7 | P.G            |
| 8 | F.G            |

P6414

|    |                |
|----|----------------|
| 1  | TORQUE CONTROL |
| 2  | FULL TORQUE    |
| 3  | MOTOR ON       |
| 4  | 9V             |
| 5  | GND            |
| 7  | REF. V         |
| 8  | CURR. LIM      |
| 9  | E.D            |
| 10 | CAP POWER      |

P6445

|   |              |
|---|--------------|
| 1 | TRACKING IN  |
| 2 | A. DUB       |
| 3 | TRACKING OUT |

P6413

|   |            |
|---|------------|
| 1 | LOAD MOTOR |
| 2 | LOAD MOTOR |

P2012


|   |         |
|---|---------|
| 1 | FG HEAD |
| 2 | GND     |
| 3 | GND     |

J.C

|   |             |
|---|-------------|
| 1 | SPEED FIX   |
| 2 | 6.H         |
| 3 | 20          |
| 4 | 27          |
| 5 | PAUSE RESET |
| 6 | 2.5         |
| 7 | 2.4/5 SW    |
| 8 | A. DUB      |

J.D

|   |               |
|---|---------------|
| 1 | UNLOADING     |
| 2 | LOADING       |
| 3 | STOP          |
| 4 | SLOW F. ADV   |
| 5 | SLOW TRACKING |
| 6 | FWD           |
| 7 | REVERSE       |
| 8 | CYL LOCK      |


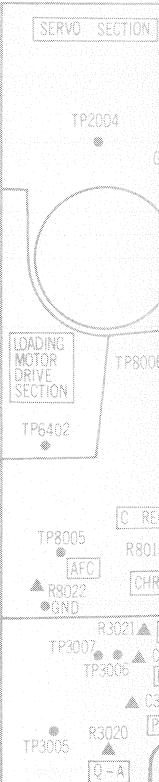


NOTE: UNLESS OTHERWISE SPECIFIED, ALL DIODES ARE MA165  
UNLESS OTHERWISE SPECIFIED, ALL Tr's ARE 2SD636 (NPN TYPE)

| MAIN P.C.B    |     |
|---------------|-----|
| A.V.R Section |     |
| Q1001         | F-7 |
| Q1002         | F-6 |
| Q1003         | E-7 |
| Q1004         | E-7 |
| Q1005         | E-7 |
| Q1006         | E-7 |
| Q1007         | E-7 |
| Q1008         | E-6 |
| Q1009         | E-7 |
| Q1010         | E-6 |
| Q1011         | E-6 |
| Q1012         | E-6 |
| IC1001        | E-7 |
| IC1002        | E-6 |


| MAIN P.C.B                  |     |
|-----------------------------|-----|
| Loading motor Drive Section |     |
| Q6401                       | C-7 |
| Q6402                       | C-7 |
| Q6403                       | C-6 |
| Q6404                       | C-2 |
| Q6405                       | C-6 |
| Q6406                       | C-6 |
| Q6407                       | C-7 |
| IC6401                      | C-7 |

| MAIN P.C.B         |     |
|--------------------|-----|
| Jack Panel Section |     |
| Q6501              | C-7 |
| Q6502              | C-8 |
| Q6503              | C-8 |
| Q6504              | C-7 |
| Q6505              | C-7 |
| Q6506              | C-6 |
| Q6507              | B-6 |
| Q6508              | C-7 |
| Q6509              | C-6 |
| IC6501             | C-8 |

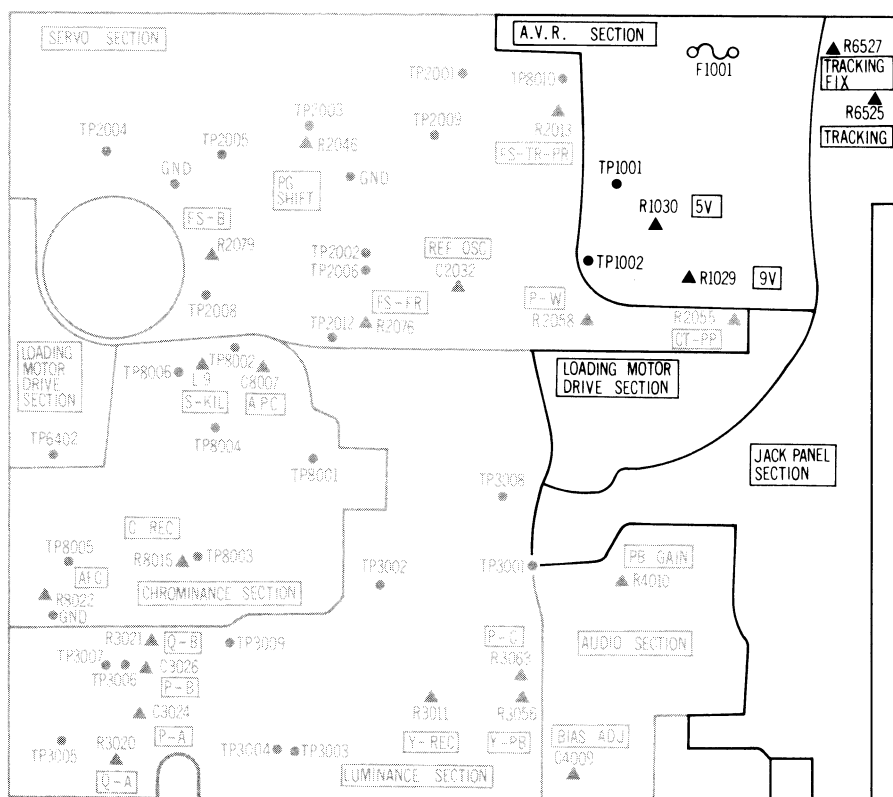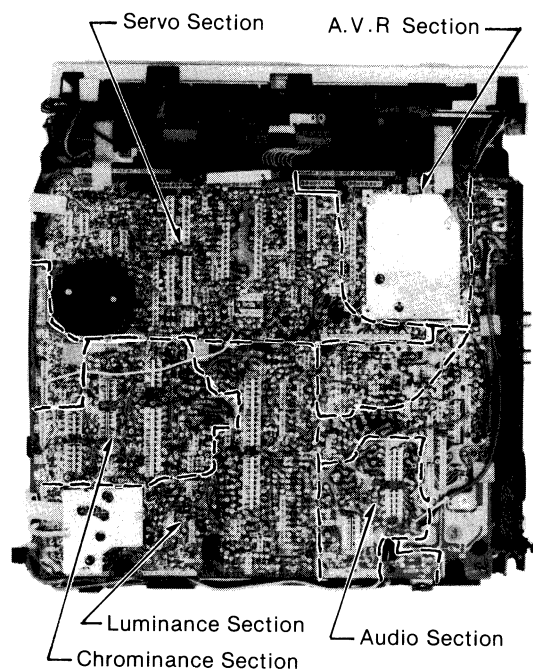



## AUDIO SECTION SCHEMATIC DIAGRAM

THE MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS ( ) ON THIS DIAGRAM IS RECORD MODE WITH PAL COLOUR SIGNAL.  
THE MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS DIAGRAM IS PLAYBACK MODE WITH PAL COLOUR SIGNAL.

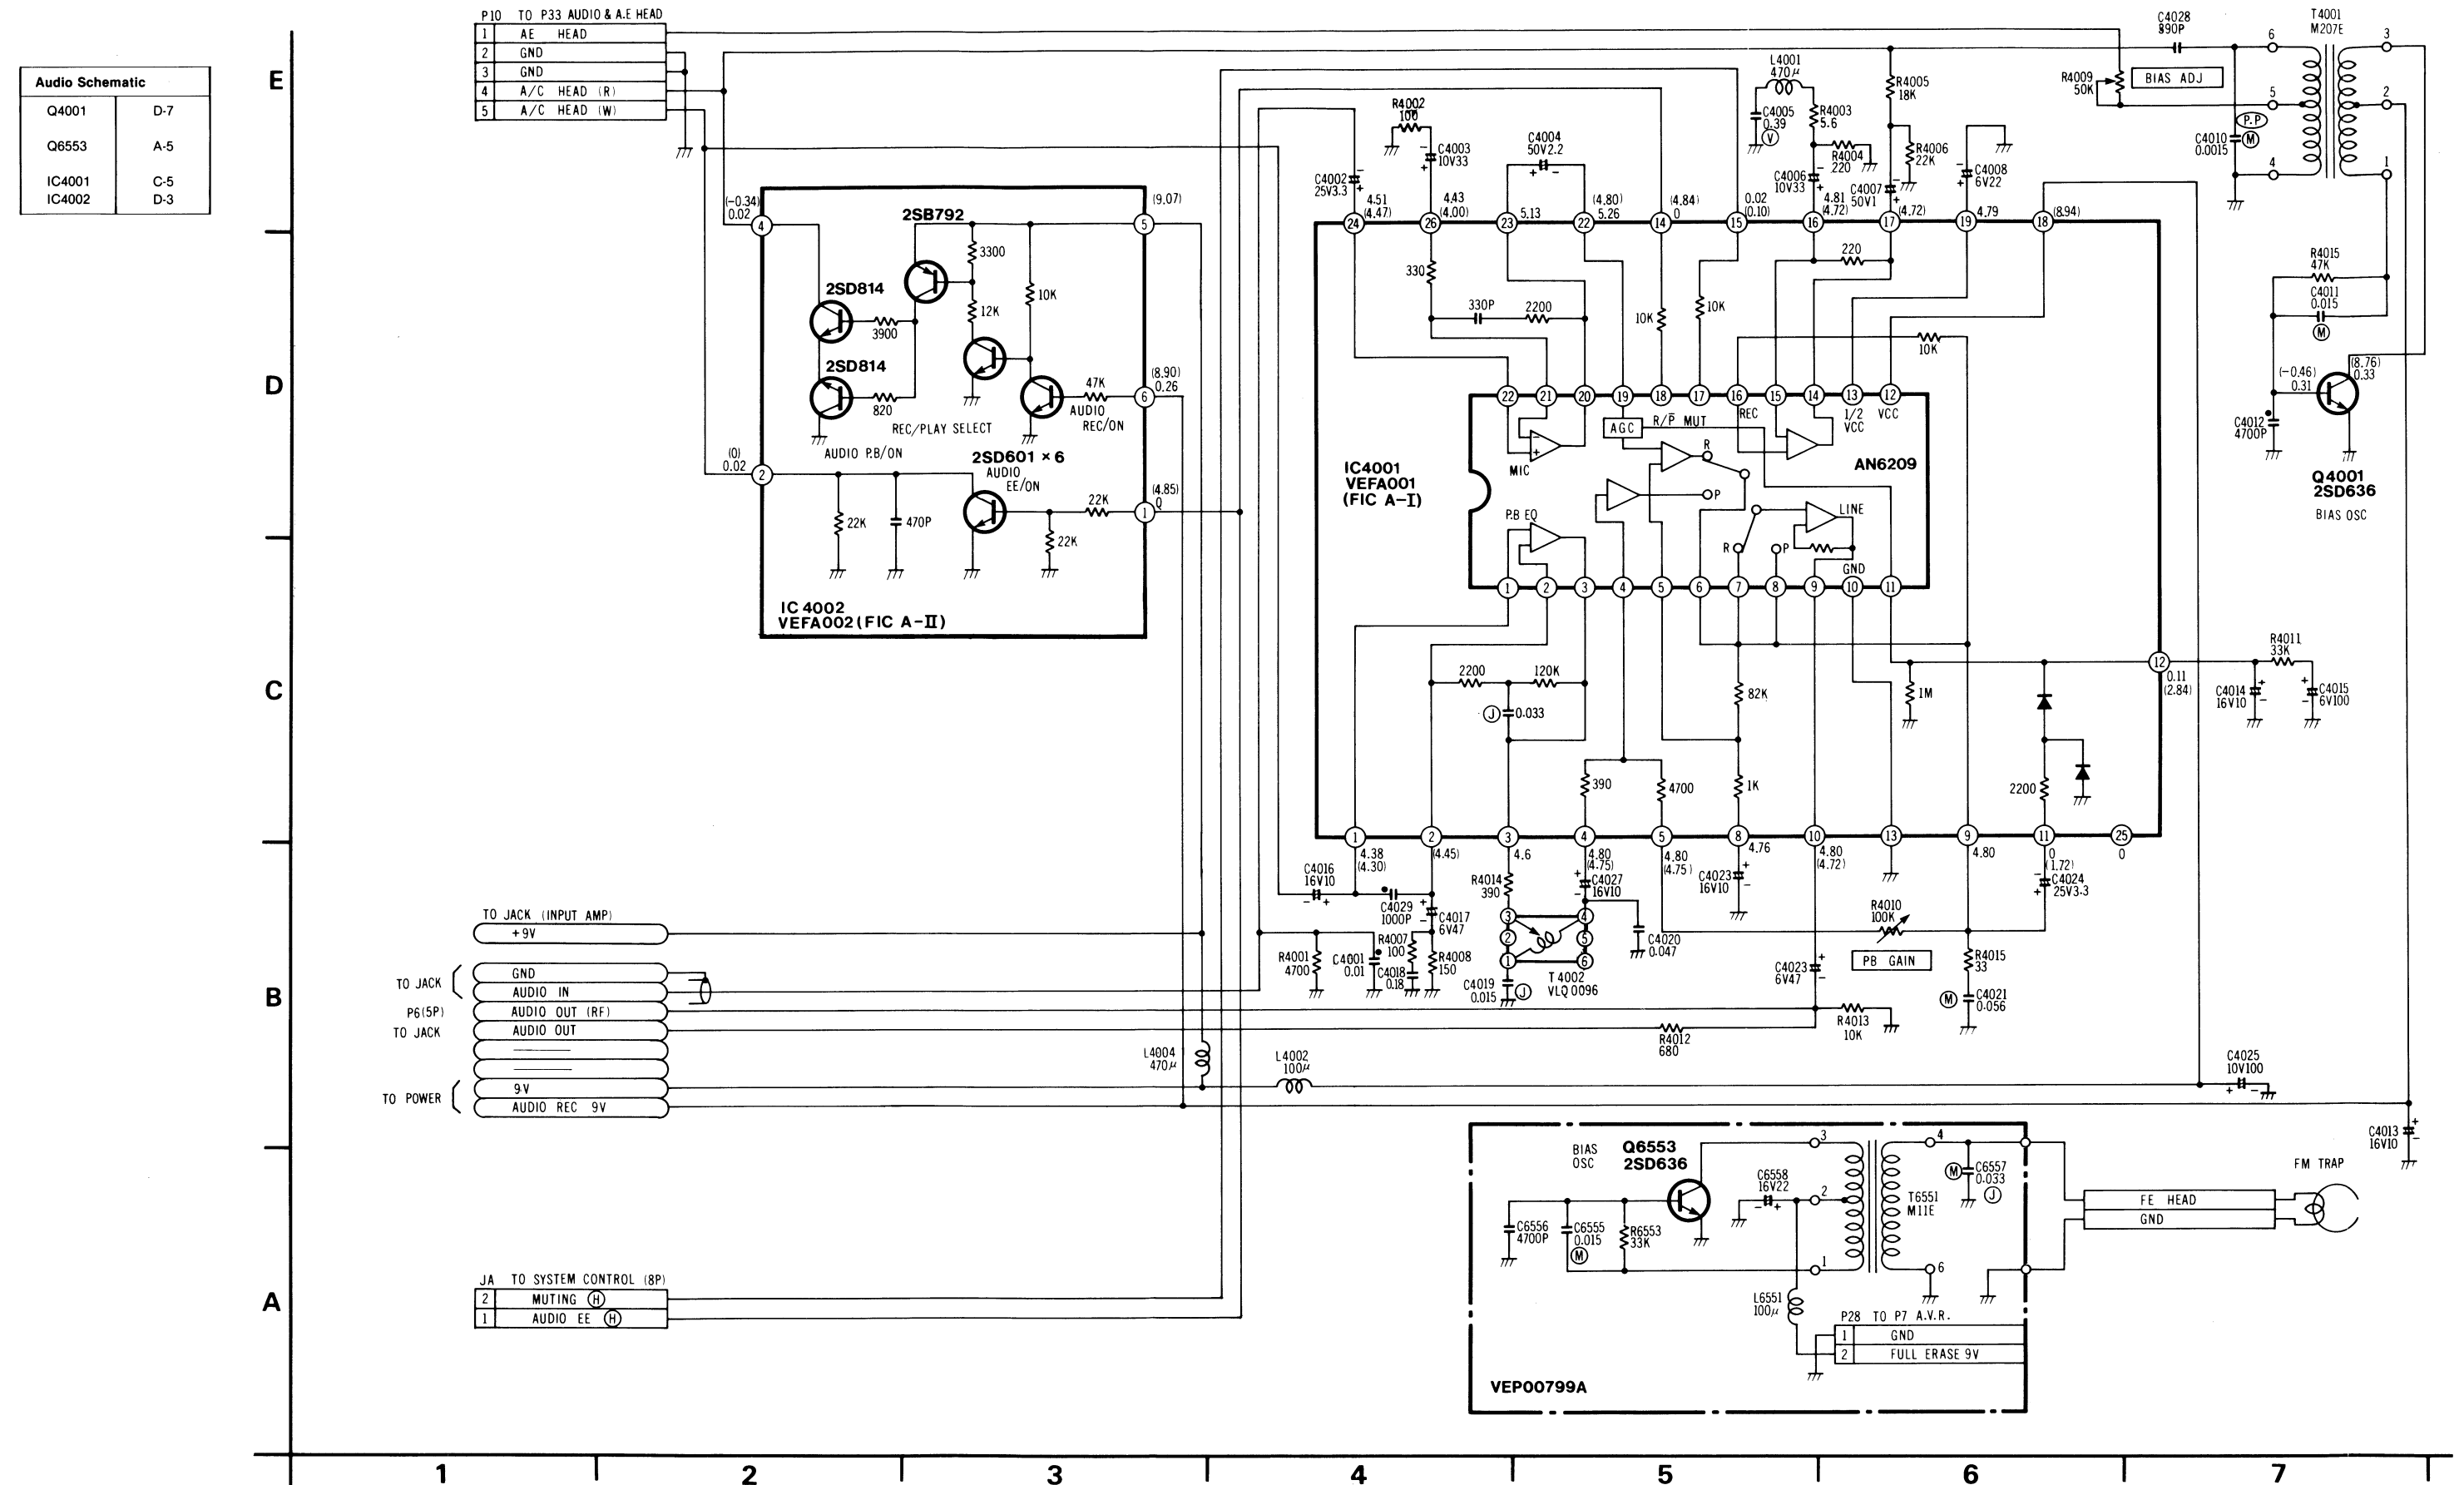




## MAIN (LUMINANCE & CHROMINANCE, AUDIO, LOADING MOTOR DRIVE AND JACK PANEL SECTION) P.C.B UNIT

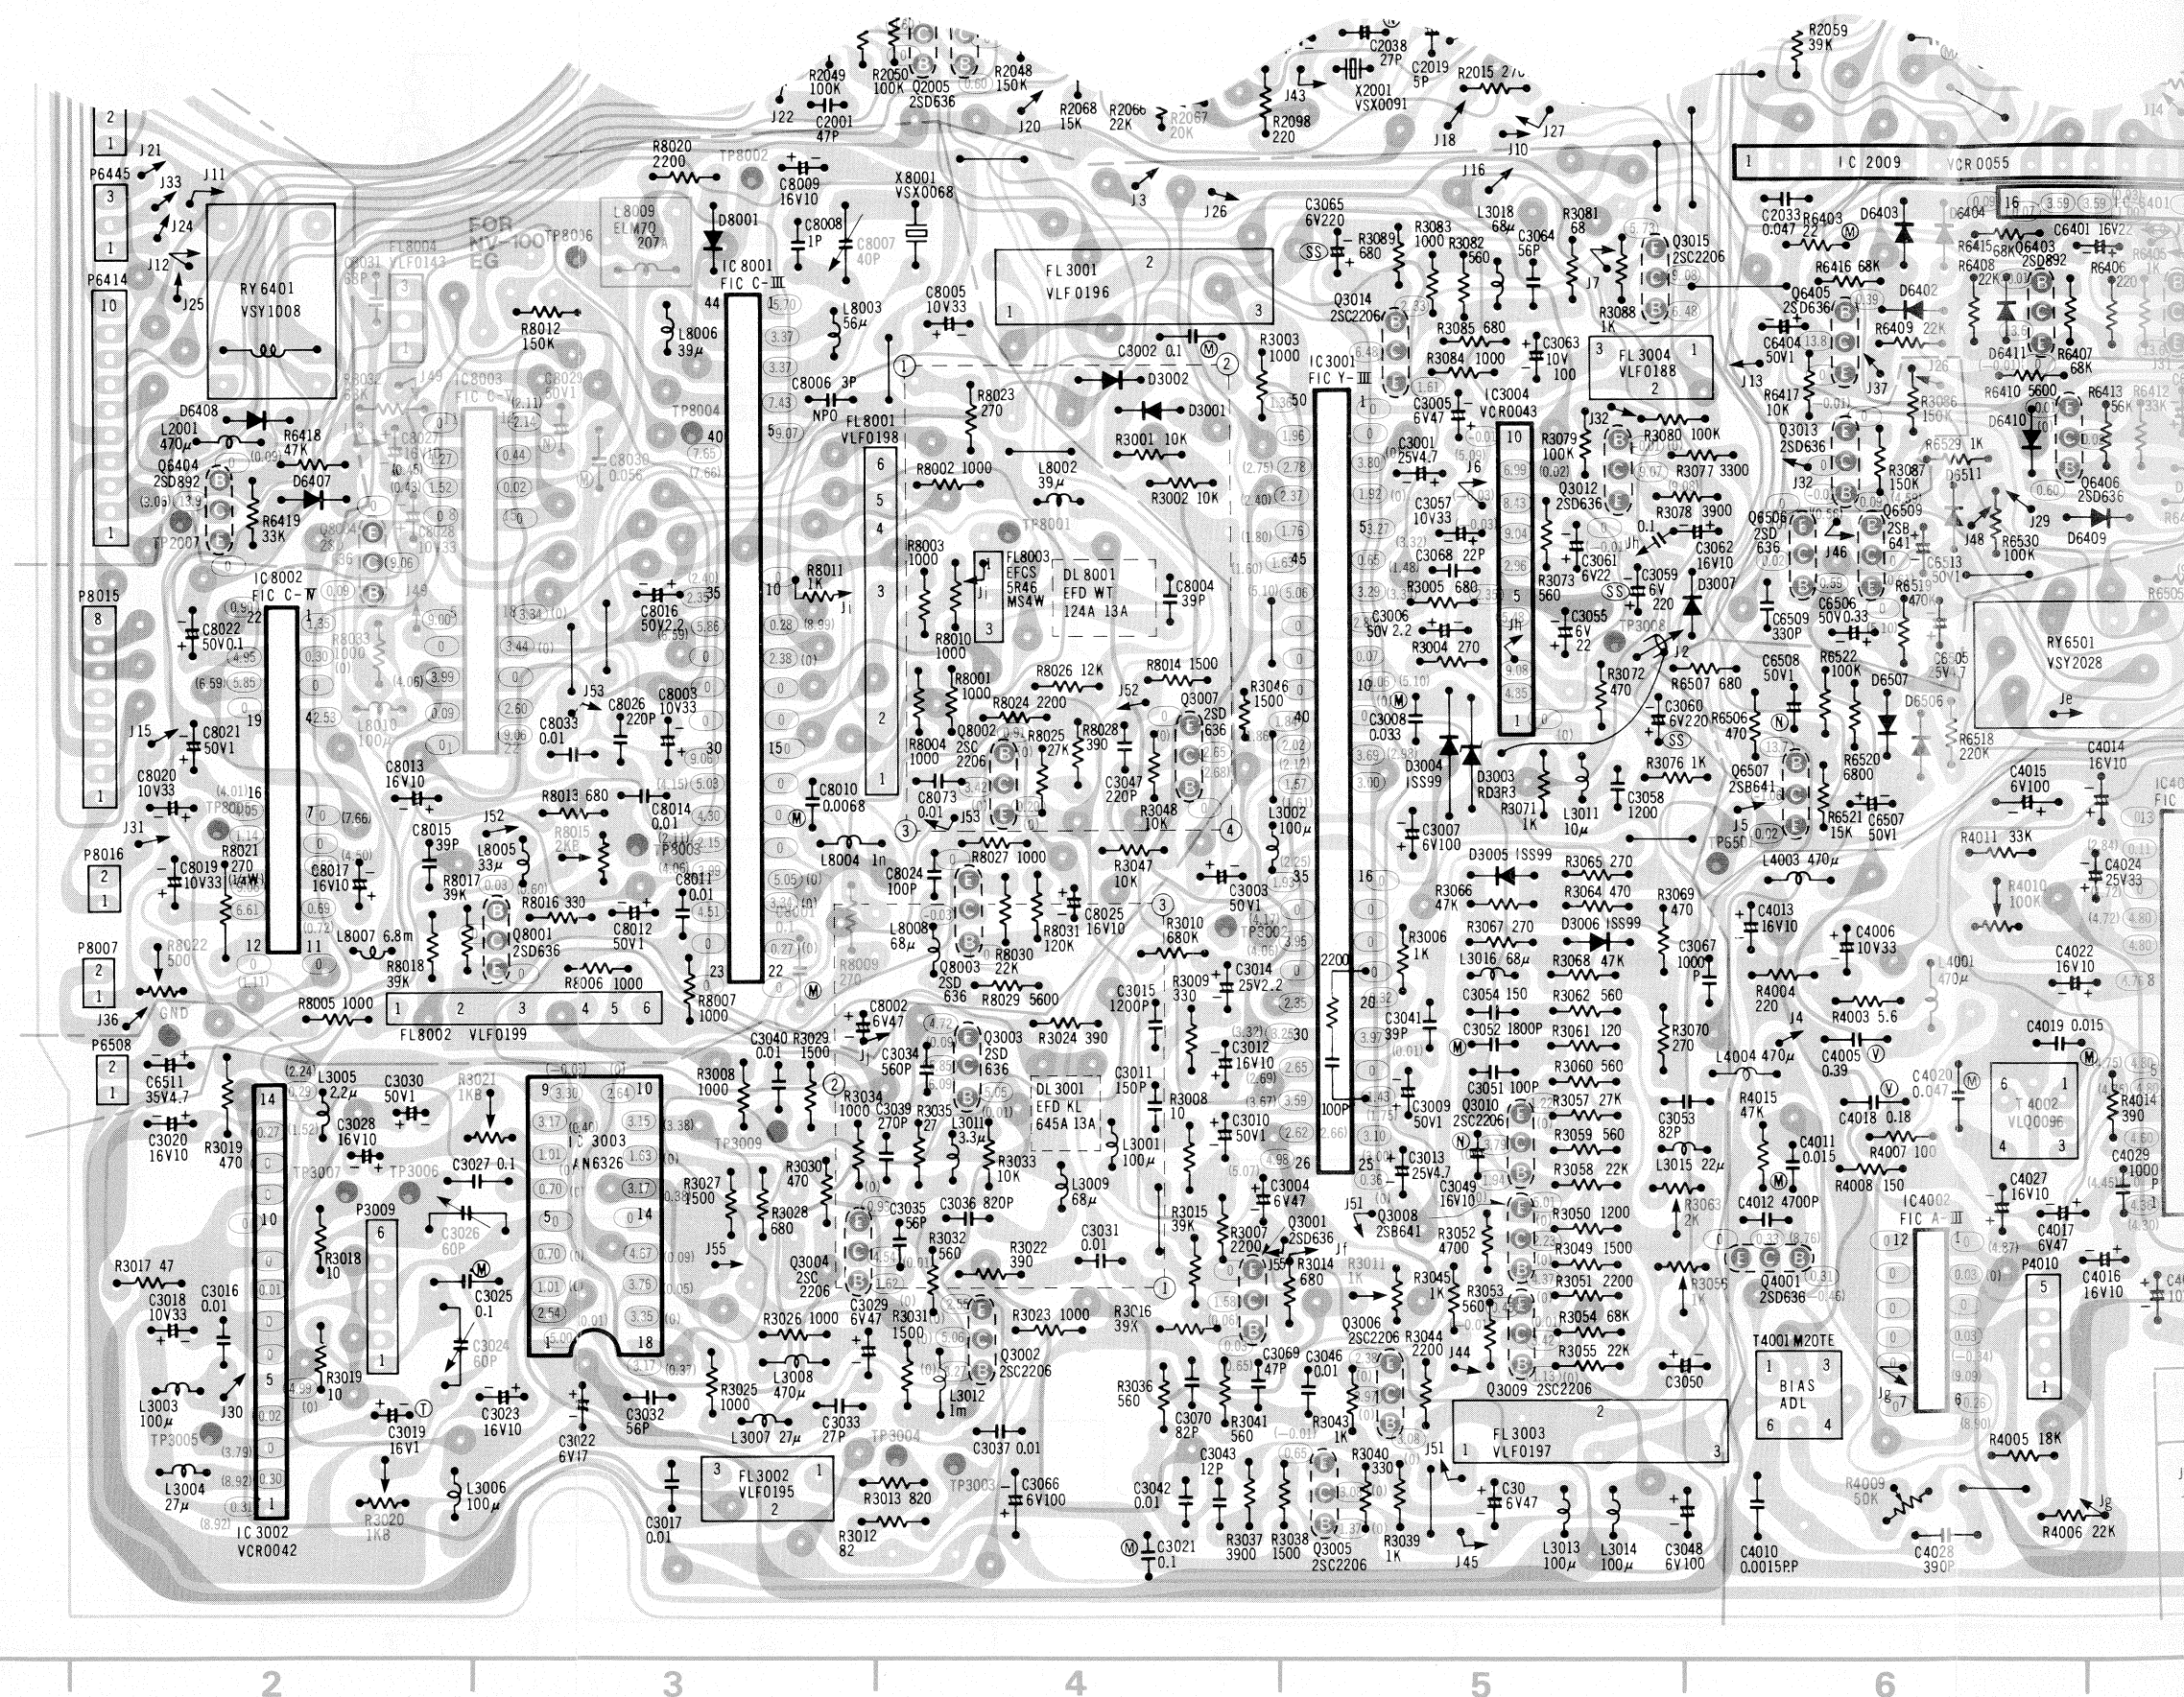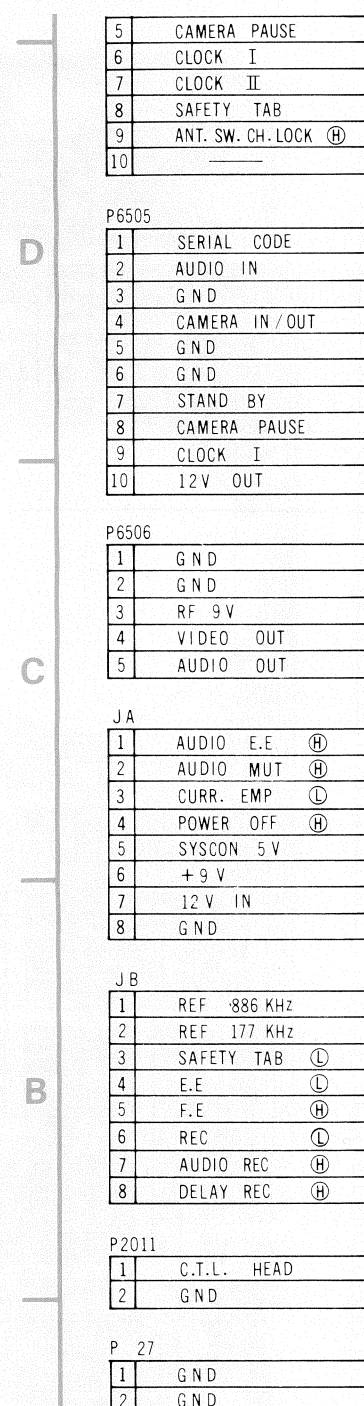




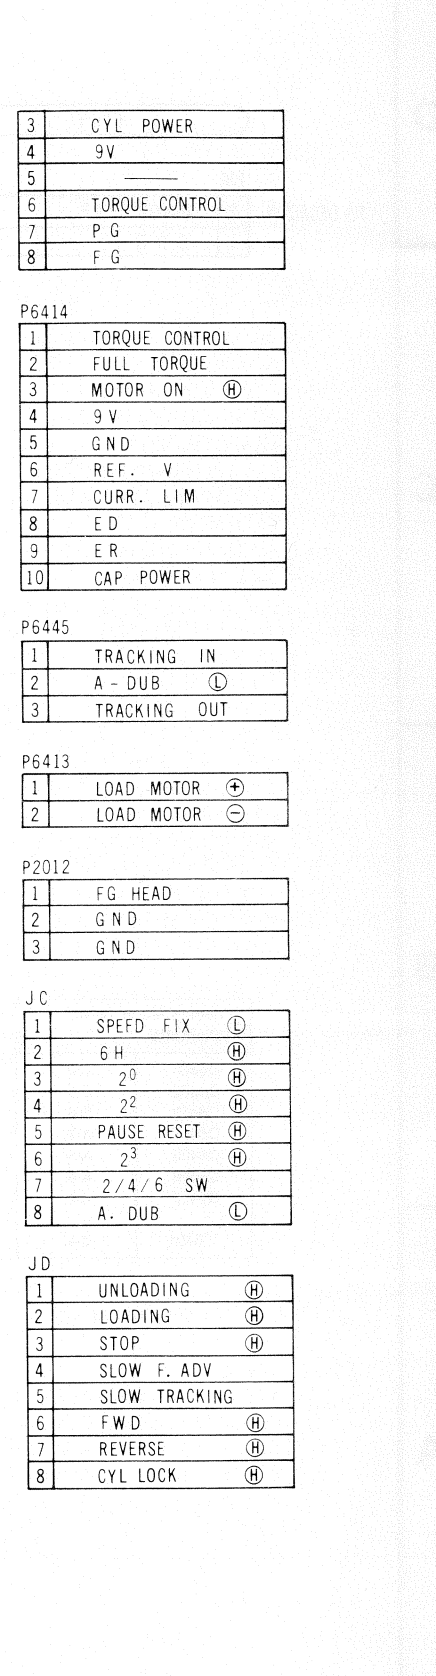








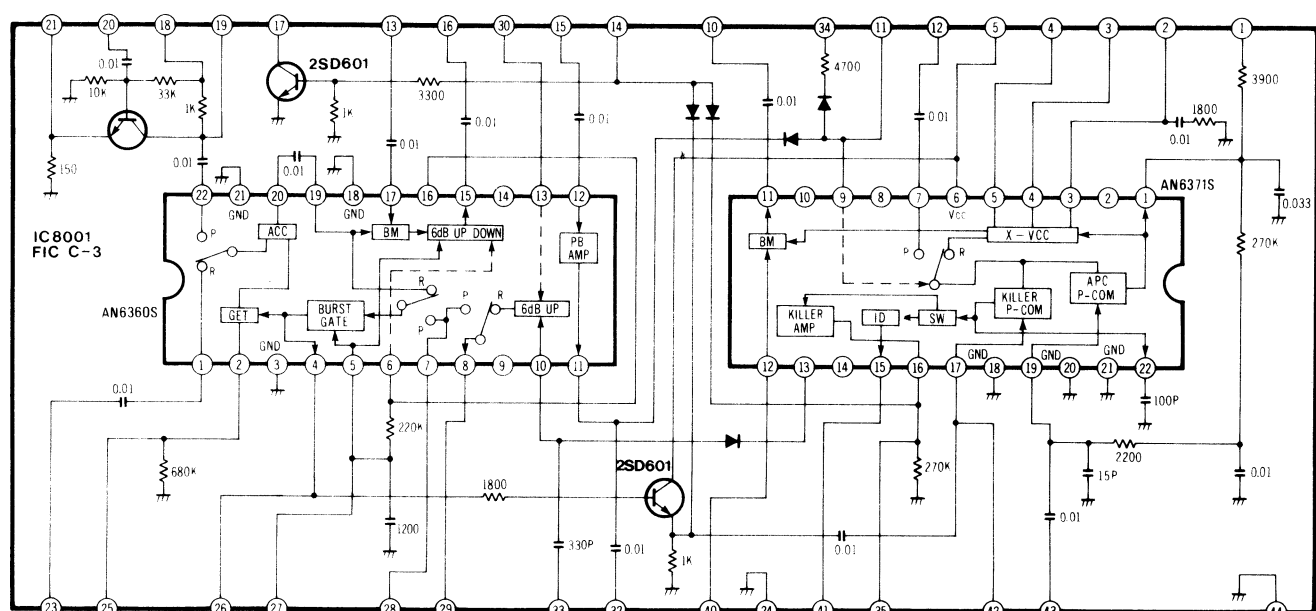


THE MEASUREMENT OF THE  
THIS DIAGRAM IS PLACED  
THE MEASUREMENT OF THE  
DIAGRAM IS PLACED

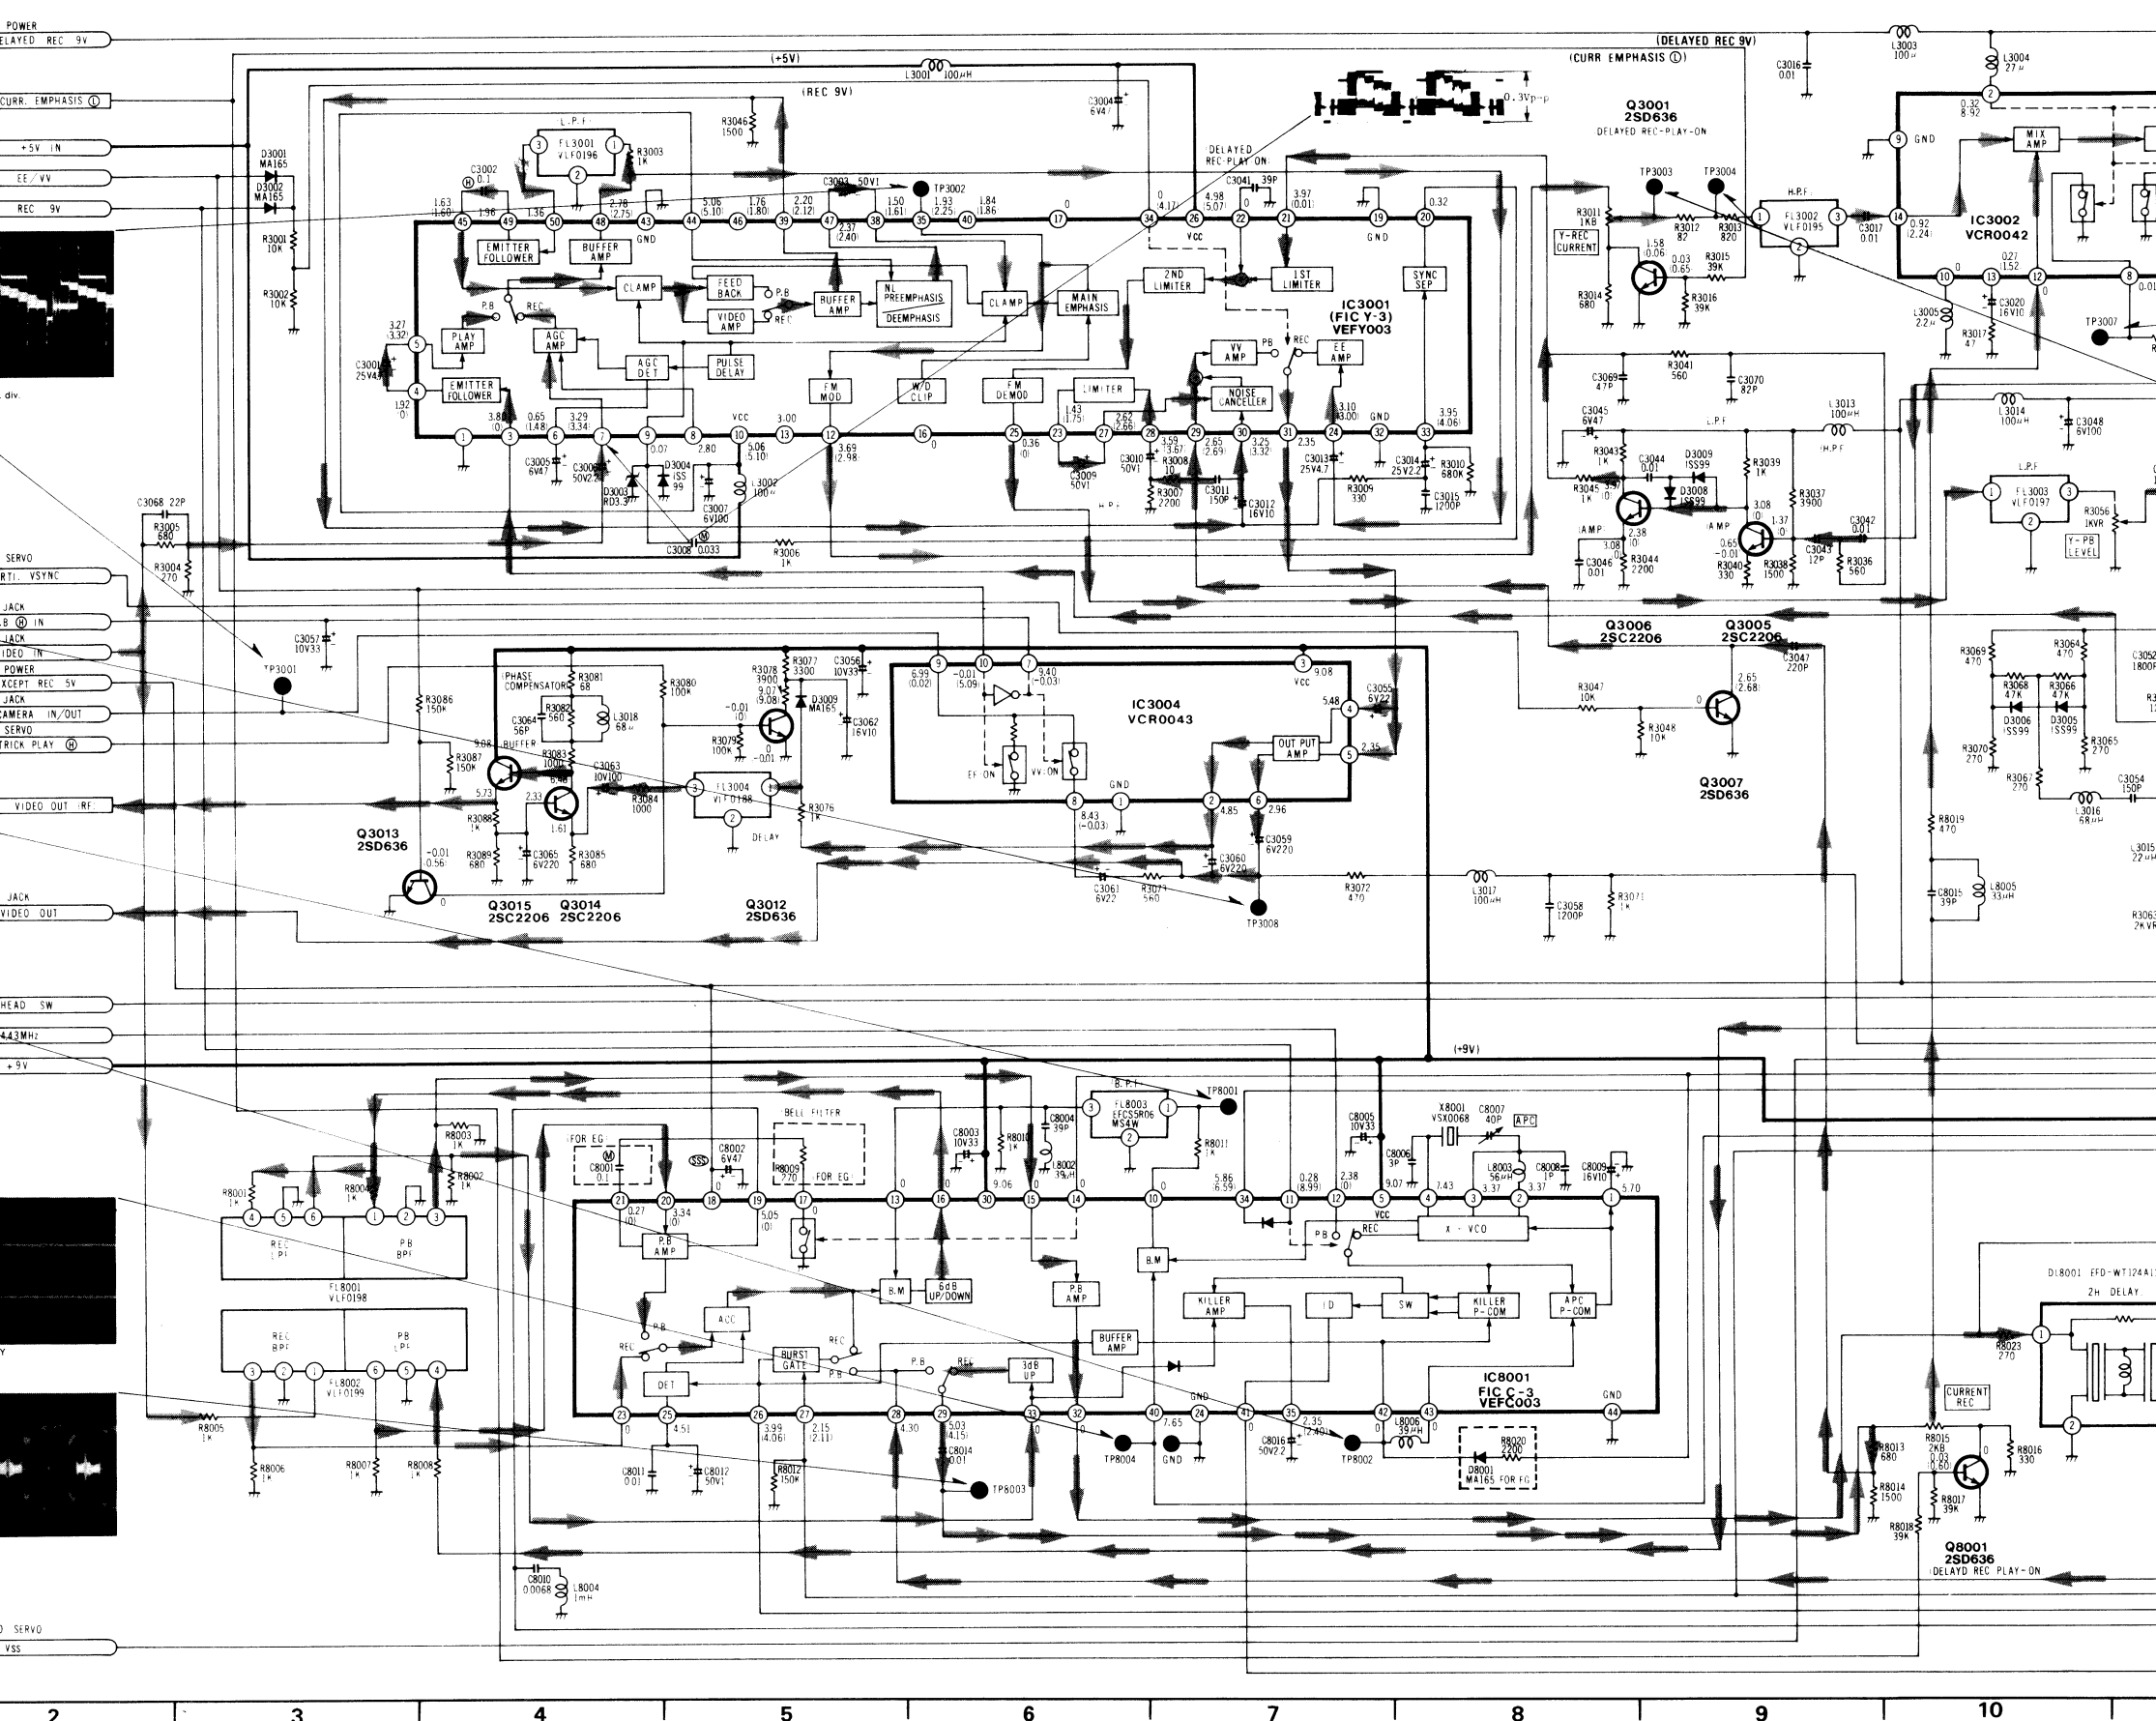

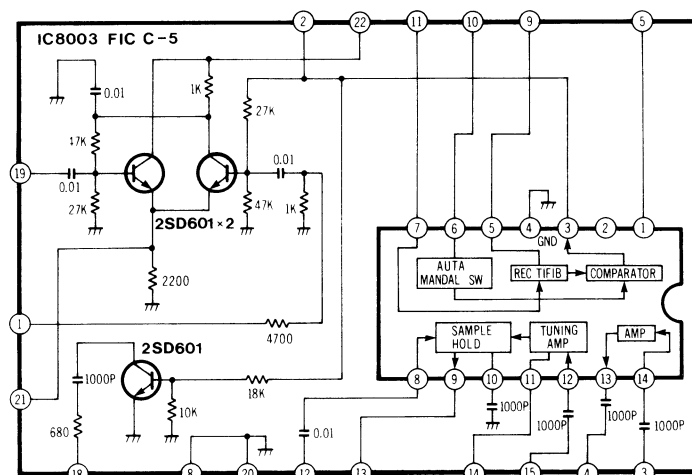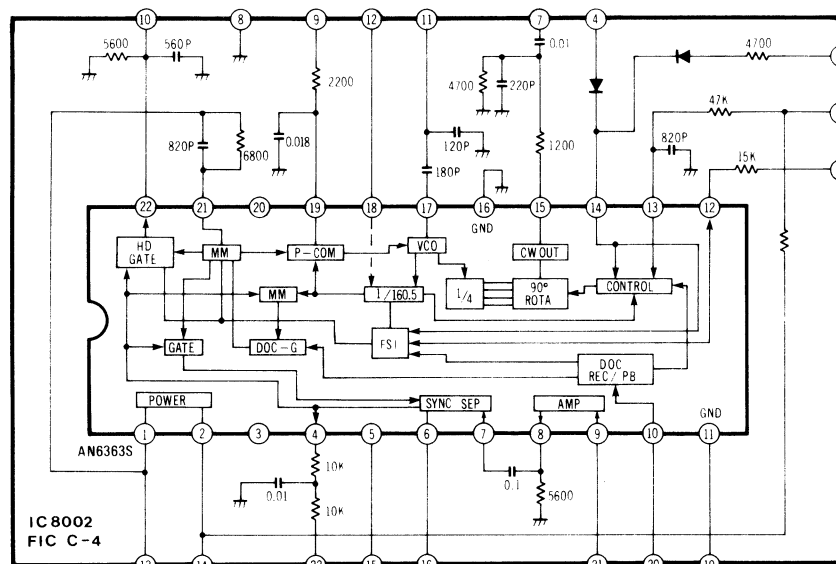


← MAIN SIGNAL PATH IN REC MODE.

→ MAIN SIGNAL PATH IN PLAYBACK MODE.

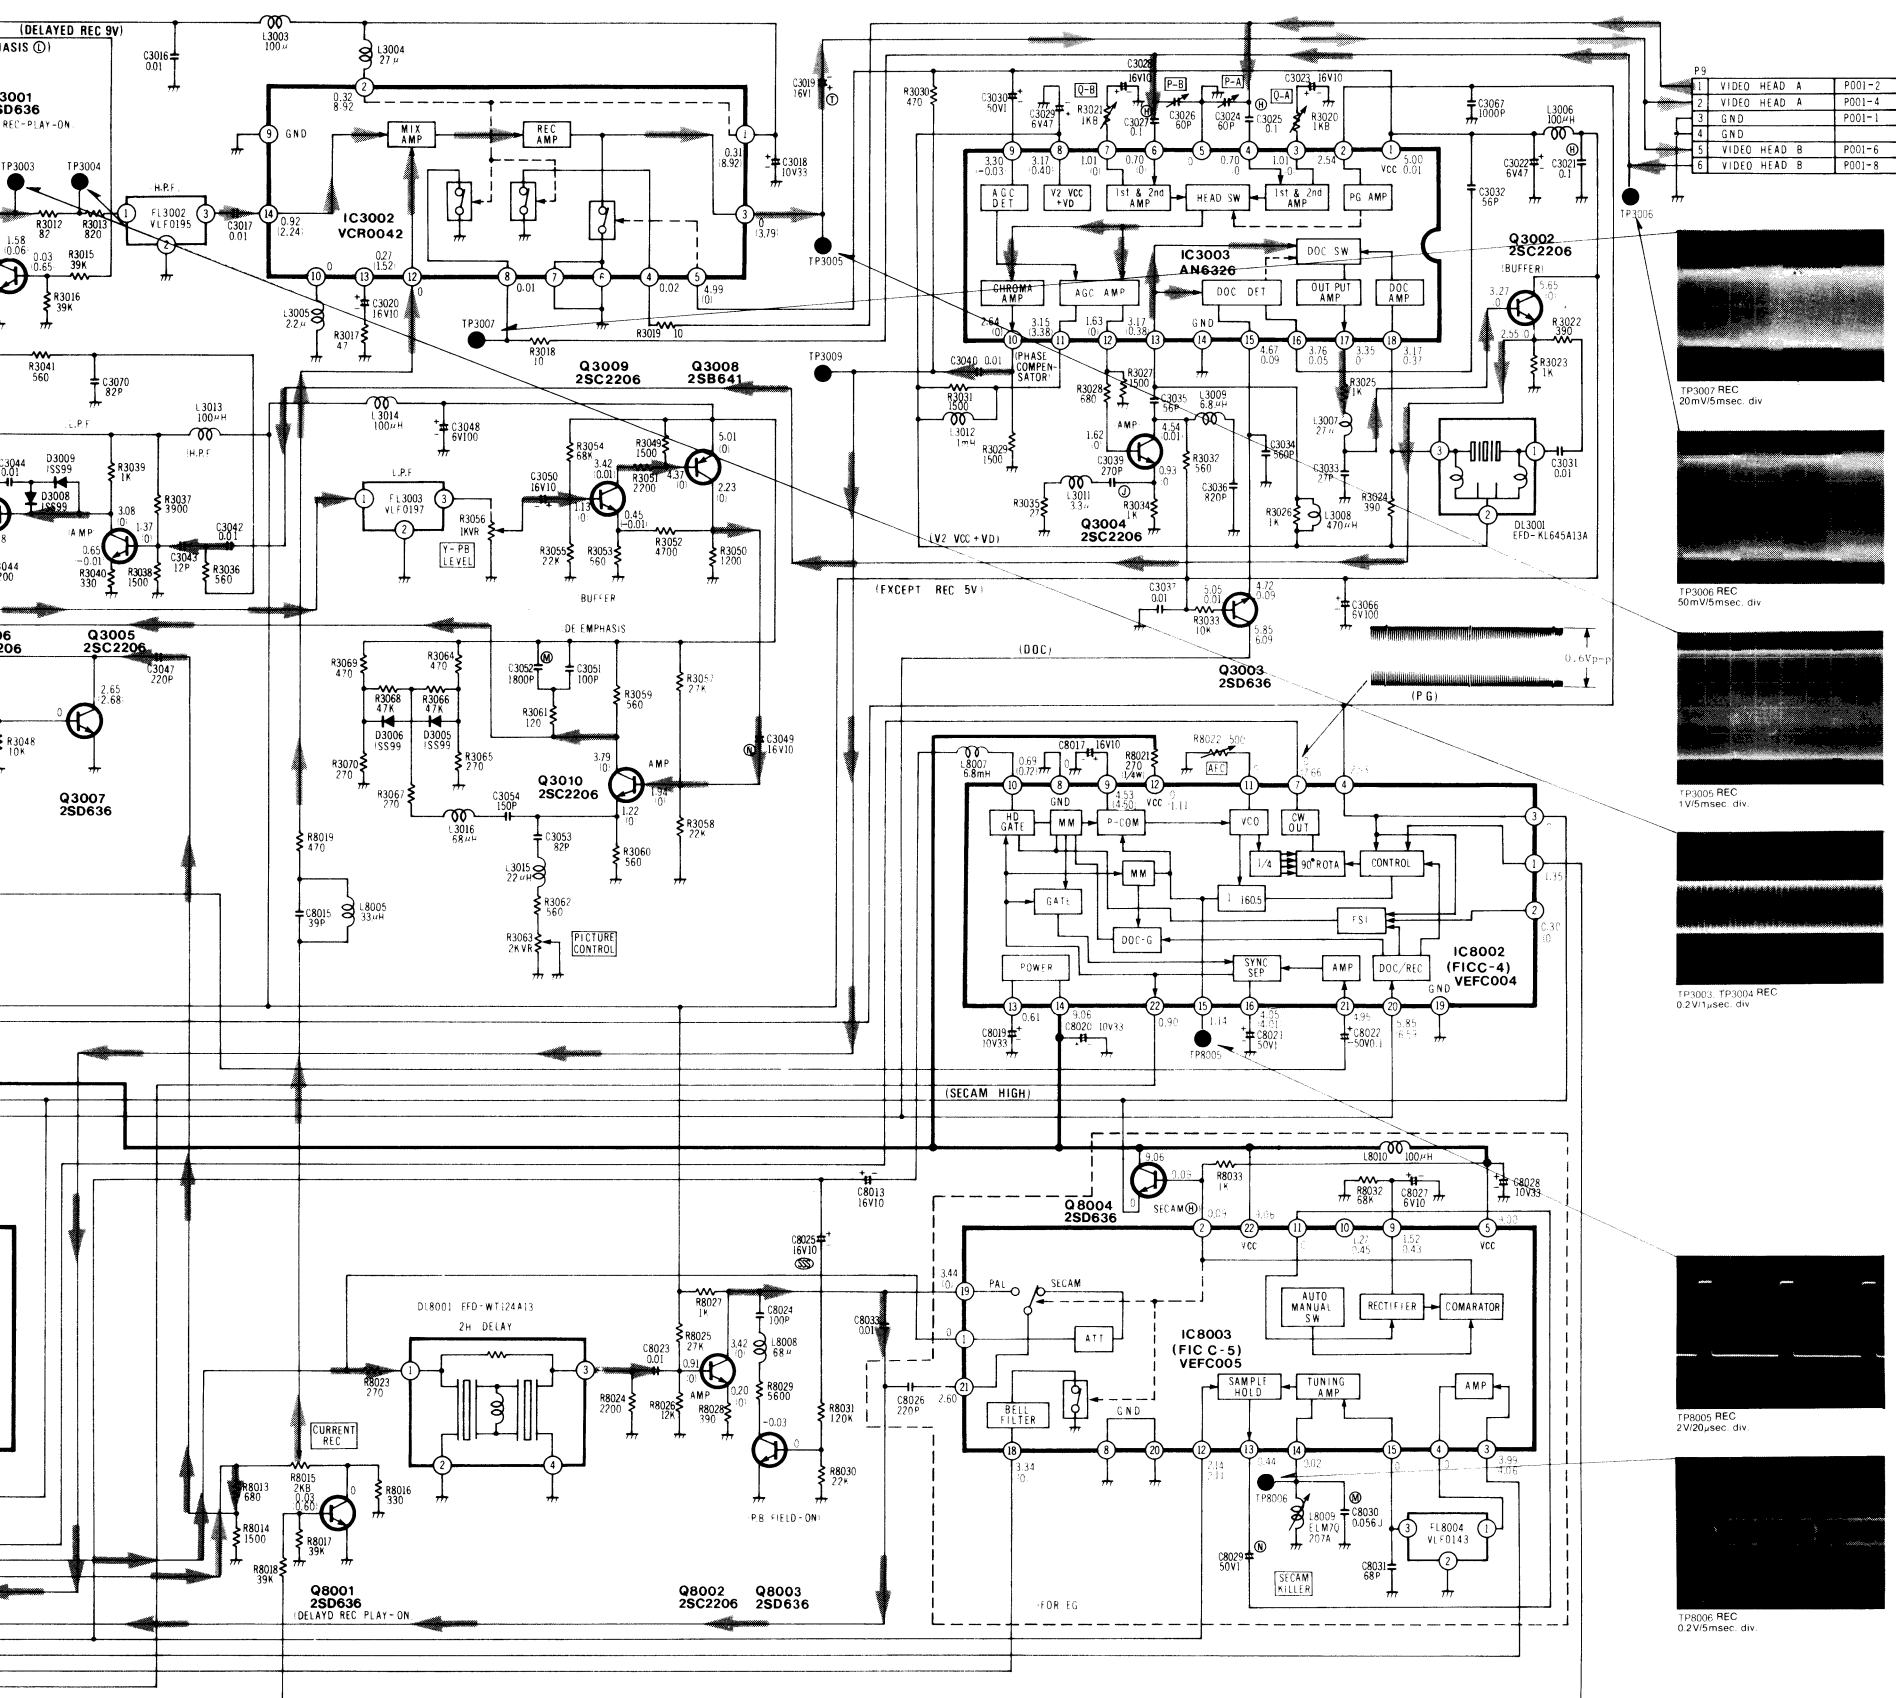




## CYLINDER MOTOR DRIVE SCHEMATIC DIAGRAM

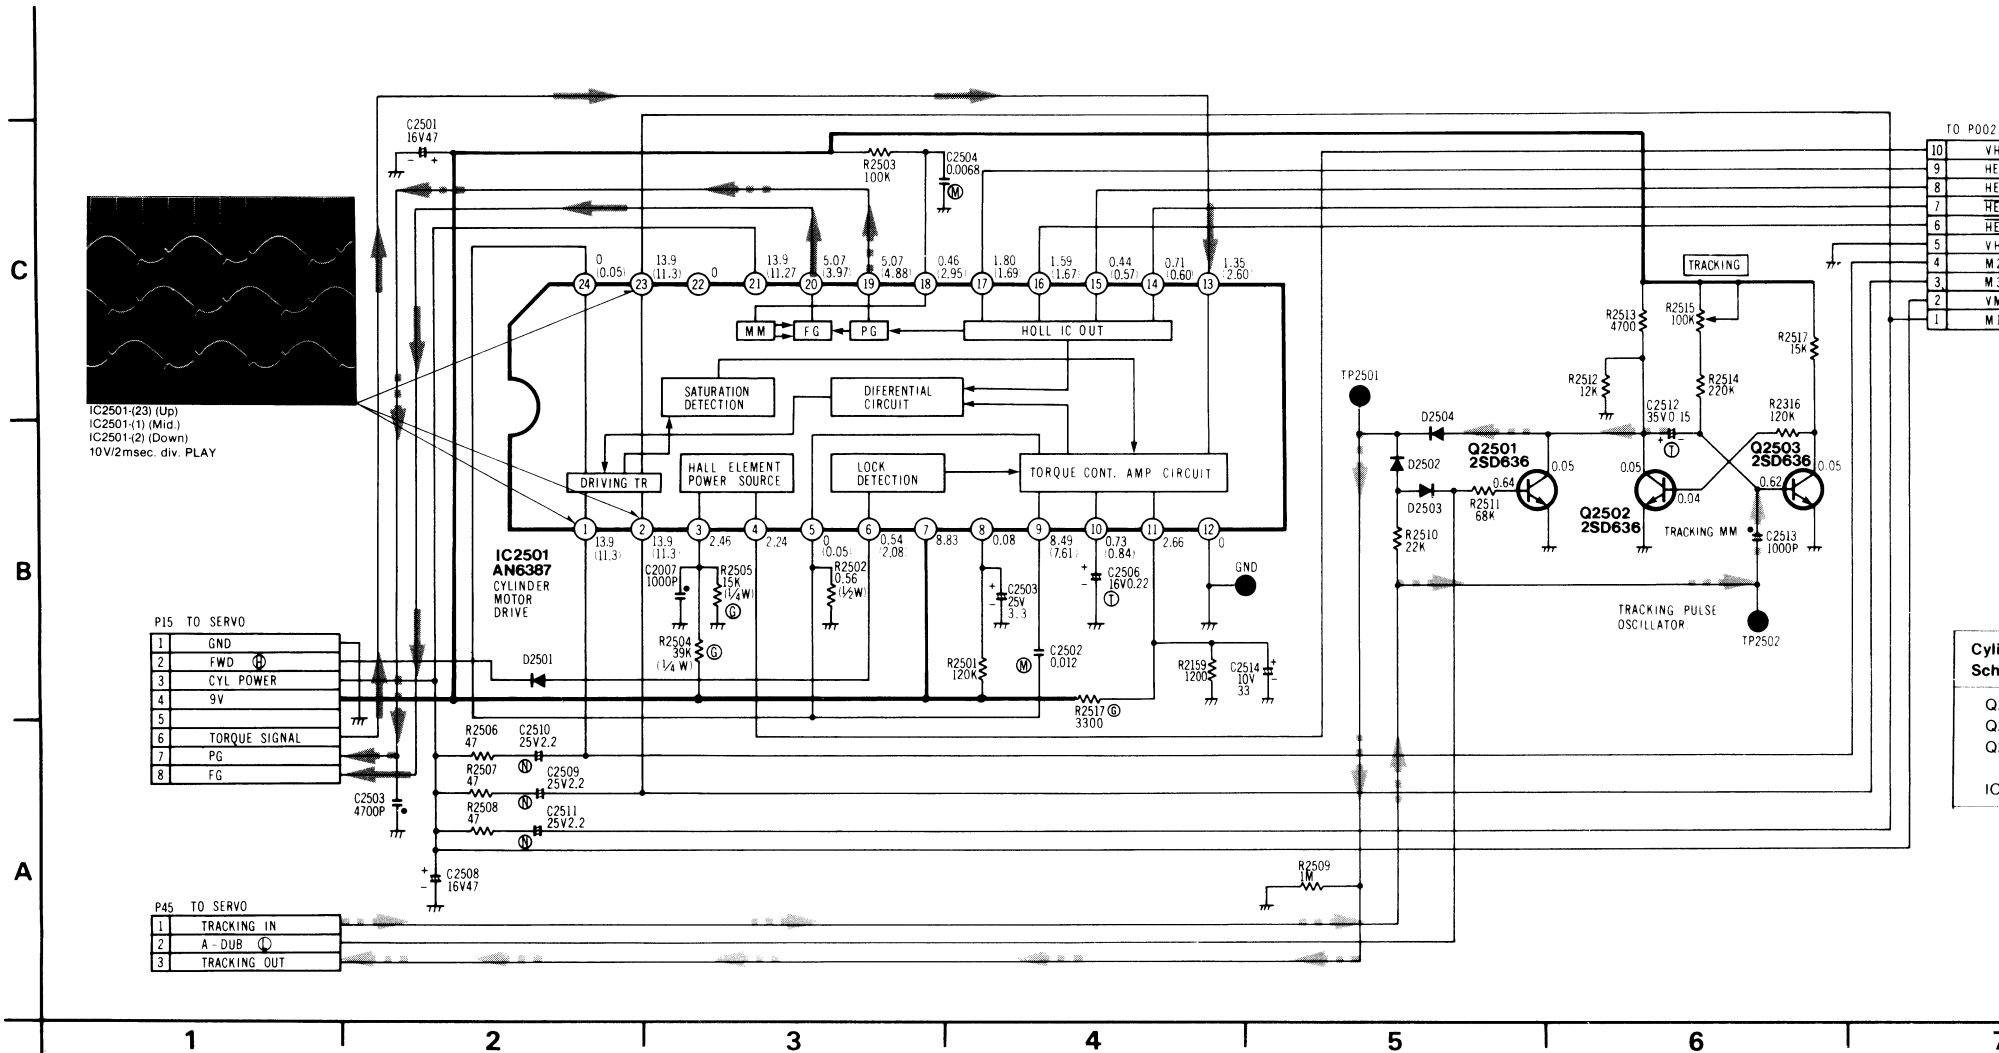

## SERVO SECTION SCHEMATIC DIAGRAM

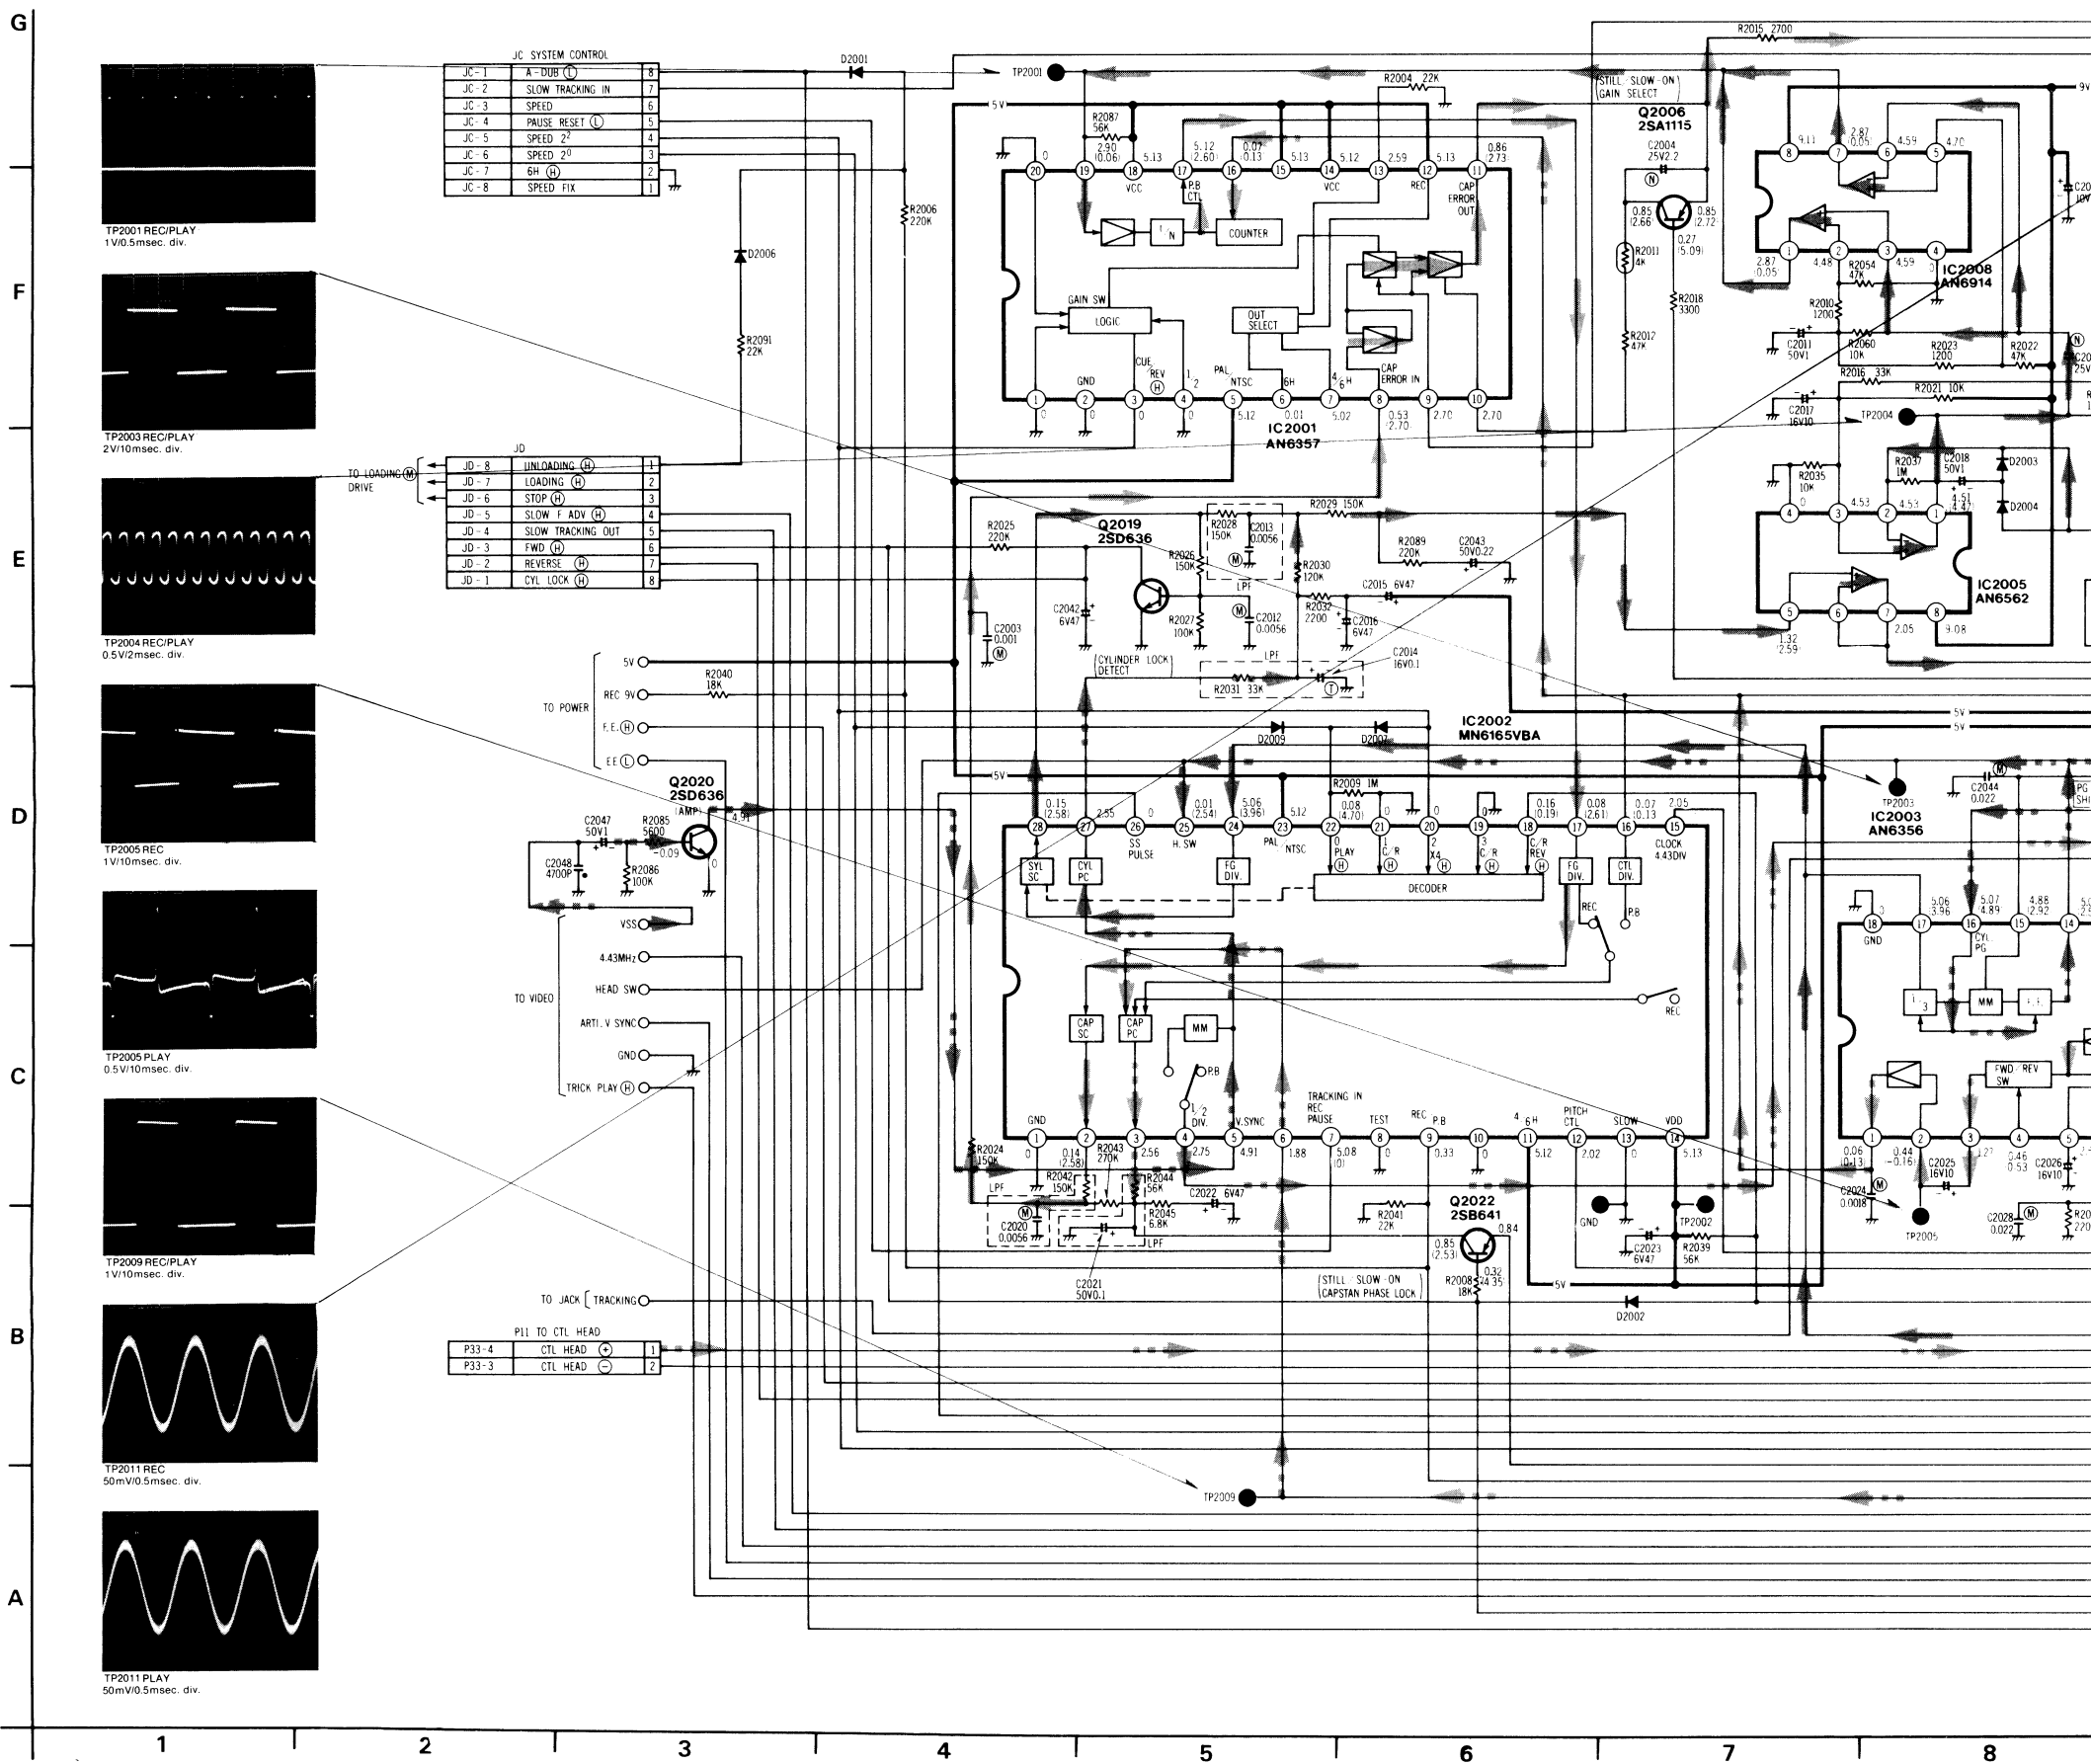

**SERVO P14**

| SERVO    | P14 | Function      |
|----------|-----|---------------|
| P14 - 10 | 1   | CAPSTAN POWER |
| P14 - 9  | 2   | ER            |
| P14 - 8  | 3   | ED            |
| P14 - 7  | 4   | LIM VOLT      |
| P14 - 6  | 5   | REF V         |
| P14 - 5  | 6   | GND           |
| P14 - 4  | 7   | 9V            |
| P14 - 3  | 8   | MOTOR ON (D)  |
| P14 - 2  | 9   | FULL TORQUE   |
| P14 - 1  | 10  | TORQUE SIGNAL |

**MOTOR DRIVE**

**IC 2701 AN6676**

**Q2701 2SB819**, **Q2702 2SB819**, **Q2703 2SB819**

**POWER SW**, **VOLTAGE COMPARATOR**, **CURRENT AMP**, **ROTARY DIRECTION SW**, **CURRENT SW**, **CURRENT COMPARATOR**, **TORQUE CTL**, **RF DETECTOR**, **3 DIFFERENTIAL**, **CAPSTAN MOTOR DRIVE**

**FUSE RESISTOR**, **R2701 22 1/4W**, **R2702 22 1/4W**, **R2703 22 1/4W**, **R2704 0.56 1/4W**, **R2700 3900**

**C2701 50V1**, **C2702 50V1**, **C2703 50V2.2**, **C2704 50V2.2**, **C2705 16V2.2**, **C2706 16V2.2**

**MOTOR ON/OFF**, **TORQUE CONTROL**


**Waveforms:** Three waveforms are shown on the left, each with a 0.25Vp-p amplitude.

The schematic diagram illustrates the control logic for a VCR, featuring several integrated circuits (ICs) and discrete components. Key components include:

- IC2003 (AN6356)**: A central control IC with multiple pins for various functions.
- IC2004 (MN6281)**: A timer or counter IC used for timing sequences.
- IC2005 (AN6562)**: A logic IC, likely a decoder or driver.
- IC2006 (VCR0053)**: A VCR-specific IC, possibly a motor driver or control.
- IC2007 (MN1453VFD)**: A timer or counter IC, similar to IC2004.
- IC2008 (AN6914)**: A logic IC, possibly a decoder or driver.
- IC2009 (VCR0055)**: A VCR-specific IC, similar to IC2006.
- IC2010 (AN6356)**: A central control IC, similar to IC2003.

The diagram also shows various transistors (Q2001-Q2012), resistors (R2001-R2012), capacitors (C2001-C2012), and other components like diodes (D2001-D2012). The circuit is powered by a 9V battery and a 5V supply. It includes several test points (TP2001-TP2008) for debugging. The schematic is divided into sections labeled 8 through 15, corresponding to the columns of the page.

IC DIAGRAM


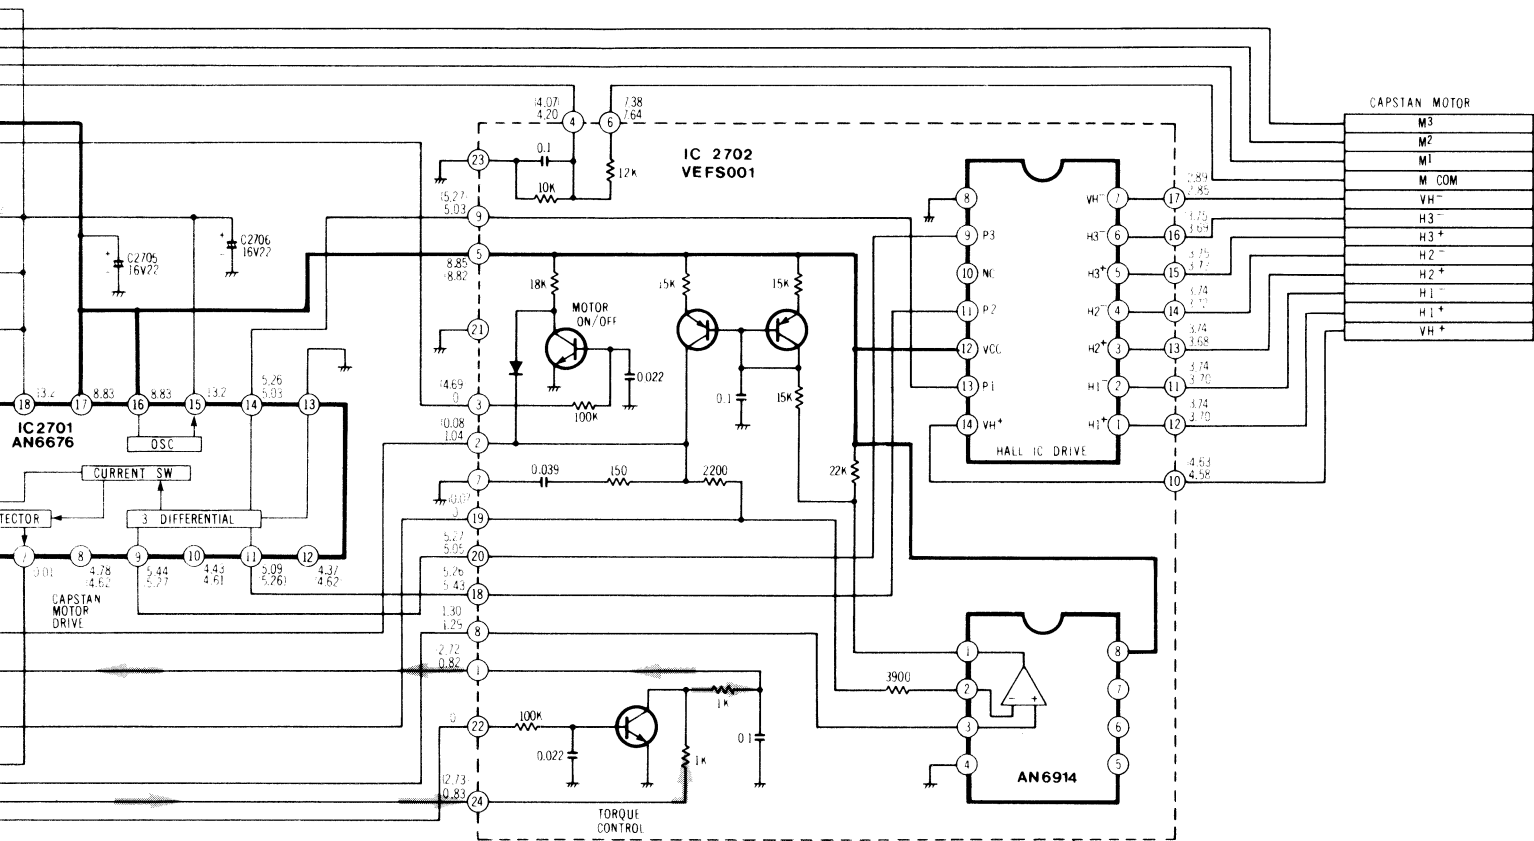


| Capstan Motor Drive Schematic |     |
|-------------------------------|-----|
| Q2701                         | B-3 |
| Q2702                         | C-3 |
| Q2703                         | C-3 |
| IC2701                        | B-3 |
| IC2702                        | B-6 |

MEASUREMENT MODE OF THE DC VOLTAGE IN THE BRACKETS ( ) ON THIS IS RECORD MODE WITH PAL COLOUR SIGNAL.


MEASUREMENT MODE OF THE DC VOLTAGE OUT OF THE BRACKETS ON THIS IS PLAYBACK MODE WITH PAL COLOUR SIGNAL.

- SPEED LOOP REC MODE.
- PHASE LOOP REC MODE.
- SPEED LOOP PLAY MODE.
- PHASE LOOP PLAY MODE.

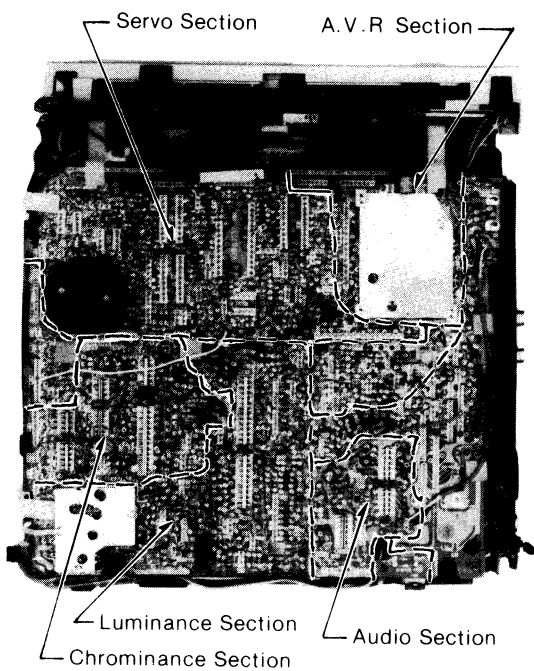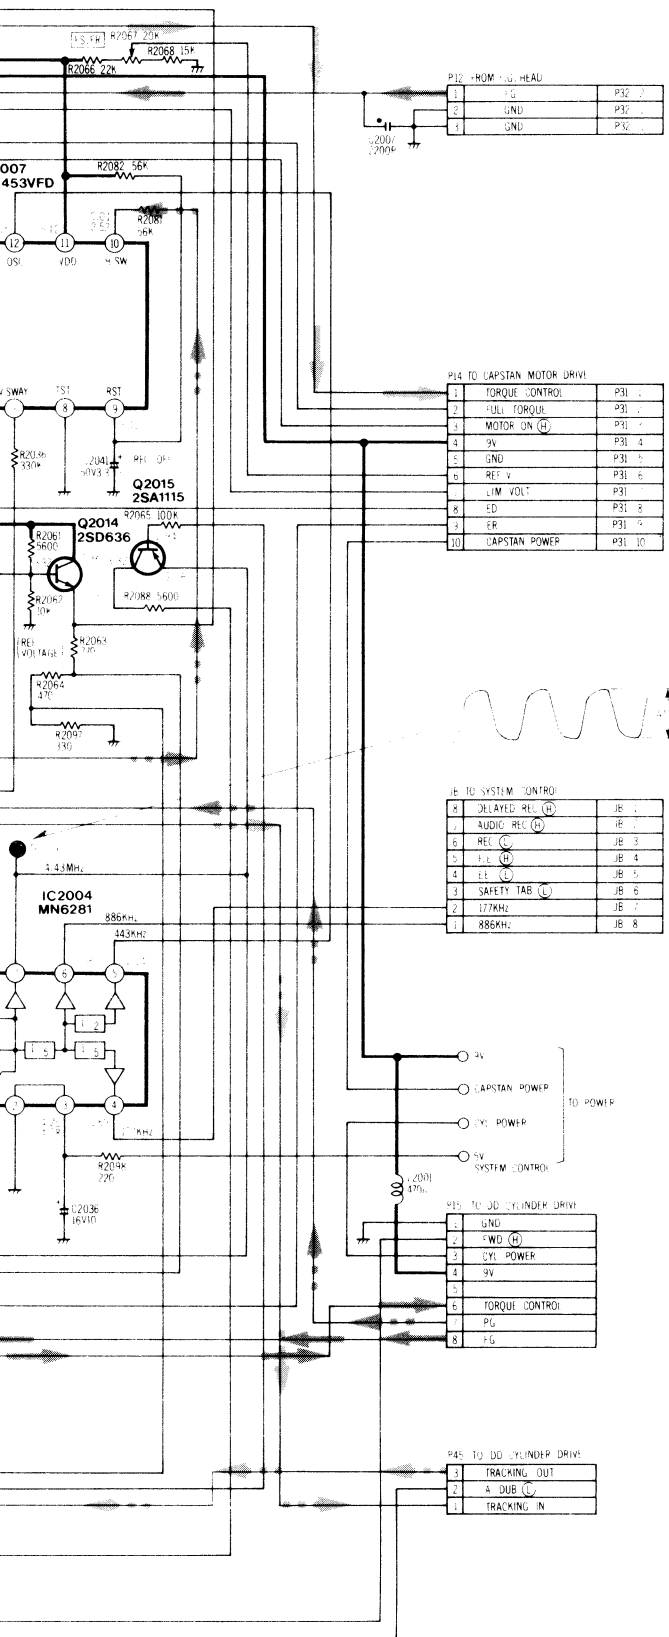

| MAIN P.C.B.   |     |
|---------------|-----|
| Servo Section |     |
| Q2001         | E-5 |
| Q2002         | E-5 |
| Q2003         | E-2 |
| Q2004         | F-6 |
| Q2005         | D-4 |
| Q2006         | E-6 |
| Q2007         | D-4 |
| Q2014         | F-5 |
| Q2015         | E-4 |
| Q2016         | E-4 |
| Q2017         | E-4 |
| Q2018         | F-2 |
| Q2019         | F-4 |
| Q2020         | E-5 |
| Q2022         | E-5 |
| IC2001        | F-5 |
| IC2002        | F-4 |
| IC2003        | F-3 |
| IC2004        | E-5 |
| IC2005        | F-3 |
| IC2006        | E-3 |
| IC2007        | E-4 |
| IC2008        | F-2 |
| IC2009        | D-6 |

| Servo Schematic |      |
|-----------------|------|
| Q2001           | C-10 |
| Q2002           | C-10 |
| Q2003           | F-9  |
| Q2004           | E-9  |
| Q2005           | C-9  |
| Q2006           | F-7  |
| Q2007           | D-10 |
| Q2014           | E-14 |
| Q2015           | E-14 |
| Q2016           | D-9  |
| Q2017           | D-9  |
| Q2018           | C-11 |
| Q2019           | D-5  |
| Q2020           | D-3  |
| Q2022           | B-6  |
| IC2001          | F-5  |
| IC2002          | C-6  |
| IC2003          | C-8  |
| IC2004          | C-13 |
| IC2005          | D-8  |
| IC2006          | E-11 |
| IC2007          | E-13 |
| IC2008          | F-8  |
| IC2009          | C-11 |

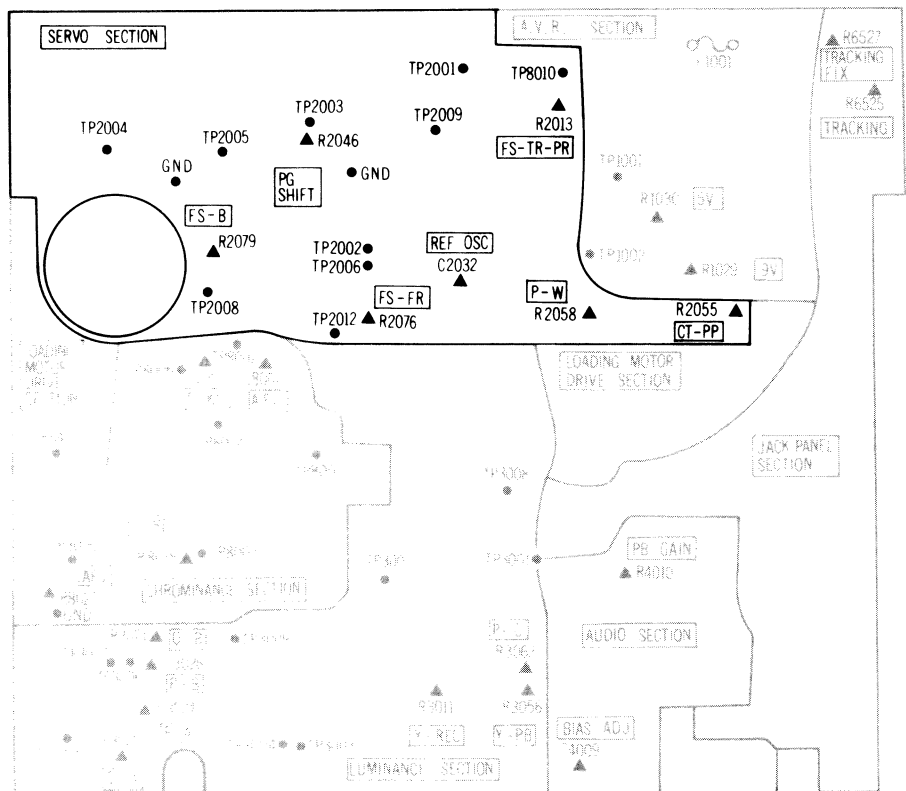



MAIN (A.V.R. AND SERVO SECTION) P.C.B. UNIT

G

F

E

D

P6501

|   |        |
|---|--------|
| 1 | GND    |
| 2 | 12V IN |

P6502

|    |             |
|----|-------------|
| 1  | CLOCK II    |
| 2  | SAFETY TAB  |
| 3  | CH LOCK     |
| 4  | GND         |
| 5  | AUDIO IN    |
| 6  | SERIAL CODE |
| 7  | GND         |
| 8  | GND         |
| 9  | VIDEO IN    |
| 10 | 12V         |
| 11 | HEATER 20V  |
| 12 | GND         |

P6503


|   |              |
|---|--------------|
| 1 | 12V IN       |
| 2 | EXT 12V      |
| 3 | GND          |
| 4 | BATT. CHARGE |
| 5 | 12V OUT      |
| 6 | 12V OUT      |

P6504


|    |                     |
|----|---------------------|
| 1  | SERIAL CODE         |
| 2  | IC & SERIAL ①       |
| 3  | CAMERA IN ②         |
| 4  | STAND BY            |
| 5  | CAMERA PAUSE        |
| 6  | CLOCK I             |
| 7  | CLOCK II            |
| 8  | SAFETY TAB          |
| 9  | ANT. SW. CH. LOCK ③ |
| 10 |                     |

P6505

|    |                 |
|----|-----------------|
| 1  | SERIAL CODE     |
| 2  | AUDIO IN        |
| 3  | GND             |
| 4  | CAMERA IN / OUT |
| 5  | GND             |
| 6  | GND             |
| 7  | STAND BY        |
| 8  | CAMERA PAUSE    |
| 9  | CLOCK I         |
| 10 | 12V OUT         |

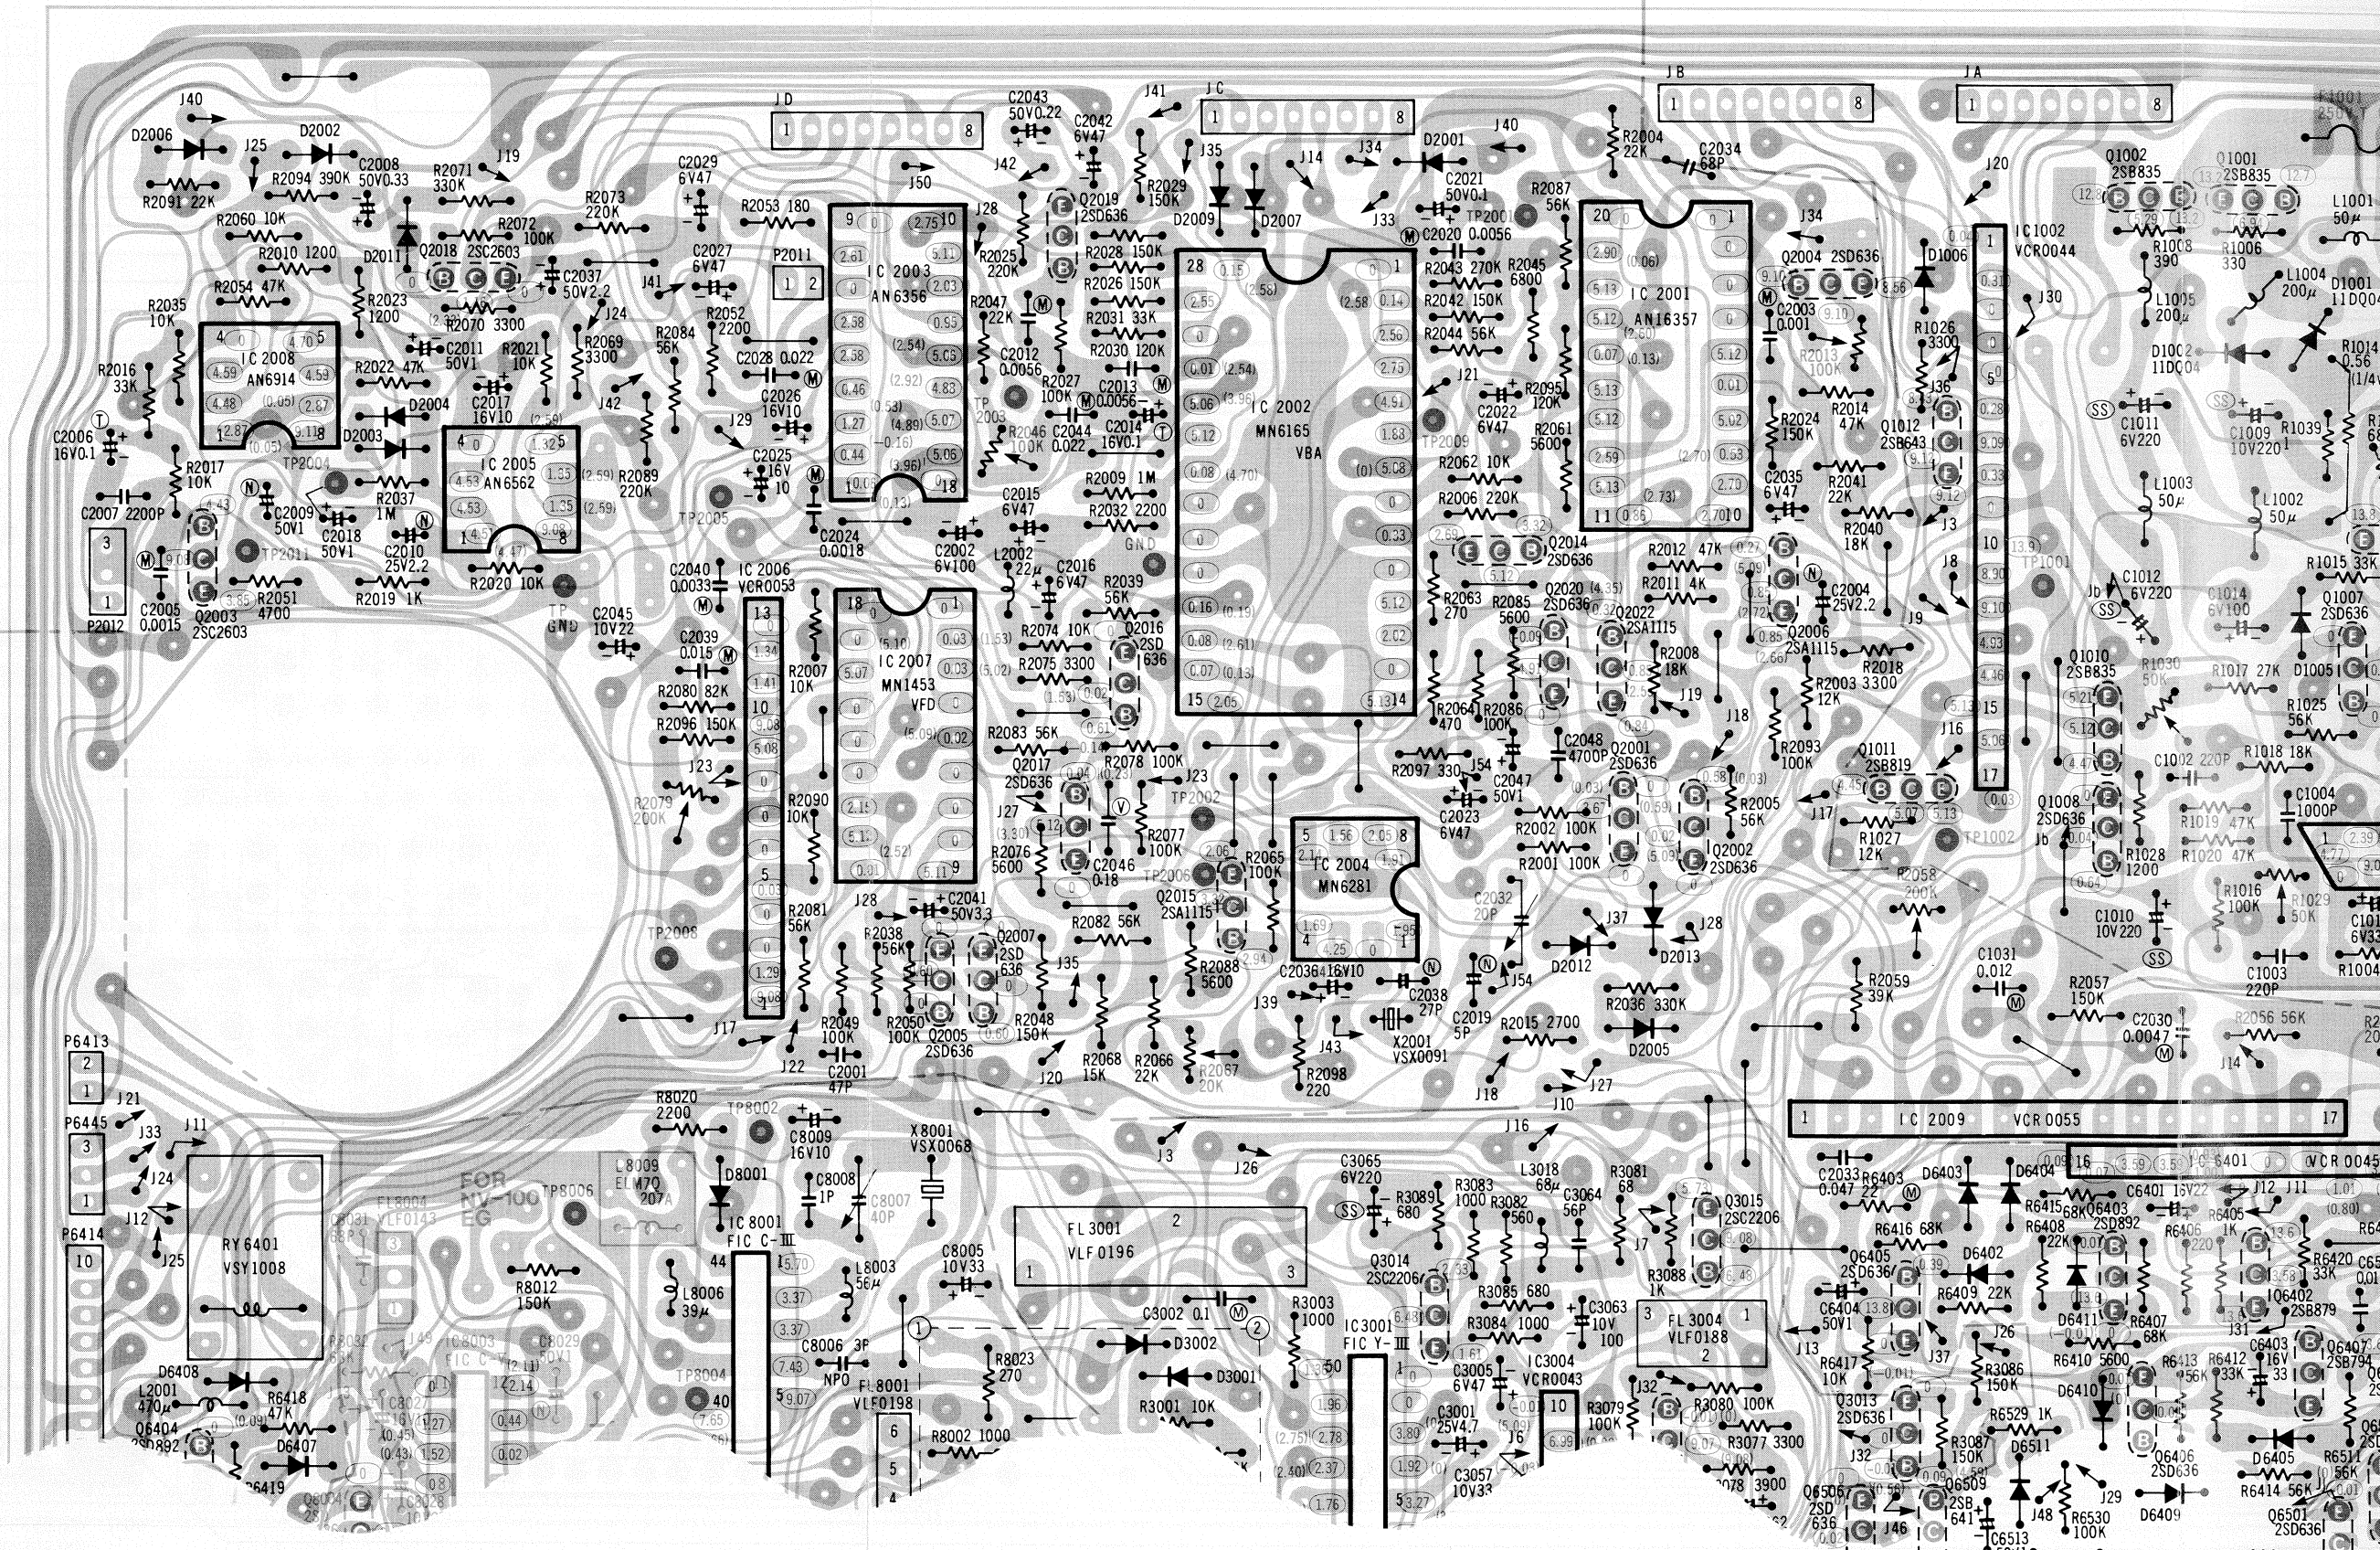





|   |                |
|---|----------------|
| 1 | A.E HEAD       |
| 2 | GND            |
| 3 | GND            |
| 4 | AUDIO HEAD (R) |
| 5 | AUDIO HEAD (W) |

|   |           |
|---|-----------|
| 1 | VIDEO (Y) |
| 2 | VIDEO (S) |
| 3 | GND       |
| 4 | GND       |
| 5 | VIDEO (P) |
| 6 | VIDEO (W) |


|   |            |
|---|------------|
| 1 | HEATER 20V |
| 2 | GND        |

|   |        |
|---|--------|
| 1 | GND    |
| 2 | F.E 9V |

|   |              |
|---|--------------|
| 1 | GND          |
| 2 | LOAD BACK UP |

|   |                |
|---|----------------|
| 1 | GND            |
| 2 | FWD (H)        |
| 3 | CYL POWER      |
| 4 | 9V             |
| 5 |                |
| 6 | TORQUE CONTROL |
| 7 | P G            |
| 8 | F G            |




|   |                |
|---|----------------|
| 1 | TORQUE CONTROL |
| 2 | FULL TORQUE    |
| 3 | MOTOR ON (H)   |
| 4 | 9 V            |
| 5 | GND            |
| 6 | REF. V         |

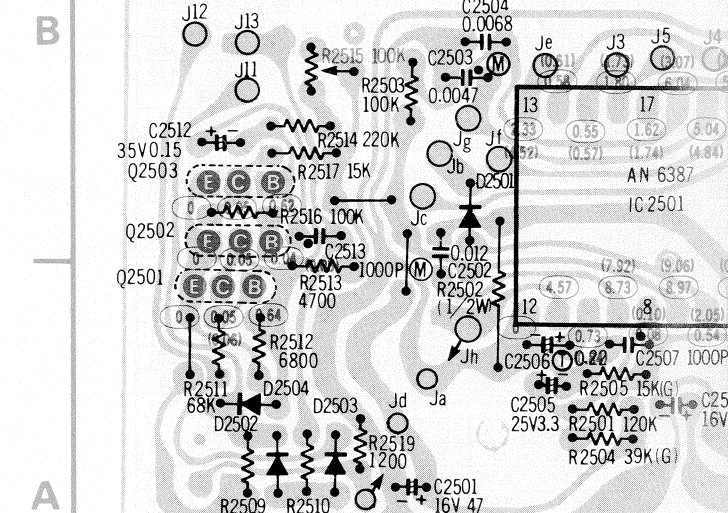



NOTE: UNLESS OTHERWISE SPECIFIED, ALL DIODES ARE 1N4148 UNLESS OTHERWISE SPECIFIED, ALL Tr's ARE



CYLINDER MOTOR DRIVE P.C.B. UNIT [VEP02148B]

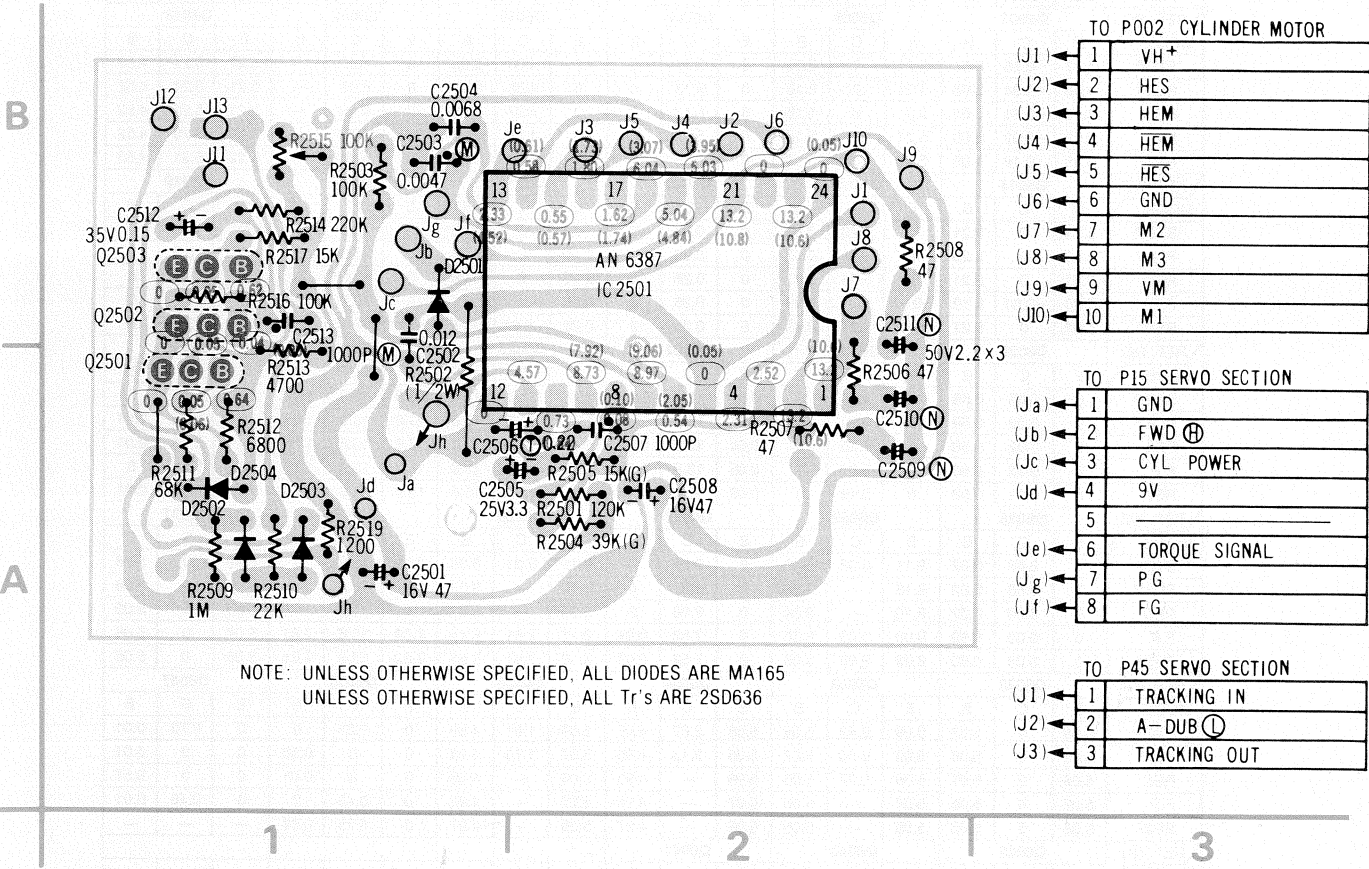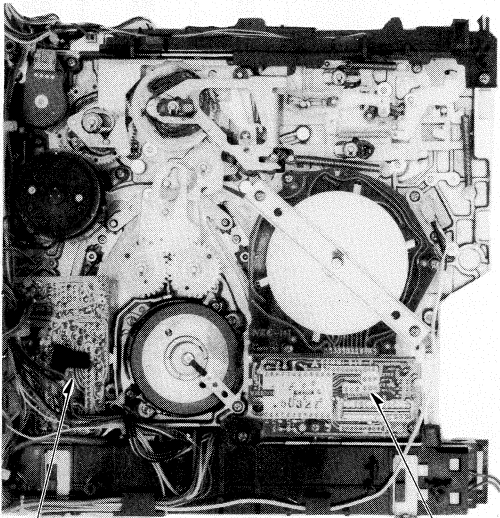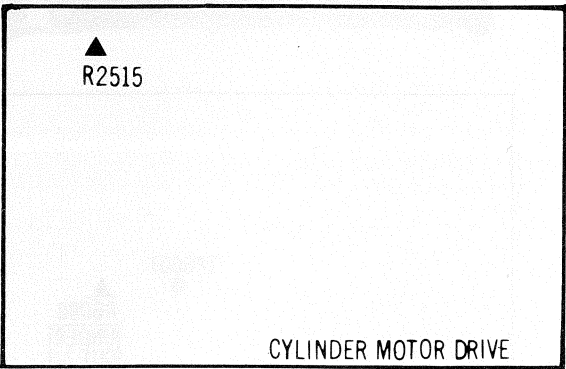

CAPSTAN MOTOR DRIVE P.C.B. UNIT [VEK1475]

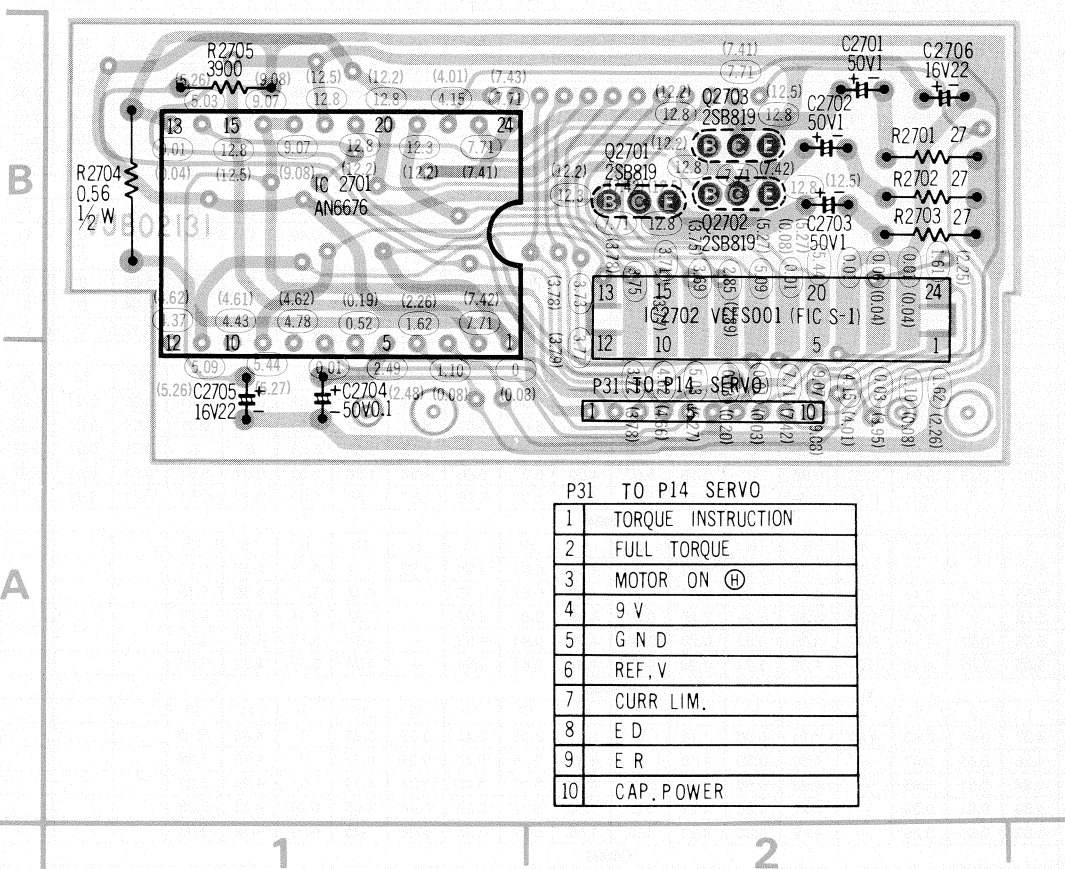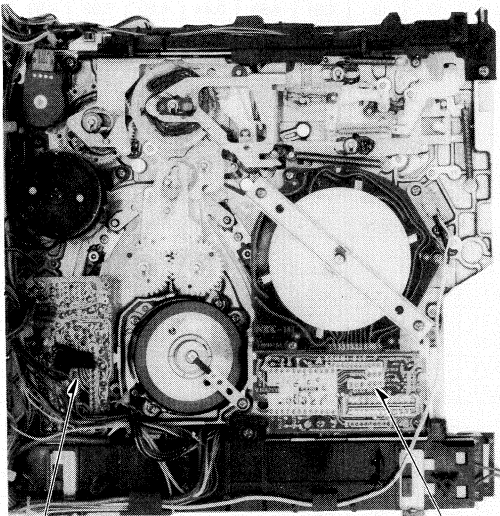

SYSTEM CONTROL ICs VOLTAGE CHART

| REF. NO. | IC6001 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
|----------|--------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   | 17   | 18   | 19   | 20   |
| STOP     | 0      | 0    | 0    | 4.80 | 4.93 | 0.38 | 4.80 | 0.02 | 4.92 | 0    | 0    | 0.22 | —    | —    | 5.21 | 5.09 | 5.21 | 0    | 0    | 5.18 |
| PLAY     | 0.02   | 0    | 0    | 4.80 | 4.98 | 0.46 | 4.80 | 0.02 | 4.92 | 0    | 0    | 0.22 | —    | —    | 5.21 | 5.08 | 5.20 | 0    | 0    | 5.18 |
| REC      | 0.02   | 0    | 0    | 4.81 | 4.98 | 0.44 | 4.80 | 0.02 | 4.93 | 0    | 0    | 0.22 | —    | —    | 5.21 | 5.07 | 5.21 | 0    | 0    | 5.19 |
| F.F      | 0      | 0    | 0    | 4.80 | 4.95 | 0.32 | 4.80 | 0.02 | 4.92 | 5.07 | 0    | 5.19 | —    | —    | 5.21 | 5.07 | 5.21 | 0    | 0    | 5.18 |
| REW      | 0.03   | 0    | 0    | 4.80 | 4.92 | —    | 4.80 | 0.02 | 4.92 | 5.07 | 0    | 5.19 | —    | —    | 5.21 | 5.07 | 5.21 | 0    | 0    | 5.19 |
| REF. NO. | IC6001 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 21     | 22   | 23   | 24   | 25   | 26   | 27   | 28   | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   |
| STOP     | 0      | 0    | 2.27 | 3.21 | 4.21 | 5.21 | 3.70 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 | 3.72 |
| PLAY     | 0      | 0    | 2.25 | 3.20 | 4.20 | 5.21 | 3.70 | 3.72 | 3.72 | 3.72 | 3.71 | 3.71 | 3.70 | 3.71 | 3.71 | 3.71 | 3.72 | 3.72 | 3.72 | 3.72 |
| REC      | 0      | 0    | 2.25 | 3.20 | 4.20 | 5.21 | 3.70 | 3.72 | 3.72 | 3.71 | 3.72 | 3.71 | 3.72 | 3.71 | 3.71 | 3.71 | 3.72 | 3.72 | 3.72 | 3.72 |
| F.F      | 0      | 0    | 2.24 | 3.19 | 4.20 | 5.21 | 0.03 | 3.72 | 3.72 | 3.71 | 3.71 | 3.70 | 3.70 | 3.71 | 3.71 | 3.71 | 3.71 | 3.70 | 3.70 | 3.71 |
| REW      | 0      | 0    | 2.24 | 3.20 | 4.20 | 5.21 | 3.69 | 3.71 | 3.71 | 3.72 | 3.70 | 3.70 | 3.70 | 3.71 | 3.70 | 3.71 | 3.71 | 3.70 | 3.70 | 3.71 |
| REF. NO. | IC6001 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 41     | 42   | 43   | 44   | 45   | 46   | 47   | 48   | 49   | 50   | 51   | 52   | 53   | 54   | 55   | 56   | 57   | 58   | 59   | 60   |
| STOP     | 3.71   | 3.75 | 3.74 | 3.74 | 3.75 | 3.74 | 3.74 | 3.75 | 3.74 | 3.74 | 3.75 | 3.73 | 3.75 | 3.74 | 0    | 0    | 1.70 | 5.21 | 3.15 | 0    |
| PLAY     | 3.71   | 3.73 | 3.74 | 3.73 | 3.74 | 3.71 | 3.75 | 3.75 | 3.72 | 3.75 | 3.74 | 3.73 | 3.74 | 3.74 | 0    | 0    | 1.70 | 5.21 | 3.15 | 0    |
| REC      | 3.71   | 3.73 | 3.74 | 3.74 | 3.74 | 3.72 | 3.75 | 3.75 | 3.70 | 3.70 | 3.73 | 3.74 | 3.75 | 3.73 | 0    | 0    | 1.71 | 5.21 | 3.15 | 0    |
| F.F      | 3.71   | 3.73 | 3.70 | 3.74 | 3.73 | 3.71 | 3.74 | 3.72 | 3.71 | 3.74 | 3.74 | 3.72 | 3.73 | 3.73 | 0    | 0    | 1.70 | 5.21 | 3.15 | 0    |
| REW      | 3.71   | 3.73 | 3.71 | 3.74 | 3.74 | 3.73 | 3.74 | 3.73 | 3.72 | 3.74 | 3.75 | 3.72 | 3.73 | 3.97 | 0    | 0    | 1.70 | 5.21 | 3.15 | 0    |
| REF. NO. | IC6001 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 61     | 62   | 63   | 64   |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| STOP     | 5.14   | 4.96 | 4.95 | 5.21 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| PLAY     | —      | —    | —    | 5.21 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| REC      | —      | —    | —    | 5.21 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| F.F      | 2.49   | 2.42 | 2.40 | 5.21 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| REW      | 2.49   | 2.41 | 2.38 | 5.21 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| REF. NO. | IC6002 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   | 17   | 18   | 19   | 20   |
| STOP     | 0      | 0    | 0    | 5.08 | 0    | 0.04 | 5.08 | 0    | 0    | 5.03 | 5.06 | 4.35 | 4.26 | 0    | 0    | 0    | 0    | 0.42 | 1.26 | 1.13 |
| PLAY     | 0      | 0    | 0    | 5.08 | 0    | 0.04 | 5.08 | 0.12 | 0    | 5.03 | 5.05 | 4.34 | 4.25 | 0    | 0    | 0    | 0    | 3.46 | 4.36 | 4.17 |
| REC      | 0      | 0    | 0    | 5.07 | 0    | 0.04 | 5.06 | 0    | 0    | 5.01 | 5.03 | 4.33 | 4.23 | 0    | 0    | 0    | 0    | 3.44 | 4.29 | 0.93 |
| F.F      | 0      | 0    | 0    | 5.07 | 0    | 0.04 | 5.07 | 0    | 0    | 5.02 | 5.04 | 4.31 | 4.32 | 0    | 0    | 0    | 0    | 0.28 | 1.05 | 4.23 |
| REW      | 0      | 0    | 0    | 5.07 | 0    | 0.04 | 5.07 | 0    | 0    | 5.02 | 5.04 | 4.31 | 4.31 | 0    | 0    | 0    | 0    | 0.28 | 1.05 | 4.23 |
| REF. NO. | IC6002 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 21     | 22   | 23   | 24   | 25   | 26   | 27   | 28   | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   |
| STOP     | 4.93   | 0    | 0    | 0.17 | 0.17 | 0    | 5.14 | 5.09 | 4.80 | 0    | 0    | 5.08 | 0.02 | 5.08 | 5.06 | 4.94 | 5.04 | 5.09 | 5.09 | 1.56 |
| PLAY     | 4.95   | 0.02 | 1.35 | 0.17 | 0.12 | 0    | 5.14 | 5.08 | 4.80 | 0    | 0    | 5.08 | 5.08 | 5.08 | 0.02 | 4.93 | 5.04 | 5.08 | 5.08 | 1.57 |
| REC      | 4.95   | 0.03 | 1.35 | 0.17 | 0.12 | 0    | 5.13 | 5.06 | 4.80 | 0    | 0    | 5.06 | 5.07 | 5.06 | 0.02 | 0.03 | 5.02 | 5.06 | 5.07 | 1.57 |
| F.F      | 4.95   | 0.04 | 1.31 | 0.17 | 0.12 | 0    | 5.13 | 5.07 | 4.80 | 0    | 0    | 5.07 | 5.07 | 0    | 5.04 | 4.92 | 5.03 | 5.07 | 5.07 | 1.57 |
| REW      | 4.93   | 0.02 | 1.30 | 0.17 | 0.14 | 0    | 5.13 | 5.07 | 4.80 | 0    | 0    | 0.01 | 5.07 | 5.07 | 5.04 | 4.92 | 5.02 | 5.07 | 5.07 | 1.57 |
| REF. NO. | IC6003 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   | 17   | 18   | 19   | 20   |
| STOP     | 0      | 4.95 | 0.04 | 0    | 0    | 0    | 5.08 | 4.96 | 0    | 0    | 0    | 0    | 0    | 0.49 | 0    | 5.08 | 0    | 0    | 0    | 0    |
| PLAY     | 0      | 0    | 0.04 | 0    | 0    | 5.08 | 0    | 0.07 | 0    | 0    | 0    | 0    | 0    | 0.49 | 0    | 0    | 0    | 0    | 0    | 0    |
| REC      | 0      | 4.94 | 4.99 | 5.00 | 5.00 | 5.06 | 5.06 | 0    | 0    | 0    | 0    | 0    | 0    | 0.44 | 0    | 0    | 0.03 | 0    | 0    | 0    |
| F.F      | 0      | 4.93 | 0.04 | 0    | 0    | 5.07 | 5.07 | 4.94 | 0    | 5.07 | 0    | 4.79 | 0    | 0.41 | 0    | 0    | 0.04 | 0    | 0    | 0    |
| REW      | 0      | 4.93 | 0.04 | 0    | 0    | 5.06 | 5.06 | 4.94 | 0    | 5.06 | 0    | 4.80 | 0    | 0.48 | 0    | 5.06 | 0.12 | 0    | 0    | 0    |
| REF. NO. | IC6003 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 21     | 22   | 23   | 24   | 25   | 26   | 27   | 28   | 29   | 30   | 31   | 32   | 33   | 34   | 35   | 36   | 37   | 38   | 39   | 40   |
| STOP     | 0      | 0    | 0    | 0.07 | 0.06 | 0    | 5.14 | 5.08 | 4.80 | 5.09 | 1.75 | 1.75 | 1.74 | 0.03 | 0.01 | 0.01 | 0.01 | 0.01 | 5.08 | 1.57 |
| PLAY     | 5.21   | 0    | 5.04 | 0.07 | 0.07 | 0    | 5.14 | 5.08 | 4.80 | 5.08 | 5.07 | 5.07 | 5.07 | 5.05 | 5.08 | 0.01 | 0.01 | 0.01 | 5.08 | 1.57 |
| REC      | 5.21   | 0.01 | 5.03 | 0.07 | 0.07 | 0    | 5.13 | 5.06 | 4.80 | 5.07 | 1.38 | 5.06 | 5.06 | 0.03 | 0    | 0    | 0.01 | 0.01 | 5.07 | 1.58 |
| F.F      | 0.01   | 0.01 | 0.01 | 0.08 | 0.08 | 0    | 5.13 | 5.07 | 4.80 | 5.07 | 5.06 | 1.56 | 1.56 | 0.03 | 0.01 | 0.61 | 0.61 | 0.61 | 5.07 | 1.57 |
| REW      | 0.01   | 5.04 | 0.01 | 0.08 | 0.08 | 0    | 5.13 | 5.07 | 4.80 | 5.07 | 5.06 | 1.57 | 1.56 | 0.03 | 0.01 | 0.61 | 0.61 | 0.61 | 5.07 | 1.57 |
| REF. NO. | IC6004 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   |      |      |      |      |
| STOP     | 5.07   | 0    | 1.13 | 5.21 | 1.28 | 5.22 | 0.43 | 0    | 4.94 | 0.61 | 4.94 | 4.80 | 1.14 | 5.18 | 4.36 | 5.10 |      |      |      |      |
| PLAY     | 5.05   | 0    | 4.18 | 5.21 | 4.31 | 5.22 | 3.47 | 0    | 4.99 | 0.61 | 4.99 | —    | 4.18 | 5.17 | 4.36 | 5.10 |      |      |      |      |
| REC      | 5.05   | 0    | 0.93 | 5.22 | 4.30 | 5.22 | 3.45 | 0.01 | 4.99 | 0.61 | 4.99 | —    | 0.93 | 5.18 | 4.34 | 5.07 |      |      |      |      |
| F.F      | 5.05   | 0.01 | 4.24 | 5.22 | 1.05 | 5.22 | 0.29 | 0.01 | 4.96 | 0.61 | 4.96 | —    | 4.24 | 5.17 | 4.32 | 5.08 |      |      |      |      |
| REW      | 5.05   | 0.01 | 4.24 | 5.21 | 1.06 | 5.22 | 0.29 | 0.01 | 4.94 | 0.61 | 4.94 | —    | 4.24 | 5.17 | 4.32 | 5.08 |      |      |      |      |
| REF. NO. | IC6005 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | 10   | 11   | 12   | 13   | 14   | 15   | 16   |      |      |      |      |
| STOP     | 4.27   | 0.61 | 0.43 | 4.84 | 4.94 | 0.60 | 1.14 | 0    | 1.27 | 5.16 | 0.43 | 0.03 | 1.27 | 0    | 4.36 | 5.10 |      |      |      |      |
| PLAY     | 4.26   | 0.61 | 3.47 | —    | 4.99 | 0.60 | 4.18 | 0    | 4.31 | 5.16 | 3.47 | 0.04 | 4.31 | 0    | 4.36 | 5.09 |      |      |      |      |
| REC      | 4.24   | 0.61 | 3.45 | —    | 4.99 | 0.60 | 0.93 | 0.01 | 4.30 | 5.17 | 3.45 | 0.04 | 4.30 | 0    | 4.34 | 5.08 |      |      |      |      |
| F.F      | 4.33   | 0.61 | 0.29 | —    | 4.97 | 0.60 | 4.24 | 0.01 | 1.06 | 5.17 | 0.28 | 0.04 | 1.05 | 0.01 | 4.32 | 5.08 |      |      |      |      |
| REW      | 4.33   | 0.61 | 0.29 | —    | 4.94 | 0.60 | 4.24 | 0.01 | 1.06 | 5.17 | 0.29 | 0.04 | 1.06 | 0.01 | 4.32 | 5.08 |      |      |      |      |
| REF. NO. | IC6006 |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| MODE     | 1      | 2    | 3    | 4    | 5    | 6    | 7    | 8    |      |      |      |      |      |      |      |      |      |      |      |      |
| STOP     | 4.93   | 0.02 | 0.72 | 0    | 4.92 | —    | 5.21 | 13.9 |      |      |      |      |      |      |      |      |      |      |      |      |
| PLAY     | 4.93   | 0.02 | 0.72 | 0    | 4.91 | —    | 5.21 | 13.8 |      |      |      |      |      |      |      |      |      |      |      |      |
| REC      | 4.93   | 0.02 | 0.72 | 0    | 4.92 | —    | 5.22 | 13.9 |      |      |      |      |      |      |      |      |      |      |      |      |
| F.F      | 4.93   | 0.02 | 0.72 | 0    | 4.91 | —    | 5.21 | 13.8 |      |      |      |      |      |      |      |      |      |      |      |      |
| REW      | 4.93   | 0.02 | 0.72 | 0    | 4.91 | —    | 5.21 | 13.8 |      |      |      |      |      |      |      |      |      |      |      |      |



SYSTEM & COUNTER CONTROL P.C.B. UNIT [VEP06164A]

D

C

B

A

|     |               |
|-----|---------------|
| P21 |               |
| 1   | 5V BACK UP    |
| 2   | DEW SENSOR    |
| 3   | TAKEUP PH. TR |
| 4   | TAPE SNS. LED |

|     |                |
|-----|----------------|
| P20 |                |
| 1   | SERIAL CODE    |
| 2   | SERIAL CLK (2) |
| 3   | SLOW TRACKING  |
| 4   | GND            |
| 5   | +5V            |
| 6   | SLOW TR. VCC   |

|     |                |
|-----|----------------|
| P22 |                |
| 1   | INDEX SIGNAL   |
| 2   | GND            |
| 3   | STOP POSITION  |
| 4   | T2             |
| 5   | GND            |
| 6   | T1             |
| 7   | EJECT POSITION |
| 8   | GND            |
| 9   | REEL SENS. LED |
| 10  | S1             |

|    |                  |
|----|------------------|
| JD |                  |
| 1  | CYL. LOCK (H)    |
| 2  | CAP REVERSE (H)  |
| 3  | FWD 5V           |
| 4  | SLOW TRACING     |
| 5  | SLOW .F. ADV (H) |
| 6  | STOP (H)         |
| 7  | LOADING (H)      |
| 8  | UNLOADING (H)    |


|    |                           |
|----|---------------------------|
| JC |                           |
| 1  | A - DUB (L)               |
| 2  | SLOW TR. VCC              |
| 3  | CAP C/R 2 <sup>3</sup> H  |
| 4  | PAUSE RESET (L)           |
| 5  | CAP 2 <sup>2</sup> (H)    |
| 6  | CAP ON 2 <sup>0</sup> (H) |
| 7  |                           |
| 8  | SPEED FIX (L)             |

|    |                   |
|----|-------------------|
| JB |                   |
| 1  | DELAYED REC (H)   |
| 2  | AUDIO REC (H)     |
| 3  | REC (L)           |
| 4  | FULL ERASE (H)    |
| 5  | V-V VIDEO (H)     |
| 6  | SAFETY TAB ON (L) |
| 7  | REF 177 KHz       |
| 8  | REF 886 KHz       |

|    |  |
|----|--|
| JA |  |
| 1  |  |
| 2  |  |
| 3  |  |
| 4  |  |
| 5  |  |
| 6  |  |
| 7  |  |
| 8  |  |

|     |     |
|-----|-----|
| P27 |     |
| 1   | GND |
| 2   | GND |

|    |               |
|----|---------------|
| JE |               |
| 1  | SAFETY TAB SW |
| 2  | GND           |

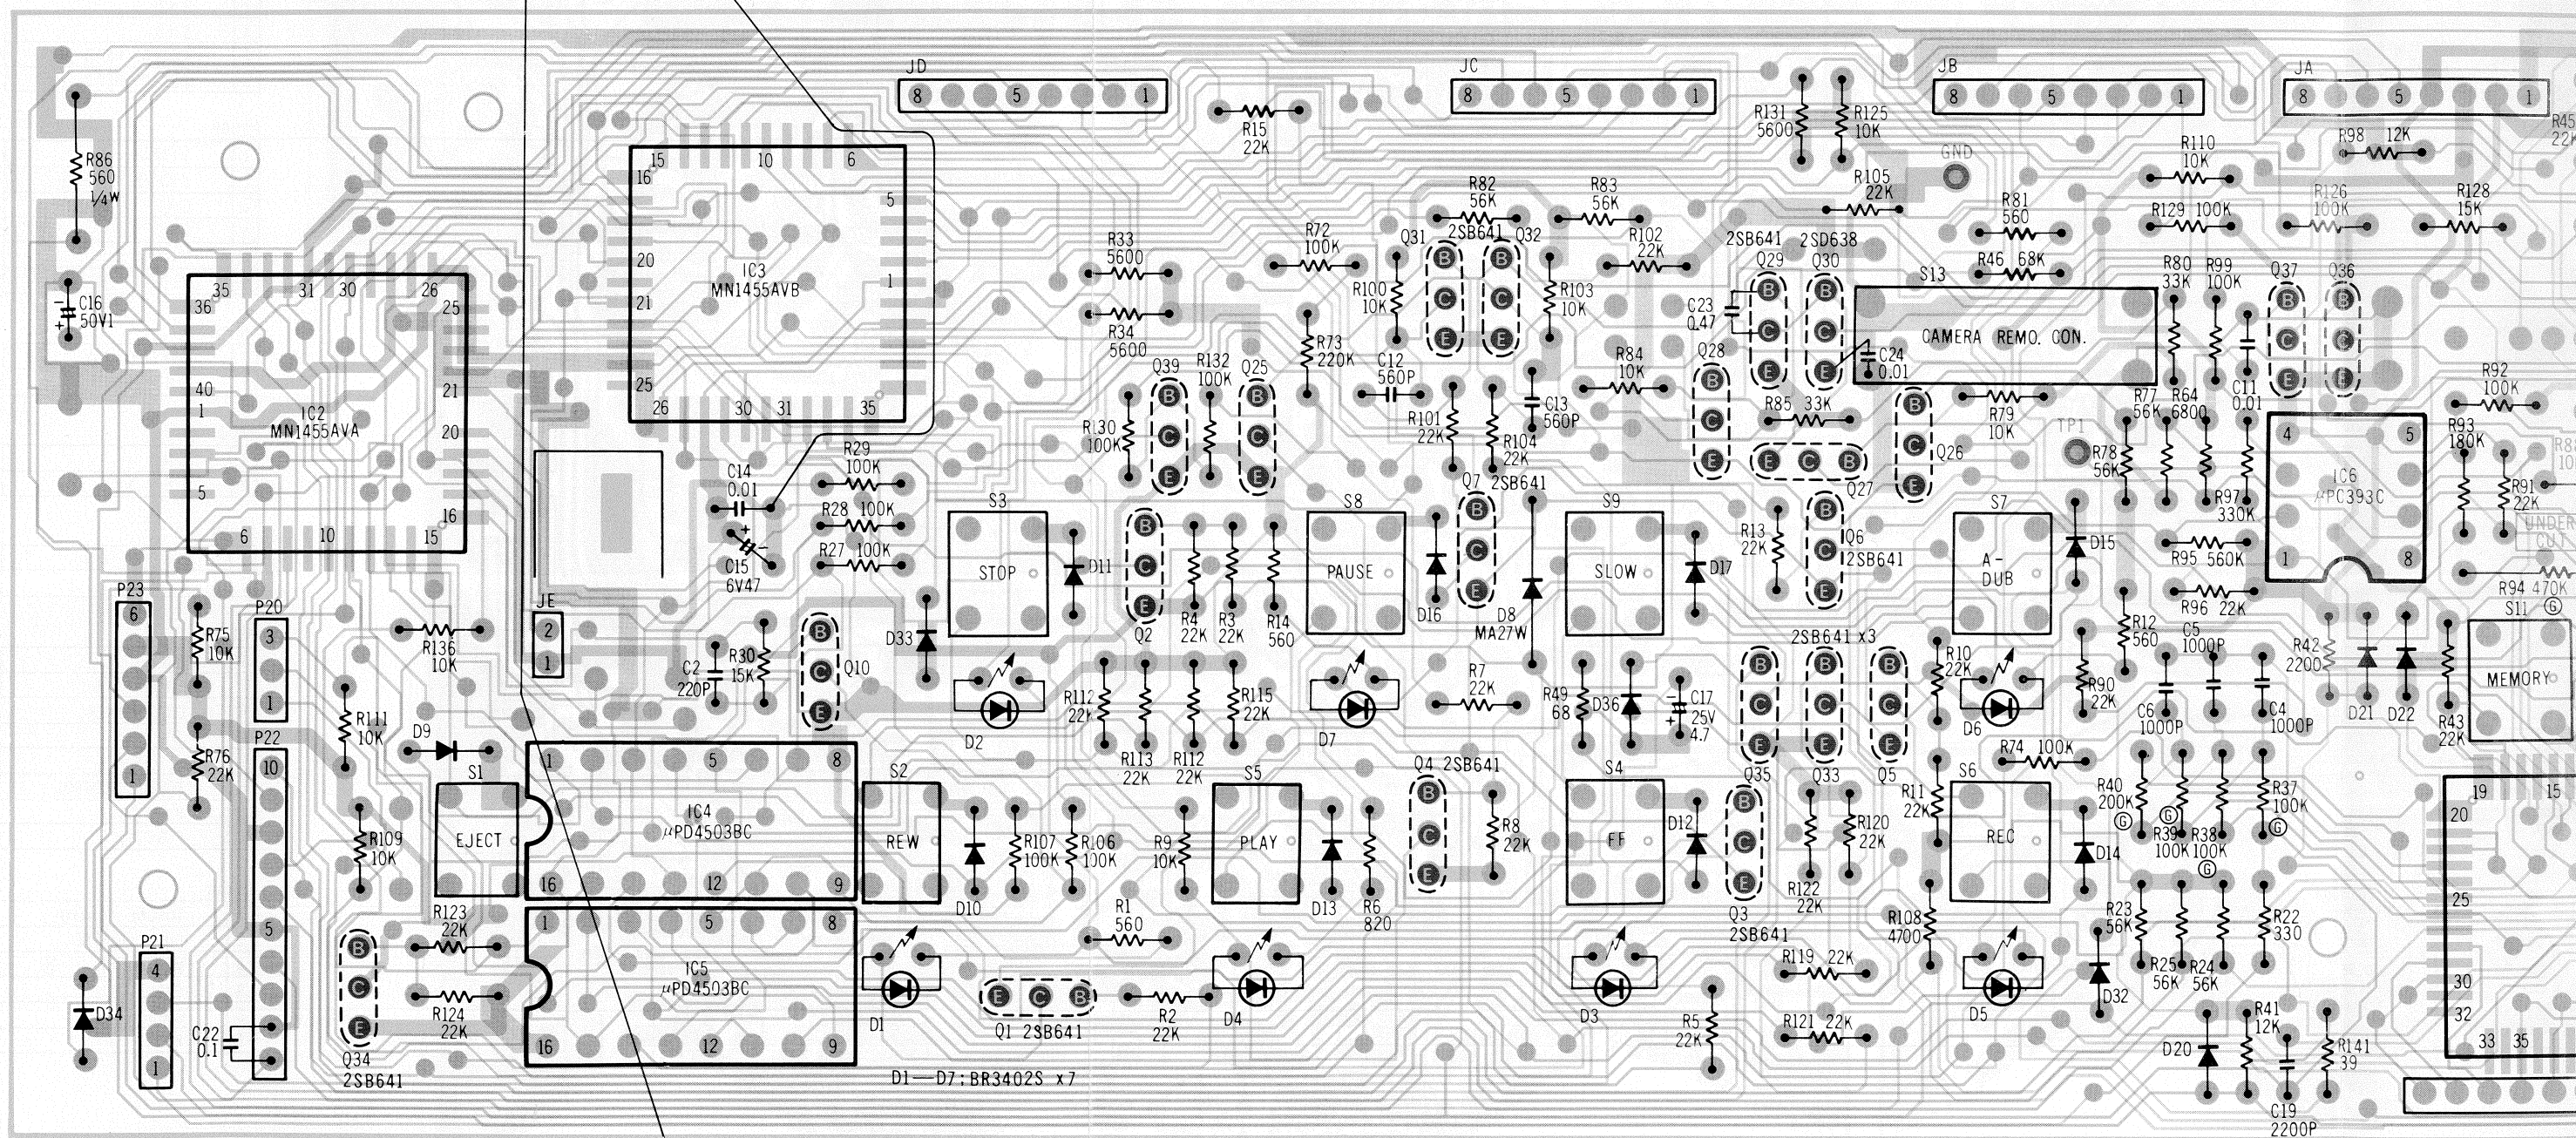

REF. NO: 6000 SERIES.

1

2

3

4

5

6



JA


|   |                 |
|---|-----------------|
| 1 | GND             |
| 2 | 12V OUT         |
| 3 | +9V             |
| 4 | +5V             |
| 5 | 9V OFF (H)      |
| 6 | CURR. EMPHA (L) |
| 7 | AUDIO MUTE (H)  |
| 8 | AUDIO EE (H)    |

P24

|   |              |
|---|--------------|
| 1 | 12V OUT      |
| 2 | BATT. CHARGE |
| 3 | 12V IN       |
| 4 | 12V IN       |
| 5 | EXT 12V      |
| 6 | GND          |


P25


|    |                  |
|----|------------------|
| 1  | _____            |
| 2  | ANT SW. CH LOCK  |
| 3  | CAMERA IN (L)    |
| 4  | SAFETY TAB       |
| 5  | SERIAL CLK (2)   |
| 6  | SERIAL CODE      |
| 7  | TC (L) & SERIAL  |
| 8  | TALLY & CLK (1)  |
| 9  | CAMERA PAUSE (L) |
| 10 | STAND-BY (R)     |

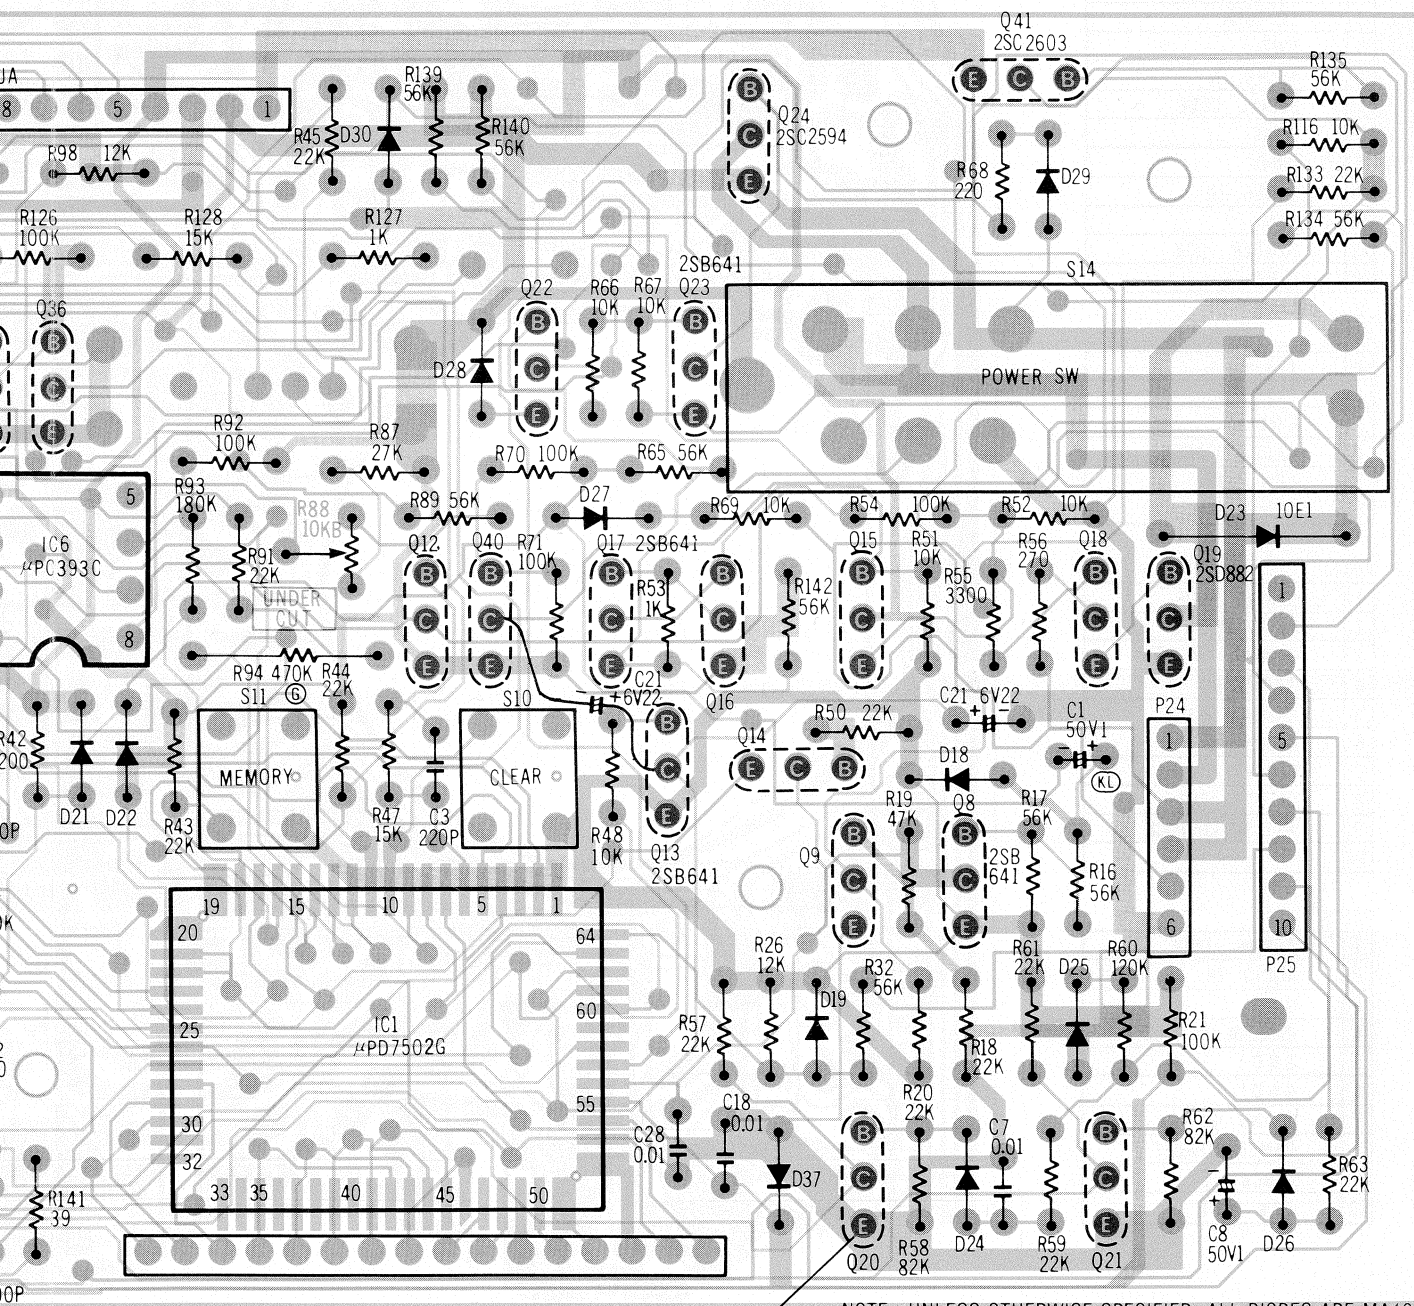

NOTE: UNLESS OTHERWISE SPECIFIED, ALL DIODES ARE MA165  
UNLESS OTHERWISE SPECIFIED, ALL Tr's ARE 2SD636

SYSTEM & COUNTER CONTROL SCHEMATIC DIAGRAM

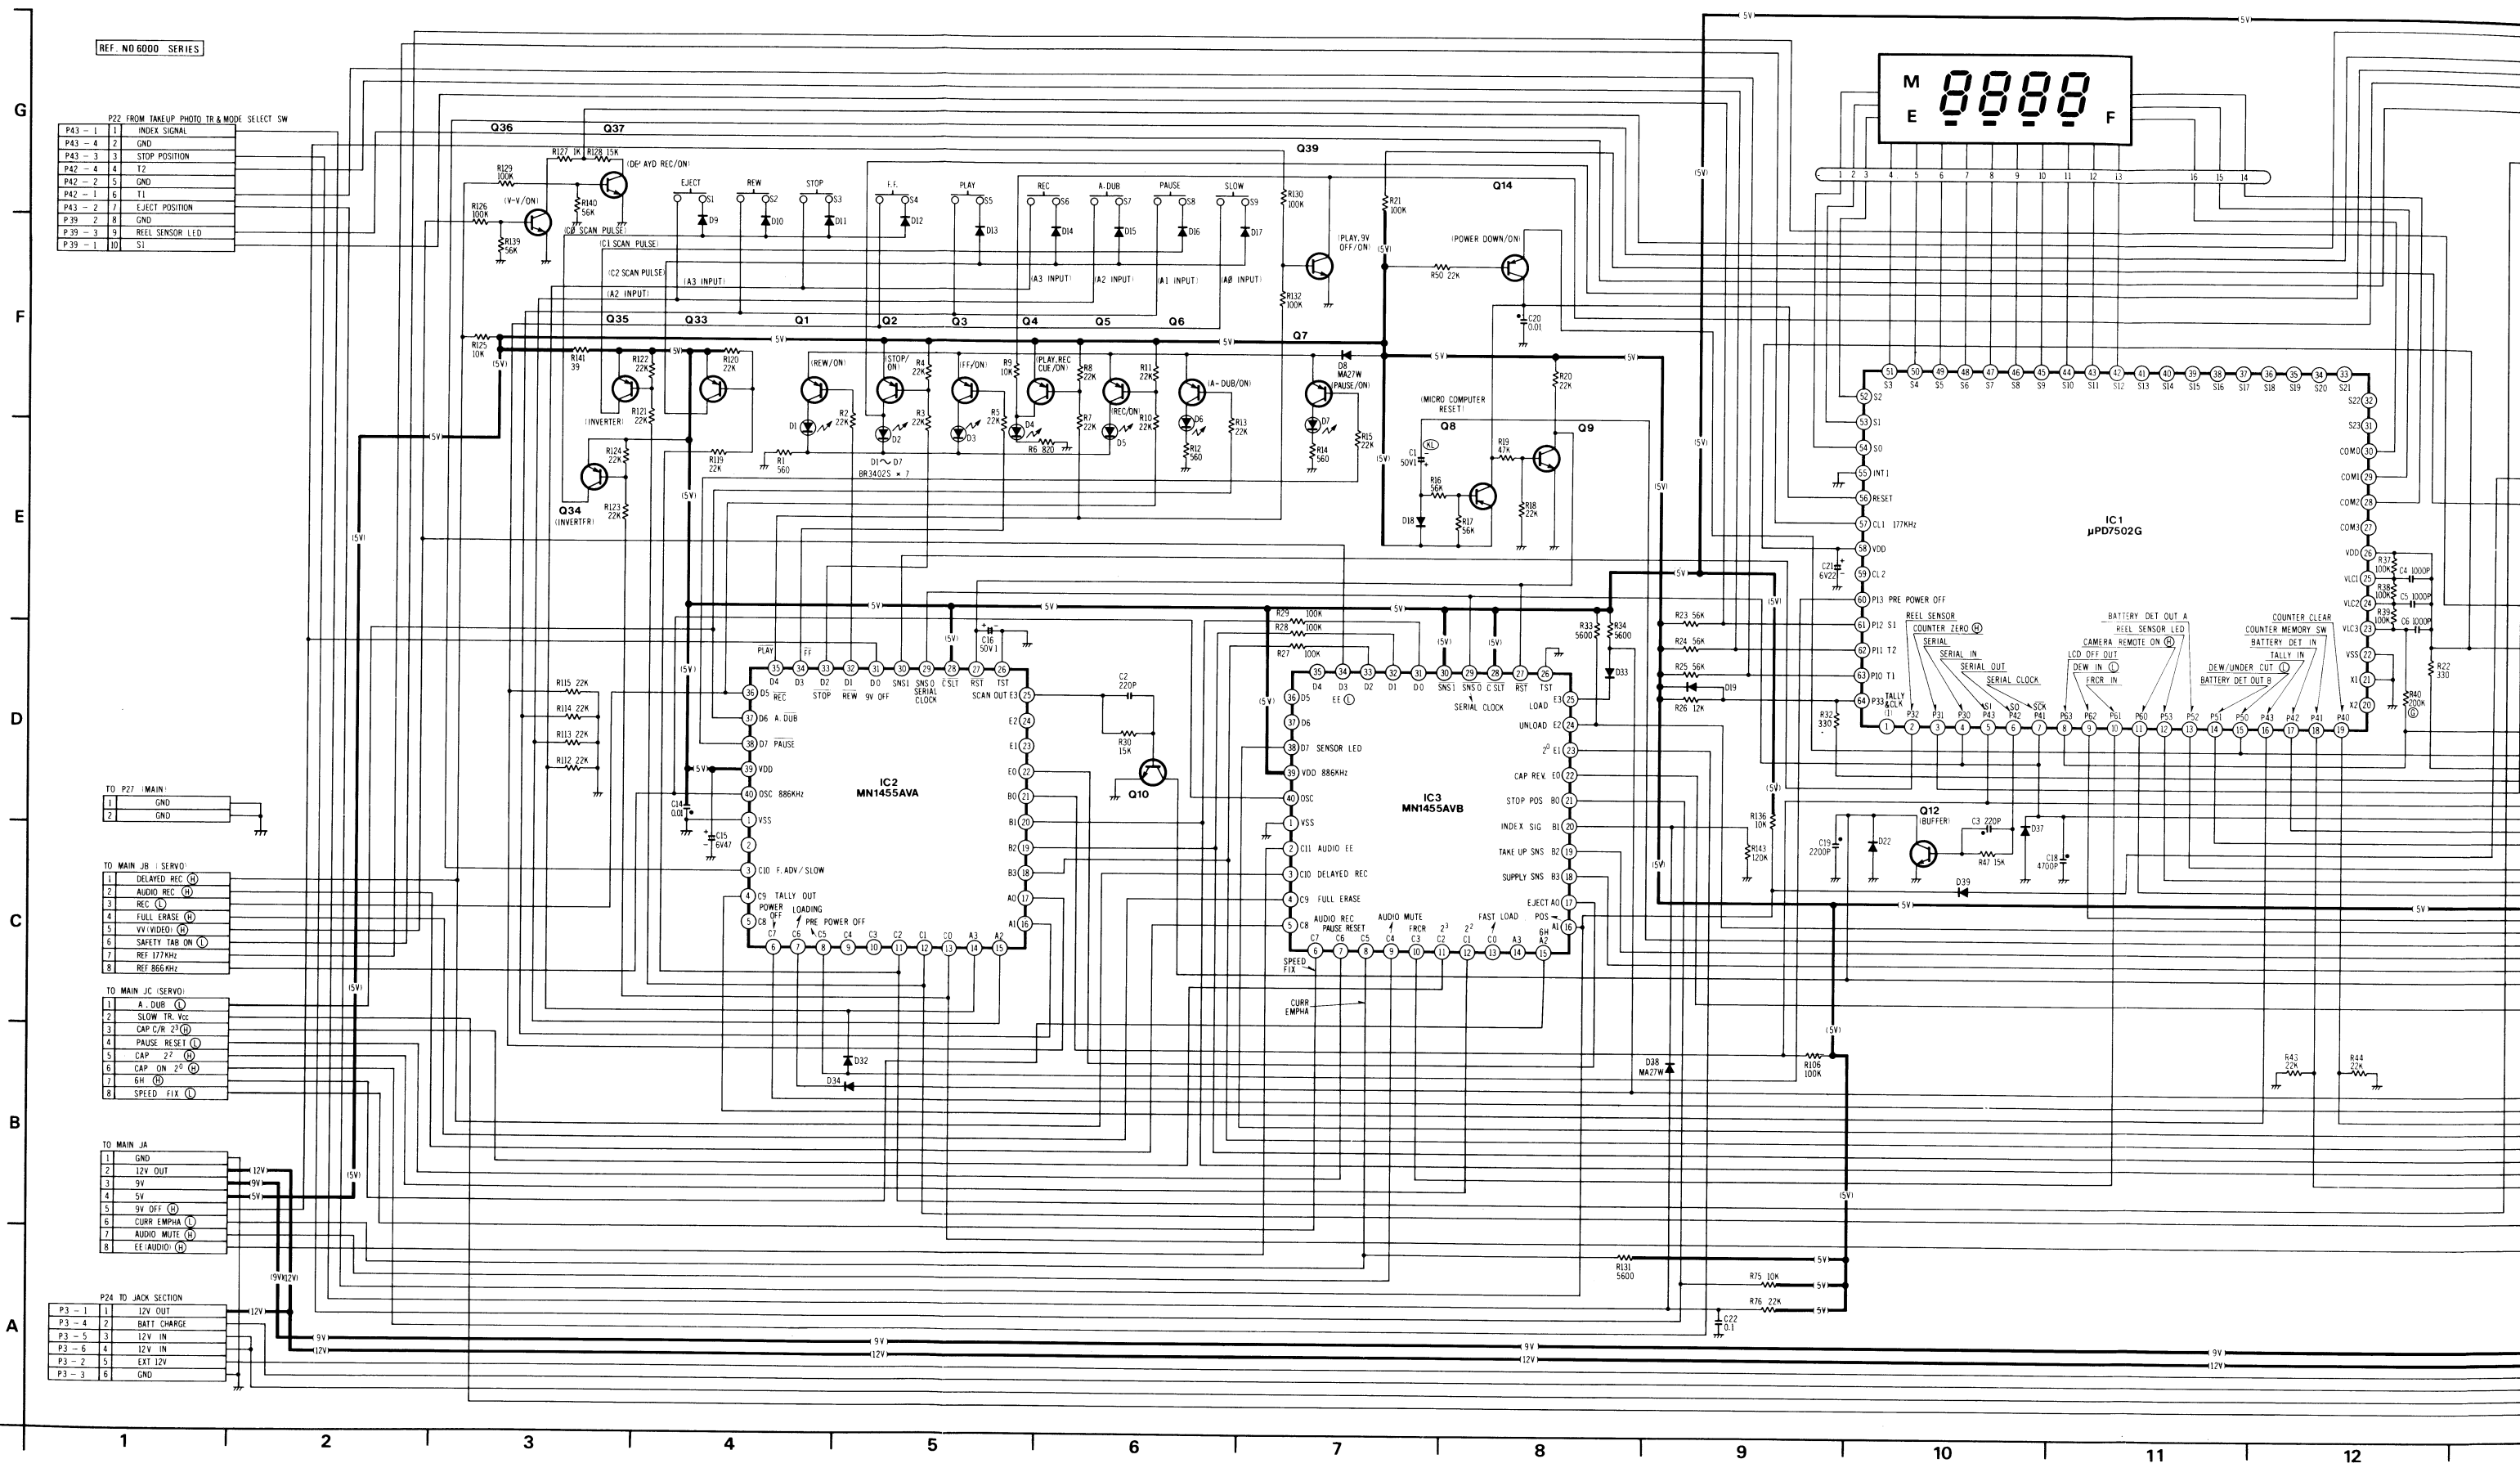

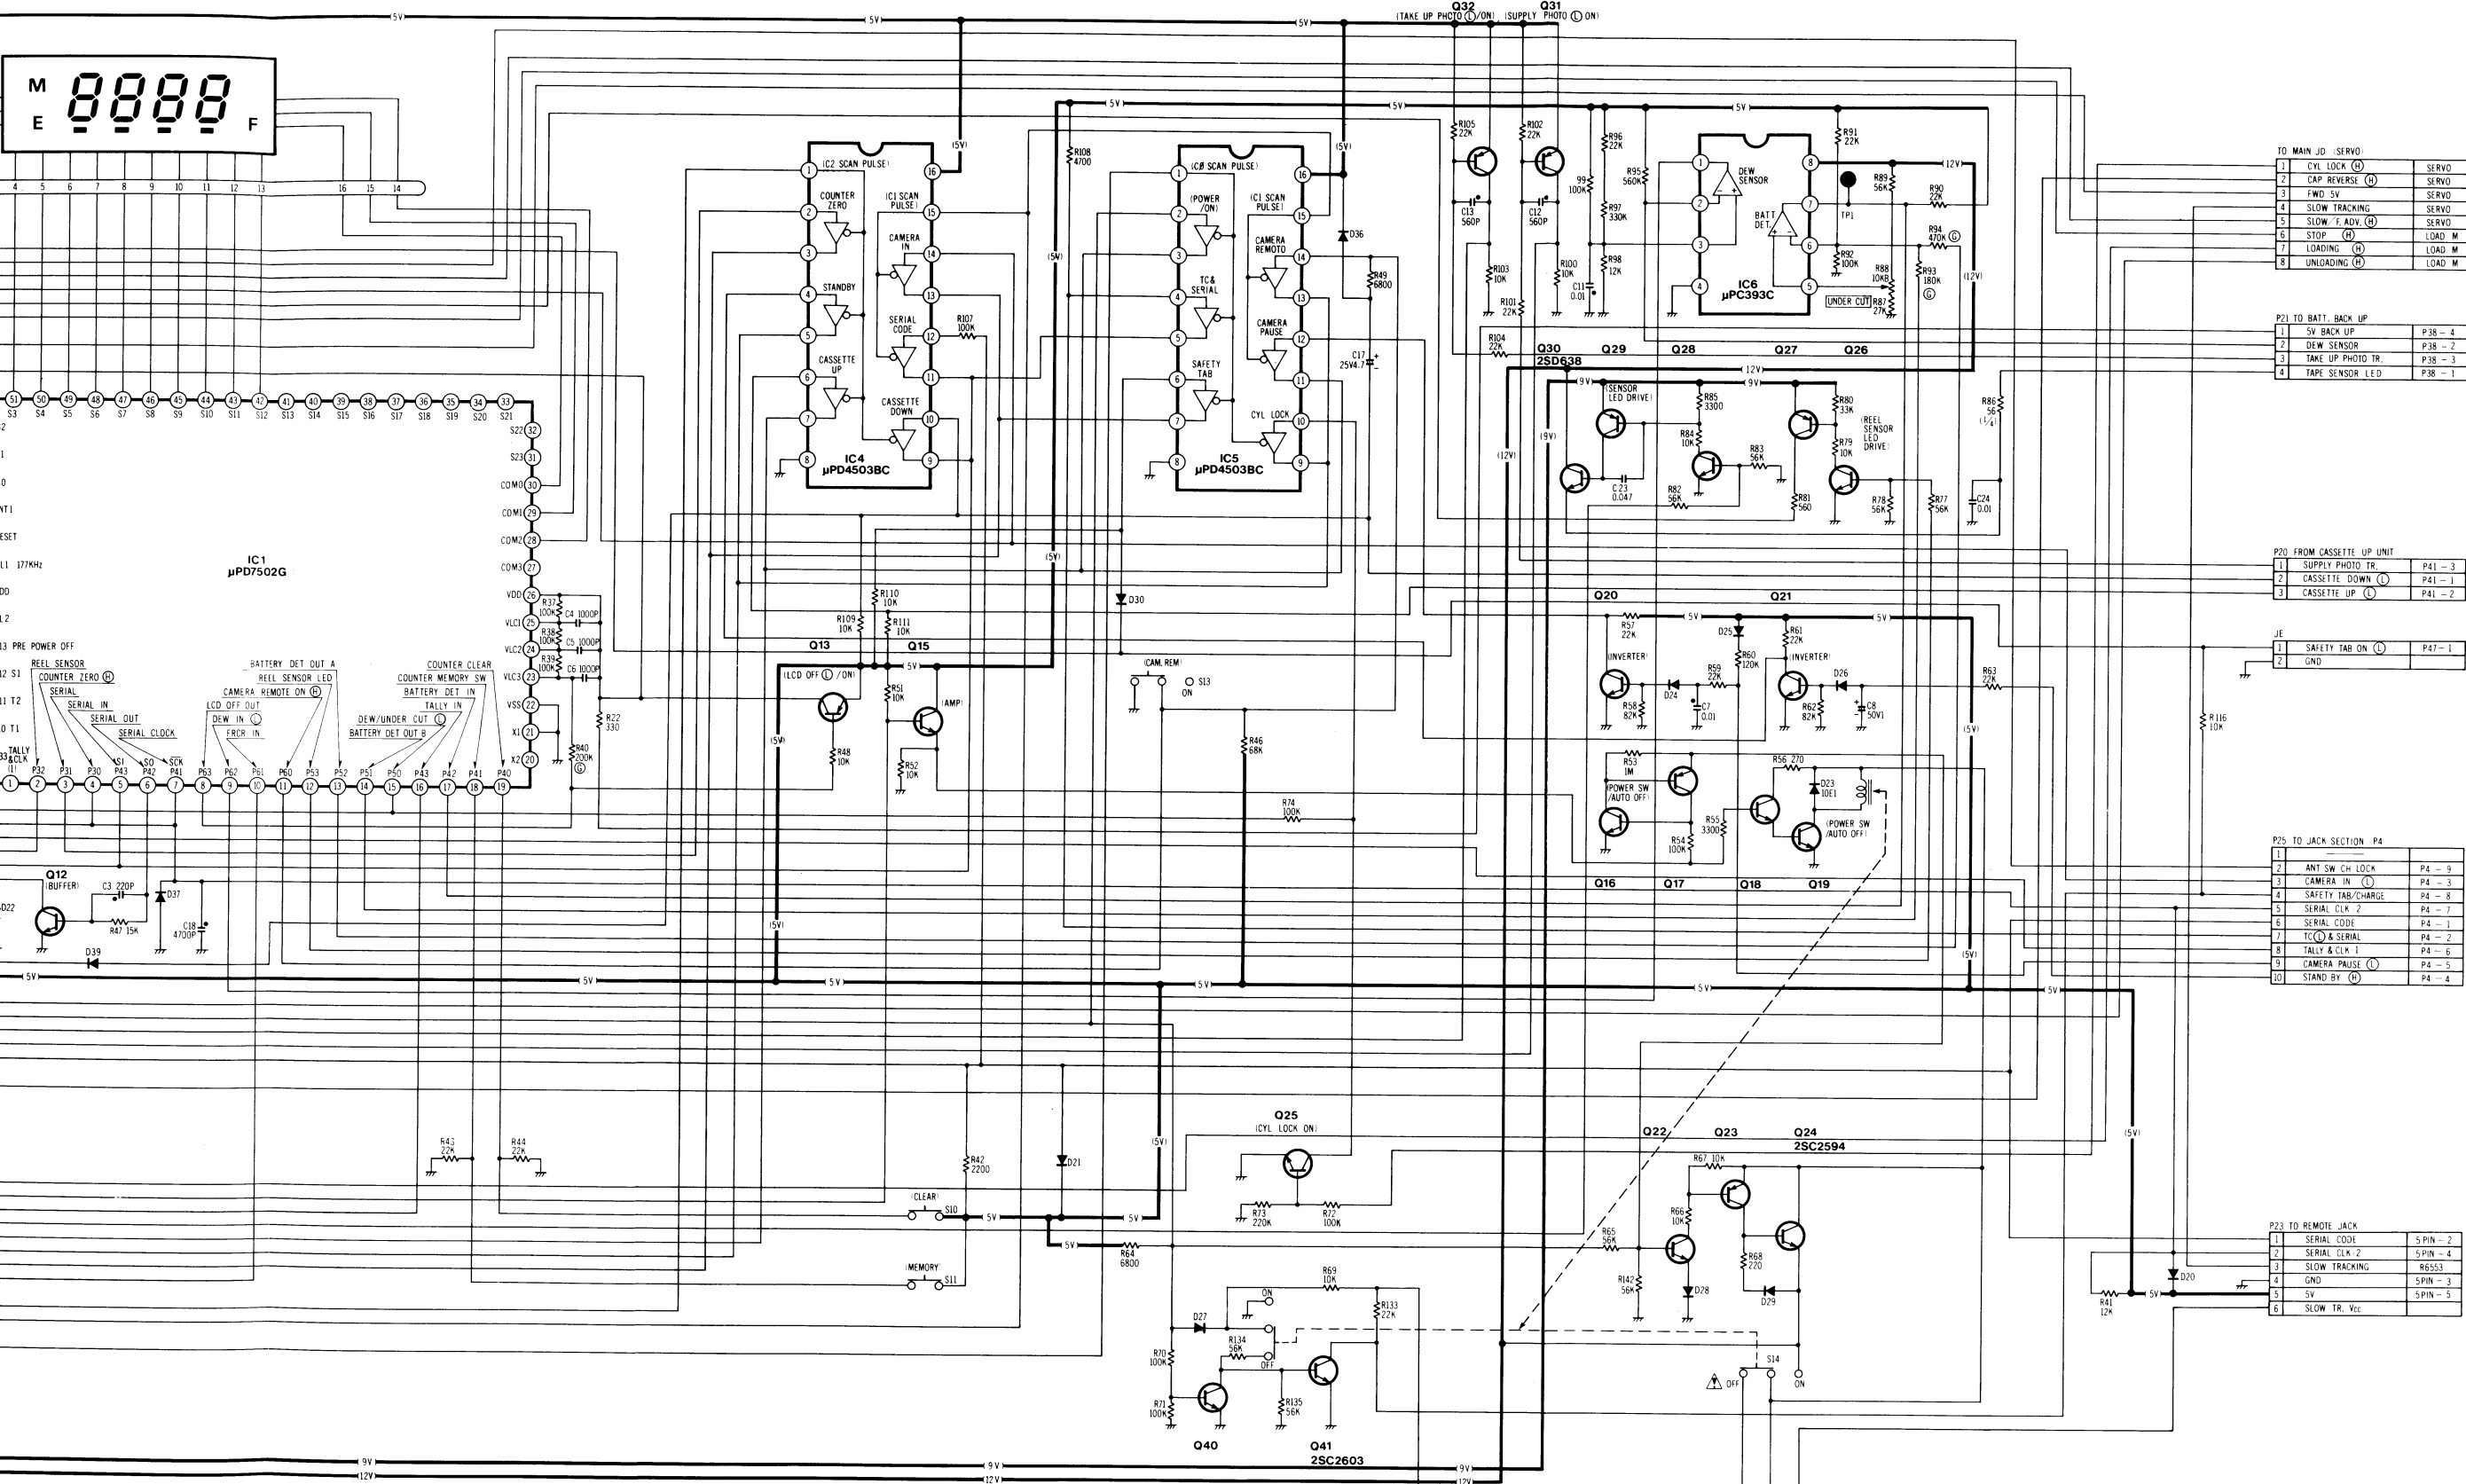

| TO MAIN J.D. SERVO |                  |        |
|--------------------|------------------|--------|
| 1                  | CYL LOCK (H)     | SERVO  |
| 2                  | CAP REVERSE (H)  | SERVO  |
| 3                  | FWD 5V           | SERVO  |
| 4                  | SLOW TRACKING    | SERVO  |
| 5                  | SLOW F. ADV. (H) | SERVO  |
| 6                  | STOP (H)         | LOAD M |
| 7                  | LOADING (H)      | LOAD M |
| 8                  | UNLOADING (H)    | LOAD M |

| P21 TO BATT. BACK UP |                   |         |
|----------------------|-------------------|---------|
| 1                    | SV BACK UP        | P38 - 4 |
| 2                    | DEW SENSOR        | P38 - 2 |
| 3                    | TAKE UP PHOTO TR. | P38 - 3 |
| 4                    | TAPE SENSOR LED   | P38 - 1 |

| P20 FROM CASSETTE UP UNIT |                   |         |
|---------------------------|-------------------|---------|
| 1                         | SUPPLY PHOTO TR.  | P41 - 3 |
| 2                         | CASSETTE DOWN (L) | P41 - 1 |
| 3                         | CASSETTE UP (L)   | P41 - 2 |

| JE |                   |         |
|----|-------------------|---------|
| 1  | SAFETY TAB ON (L) | P47 - 1 |
| 2  | GND               |         |

| P25 TO JACK SECTION P4 |                   |        |
|------------------------|-------------------|--------|
| 1                      | ANT SW CH LOCK    | P4 - 9 |
| 2                      | CAMERA IN (L)     | P4 - 3 |
| 3                      | SAFETY TAB/CHARGE | P4 - 8 |
| 4                      | SERIAL CLK 2      | P4 - 7 |
| 5                      | SERIAL CODE       | P4 - 1 |
| 6                      | TC & SERIAL       | P4 - 2 |
| 7                      | TALLY & CLK 1     | P4 - 6 |
| 8                      | CAMERA PAUSE (L)  | P4 - 5 |
| 9                      | STAND BY (H)      | P4 - 4 |

| P23 TO REMOTE JACK |               |           |
|--------------------|---------------|-----------|
| 1                  | SERIAL CODE   | S PIN - 2 |
| 2                  | SERIAL CLK 2  | S PIN - 4 |
| 3                  | SLOW TRACKING | R6553     |
| 4                  | GND           | S PIN - 3 |
| 5                  | SV            | S PIN - 5 |
| 6                  | SLOW TR. Vcc  |           |


### System Control Schematic

|        |      |
|--------|------|
| Q6001  | F-4  |
| Q6002  | F-5  |
| Q6003  | F-5  |
| Q6004  | F-5  |
| Q6005  | F-6  |
| Q6006  | F-6  |
| Q6007  | F-7  |
| Q6008  | E-8  |
| Q6009  | E-8  |
| Q6010  | D-6  |
| Q6012  | C-10 |
| Q6013  | D-13 |
| Q6014  | F-8  |
| Q6015  | D-14 |
| Q6016  | D-17 |
| Q6017  | D-17 |
| Q6018  | D-18 |
| Q6019  | D-18 |
| Q6020  | E-17 |
| Q6021  | E-18 |
| Q6022  | B-17 |
| Q6023  | C-18 |
| Q6024  | C-18 |
| Q6025  | B-15 |
| Q6026  | E-18 |
| Q6027  | E-18 |
| Q6028  | E-17 |
| Q6029  | E-17 |
| Q6030  | E-17 |
| Q6031  | G-17 |
| Q6032  | G-16 |
| Q6033  | E-4  |
| Q6034  | E-3  |
| Q6035  | E-4  |
| Q6036  | F-3  |
| Q6037  | F-4  |
| Q6039  | F-7  |
| Q6040  | A-15 |
| Q6041  | A-16 |
| IC6001 | E-11 |
| IC6002 | C-5  |
| IC6003 | C-7  |
| IC6004 | F-13 |
| IC6005 | F-15 |
| IC6006 | F-18 |

NOTE: UNLESS OTHERWISE SPECIFIED, ALL DIODES ARE MAT165  
UNLESS OTHERWISE SPECIFIED, ALL TRs ARE 2SD636


RF CONVERTER SCHEMATIC DIAGRAM (ENC17553)

RF CONV

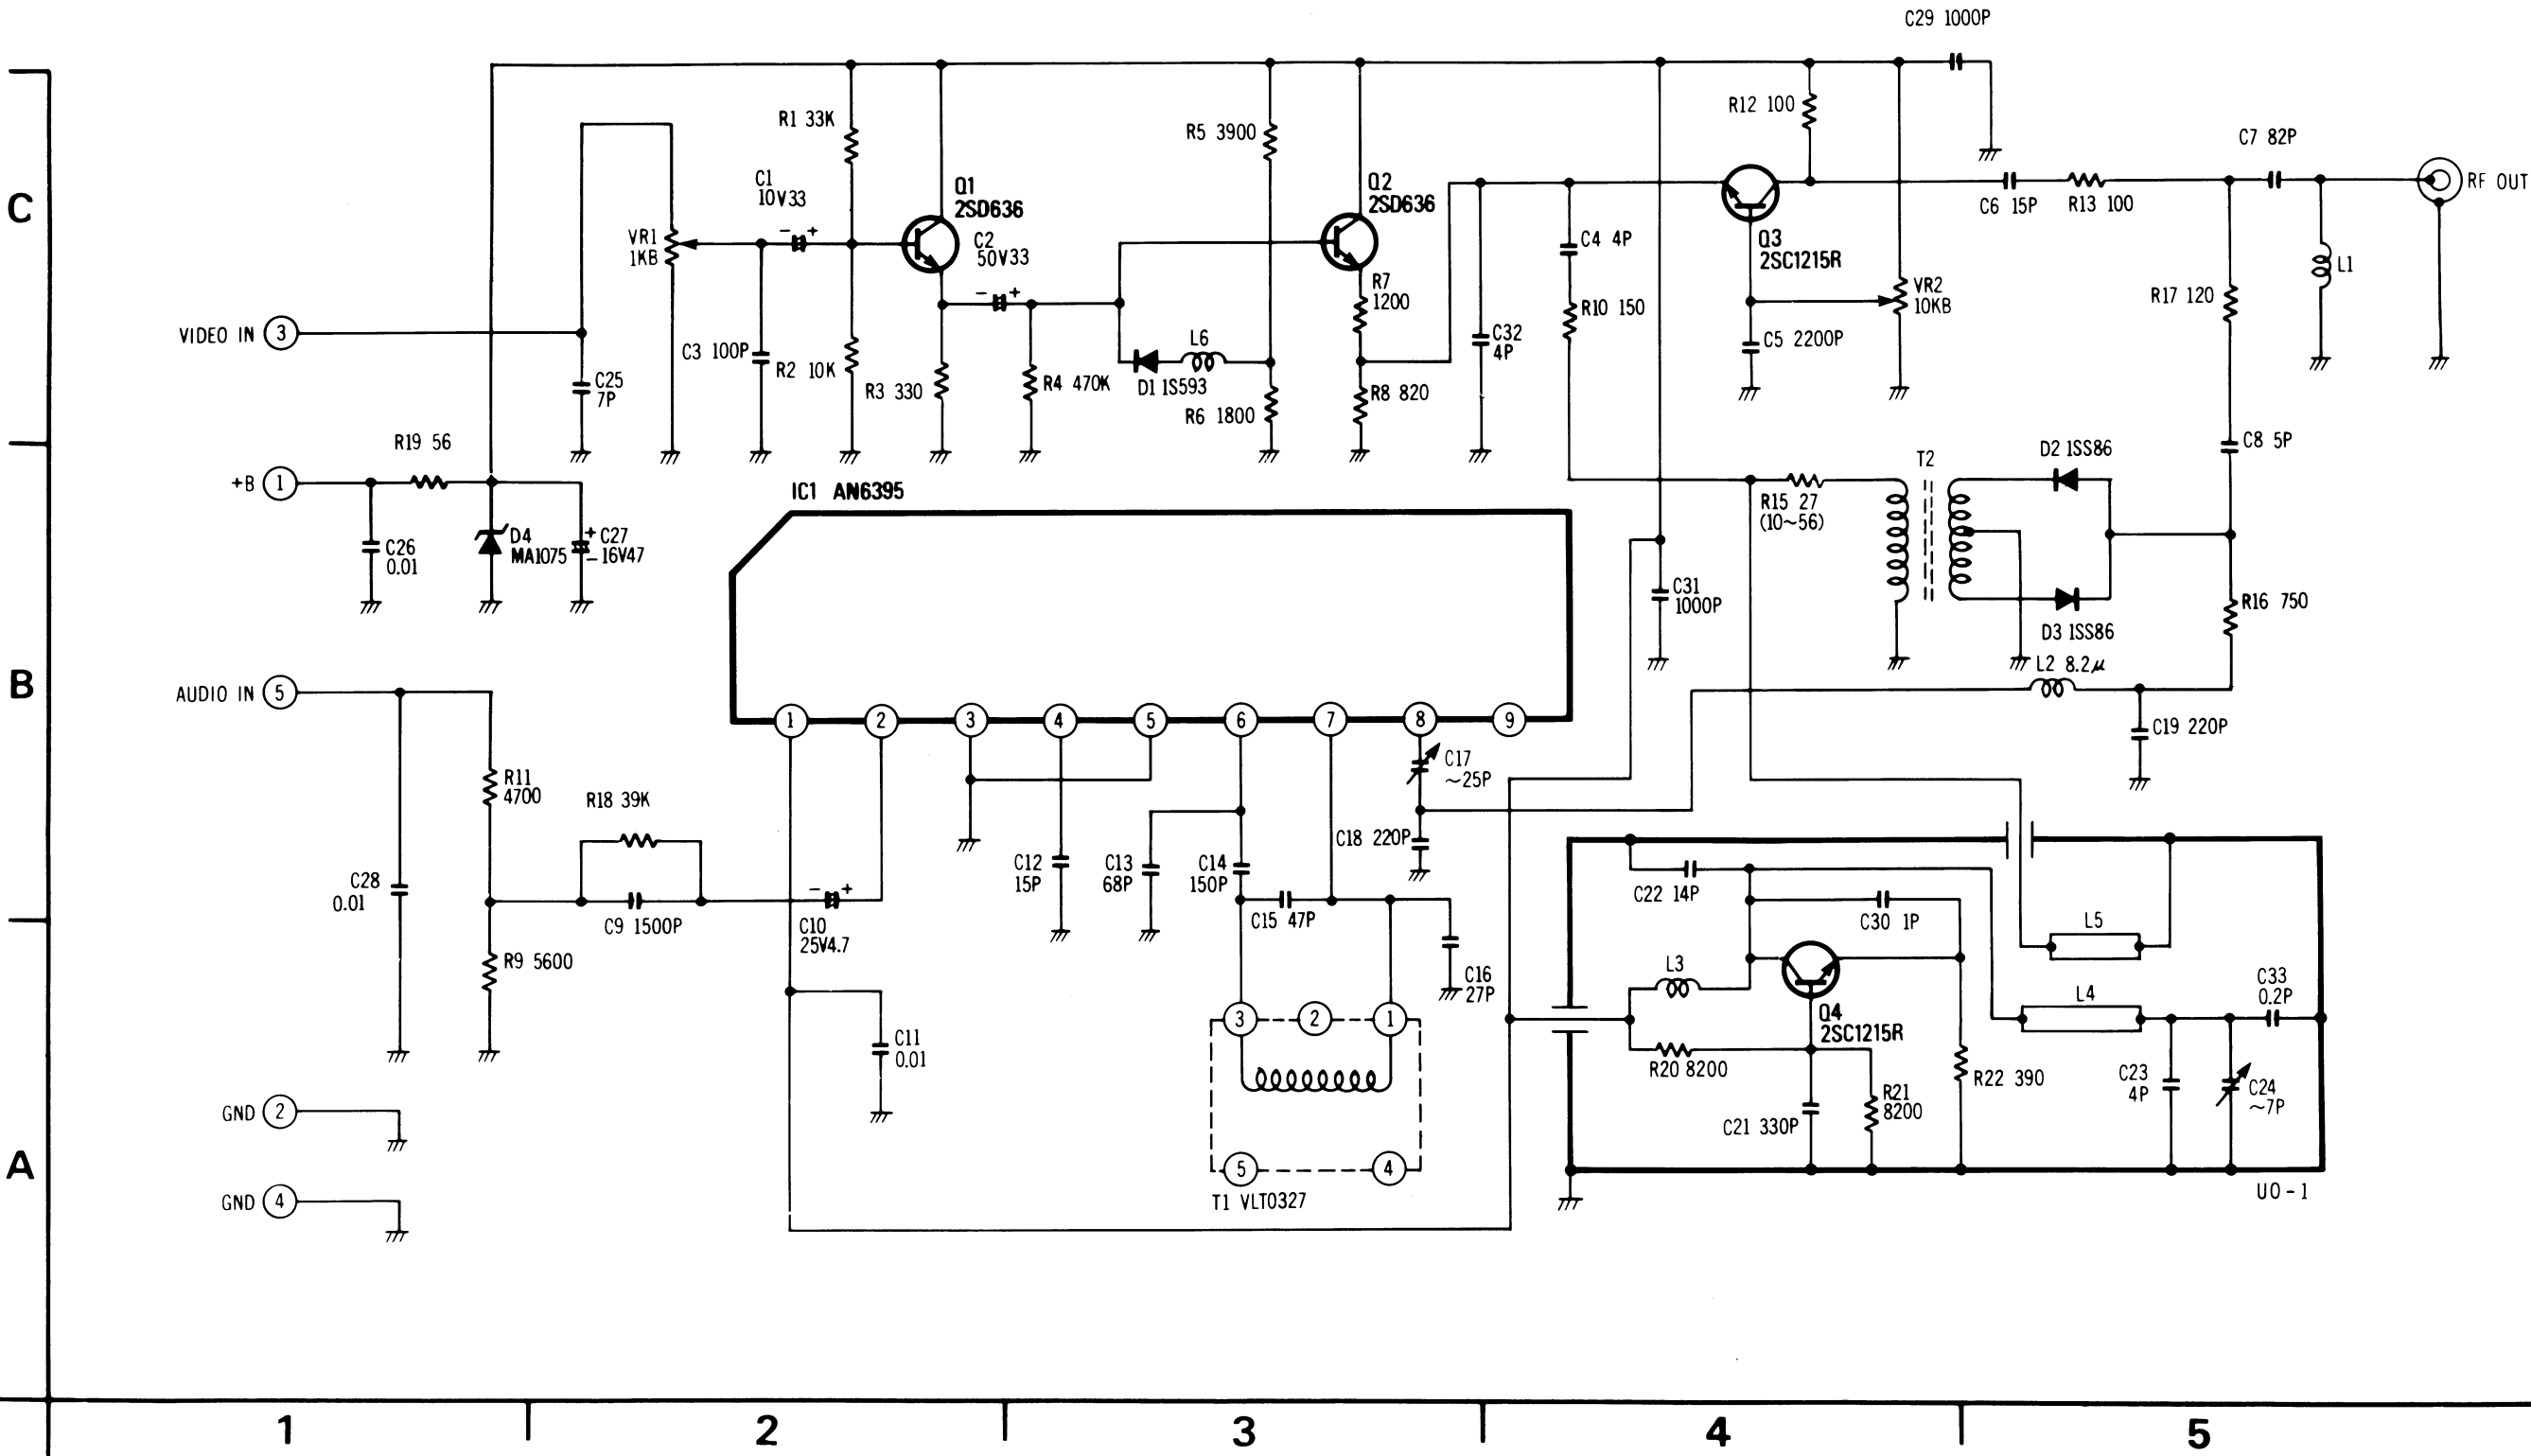




RF CONVERTER UNIT [ENC17553; NV-100E/EG]

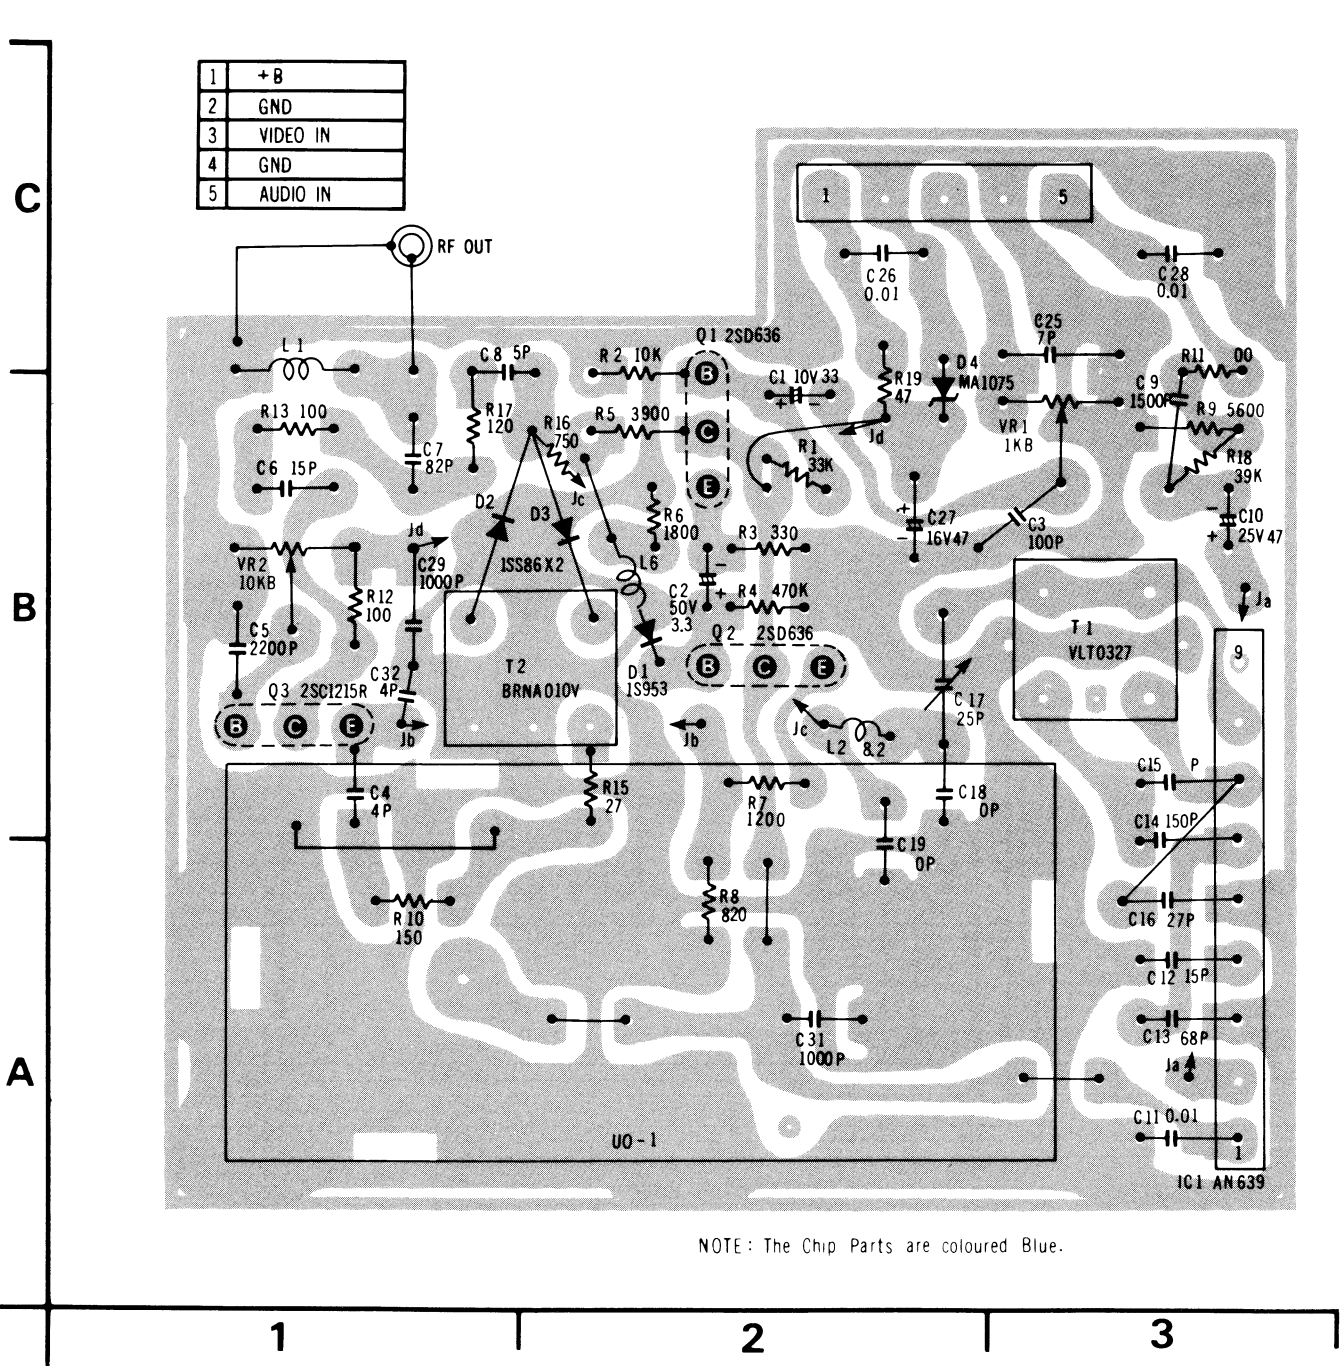


RF CONVERTER UNIT [ENC17554; NV-100B]

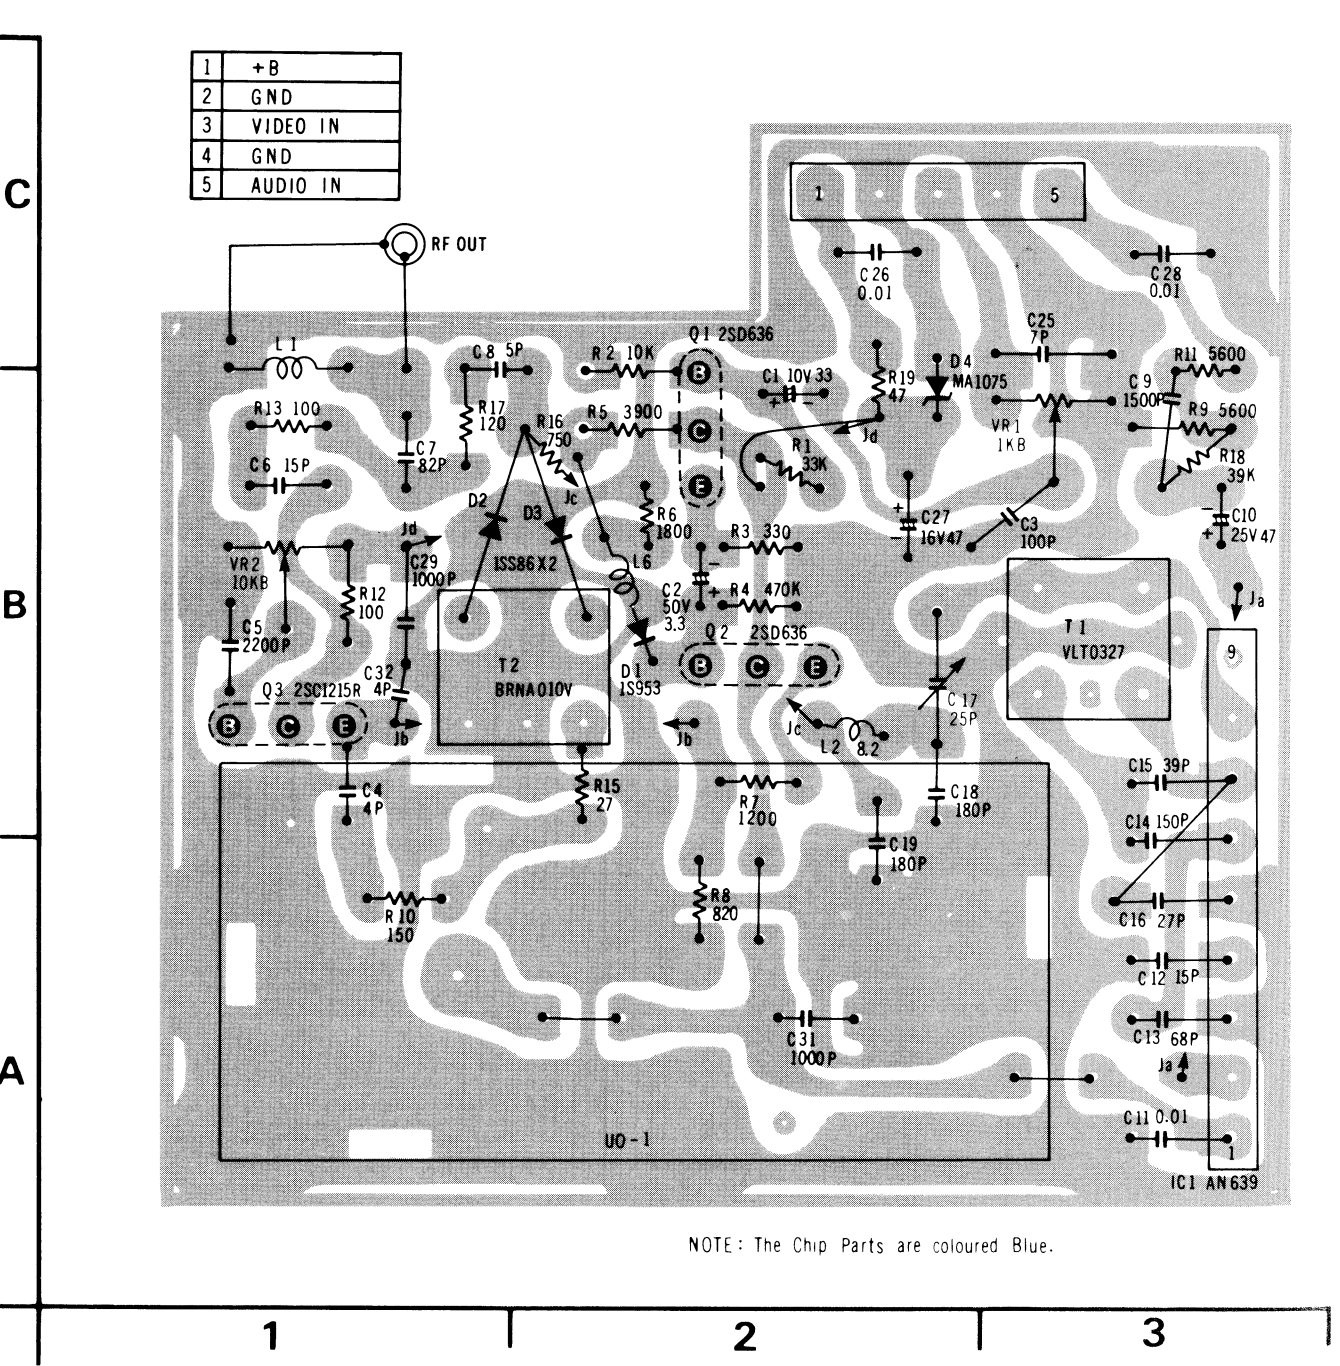




RF CONVERTER SCHEMATIC DIAGRAM (ENC17554)

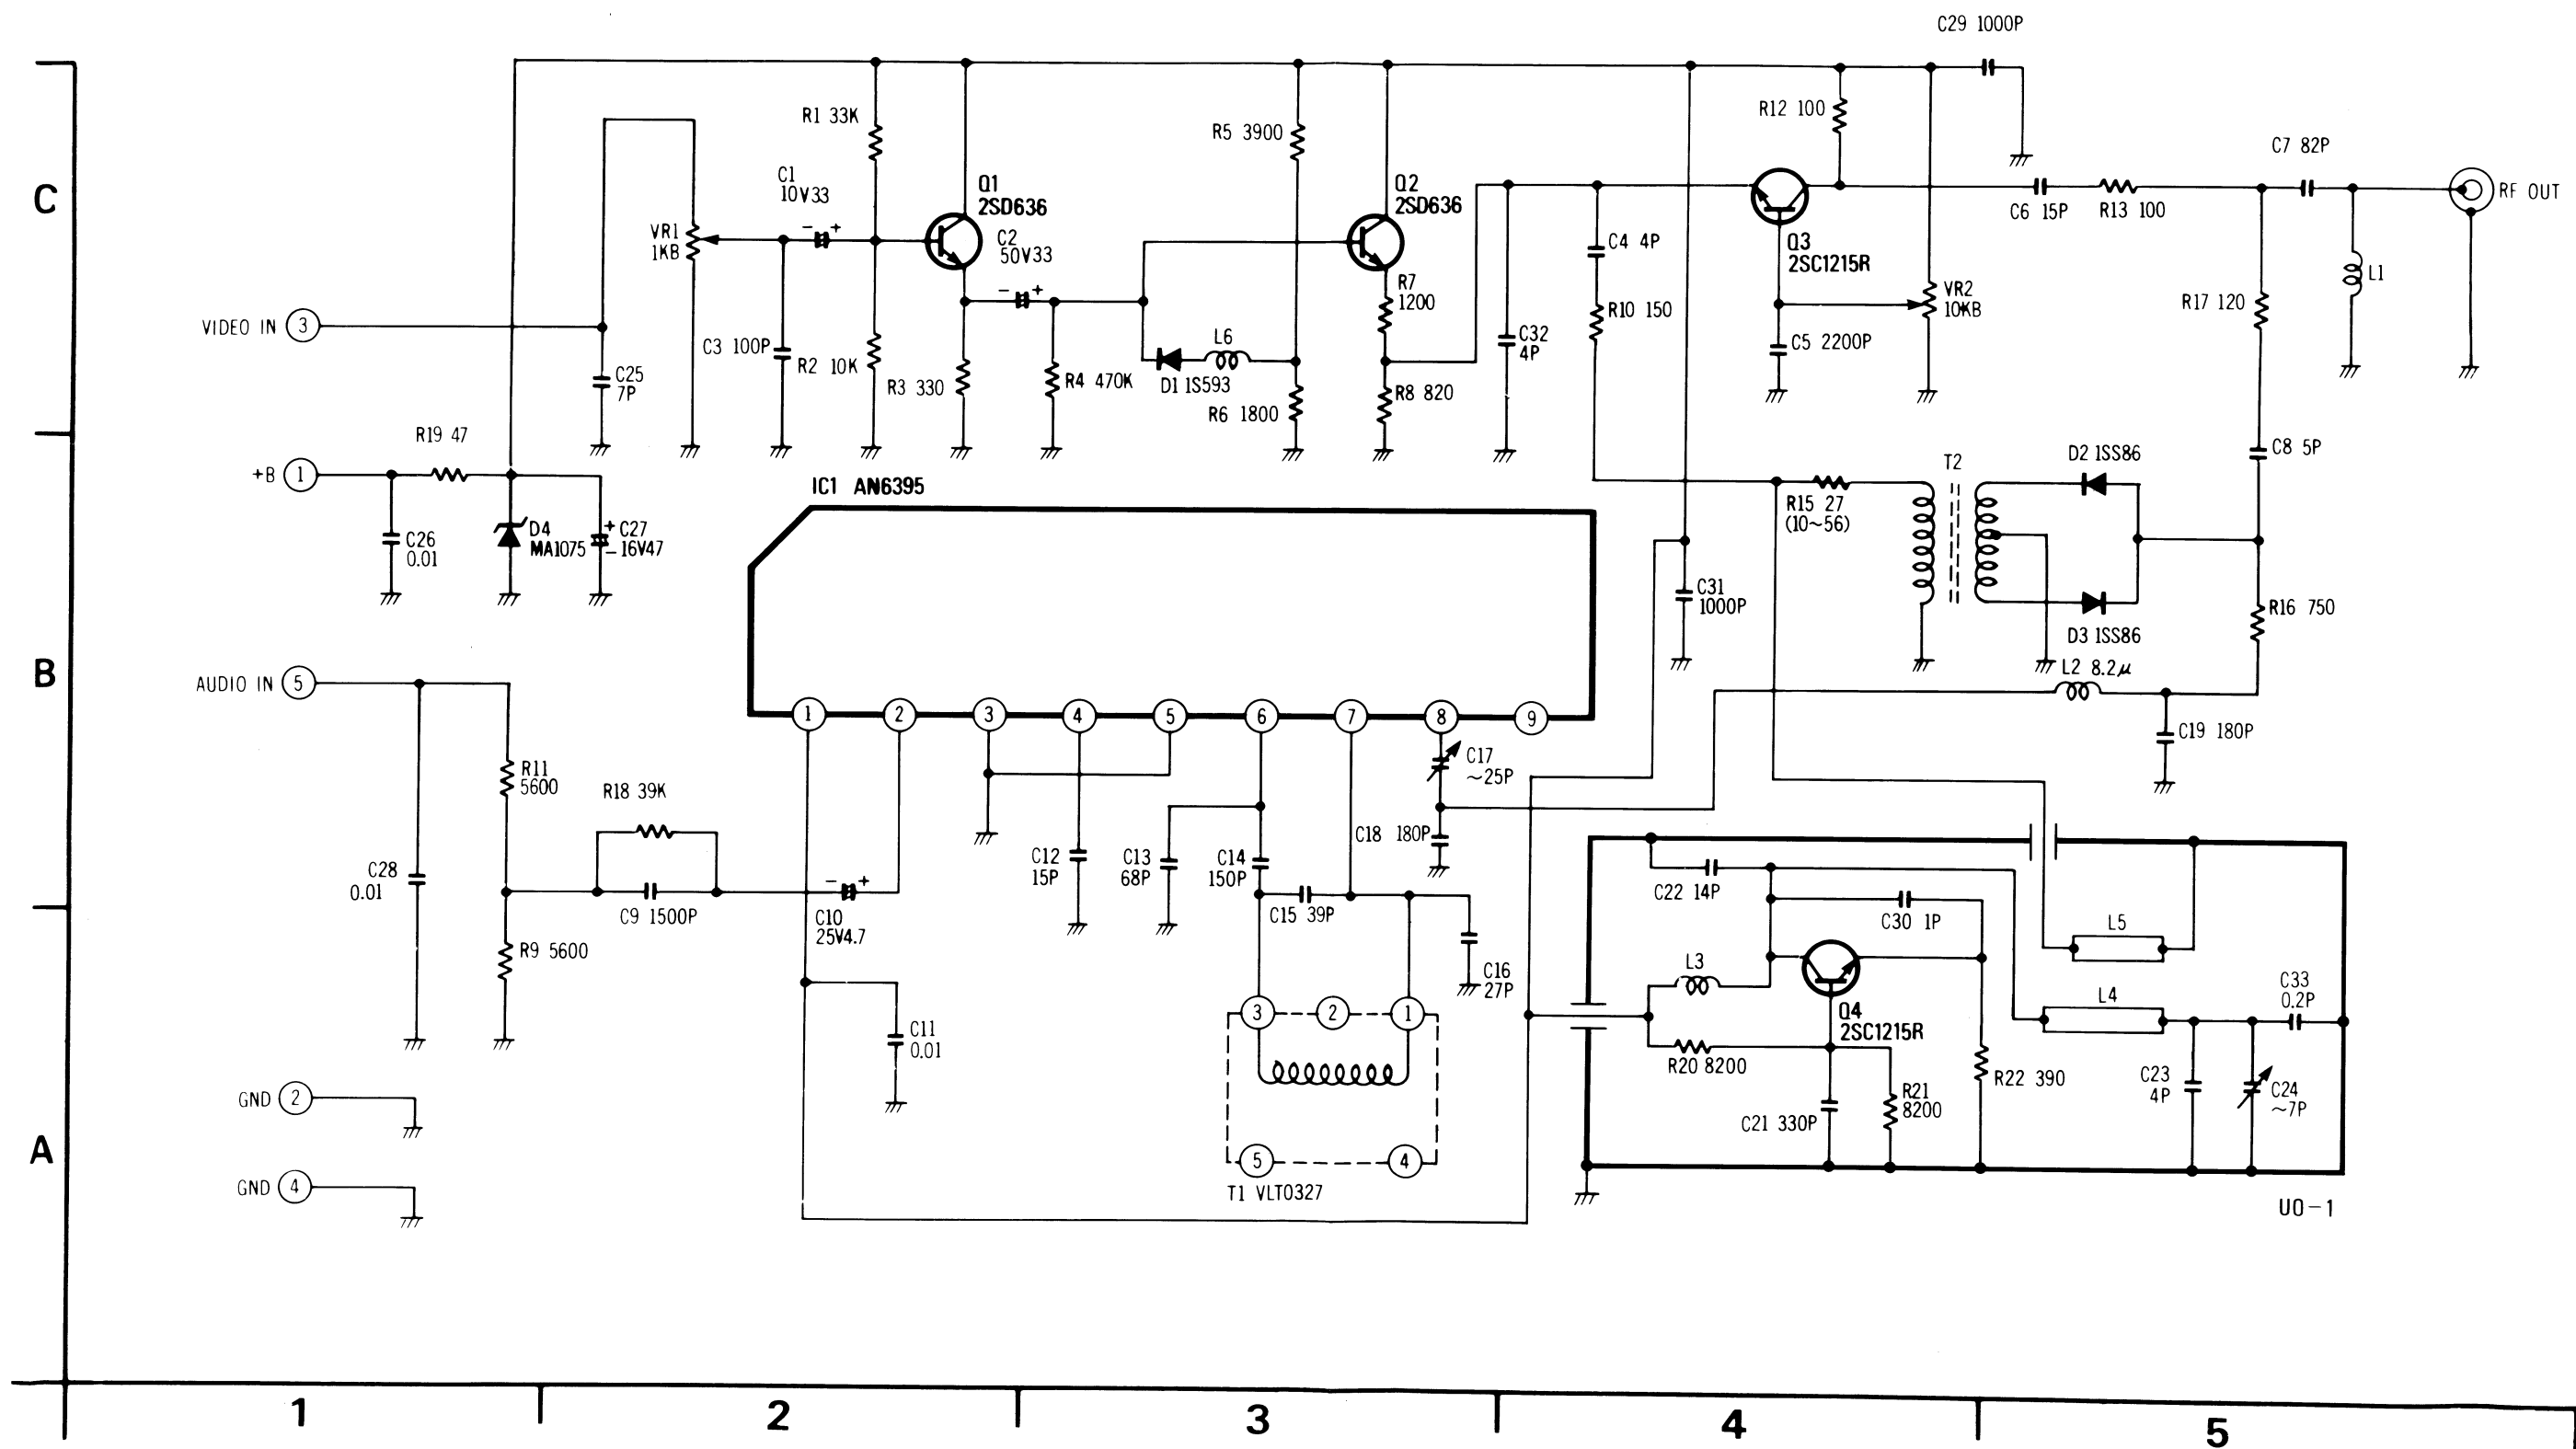

BATTERY BACK UP C.B.A. (VEP06165A)

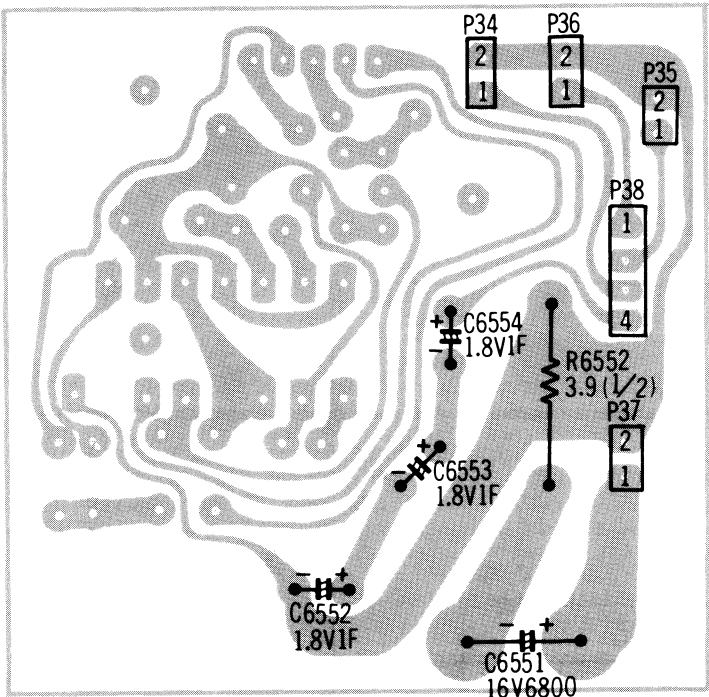

P34 TO DEW SENSOR

|   |            |
|---|------------|
| 1 | DEW SENSOR |
| 2 | GND        |

P36 TO TAKE UP SENSOR P40

|   |             |
|---|-------------|
| 1 | TAKE UP SNS |
| 2 | GND         |

P35 TO TAPE SNS.LED

|   |              |
|---|--------------|
| 1 | TAPE SNS LED |
| 2 | GND          |


P38 TO P21 SYSTEM CONTROL

|   |                |
|---|----------------|
| 1 | TAKE UP SNS    |
| 2 | TAPE SNS.LED   |
| 3 | DEW SNS        |
| 4 | MEMORY COUNTER |

P37 TO LOAD MOTOR DRIVE P16

|   |              |
|---|--------------|
| 1 | LOAD BACK UP |
| 2 | GND          |

TAKEUP REEL SENSOR C.B. (VJB00801)

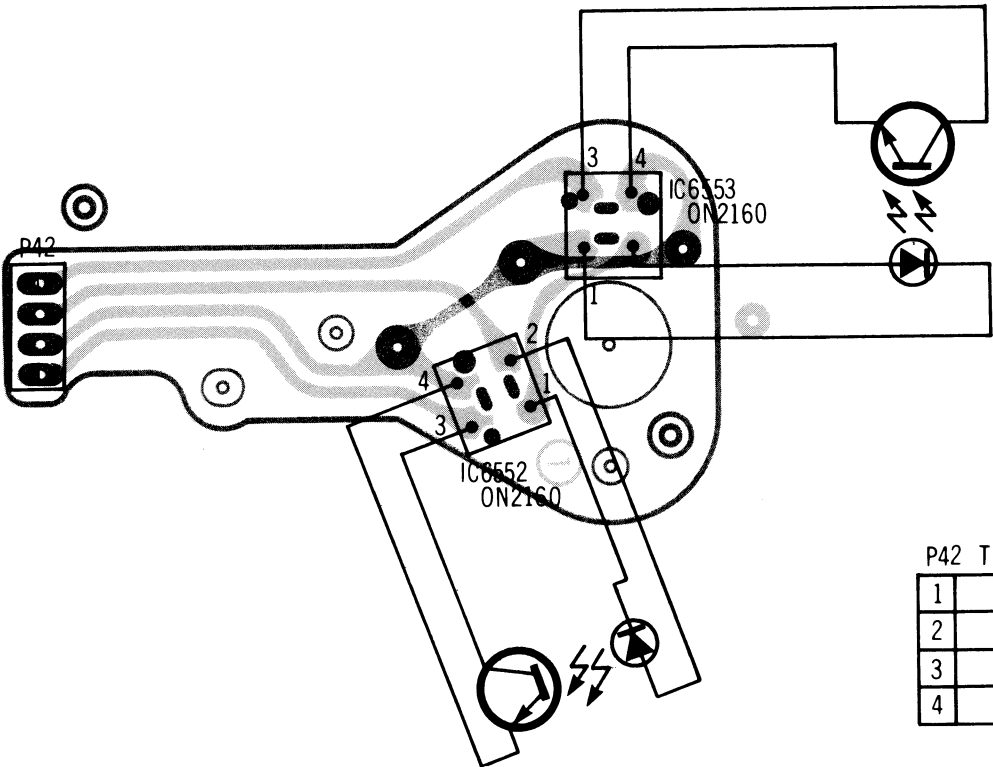


P42 TO P22 SYSTEM CONTROL

|   |                 |
|---|-----------------|
| 1 | T1              |
| 2 | GND             |
| 3 | REEL SENSOR LED |
| 4 | T2              |


FULL ERASE HEAD C.B.A. (VEP00799A)

P28 TO P7 POWER SUPPLY

|   |               |
|---|---------------|
| 1 | GND           |
| 2 | FULL ERASE 9V |

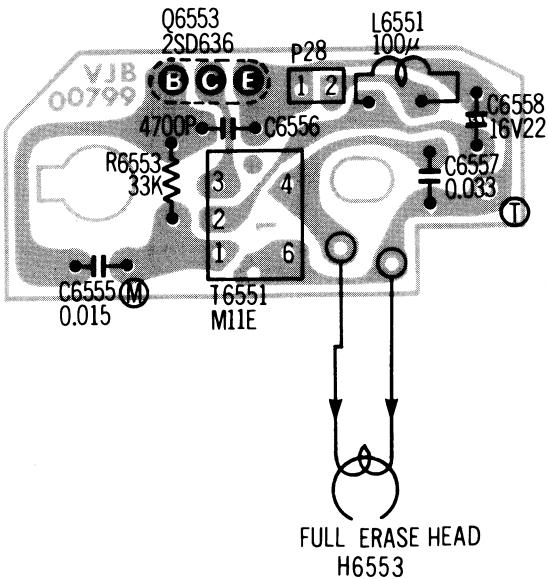


TAKEUP PHOTO TR C.B. (VJB00796)

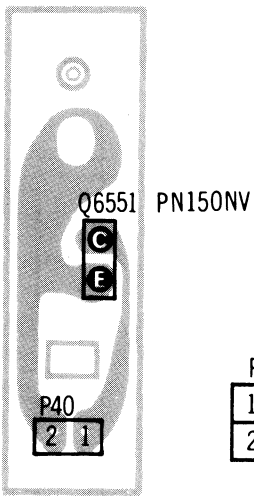

P40 (TO P36)

|   |                  |
|---|------------------|
| 1 | TAKE UP PHOTO TR |
| 2 | GND              |


SENSOR LED C.B. (VJB00800)

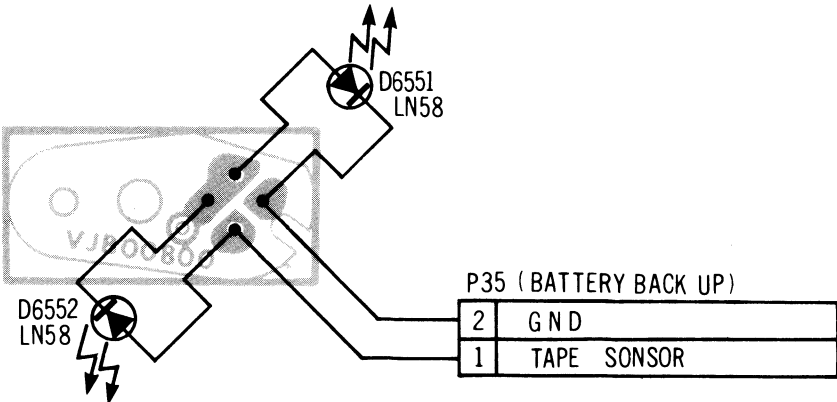

P35 (BATTERY BACK UP)

|   |             |
|---|-------------|
| 2 | GND         |
| 1 | TAPE SENSOR |


A/C, AE HEAD C.B. (VJB00798)

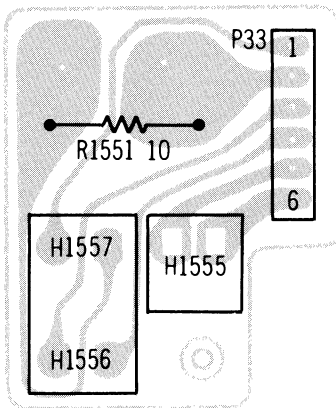

P33 TO P10 SERVO & AUDIO

|   |                |
|---|----------------|
| 1 | AUDIO HEAD (R) |
| 2 | AUDIO HEAD (W) |
| 3 | GND            |
| 4 | CTL HEAD       |
| 5 | GND            |
| 6 | A.E. HEAD      |


FG HEAD C.B. (VJB00803)

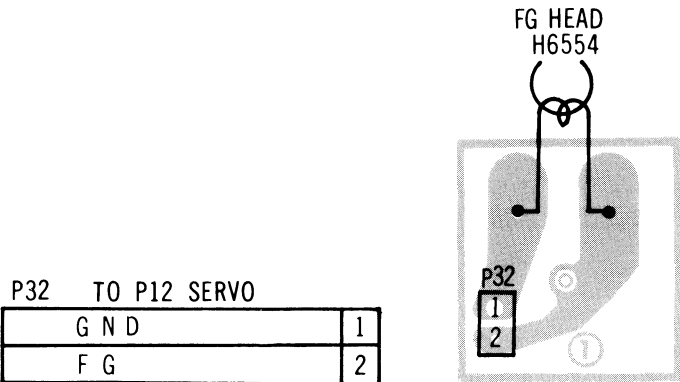


P32 TO P12 SERVO

|     |   |
|-----|---|
| GND | 1 |
| FG  | 2 |

**SUPPLY REEL SENSOR C.B.  
(VJB00802)**

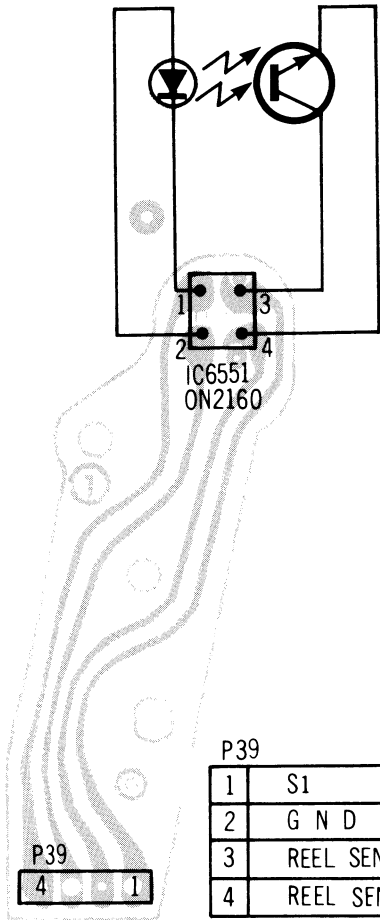

**SAFETY TAB SW C.B. (VJB00896)**

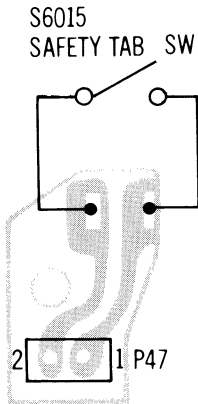


TO SYSTEM CONTROL ←

|     |                   |
|-----|-------------------|
| P47 |                   |
| 1   | SAFETY TAB ON (L) |
| 2   | G N D             |

|     |                 |
|-----|-----------------|
| P39 |                 |
| 1   | S1              |
| 2   | G N D           |
| 3   | REEL SENSOR LED |
| 4   | REEL SENSOR LED |

TO P22  
SYSTEM CONTROL  
TO TAKE UP REEL SENSOR

**SUPPLY PHOTO TR C.B. (VJB00901)**

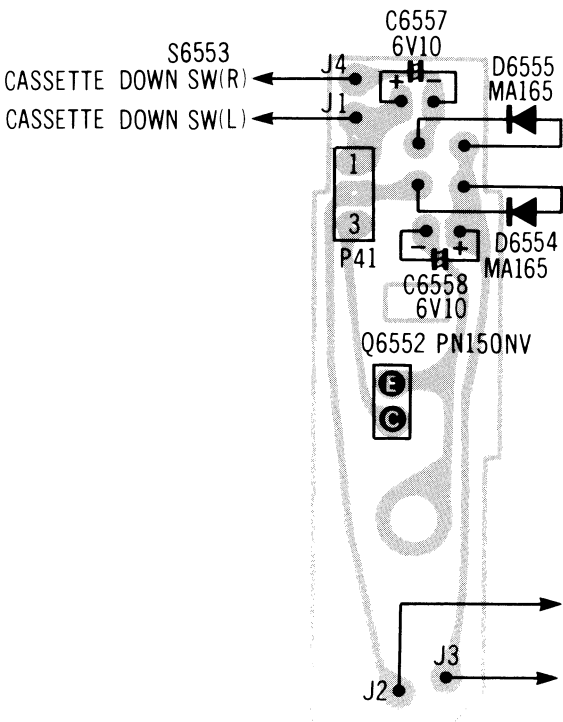


P41 TO P20 SYSTEM CONTROL


|   |                  |
|---|------------------|
| 1 | CASSETTE DOWN SW |
| 2 | CASSETTE UP SW   |
| 3 | SUPPLY PHOTO TR  |

# CIRCUIT BOARD LAYOUT


## TOP VIEW

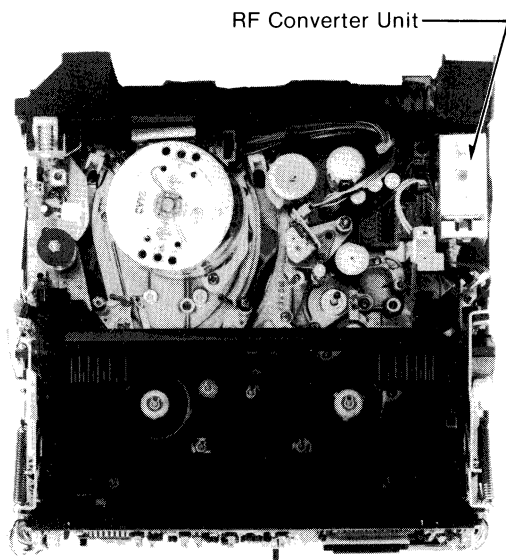


## FRONT VIEW

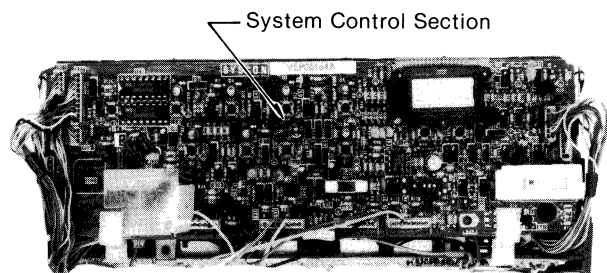


## BOTTOM VIEW I

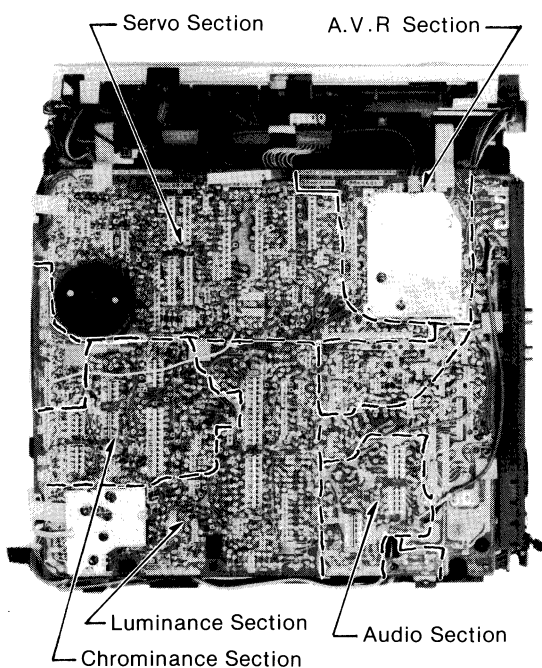


## BOTTOM VIEW II

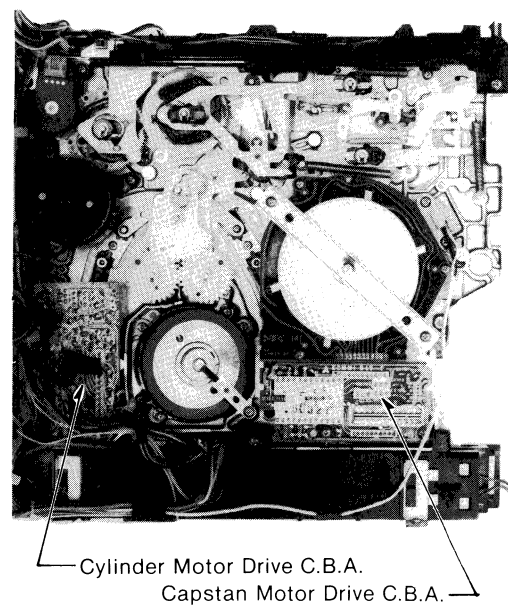

## INTERCONNECTION SCHEMATIC DIAGRAM

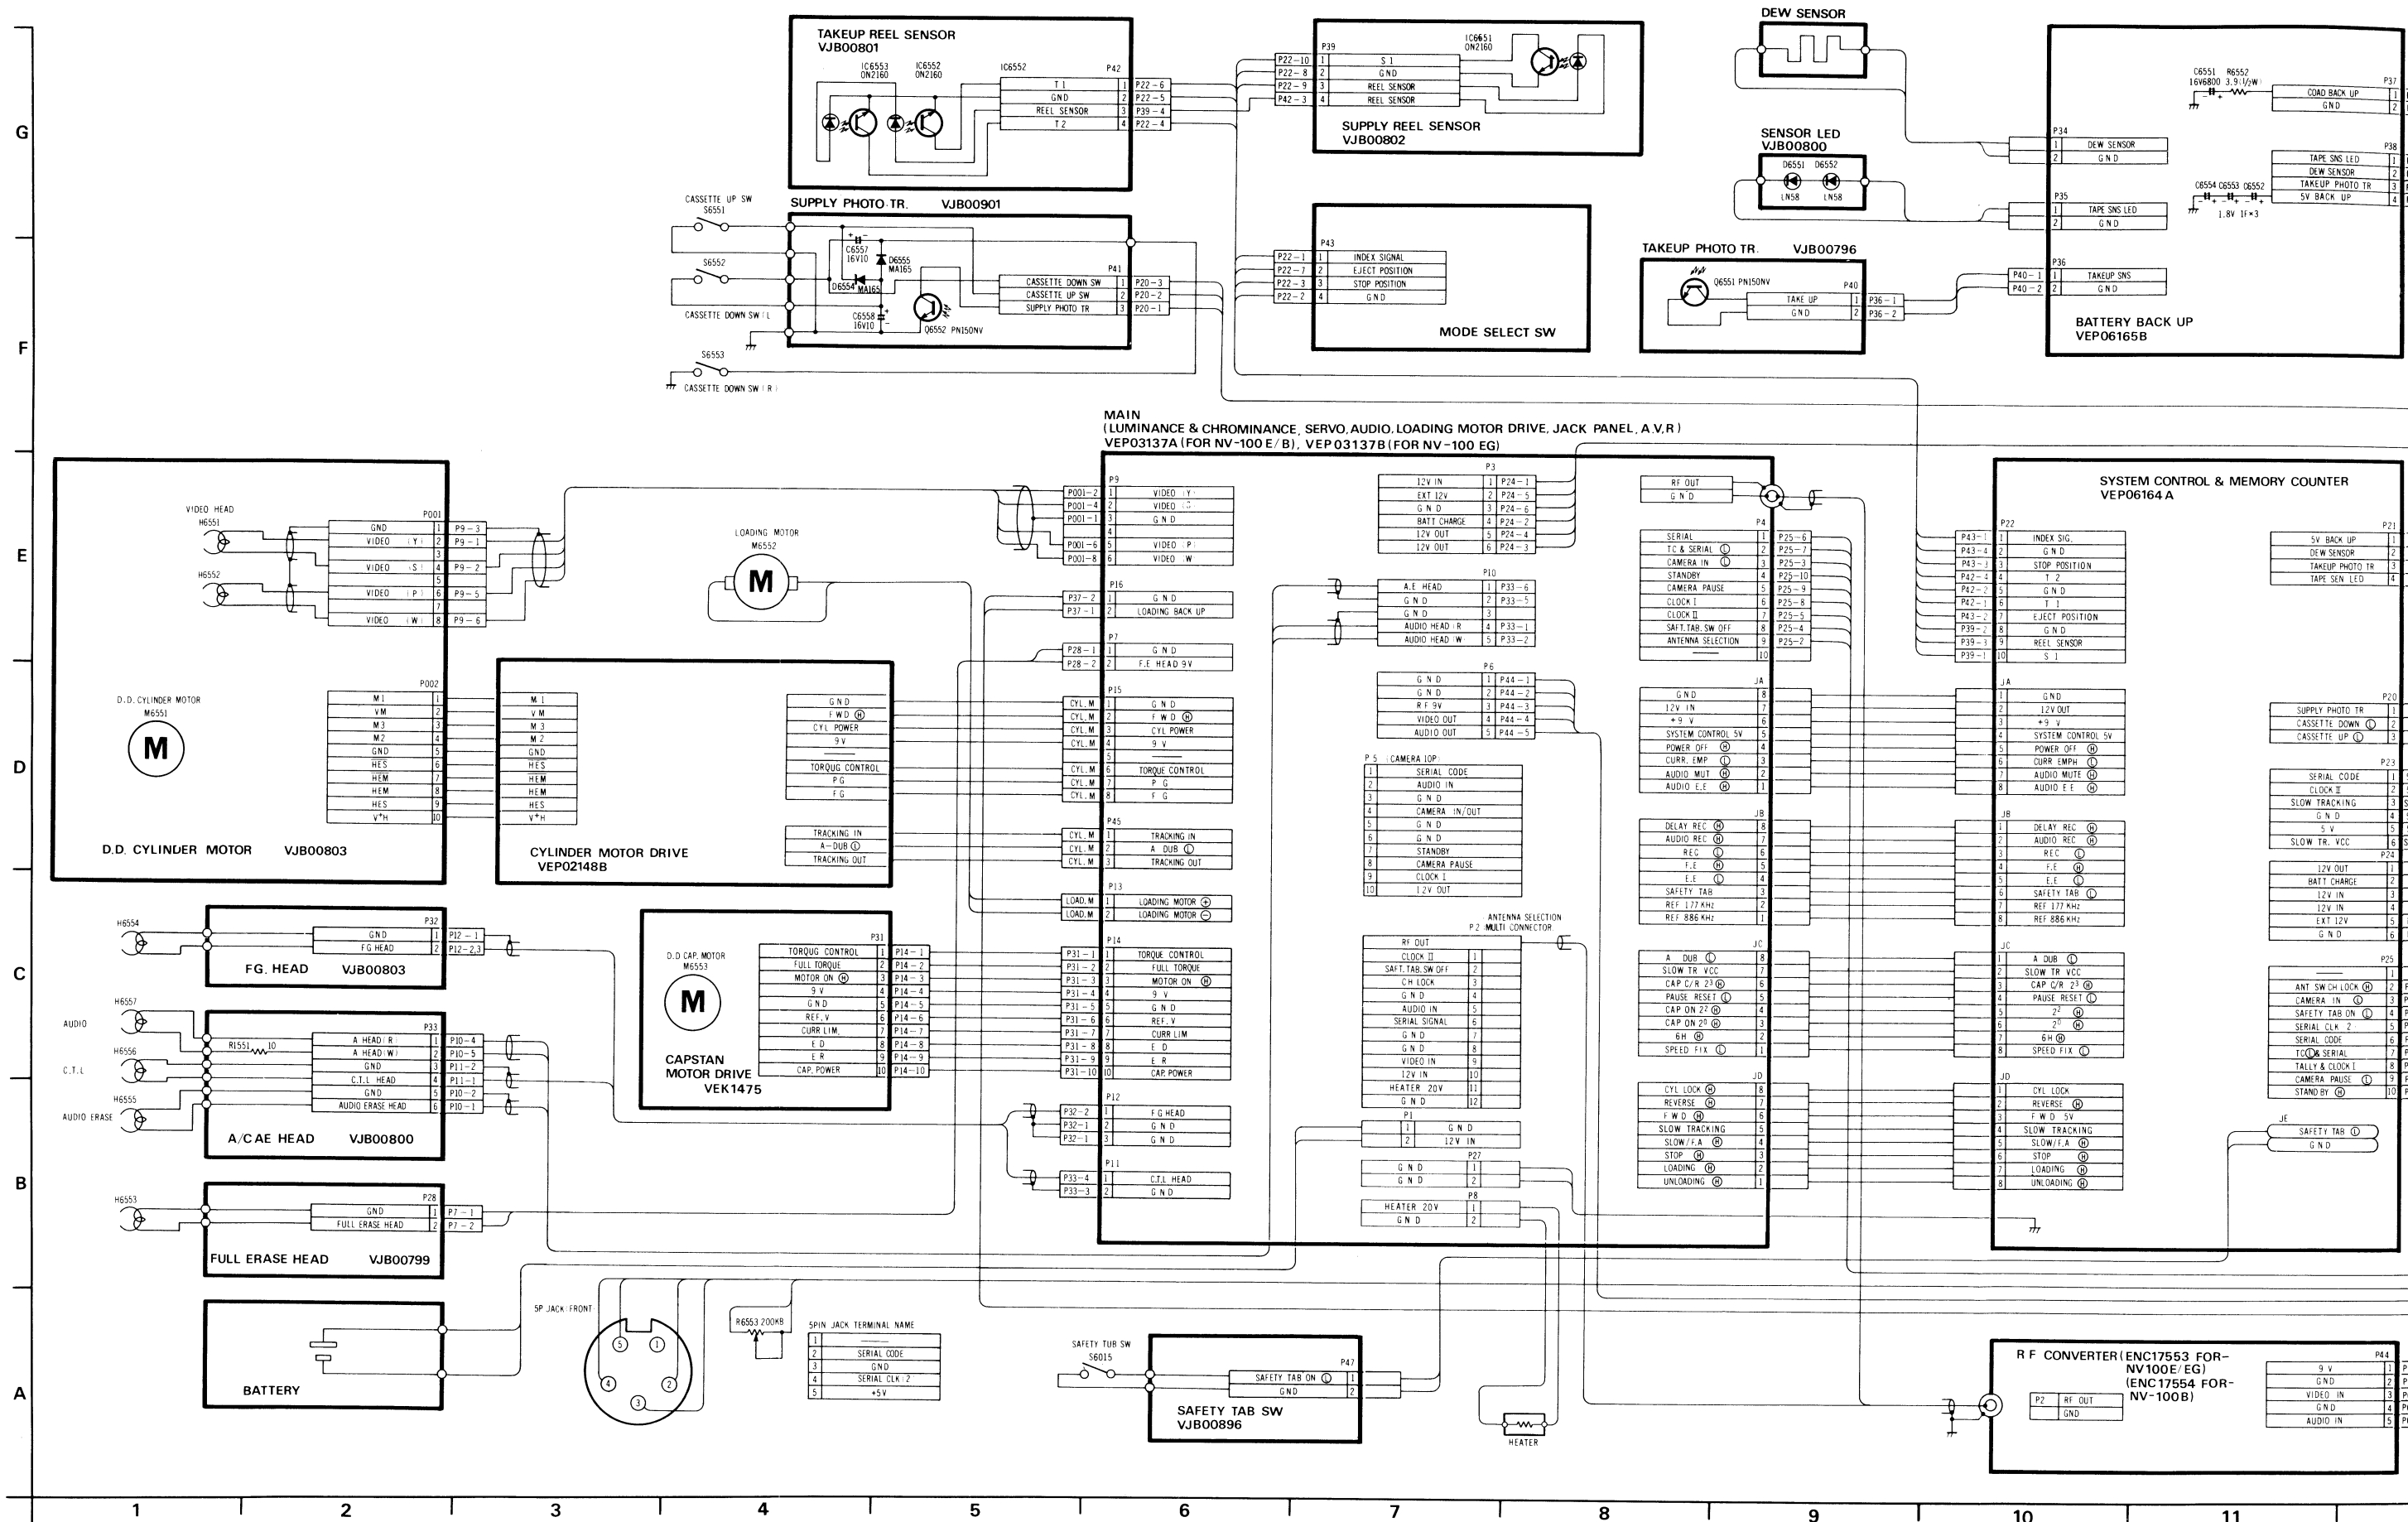

# SCHEMATIC DIAGRAM

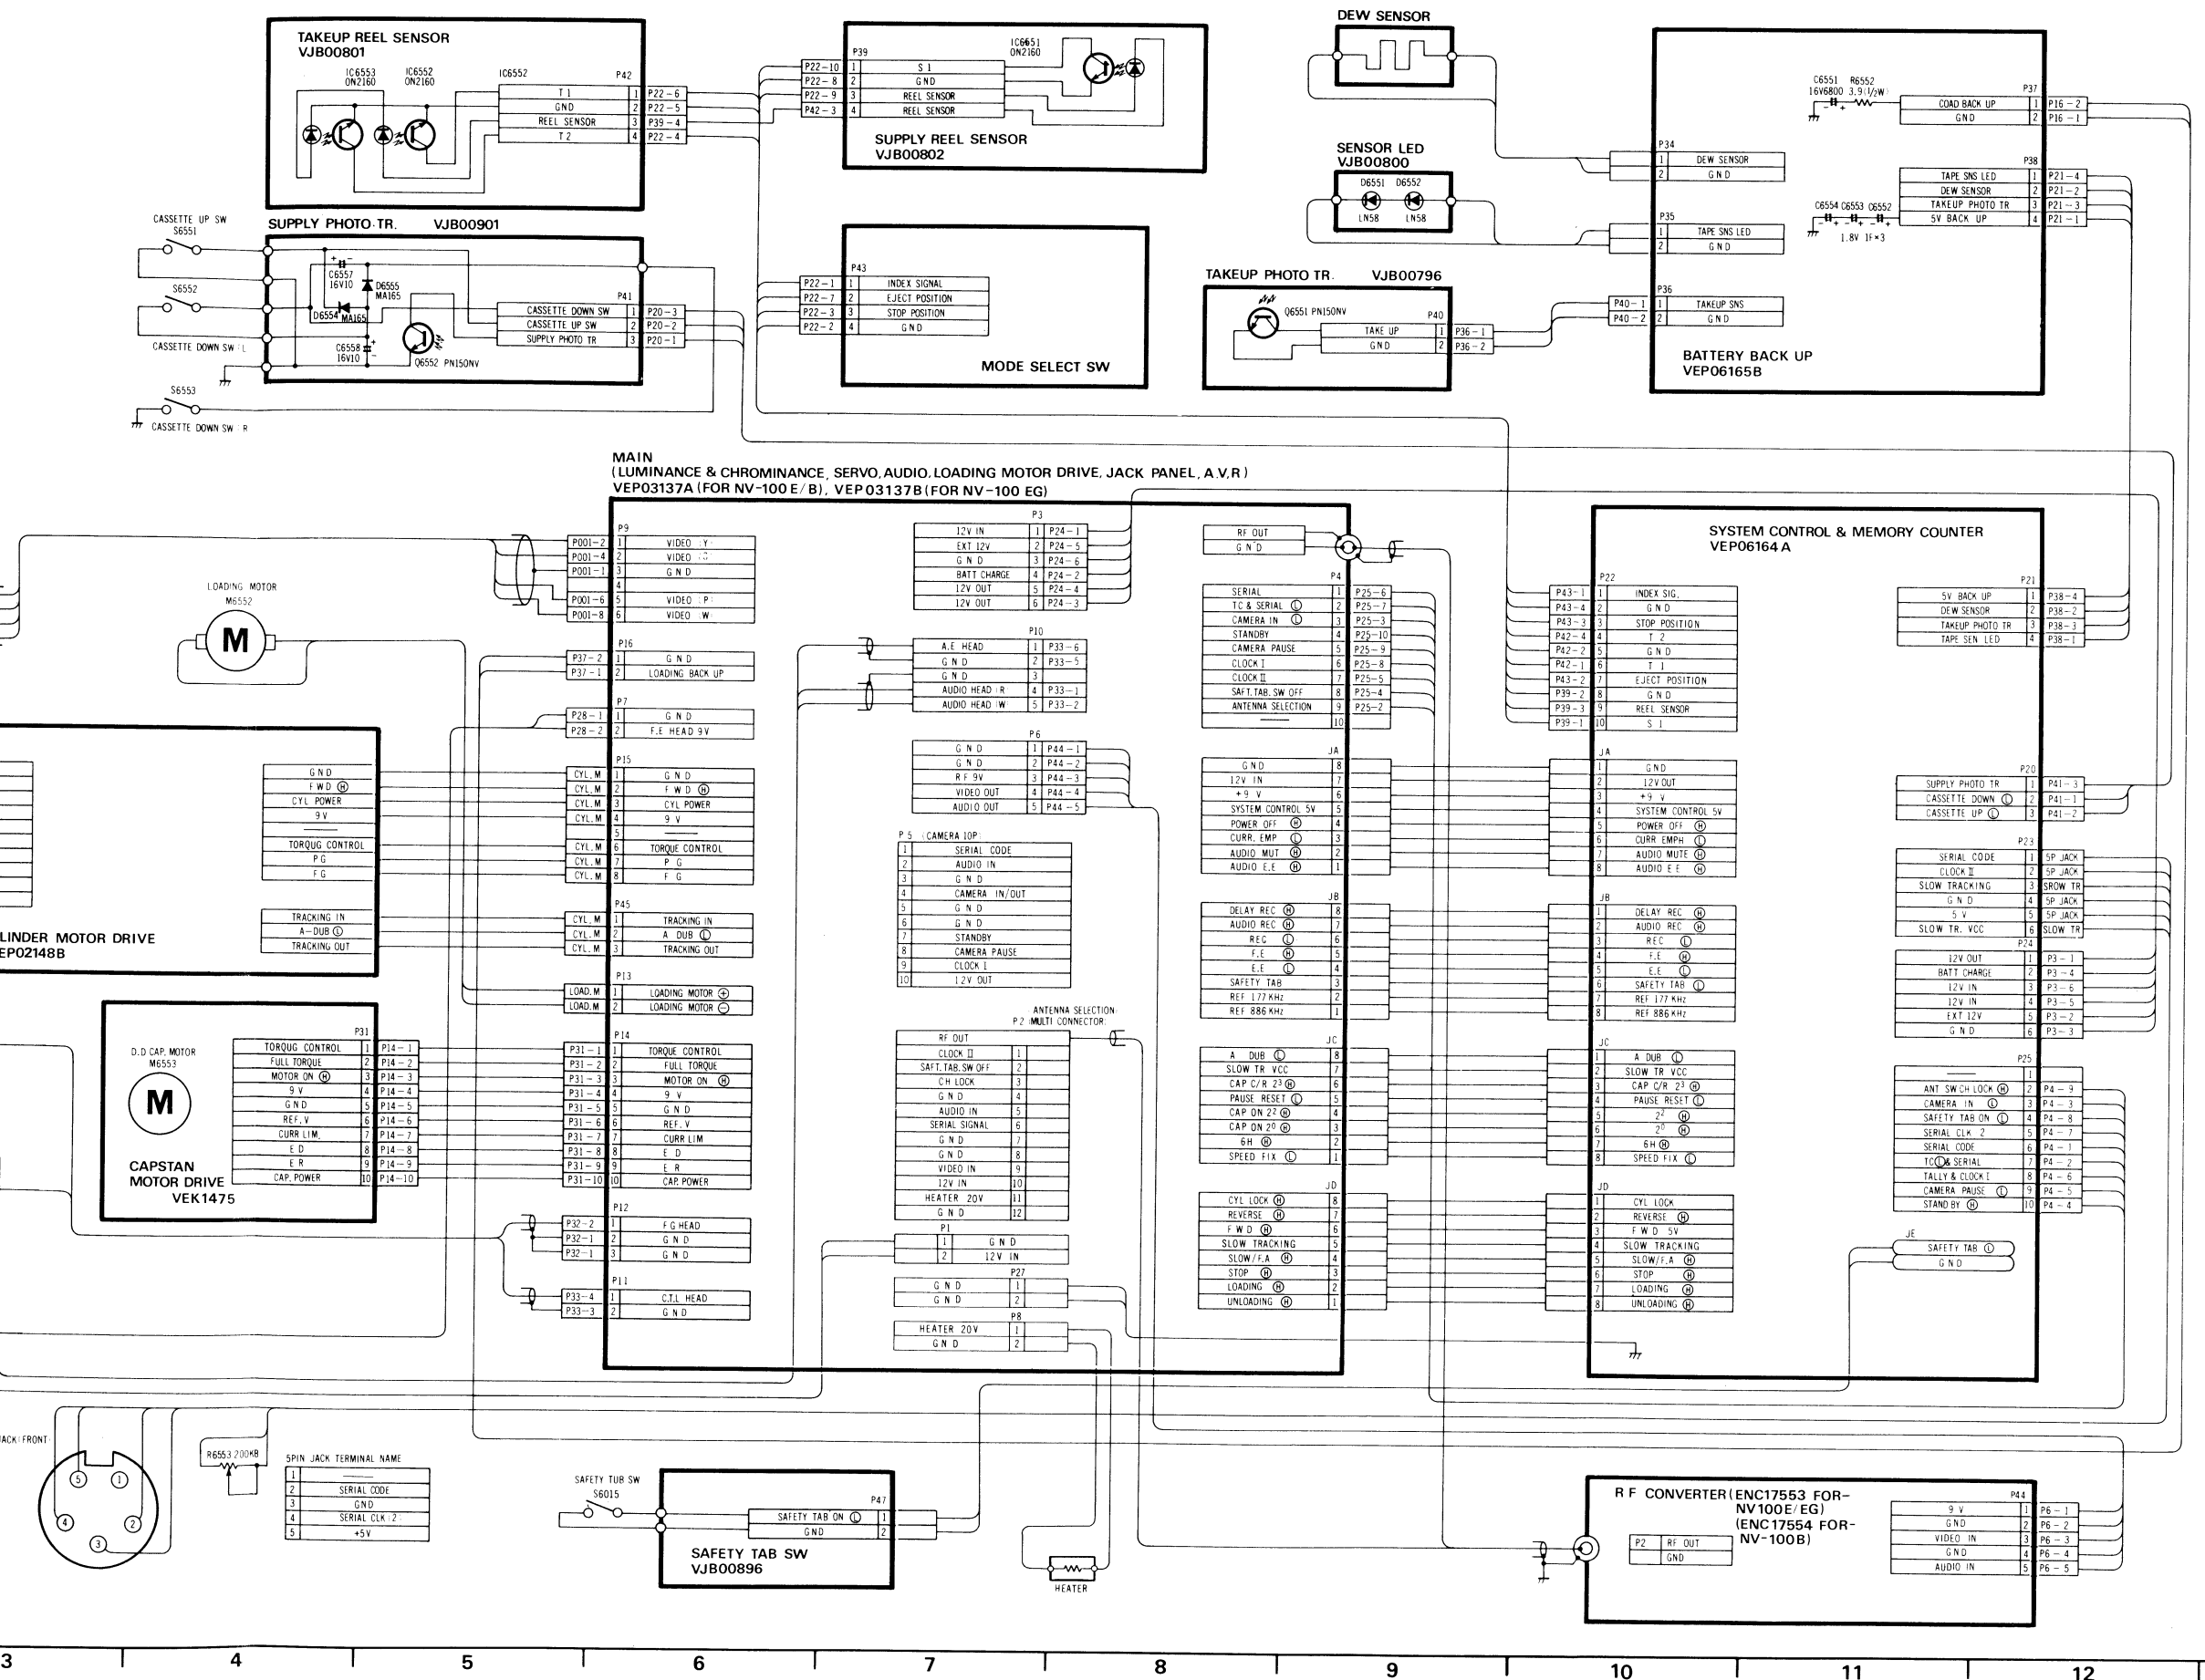



**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

Portable Video Cassette Recorder

**Vol. 4****Panasonic VHS****NV-100**<sup>-E</sup><sub>-B</sub><sup>-EG</sup>

## *Exploded Views Replacement Parts List*



### SPECIFICATIONS

Power Source: DC 12V  
 Power Consumption: Approx. 6.7W at Play mode  
 Video Recording

System: 2 rotary heads, helical scanning system

Tape Speed: 23.39mm/s

Tape Format: Tape width 12.7mm high density tape

Record/Playback Time: 240 min. with NV-E240

FF/REW Time: Less than 6.5 min. with NV-E180

#### VIDEO

Television System: CCIR: 625 lines, 50 fields PAL colour signal  
 (PAL/D.D.R SECAM colour signal:  
 NV-100EG only)

Modulation System: Luminance: FM azimuth recording  
 Colour signal: converted subcarrier phase  
 shift recording

Input Level: VIDEO IN (BNC): 1.0Vp-p,  
 75Ω unbalanced

Output Level: VIDEO OUT (BNC): 1.0Vp-p,  
 75Ω unbalanced  
 RF Modulated: UHF channel 36 (±4),  
 75Ω unbalanced

#### AUDIO

Input Level: MIC IN (M3): -70dB, more than 600Ω  
 unbalanced  
 10 pin input, Multi input: -20dB,  
 2.2kΩ unbalanced

Output Level: LINE OUT (RCA): -6dB,  
 600Ω unbalanced

Earphone: -10dB, 200Ω unbalanced  
 Audio Track: 1 track

#### Video Horizontal

Resolution: Colour: more than 240 lines

Signal-to-Noise Ratio: Video: more than 40dB

Audio: more than 43dB

#### Audio Frequency

Response: 80Hz-10kHz

#### Operating Room

Temperature: 0°C-40°C

Operating Humidity: 35%-80%

Weight: 3.8kg (with internal battery pack)

Dimensions: 236(W) × 92(H) × 242(D)mm

Standard Accessories: 1 pc. Video Cassette Tape  
 2 pcs. DIN-RF coaxial cable  
 1 pc. Audio Input Attenuator  
 1 pc. Earphone  
 1 pc. Carrying Case

#### Optional Accessories: Video cassette tape:

NV-E240 Approx. 344m, 240 min.

NV-E180 Approx. 258m, 180 min.

NV-E120 Approx. 174m, 120 min.

NV-E90 Approx. 130m, 90 min.

NV-E60 Approx. 88m, 60 min.

NV-E30 Approx. 45m, 30 min.

Battery Pack, LCS2012E

Video Tuner/Timer Adaptor, NV-V10

AC Adaptor, NV-B11

Wireless Remote Controller, NV-A17

Wired Remote Controller, NV-A13

Car Battery Cord, NV-C12

Video Camera

Microphone

Weight and dimensions shown are approximate.  
 Specifications are subject to change without notice.

# Panasonic

**Matsushita Electric Trading Co., Ltd.**

P.O. Box 288, Central Osaka Japan

# CONTENTS

|                                         |       |
|-----------------------------------------|-------|
| SPECIFICATIONS .....                    | Cover |
| INNER PARTS LOCATION .....              | 4- 1  |
| TOP VIEW .....                          | 4- 1  |
| BOTTOM VIEW .....                       | 4- 2  |
| EXPLODED VIEWS .....                    | 4- 3  |
| 1. Transport Section -(1) .....         | 4- 3  |
| 2. Moving Mechanism Section -(1) .....  | 4- 4  |
| 3. Moving Mechanism Section -(2) .....  | 4- 5  |
| 4. Chassis Frame Section -(1) .....     | 4- 6  |
| 5. Chassis Frame Section -(2) .....     | 4- 7  |
| 6. Casing Parts Section .....           | 4- 8  |
| 7. Packing Parts Section .....          | 4- 9  |
| MECHANICAL REPLACEMENT PARTS LIST ..... | 4-10  |
| ELECTRICAL REPLACEMENT PARTS LIST ..... | 4-11  |

# INNER PARTS LOCATION

## TOP VIEW

Transmitting Gear Unit (VXP0413)

Inclind Base [R] Unit (VXA1485)

Upper Cylinder Unit (VEH0171)

Full Erase Head (VBS0021)

Supply Roller [K] (VDP0759)

Tension Arm (VXL0933)

Inclind Base [L] Unit (VXA1482)

Supply Reel Idler Gear Unit (VXP0402)

Supply Reel Table Unit (VXR0095)

Brake Arm [L] Unit (VXZ0122)

Safety Lever (VML1379)

F.F. Idler Bracket [1] Unit (VXA1491)

Sensor LED Unit (VEK1461)

Inatia Roller Unit (VXL0939)

A/C Head Unit (VEH0172)

Rotor Unit (VXP0408)

Pressure Roller Arm [1] Unit (VXL0927)

Main Idler [1] Unit (VXP0405)

P5 Arm Unit (VXP0937)


Takeup Soft Arm Unit (VXZ0119)

Brake Arm [R] Unit (VXZ0124)

Takeup Reel Table Unit (VXR0096)


Takeup Reel Idler Gear Unit (VXP0403)

Timing Belt (VDV0141)

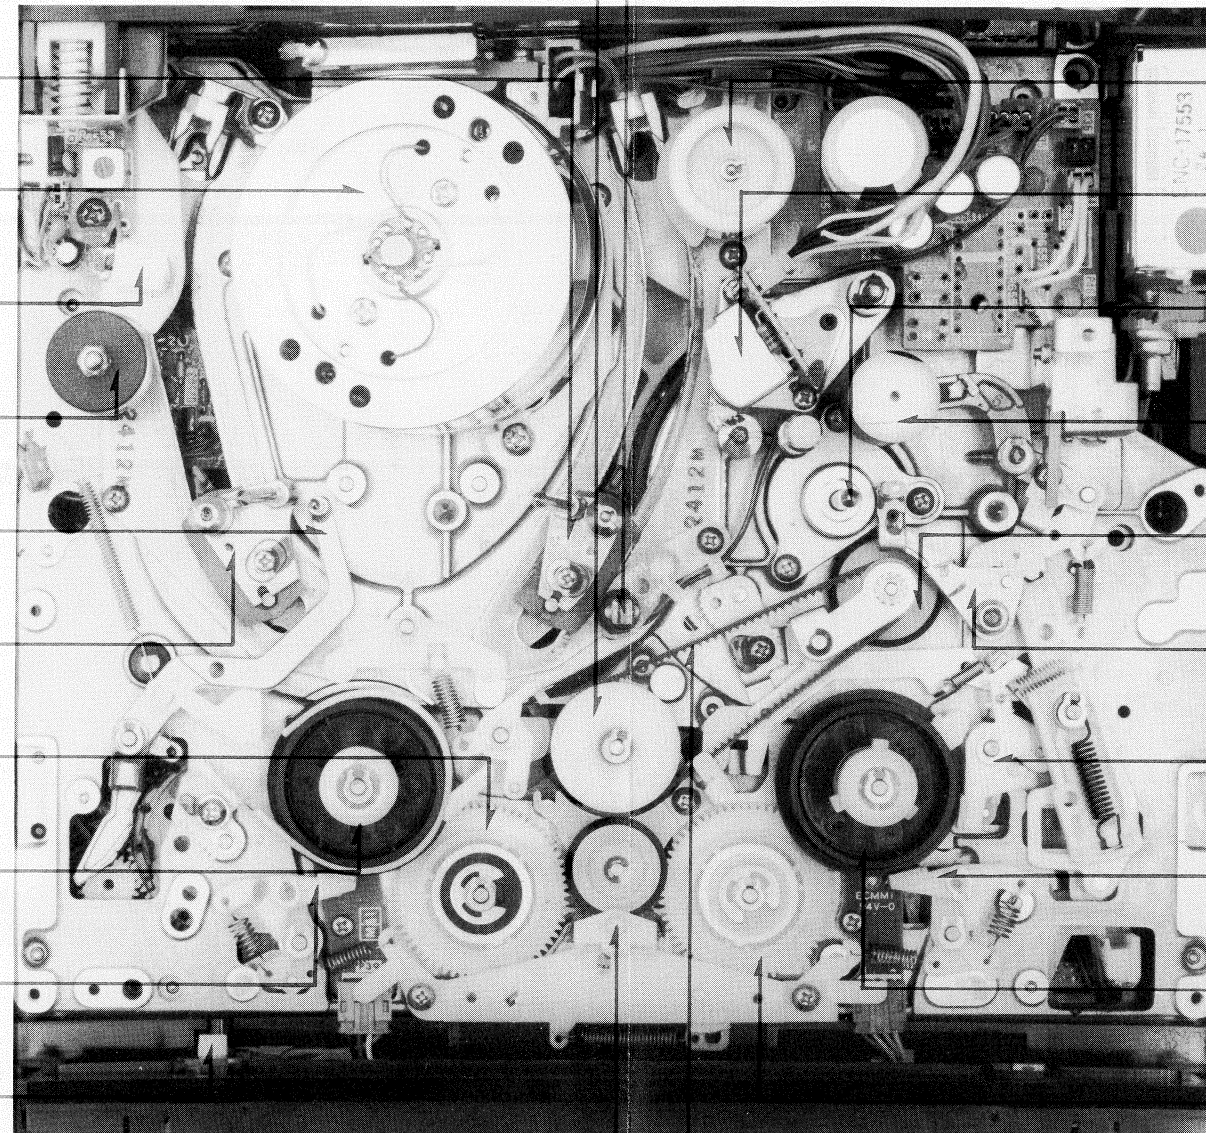



BOTTOM VIEW

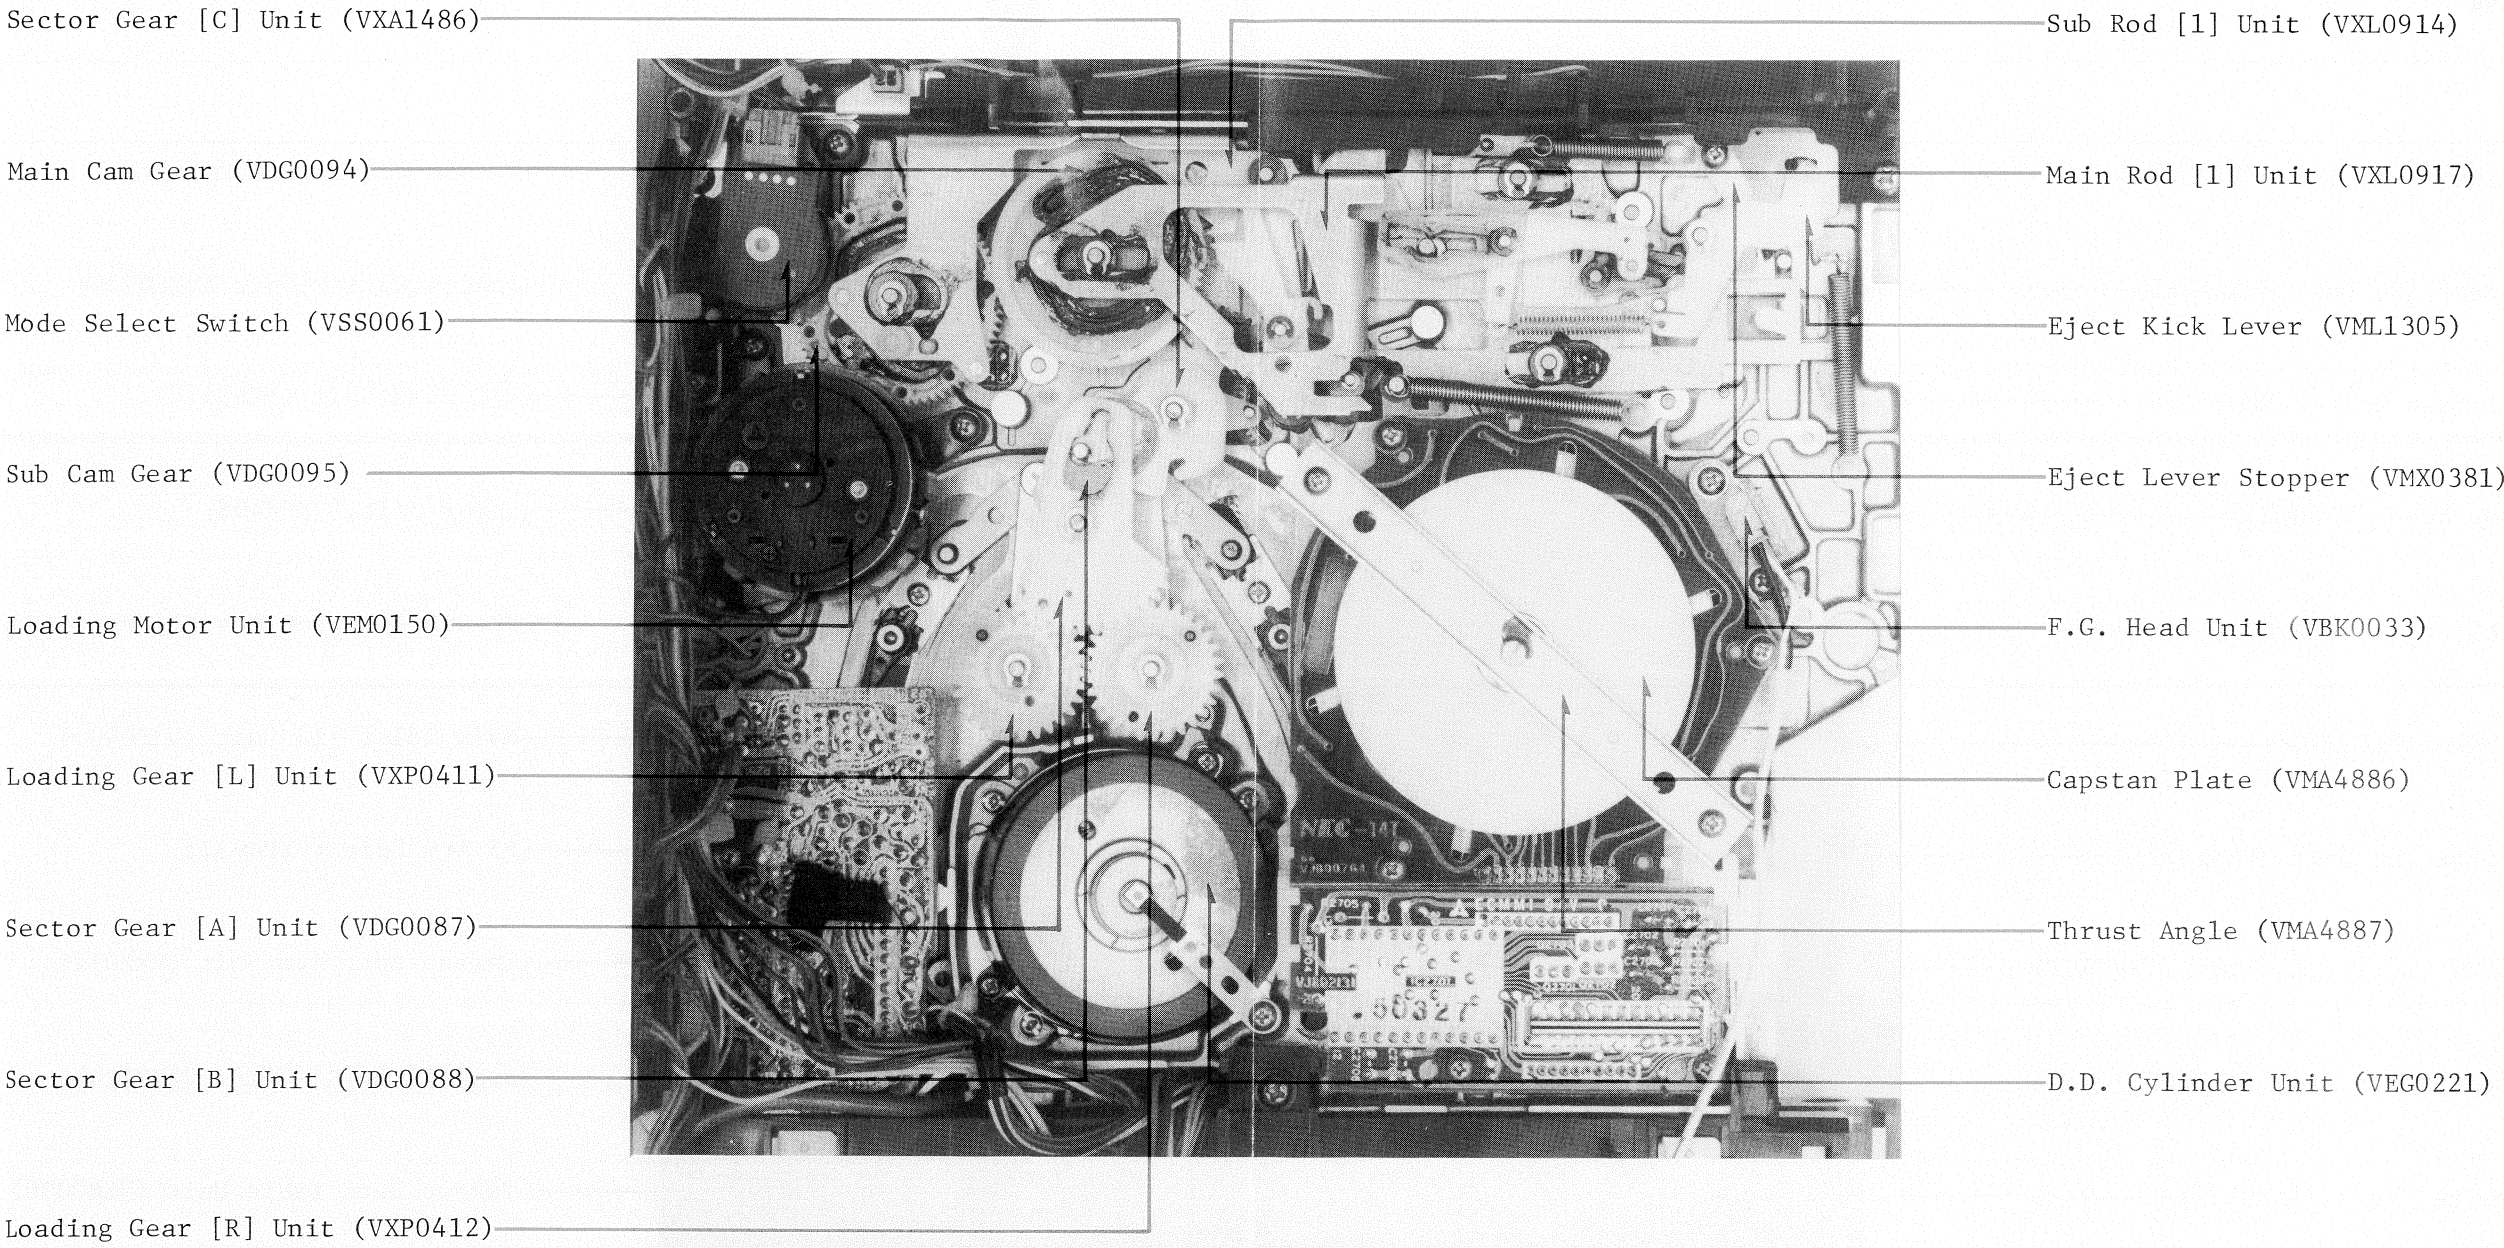


LUBRICATION POINTS

When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.


| Marks | Kind of Lubricant | Availability                 | Part Number |
|-------|-------------------|------------------------------|-------------|
| ×××   | Morlytone Grease  | Available From Factory       | MOR265      |
| ○○○   | Spindle Oil       | Purchase From Local Supplier | .....       |
| △△△   | Gummed Adhesive   | Purchase From Local Supplier | .....       |

# EXPLODED VIEWS **1** *Transport Section*

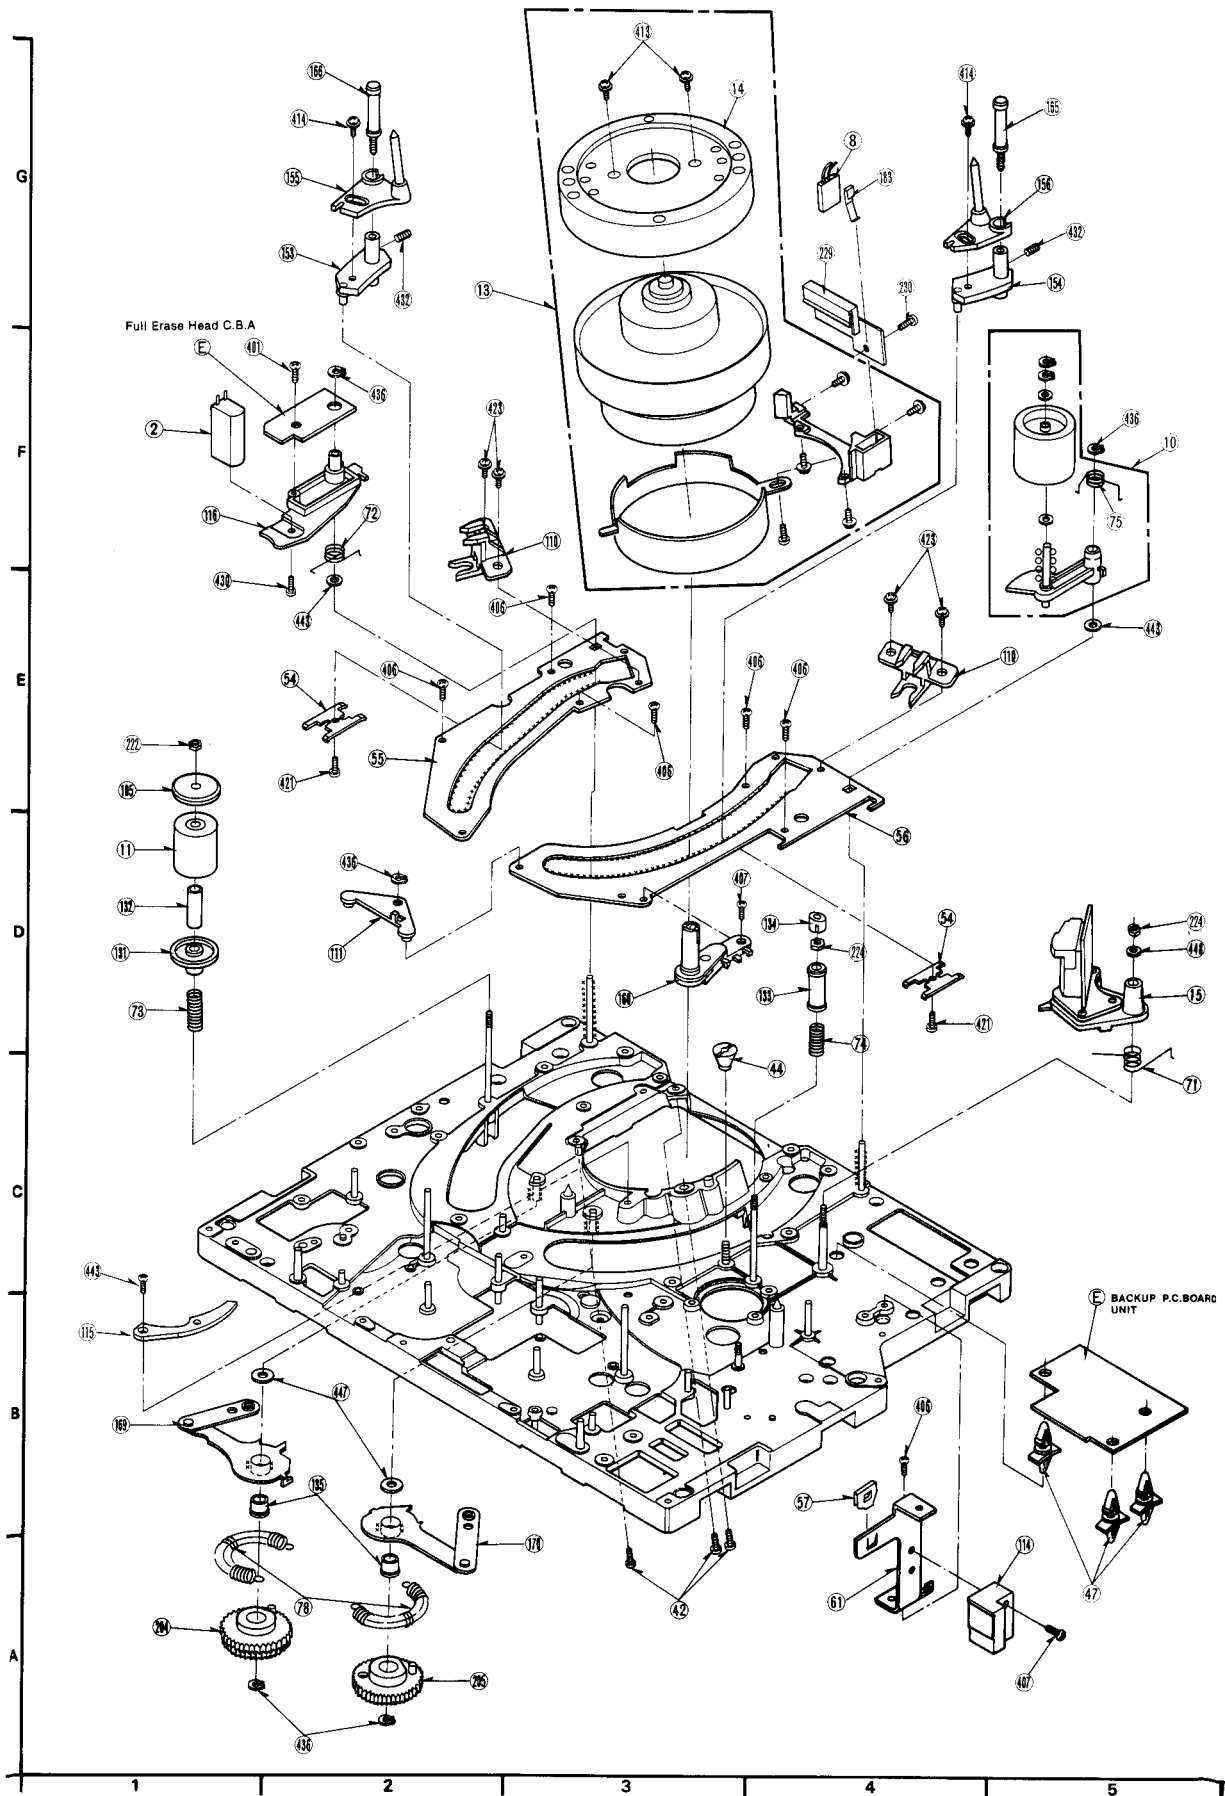





## 2 Moving Mechanism Section-(1)

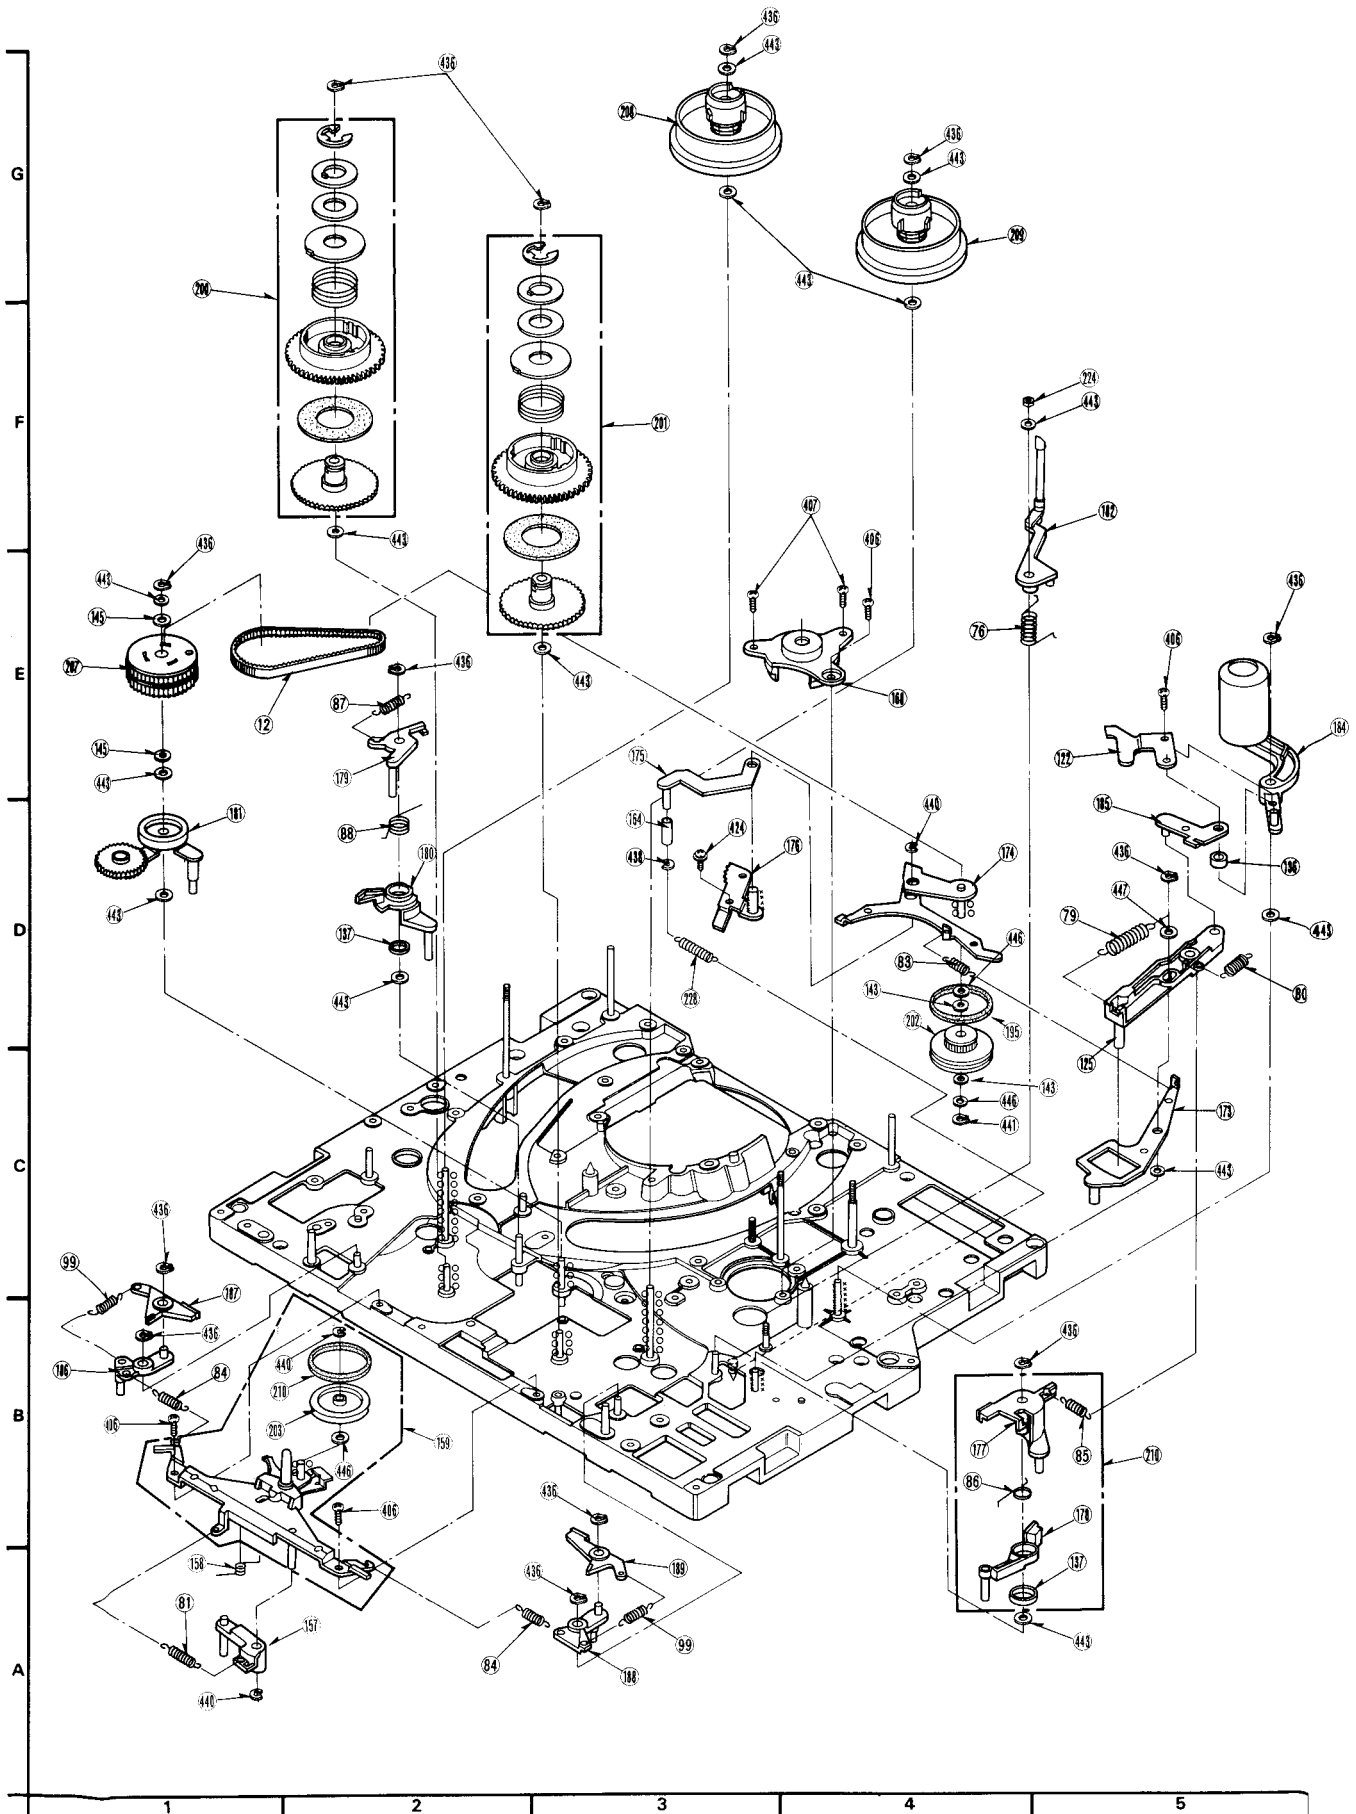


### 3 Moving Mechanism Section-(2)

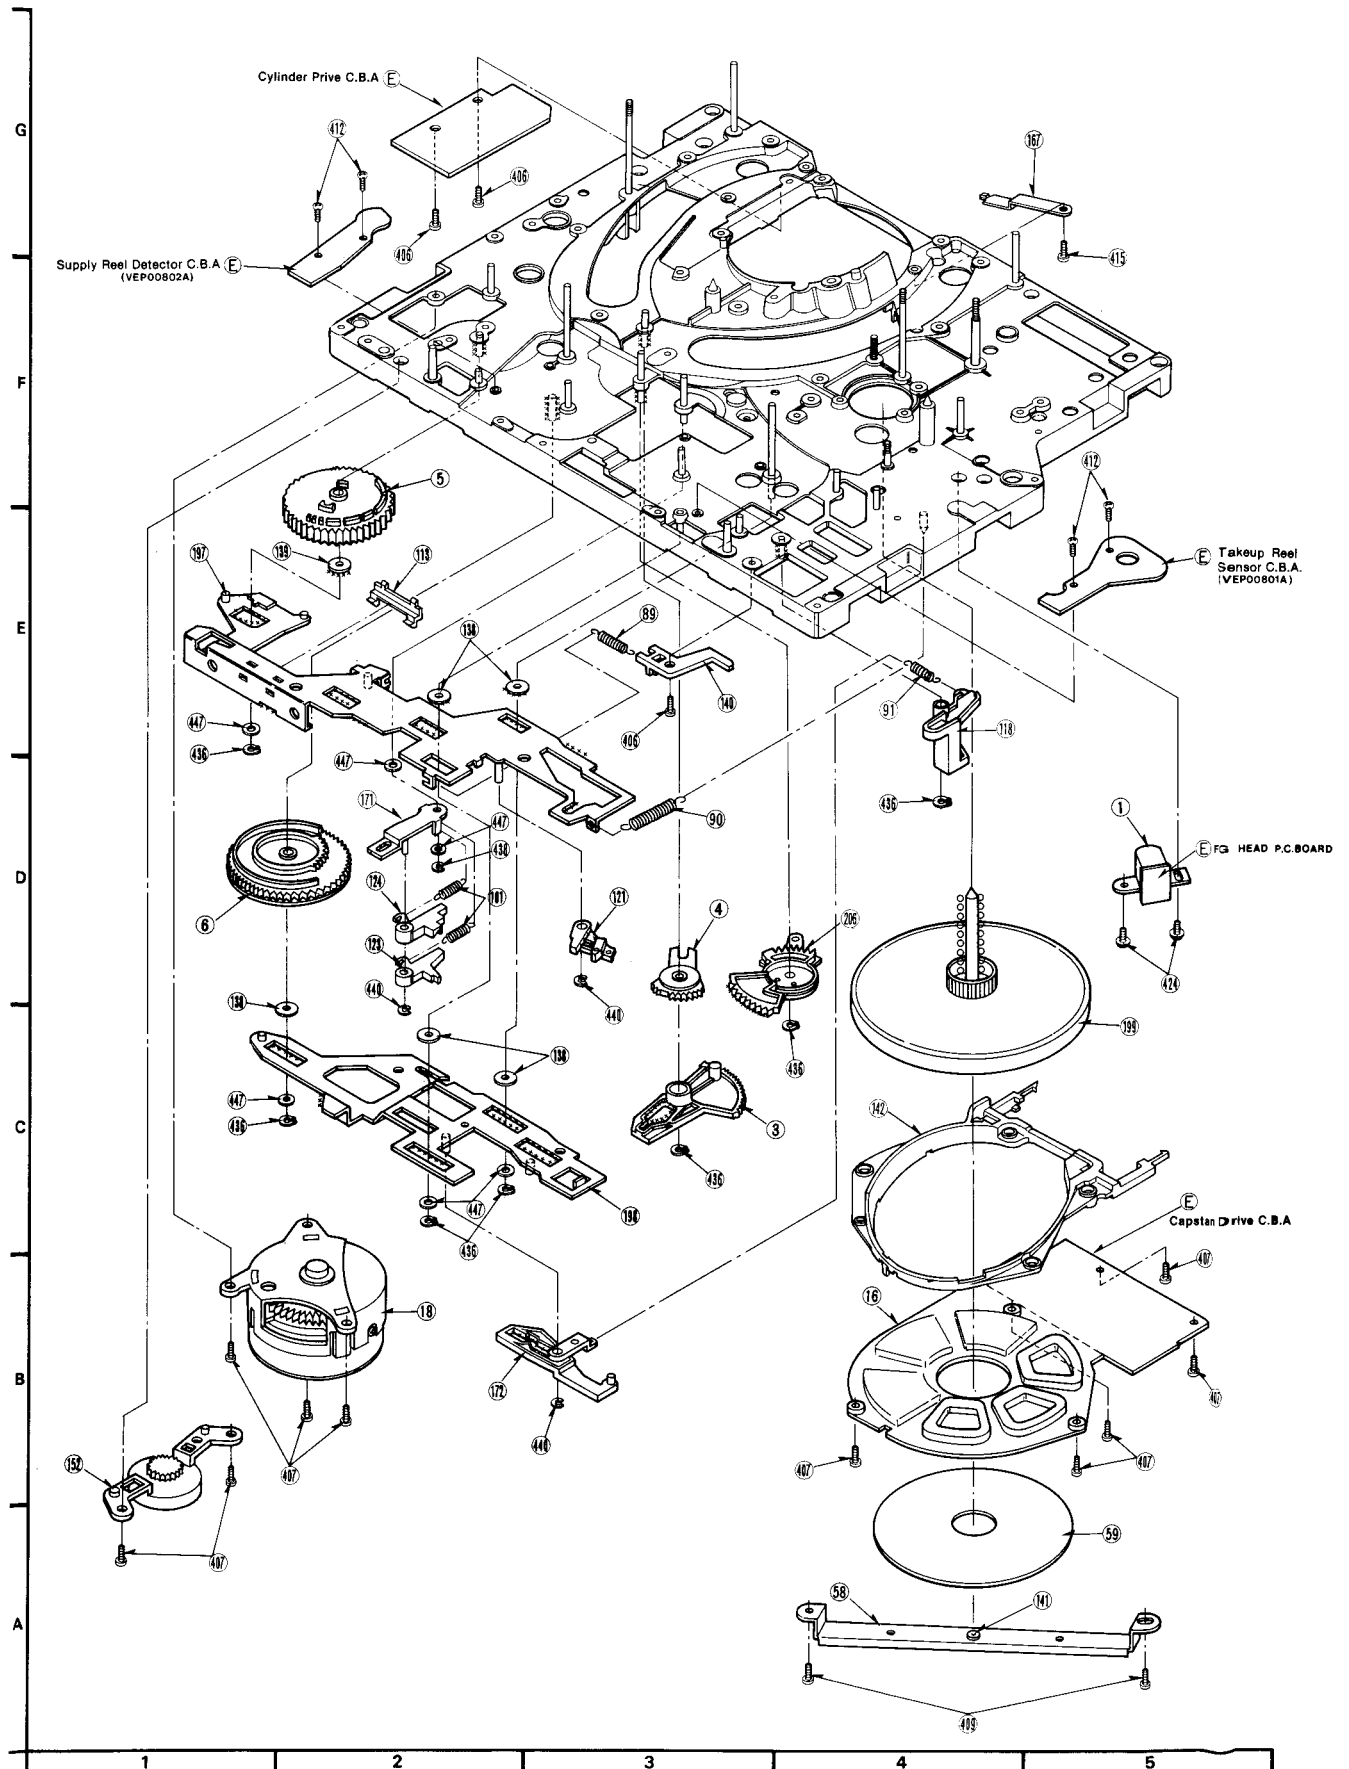


## 4 Chassis Frame Section-(1)

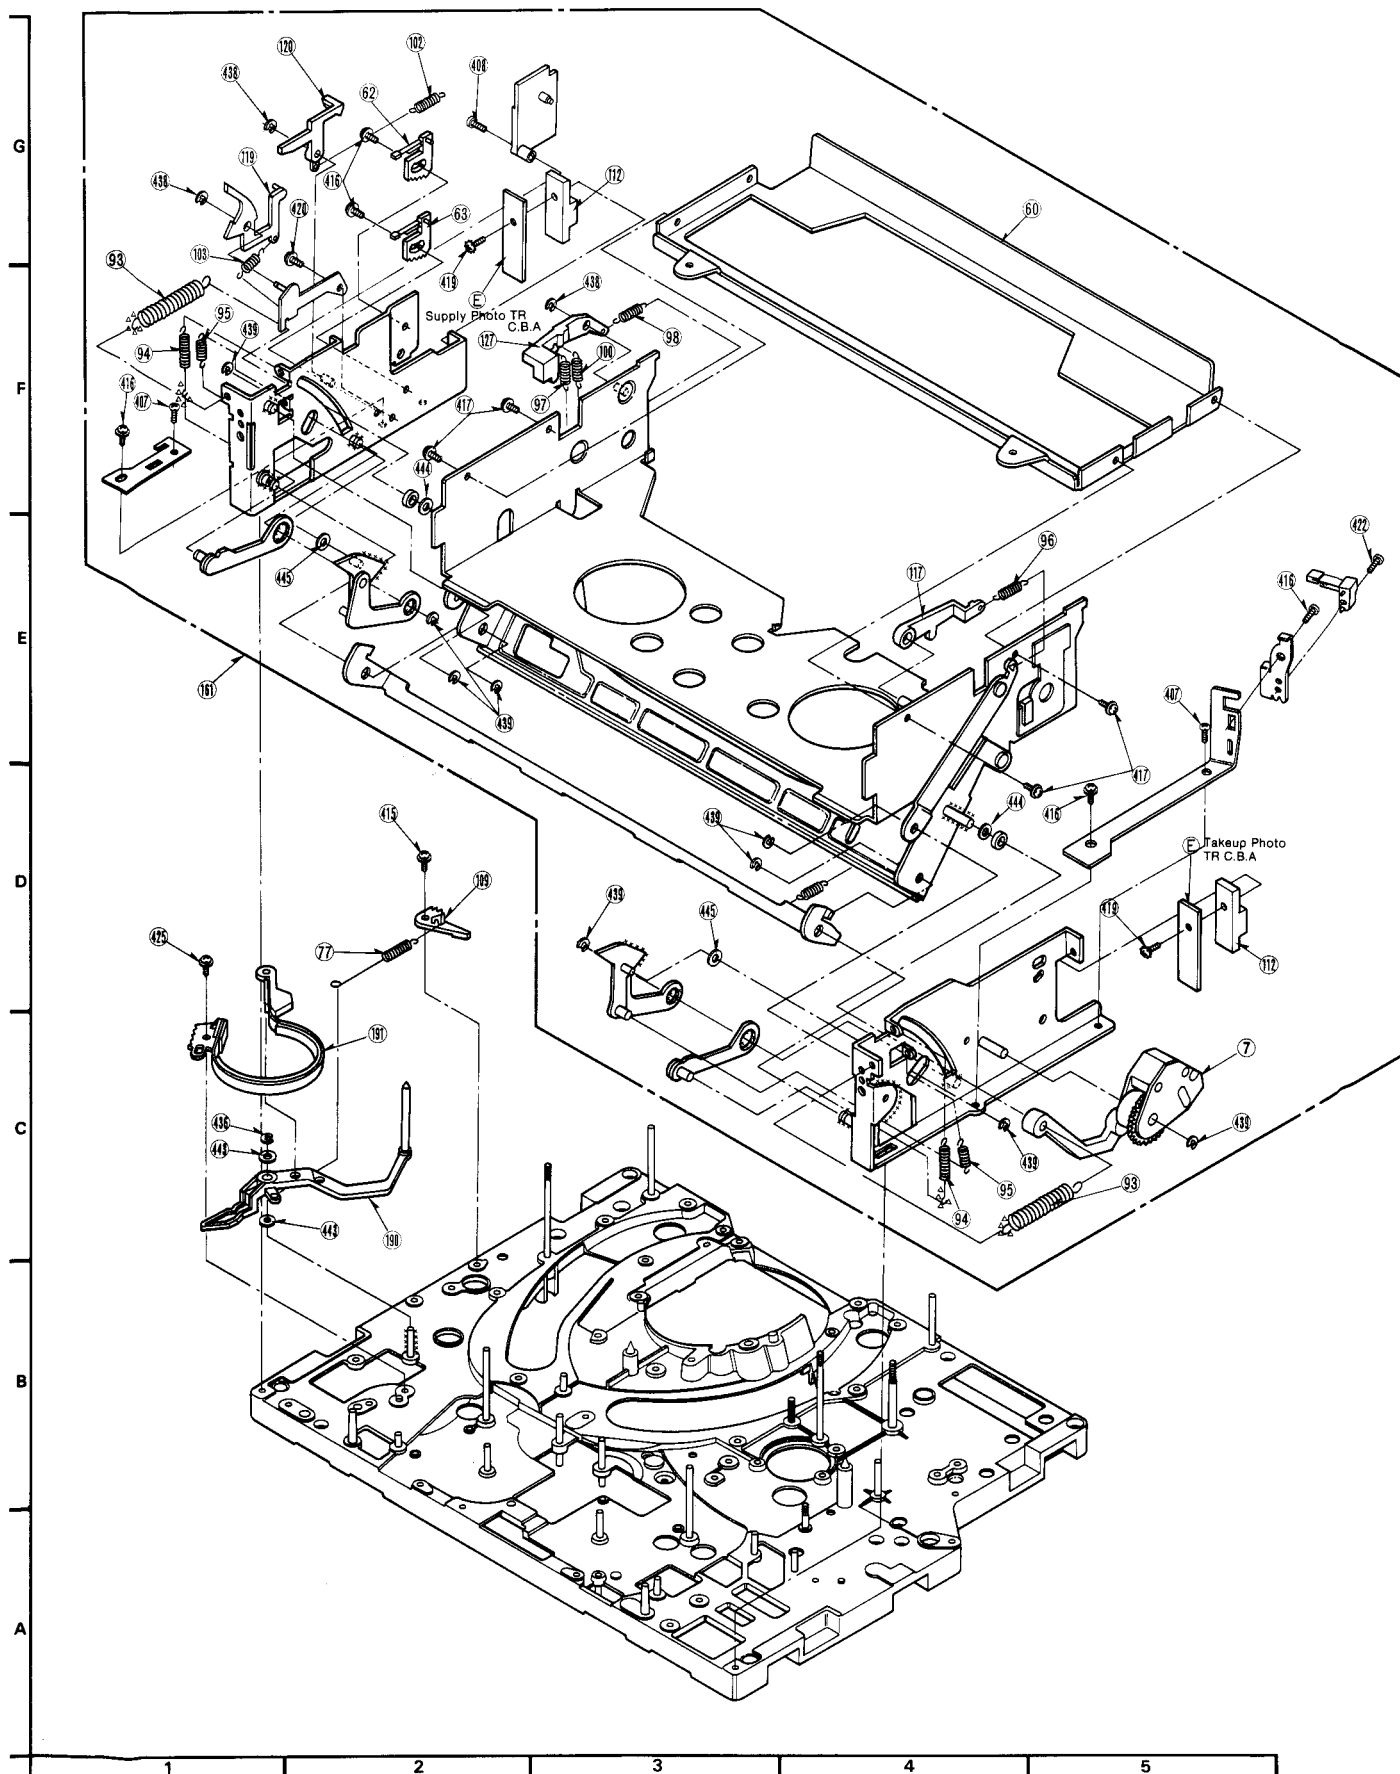


### 5 Chassis Frame Section-(2)

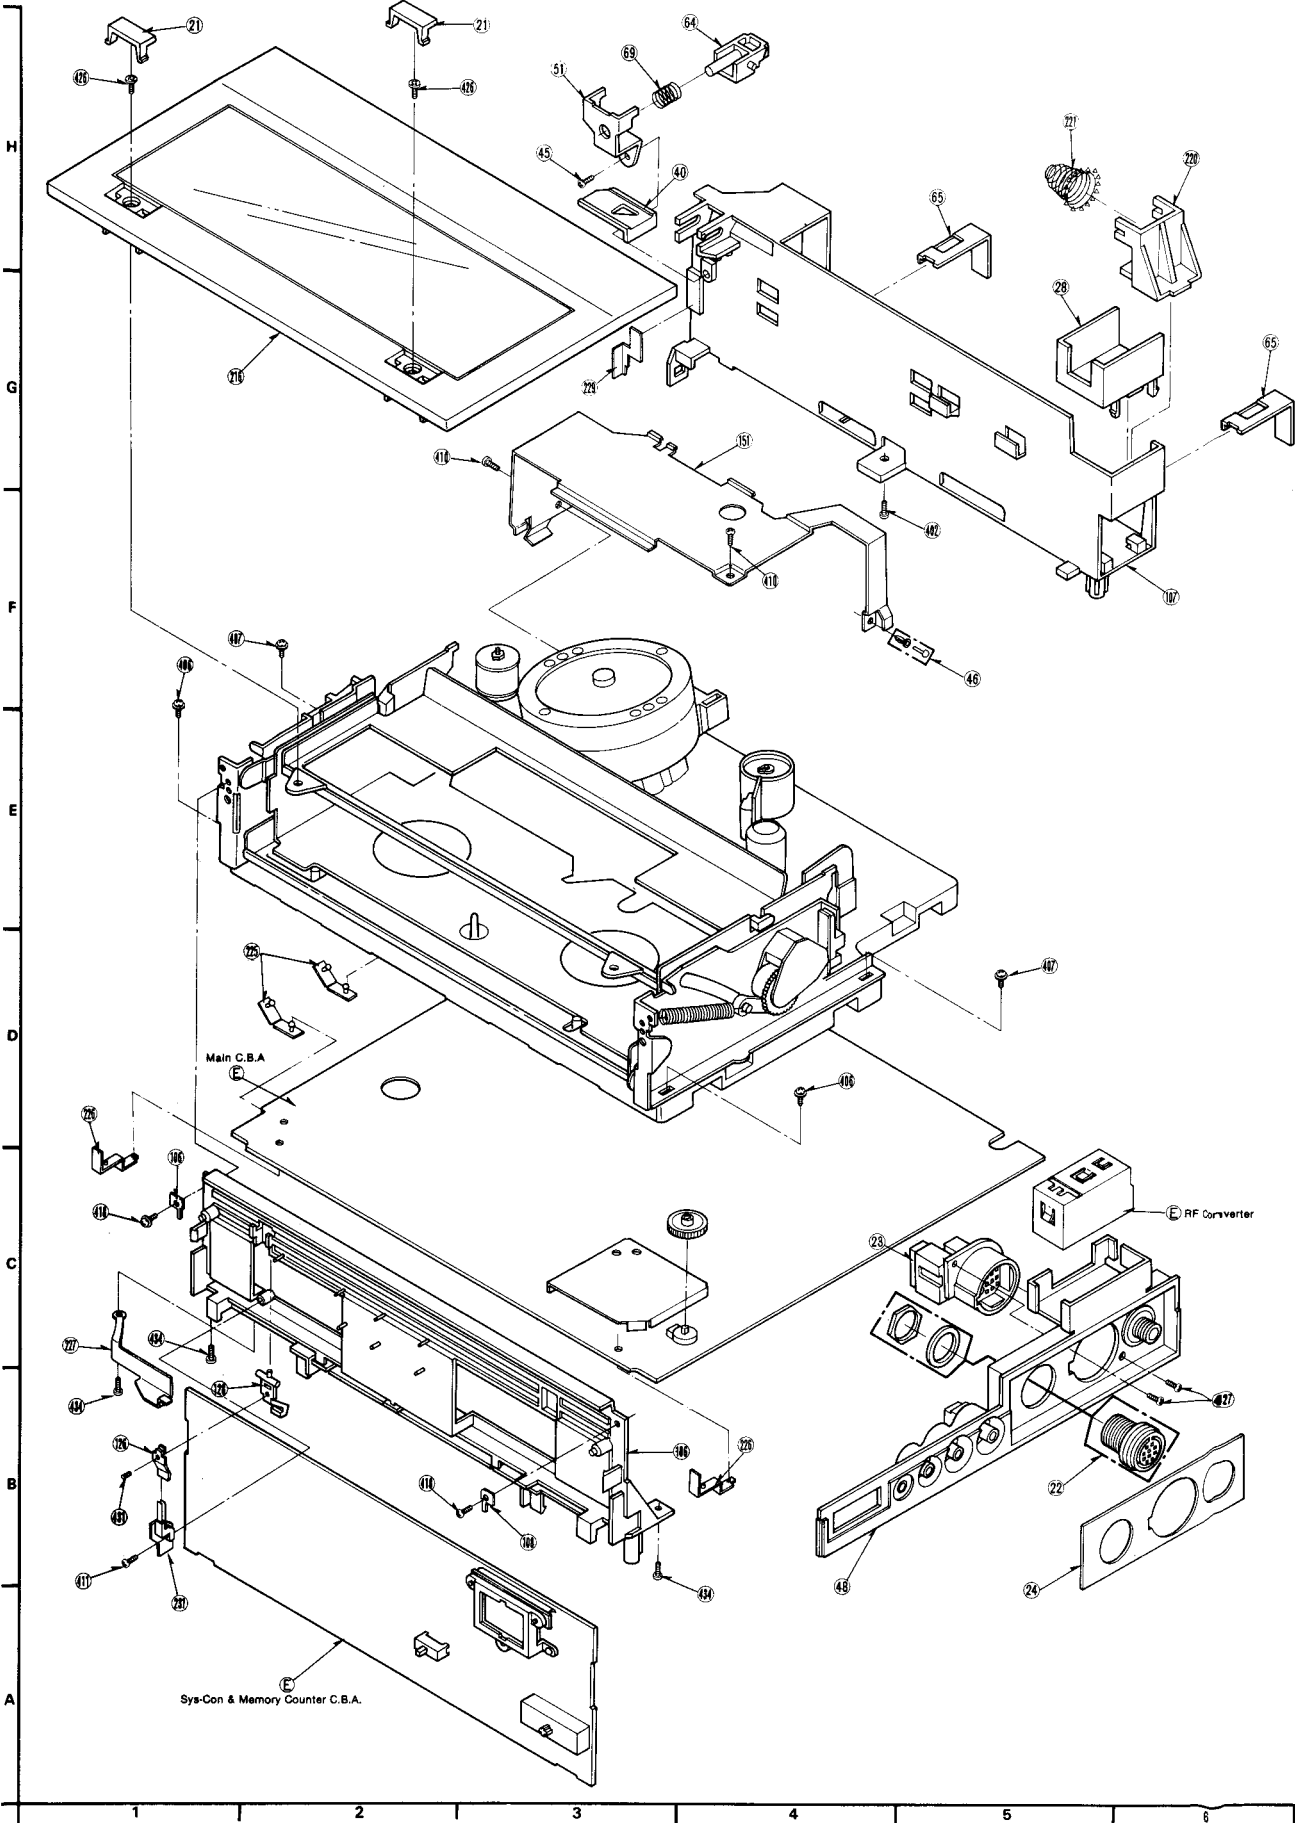

## 6 Casing Parts Section

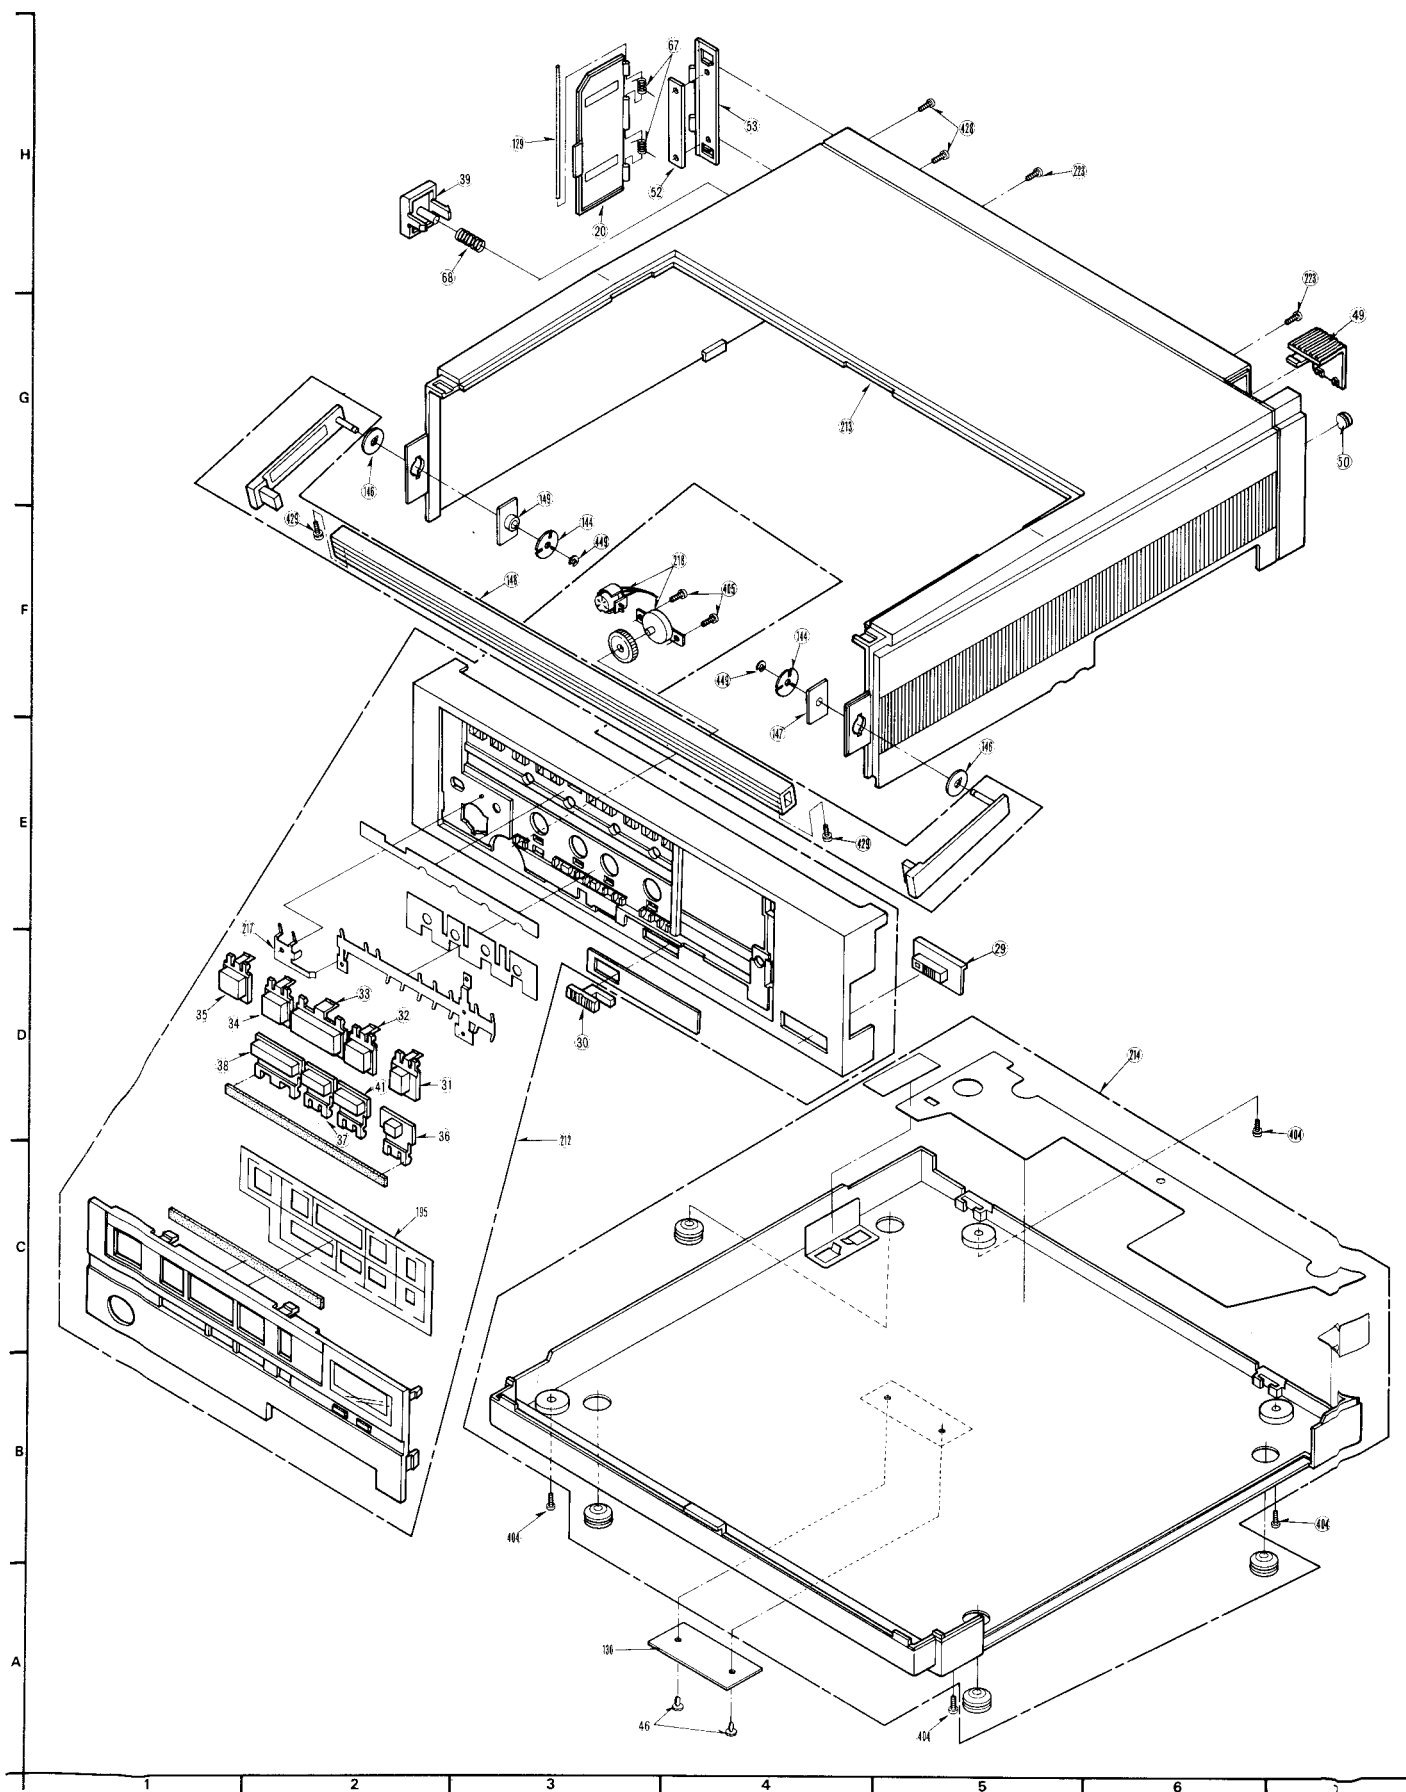

## 7 *Packing Parts & Accessories Section*

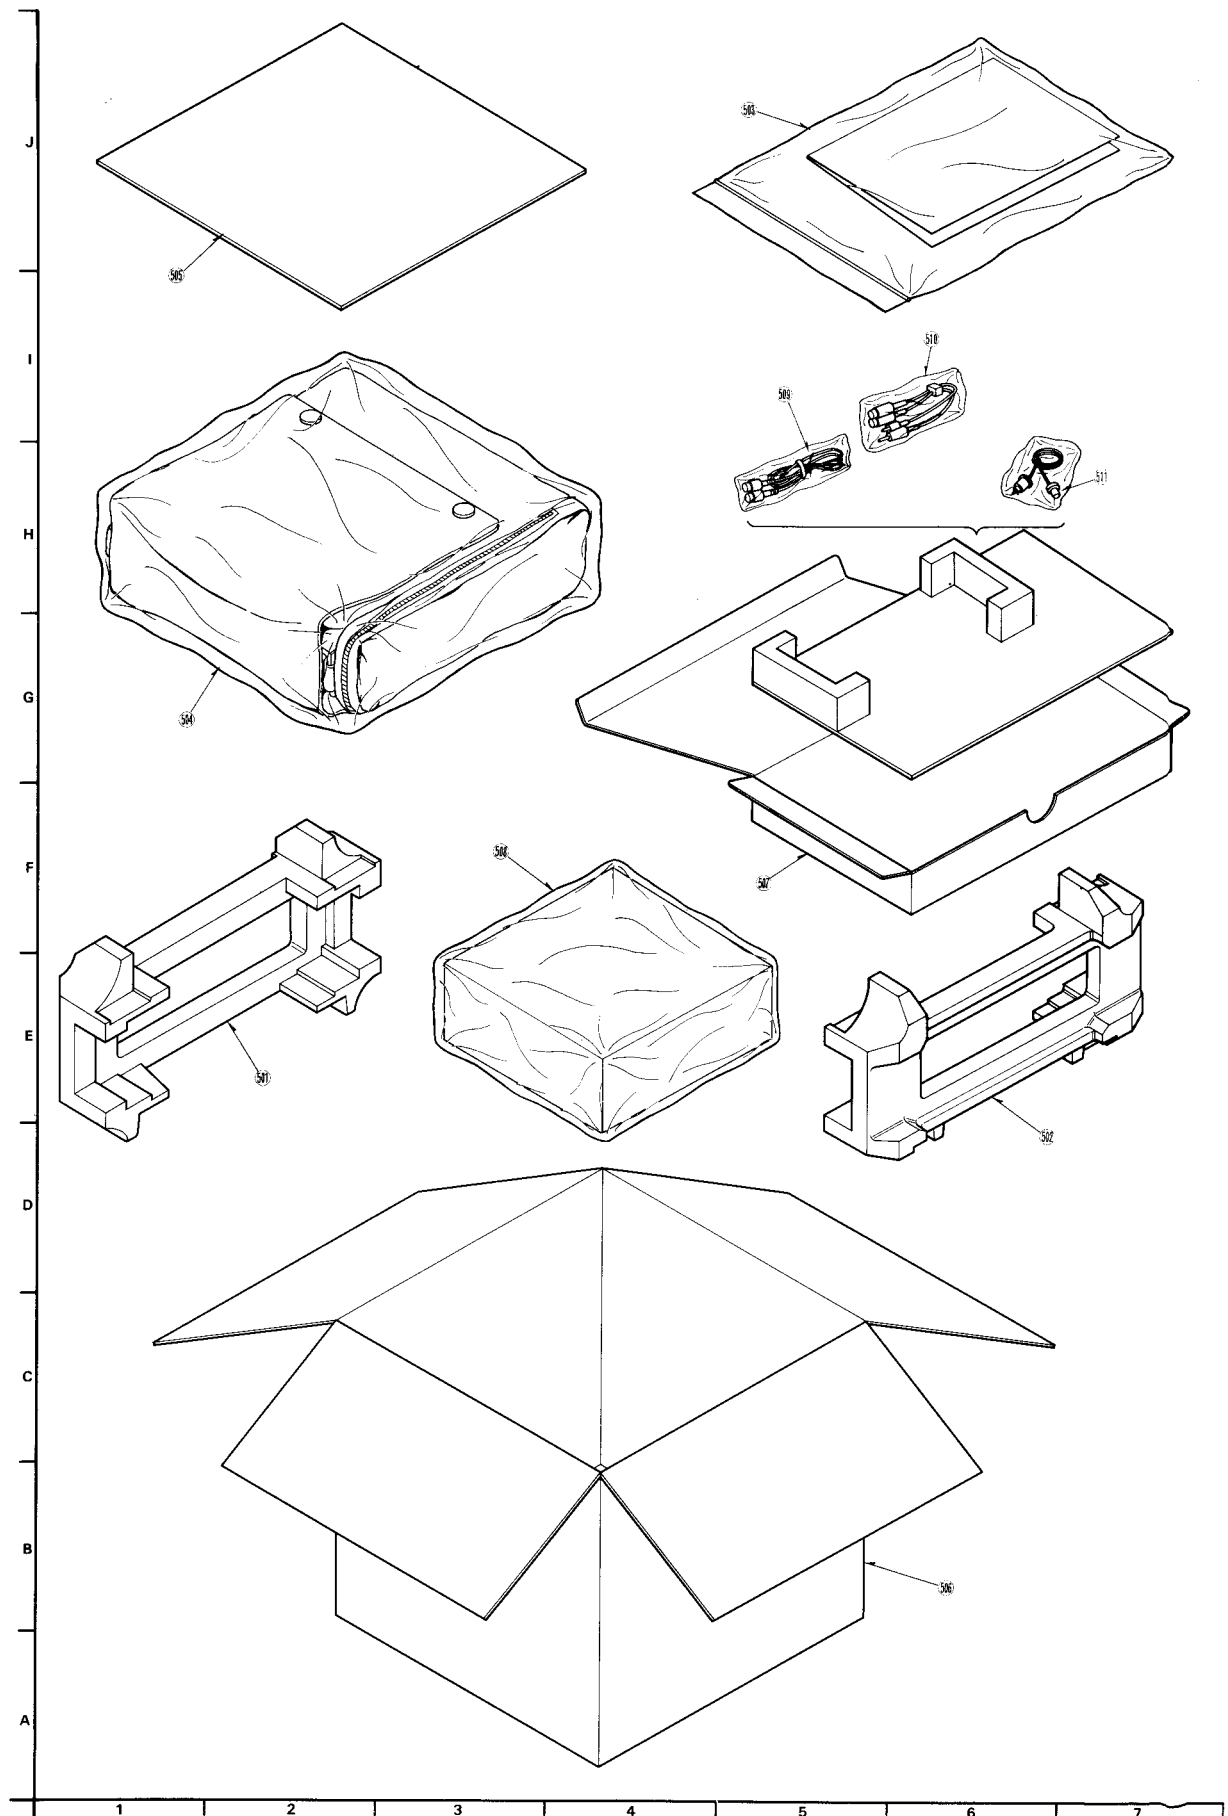



# MECHANICAL REPLACEMENT PARTS LIST

Model No. NV-100E/B/EG



## Notes:

- Be sure to make your orders of replacement parts according to this list.
- "●" in Remarks column indicates new parts.

| Ref. No. | Part No. | Part Name & Description   | Pcs / Set | Remarks |
|----------|----------|---------------------------|-----------|---------|
| 1(3)     | VBK0033  | FC HEAD UNIT              | 1         |         |
| 2(1)     | VBS0021  | FE HEAD                   | 1         |         |
| 3(3)     | VDG0087  | SECTOR GEAR (A)           | 1         |         |
| 4(3)     | VDG0088  | SECTOR GEAR (B)           | 1         |         |
| 5(3)     | VDG0095  | SUB CAM GEAR              | 1         |         |
| 6(3)     | VDG0094  | MAIN CAM GEAR             | 1         |         |
| 7(4)     | VDG0098  | DAMPER UNIT               | 1         |         |
| 8(1)     | VRH0009  | HEATER UNIT               | 1         |         |
| 10(1)    | VXL0939  | INERTIA ROLLER UNIT       | 1         |         |
| 11(1)    | VDP0759  | SUPPLY ROLLER (K)         | 1         |         |
| 12(2)    | VDV0141  | TIMING BELT               | 1         |         |
| 13(1)    | VEG0221  | DP CYLINDER UNIT          | 1         |         |
| 14(1)    | VEH0171  | UPPER CYLINDER UNIT       | 1         |         |
| 15(1)    | VEH0172  | A/C HEAD UNIT             | 1         |         |
| 16(3)    | VEK1474  | CAPSTAN STATOR COIL       | 1         |         |
|          |          | P.C. BOARD UNIT           |           |         |
| 18(3)    | VEM0150  | LOADING MOTOR UNIT        | 1         |         |
| 20(6)    | VKF0111  | BATTERY DOOR              | 1         |         |
| 21(5)    | VGK1041  | CASSETTE SCREW RUBBER     | 2         |         |
| 22(5)    | VEK1557  | CAMERA JACK UNIT          | 1         |         |
| 23(5)    | VEE0057  | MULTIPLE CONNECTOR UNIT   | 1         |         |
| 24(5)    | VGN1923  | JACK PLATE DECORATION     | 1         |         |
| 28(5)    | VGQ0272  | CHANNEL SELECT CASE       | 1         |         |
| 29(6)    | VGTO271  | POWER SWITCH KNOB         | 1         |         |
| 30(6)    | VGTO272  | CAMERA REMOTE SW KNOB     | 1         |         |
| 31(6)    | VGU0429  | OPERATION BUTTON (REC)    | 1         |         |
| 32(6)    | VGU0430  | OPERATION BUTTON (FF/CUE) | 1         |         |
| 33(6)    | VGU0431  | OPERATION BUTTON (PLAY)   | 1         |         |
| 34(6)    | VGU0432  | OPERATION BUTTON          | 1         |         |
|          |          | (REW/REVIEW)              |           |         |
| 35(6)    | VGU0433  | OPERATION BUTTON (EJECT)  | 1         |         |
| 36(6)    | VGU0434  | OPERATION BUTTON          | 1         |         |
|          |          | (AUDIO DUBBING)           |           |         |
| 37(6)    | VGU0435  | OPERATION BUTTON          | 1         |         |
|          |          | (PAUSE/STILL)             |           |         |
| 38(6)    | VGU0436  | OPERATION BUTTON (STOP)   | 1         |         |
| 39(6)    | VGU0497  | BATTERY EJECT BUTTON      | 1         |         |
| 40(5)    | VGU0312  | STOPPER RELEASE BUTTON    | 1         |         |
| 41(6)    | VGU0437  | OPERATION BUTTON (SLOW)   | 1         |         |
| 42(1)    | VHD0081  | SCREW                     | 3         |         |
| 43(1)    | VHD0075  | SCREW                     | 1         |         |
| 44(1)    | VHN0020  | ADJUST NUT                | 1         |         |
| 45(5)    | XTV3+6J  | SCREW                     | 1         |         |
| 46(5,6)  | VHN0030  | PLASTIC RIVET             | 3         |         |
| 47(1)    | VJF0109  | P.C. BOARD SUPPORT        | 3         |         |
| 48(5)    | VJH0224  | JACK PLATE                | 1         |         |
| 49(6)    | VKF0110  | CONVERTER COVER           | 1         |         |
| 50(6)    | VMG0220  | RUBBER BUSHING            | 1         |         |
| 51(5)    | VMA4972  | STOPPER COVER             | 1         |         |
| 52(6)    | VMA5799  | BATTERY DOOR HOLDER       | 1         |         |
| 53(6)    | VKC0051  | BATTERY DOOR HINGE        | 1         |         |
| 54(1)    | VMA4833  | SHAFT HOLDER PLATE        | 2         |         |
| 55(1)    | VMA4834  | LOADING GUIDE (L)         | 1         |         |
| 56(1)    | VMA4835  | LOADING GUIDE (R)         | 1         |         |
| 57(1)    | VMA4876  | CASSETTE OPENER COVER     | 1         |         |
| 58(3)    | VMA4887  | THRUST ANGLE              | 1         |         |
| 59(3)    | VMA4886  | CAPSTAN PLATE             | 1         |         |
| 60(4)    | VMA4843  | CASSETTE HOLDER (B)       | 1         |         |
| 61(1)    | VMA4846  | CASSETTE OPENER           | 1         |         |
| 62(4)    | VSH0016  | CASSETTE LOCK DETECT SW   | 1         |         |
| 63(4)    | VSH0018  | LEAF SW                   | 1         |         |
| 64(5)    | VGQ0273  | BATTERY STOPPER           | 1         |         |
| 65(5)    | VMA4971  | FRAME SUPPORT ANGLE       | 2         |         |
| 67(6)    | VMB0966  | BATTERY DOOR SPRING       | 2         |         |
| 68(6)    | VMB0967  | BATTERY BUTTON SPRING     | 1         |         |

| Ref. No. | Part No. | Part Name & Description   | Pcs / Set | Remarks  |
|----------|----------|---------------------------|-----------|----------|
| 69(5)    | VMB0968  | SPRING                    | 1         |          |
| 71(1)    | VMB0930  | A/C HEAD SPRING           | 1         |          |
| 72(1)    | VMB0925  | ERASE HEAD LEVER SPRING   | 1         |          |
| 73(1)    | VMB0934  | SUPPLY LIMITER SPRING     | 1         |          |
| 74(1)    | VMB0936  | POST SPRING               | 1         |          |
| 75(1)    | VMB0926  | INERTIA ROLLER SPRING     | 1         |          |
| 76(2)    | VMB0941  | ARM SPRING                | 1         |          |
| 77(4)    | VMB0933  | TENSION ARM SPRING        | 1         |          |
| 78(1)    | VMB0931  | LOADING SPRING            | 2         |          |
| 79(2)    | VMB0910  | SPRING                    | 1         |          |
| 80(2)    | VMB0971  | PRESSURE ROLLER RETURN    | 1         |          |
|          |          | SPRING                    |           |          |
| 81(2)    | VMB0922  | FF LEVER SPRING           | 1         |          |
| 83(2)    | VMB0939  | MAIN IDLER SPRING         | 1         |          |
| 84(2)    | VMB0923  | BRAKE LEVER SPRING        | 2         |          |
| 85(2)    | VMB0937  | TAKE-UP SOFT ARM SPRING   | 1         |          |
| 86(2)    | VMB0911  | TAKE-UP SOFT BRAKE SPRING | 1         |          |
| 87(2)    | VMB0938  | SUPPLY SOFT GUIDE SPRING  | 1         |          |
| 88(2)    | VMB0912  | SUPPLY SOFT BRAKE SPRING  | 1         |          |
| 89(3)    | VMB0919  | SUB ROD RETURN SPRING     | 1         |          |
| 90(3)    | VMB0920  | SUB ROD SPRING            | 1         |          |
| 91(3)    | VMB0918  | EJECT LEVER SPRING        | 1         |          |
| 93(4)    | VMB0929  | CASSETTE HOLDER SPRING    | 2         |          |
| 94(4)    | VMB0927  | LOCK ARM SPRING           | 2         |          |
| 95(4)    | VMB0916  | LOCK RELEASE SPRING       | 2         |          |
| 96(4)    | VMB0914  | CASSETTE HOLDING SPRING   | 1         |          |
| 97(4)    | VMB0915  | CASSETTE HOLDER SPRING    | 1         |          |
|          |          | (L)                       |           |          |
| 98(4)    | VMB0917  | DISCRIMINATING LEVER      | 1         |          |
|          |          | SPRING                    |           |          |
| 99(2)    | VMB0924  | BRAKE ARM SPRING          | 2         |          |
| 100(4)   | VMB0988  | SUB CASSETTE HOLDING      | 1         |          |
|          |          | SPRING                    |           |          |
| 101(3)   | VMB0980  | LATCH SPRING              | 2         |          |
| 102(4)   | VMB0989  | CASSETTE UP DETECT SPRING | 1         |          |
| 103(4)   | VMB1021  | SWITCH DRIVE SPRING       | 1         |          |
| 105(1)   | VMX0297  | INERTIA ROLLER UPPER      | 1         |          |
|          |          | LIMITER                   |           |          |
| 106(5)   | VMZ0371  | BARRIER (L)               | 1         |          |
| 107(5)   | VMD0343  | REAR FRAME                | 1         |          |
| 108(5)   | VMZ0372  | BARRIER (R)               | 1         |          |
| 109(4)   | VMD0334  | ADJUST HOOK               | 1         |          |
| 110(1)   | VMD0331  | POST STOPPER              | 2         |          |
| 111(1)   | VMD0324  | LOADING GUIDE SUPPORT     | 1         |          |
| 112(4)   | VMD0326  | TRANSISTOR HOLDER         | 2         |          |
| 113(3)   | VMD0354  | GUIDE BLOCK               | 1         |          |
| 114(1)   | VEK1445  | DEW DETECTOR UNIT         | 1         |          |
| 115(1)   | VMD0385  | INCLIND SUPPORT ANGLE     | 1         |          |
| 116(1)   | VML1281  | ERASE HEAD LEVER          | 1         |          |
| 117(4)   | VML1303  | CASSETTE HOLDING LEVER    | 1         |          |
| 118(3)   | VML1305  | EJECT KICK LEVER          | 1         |          |
| 119(4)   | VML1385  | CASSETTE DOWN SW LEVER    | 1         |          |
| 120(4)   | VML1299  | CASSETTE UP SW LEVER      | 1         |          |
| 121(3)   | VML1312  | MAIN BRAKE KICK LEVER     | 1         |          |
| 122(2)   | VML1291  | KICK LEVER                | 1         |          |
| 123(3)   | VML1357  | LATCHET (A)               | 1         |          |
| 124(3)   | VML1358  | LATCHET (B)               | 1         |          |
| 125(2)   | VML1289  | TOGGLE ARM                | 1         |          |
| 126(5)   | VMA5914  | ADJUST ANGLE              | 1         |          |
| 127(4)   | VML1304  | DISCRIMINATING LEVER      | 1         |          |
| 128(5)   | VML1379  | SAFETY LEVER              | 1         |          |
| 129(6)   | VMS2135  | BATTERY DOOR SHAFT        | 1         |          |
| 130(6)   | VGN1925  | RATED LABEL               | 1         | NV-100E  |
| 130(6)   | VGN1926  | RATED LABEL               | 1         | NV-100EG |
| 130(6)   | VGN1927  | RATED LABEL               | 1         | NV-100B  |
| 131(1)   | VMS2094  | INERTIA ROLLER LOWER      | 1         |          |
|          |          | LIMITER                   |           |          |
| 132(1)   | VMX0288  | COLLAR                    | 1         |          |
| 133(1)   | VMX0404  | POST SLEEVE               | 1         |          |
| 134(1)   | VMX0373  | POST CAP                  | 1         |          |

| Ref. No. | Part No. | Part Name & Description     | Pcs / Set | Remarks | Ref. No.  | Part No.    | Part Name & Description | Pcs / Set | Remarks |
|----------|----------|-----------------------------|-----------|---------|-----------|-------------|-------------------------|-----------|---------|
| 135 (1)  | VMX0375  | LOADING ARM SLEEVE          | 2         |         | 209 (2)   | VXR0096     | TAKE-UP REEL TABLE UNIT | 1         |         |
| 136 (2)  | VMX0395  | SLEEVE                      | 1         |         | 210 (2)   | VMG0258     | FF IDLER TIRE           | 1         |         |
| 137 (2)  | VMX0394  | SOFT BRAKE STOPPER          | 2         |         | 212 (6)   | VYP0666     | FRONT PANEL UNIT        | 1         |         |
| 138 (3)  | XWGV3D7G | SLIDE WASHER (A)            | 6         |         | 213 (6)   | VGP0726     | TOP CASE                | 1         |         |
| 139 (3)  | XWGV3D9G | SLIDE WASEHR (B)            | 2         |         | 214 (6)   | VYK0421     | BOTTOM CASE UNIT        | 1         |         |
| 140 (3)  | VMX0381  | EJECT LEVER STOPPER         | 1         |         | 216 (5)   | VYK0420     | CASSETTE COVER UNIT     | 1         |         |
| 141 (3)  | VMX0396  | THRUST BOSS                 | 1         |         | 217 (6)   | VEK1756     | EARTH ANGLE             | 1         |         |
| 142 (3)  | VMX0397  | STARTER BRACKET             | 1         |         | 218 (6)   | VEK1856     | REMOTE CONNECTOR UNIT   | 1         |         |
| 143 (2)  | VMX0387  | IDLER WASHER                | 2         |         | 220 (5)   | VJF0106     | BATTERY CATCHER         | 1         |         |
| 144 (6)  | VGQ0331  | HANDLE SPACER               | 2         |         | 221 (5)   | VMB0969     | BATTERY CATCHER SPRING  | 1         |         |
| 145 (2)  | VMX0157  | WASHER                      | 2         |         | 222 (1)   | VHD0045     | NYLON NUT               | 1         |         |
| 146 (6)  | VGQ0328  | HANDLE WASHER               | 2         |         | 223 (6)   | VHD0087     | TOP PANEL SCREW         | 2         |         |
| 147 (6)  | VMA5906  | HANDLE SUPPORT ANGLE (R)    | 1         |         | 224 (1,2) | VHN0023     | NYLON NUT               | 3         |         |
| 148 (6)  | VYC0065  | HANDLE UNIT                 | 1         |         | 225 (5)   | VKC0052     | HINGE                   | 2         |         |
| 149 (6)  | VMA5910  | HANDLE SUPPORT ANGLE (L)    | 1         |         | 226 (5)   | VKC0053     | HINGE                   | 2         |         |
| 151 (5)  | VSC0737  | SHIELD CASE (TOP)           | 1         |         | 227 (5)   | VEK1769     | GROUND ANGLE            | 1         |         |
| 152 (3)  | VSS0061  | MODE SELECT SWITCH          | 1         |         | 228 (2)   | VMB0940     | SUB LEVER SPRING        | 1         |         |
| 153 (1)  | VXA1481  | SHAFT HOLDER L UNIT         | 1         |         | 229 (1)   | VEK1827     | Shield Cover Unit       | 1         |         |
| 154 (1)  | VXA1484  | SHAFT HOLDER R UNIT         | 1         |         | 230 (1)   | VHD0075     | Shield Cover Screw      | 1         |         |
| 155 (1)  | VXA1482  | INCLINED BASE L UNIT        | 1         |         | 231 (5)   | VEK1758     | SAFETY TAB SW.          | 1         |         |
| 156 (1)  | VXA1485  | INCLINED BASE R UNIT        | 1         |         |           |             |                         |           |         |
| 157 (2)  | VXL0938  | FF IDLER LEVER UNIT         | 1         |         |           |             |                         |           |         |
| 158 (2)  | VMB0921  | ROD SPRING                  | 1         |         |           |             |                         |           |         |
| 159 (2)  | VXA1491  | FF IDLER BRACKET 1 UNIT     | 1         |         |           |             |                         |           |         |
| 160 (1)  | VEK1461  | SENSOR LED UNIT             | 1         |         |           |             |                         |           |         |
| 161 (4)  | VXA1495  | CASSETTE UP UNIT            | 1         |         |           |             |                         |           |         |
| 162 (5)  | XIV3+10F | SCREW                       | 1         |         |           |             |                         |           |         |
| 164 (2)  | VDP0858  | ROLLER                      | 1         |         |           |             |                         |           |         |
| 165 (1)  | VXP0302C | ROLLER POST R UNIT          | 1         |         |           |             |                         |           |         |
| 166 (1)  | VXP0302A | ROLLER POST L UNIT          | 1         |         |           |             |                         |           |         |
| 167 (3)  | VSA0040  | GROUNDING PLATE             | 1         |         |           |             |                         |           |         |
| 168 (2)  | VXD0068  | HOUSING                     | 1         |         |           |             |                         |           |         |
| 169 (1)  | VXL0910  | LOADING ARM L-1 UNIT        | 1         |         |           |             |                         |           |         |
| 170 (1)  | VXL0912  | LOADING ARM R-1 UNIT        | 1         |         |           |             |                         |           |         |
| 171 (3)  | VML0970  | RELEASE LINK                | 1         |         |           |             |                         |           |         |
| 172 (3)  | VXL0918  | ARM KICK LEVER UNIT         | 1         |         | 401       | XIV3+8J     |                         | 1         |         |
| 173 (2)  | VXL0920  | IDLER LEVER UNIT            | 1         |         | 402       | XIV3+10F    |                         | 1         |         |
| 174 (2)  | VXL0922  | MAIN IDLER LEVER 1 UNIT     | 1         |         | 403       | XIV3+6J     |                         | 1         |         |
| 175 (2)  | VXL0923  | SUB IDLER LEVER UNIT        | 1         |         | 404       | XIV3+14FZ   |                         | 4         |         |
| 176 (2)  | VXA1487  | IDLER SUPPORT UNIT          | 1         |         | 405       | XIV2+5J     |                         | 2         |         |
| 177 (2)  | VXZ0119  | TAKE-UP SOFT ARM UNIT       | 1         |         |           |             |                         |           |         |
| 178 (2)  | VXZ0120  | TAKE-UP SOFT GUIDE UNIT     | 1         |         | 406       | XTV26+6F    |                         | 16        |         |
| 179 (2)  | VXL0935  | SUPPLY SOFT ARM UNIT        | 1         |         | 407       | XTV26+8F    |                         | 20        |         |
| 180 (2)  | VXL0934  | SUPPLY SOFT GUIDE UNIT      | 1         |         | 408       | XTV26+10F   |                         | 1         |         |
| 181 (2)  | VXL0936  | TRANSMITTING ARM UNIT       | 1         |         | 409       | XIV26+12F   |                         | 2         |         |
| 182 (2)  | VXL0937  | P5 ARM UNIT                 | 1         |         | 410       | XTV26+6FRS  |                         | 2         |         |
| 183 (1)  | VMB0908  | HEATER SPRING               | 1         |         |           |             |                         |           |         |
| 184 (2)  | VXL0927  | PRESSURE ROLLER ARM 1 UNIT  | 1         |         | 411       | XIV26+8J    |                         | 1         |         |
|          |          |                             |           |         | 412       | XTN26+35F   |                         | 4         |         |
| 185 (2)  | VXL0929  | CONNECTING ARM UNIT         | 1         |         | 413       | XYN3+8BBNS  |                         | 2         |         |
| 186 (2)  | VXL0930  | BRAKE LEVER L UNIT          | 1         |         | 414       | XYN26+A5    |                         | 2         |         |
| 187 (2)  | VXZ0122  | BRAKE ARM L UNIT            | 1         |         | 415       | XYE26+BF6   |                         | 2         |         |
| 188 (2)  | VXL0931  | BRAKE LEVER R UNIT          | 1         |         | 416       | XYN26+F6    |                         | 5         |         |
| 189 (2)  | VXZ0124  | BRAKE ARM R UNIT            | 1         |         | 417       | XYN26+C6FZ  |                         | 4         |         |
| 190 (4)  | VXL0933  | TENSION ARM                 | 1         |         | 418       | XYN26+F8    |                         | 2         |         |
| 191 (4)  | VXZ0125  | TENSION BAND UNIT           | 1         |         | 419       | XYN26+E10   |                         | 2         |         |
| 195 (2)  | VMG0259  | IDLER TIRE                  | 1         |         | 420       | XYN26+C6    |                         | 1         |         |
| 197 (3)  | VXL0914  | SUB ROD 1 UNIT              | 1         |         |           |             |                         |           |         |
| 198 (3)  | VXL0917  | MAIN ROD 1 UNIT             | 1         |         | 421       | XYN3+C4     |                         | 2         |         |
| 199 (3)  | VXP0408  | ROTOR UNIT                  | 1         |         | 422       | XYN2+C6     |                         | 1         |         |
| 200 (2)  | VXP0402  | SUPPLY REEL IDLER GEAR UNIT | 1         |         | 423       | XYE26+BF10  |                         | 4         |         |
|          |          |                             |           |         | 424       | XYE26+BF5   |                         | 3         |         |
| 201 (2)  | VXP0403  | TAKE-UP REEL IDLER UNIT     | 1         |         | 425       | XYE26+BF8   |                         | 1         |         |
| 202 (2)  | VXP0405  | MAIN IDLER 1 UNIT           | 1         |         | 426       | XS83+6FKS   |                         | 2         |         |
| 203 (2)  | VDP0854  | FF IDLER                    | 1         |         | 427       | XSS26+2     |                         | 2         |         |
| 204 (1)  | VXP0411  | LOADING GEAR L UNIT         | 1         |         | 428       | XSS2+5FXKS  |                         | 2         |         |
| 205 (1)  | VXP0412  | LOADING GEAR R UNIT         | 1         |         | 429       | XSS26+8FXKS |                         | 2         |         |
| 206 (3)  | VXA1486  | SECTOR GEAR C UNIT          | 1         |         | 430       | XSN2+35     |                         | 1         |         |
| 207 (2)  | VXP0413  | TRANSMITTING GEAR UNIT      | 1         |         |           |             |                         |           |         |
| 208 (2)  | VXR0095  | SUPPLY REEL TABLE UNIT      | 1         |         |           |             |                         |           |         |



## ELECTRICAL REPLACEMENT PARTS LIST

Model No. NV-100E/B/EG

### Notes:

1. Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE  
Components identified by  $\Delta$  have special characteristics important for safety.  
When replacing any of these components, use only the original ones.
3. Unless otherwise specified,  
All resistors are in OHMS ( $\Omega$ ), 1/8W  $\pm$  5% carbon. K=1,000 $\Omega$ , M=1,000K $\Omega$ .  
All capacitors are in MICROFARADS ( $\mu$ F),  $\pm$  10% P= $\mu$ F.

| Ref. No.   | Part No.   | Part Name & Description                     | Pcs / Set | Remarks             |
|------------|------------|---------------------------------------------|-----------|---------------------|
|            | VEP03137A  | Main P.C.B. Unit                            | 1         | NV-100E/B           |
|            | VEP03137B  | Main P.C.B. Unit                            | 1         | NV-100EG            |
|            | VEP06164A  | System Control & Memory Counter P.C.B. Unit | 1         |                     |
|            | VEP02148B  | Cylinder Motor Drive P.C.B. Unit            | 1         |                     |
|            | VEK1475    | Capstan Motor Drive P.C.B. Unit             | 1         |                     |
|            | VEP06165B  | Back-Up Circuit P.C.B. Unit                 | 1         |                     |
|            | VJB00799   | Full Erase Head P.C.B.                      | 1         |                     |
|            | VJB00802   | Supply Reel Detector P.C.B.1                |           |                     |
|            | VJB00801   | Take-up Reel Detector P.C.B.1               |           |                     |
|            | VJB00796   | Take-up Photo TR P.C.B.                     | 1         |                     |
|            | VJB00901   | Supply Photo TR P.C.B.                      | 1         |                     |
|            | VJB00896   | Safety Tab Switch P.C.B.                    | 1         |                     |
|            | VJB00803   | PG Head P.C.B.                              | 1         |                     |
|            | ENC17553   | RF Converter                                | 1         | NV-100E/EG $\Delta$ |
|            | ENC17554   | RF Converter                                | 1         | NV-100B $\Delta$    |
|            | VEP03137A  | Main P.C Board Unit                         |           | NV-100E/B           |
|            | VEP03137B  |                                             |           | NV-100EG            |
|            |            | AVR Section                                 |           |                     |
|            |            | Integrated Circuits                         |           |                     |
| IC1001     | BA6122A    |                                             | 1         |                     |
| IC1002     | VCR0044    |                                             | 1         |                     |
|            |            | Transistors                                 |           |                     |
| Q1001,1002 | 2SB835     |                                             | 2         | (Q,R)               |
| Q1003      | 2SB772     |                                             | 1         | (P,Q)               |
| Q1004      | 2SD992     |                                             | 1         | (K,L)               |
| Q1005      | 2SB641     |                                             | 1         | (Q,R)               |
| Q1006-1008 | 2SD636     |                                             | 3         | (Q,R)               |
| Q1009      | 2SD889     |                                             | 1         | (Q,R,S)             |
| Q1010      | 2SB835     |                                             | 1         | (Q,R)               |
| Q1011      | 2SB819     |                                             | 1         | (Q,R)               |
| Q1012      | 2SB643     |                                             | 1         | (Q,R)               |
|            |            | Diodes                                      |           |                     |
| D1001-1004 | 11DQ04FE7  |                                             | 4         |                     |
| D1005,1006 | MA165      |                                             | 2         |                     |
|            |            | Resistors                                   |           |                     |
| R1001      | ERDS2TJ253 | 1/4W 15K                                    | 1         |                     |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks  |
|------------|--------------|-------------------------|-----------|----------|
| R1002      | ERDS2TJ393   | 1/4W 39K                | 1         |          |
| R1003,1004 | ERDS2TJ103   | 1/4W 10K                | 2         |          |
| R1005      | ERDS2TJ333   | 1/4W 33K                | 1         |          |
| R1006      | ERDS2TJ331   | 1/4W 330                | 1         |          |
| R1007      | ERDS2TJ182   | 1/4W 1.8K               | 1         |          |
| R1008      | ERDS2TJ391   | 1/4W 390                | 1         |          |
| R1009      | ERDS2TJ222   | 1/4W 2.2K               | 1         |          |
| R1010      | ERDS2TJ331   | 1/4W 330                | 1         |          |
| R1011      | ERDS2TJ681   | 1/4W 680                | 1         |          |
| R1012      | ERDS2TJ122   | 1/4W 1.2K               | 1         |          |
| R1013      | ERDS2TJ180   | 1/4W 1.0                | 1         |          |
| R1014      | ERX12ANJR56  | Metal 1/4W 0.56         | 1         |          |
| R1015      | ERDS2TJ333   | 1/4W 33K                | 1         |          |
| R1016      | ERDS2TJ104   | 1/4W 100K               | 1         |          |
| R1017      | ERDS2TJ273   | 1/4W 27K                | 1         |          |
| R1018      | ERDS2TJ183   | 1/4W 18K                | 1         |          |
| R1019,1020 | ERDS2TJ473   | 1/4W 47K                | 2         |          |
| R1021      | ERDS2TJ472   | 1/4W 4.7K               | 1         |          |
| R1022      | ERDS2TJ123   | 1/4W 12K                | 1         |          |
| R1023      | ERDS2TJ333   | 1/4W 33K                | 1         |          |
| R1024      | ERDS2TJ104   | 1/4W 100K               | 1         |          |
| R1025      | ERDS2TJ563   | 1/4W 56K                | 1         |          |
| R1026      | ERDS2TJ332   | 1/4W 3.3K               | 1         |          |
| R1027      | ERDS2TJ123   | 1/4W 12K                | 1         |          |
| R1028      | ERDS2TJ122   | 1/4W 1.2K               | 1         |          |
| R1029,1030 | EVN3ACA00B54 | Variable 50K            | 2         |          |
|            |              | Capacitors              |           |          |
| C1001      | ECCFIH390K   | Ceramic 50V 39P         | 1         |          |
| C1002,1003 | ECCFIH221K   | Ceramic 50V 220P        | 2         |          |
| C1004      | ECCFIH1032F  | Ceramic 50V 0.01        | 1         |          |
| C1005      | ECCFIH331KB  | Ceramic 50V 330P        | 1         |          |
| C1006,1007 | ECEA1CSS221  | Electrolytic 16V 220    | 2         |          |
| C1008      | ECEA1CSS101  | Electrolytic 16V 100    | 1         |          |
| C1009,1010 | ECEA1ASS221  | Electrolytic 10V 220    | 2         |          |
| C1011,1012 | ECEA0JSS221  | Electrolytic 6.3V 220   | 2         |          |
| C1013      | ECEA0JK330   | Electrolytic 6.3V 33    | 1         |          |
| C1014      | ECEA0JK101   | Electrolytic 6.3V 100   | 1         |          |
| C1015      | ECEA1HK010   | Electrolytic 50V 1      | 1         |          |
|            |              | Coils                   |           |          |
| L1001-1003 | VLQ0085      |                         | 3         |          |
| L1004-1006 | VLS0084      |                         | 3         |          |
| L1007      | VLQ0083      |                         | 1         |          |
|            |              | Fuses                   |           |          |
| F1001      | XBA2C05TR0   |                         | 1         | $\Delta$ |
| F1002      | VSF0021      |                         | 1         | $\Delta$ |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks |
|------------|--------------|-------------------------|-----------|---------|
|            |              | Servo Section           |           |         |
|            |              | Integrated Circuits     |           |         |
| IC2001     | AN6357       |                         | 1         |         |
| IC2002     | MN6165VBA    |                         | 1         |         |
| IC2003     | AN6356       |                         | 1         |         |
| IC2004     | MN6281       |                         | 1         |         |
| IC2005     | AN6562       |                         | 1         |         |
| IC2006     | VCR0053      |                         | 1         |         |
| IC2007     | MN1453VPD    |                         | 1         |         |
| IC2008     | AN6914       |                         | 1         |         |
| IC2009     | VCR0055      |                         | 1         |         |
|            |              | Transistors             |           |         |
| Q2001,2002 | 2SD636       |                         | 2         | (Q,R,S) |
| Q2003      | 2SC2603      |                         | 1         | (E2,F)  |
| Q2004,2005 | 2SD636       |                         | 2         | (Q,R,S) |
| Q2006      | 2SA1115      |                         | 1         | (E,F)   |
| Q2007      | 2SD636       |                         | 1         | (Q,R,S) |
| Q2014      | 2SD636       |                         | 1         | (Q,R,S) |
| Q2015      | 2SA1115      |                         | 1         | (E,F)   |
| Q2016,2017 | 2SD636       |                         | 2         | (Q,R,S) |
| Q2018      | 2SC2603      |                         | 1         | (E2,F)  |
| Q2019,2020 | 2SD636       |                         | 2         | (Q,R,S) |
| Q2022      | 2SA1115      |                         | 1         | (E,F)   |
|            |              | Diodes                  |           |         |
| D2001-2007 | MA165        |                         | 7         |         |
| D2009      | MA165        |                         | 1         |         |
| D2011-2013 | MA165        |                         | 3         |         |
|            |              | Resistors               |           |         |
| R2001,2002 | ERDS2TJ104   | 1/4W 100K               | 2         |         |
| R2003      | ERDS2TJ123   | 1/4W 12K                | 1         |         |
| R2004      | ERDS2TJ223   | 1/4W 22K                | 1         |         |
| R2005      | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R2006      | ERDS2TJ224   | 1/4W 220K               | 1         |         |
| R2007      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2008      | ERDS2TJ183   | 1/4W 18K                | 1         |         |
| R2009      | ERDS2TJ105   | 1/4W 1M                 | 1         |         |
| R2010      | ERDS2TJ122   | 1/4W 1.2K               | 1         |         |
| R2011      | ERPF3A4M402S | Thermistor 4K           | 1         |         |
| R2012      | ERDS2TJ473   | 1/4W 47K                | 1         |         |
| R2013      | EVN3ACA00B15 | Variable 100K           | 1         |         |
| R2014      | ERDS2TJ473   | 1/4W 47K                | 1         |         |
| R2015      | ERDS2TJ272   | 1/4W 2.7K               | 1         |         |
| R2016      | ERDS2TJ333   | 1/4W 33K                | 1         |         |
| R2017      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2018      | ERDS2TJ332   | 1/4W 3.3K               | 1         |         |
| R2019      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
| R2020,2021 | ERDS2TJ103   | 1/4W 10K                | 2         |         |
| R2022      | ERDS2TJ473   | 1/4W 47K                | 1         |         |
| R2023      | ERDS2TJ122   | 1/4W 1.2K               | 1         |         |
| R2024      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2025      | ERDS2TJ224   | 1/4W 220K               | 1         |         |
| R2026      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2027      | ERDS2TJ104   | 1/4W 100K               | 1         |         |
| R2028,2029 | ERDS2TJ154   | 1/4W 150K               | 2         |         |
| R2030      | ERDS2TJ124   | 1/4W 120K               | 1         |         |
| R2031      | ERDS2TJ333   | 1/4W 33K                | 1         |         |
| R2032      | ERDS2TJ222   | 1/4W 2.2K               | 1         |         |
|            |              | Capacitors              |           |         |
| R2035      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2036      | ERDS2TJ334   | 1/4W 330K               | 1         |         |
| R2037      | ERDS2TJ105   | 1/4W 1M                 | 1         |         |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks |
|------------|--------------|-------------------------|-----------|---------|
| R2039      | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R2040      | ERDS2TJ183   | 1/4W 18K                | 1         |         |
| R2041      | ERDS2TJ223   | 1/4W 22K                | 1         |         |
| R2042      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2043      | ERDS2TJ274   | 1/4W 270K               | 1         |         |
| R2044      | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R2045      | ERDS2TJ682   | 1/4W 6.8K               | 1         |         |
| R2046      | EVN3ACA00B15 | Variable 100K           | 1         |         |
| R2047      | ERDS2TJ223   | 1/4W 22K                | 2         |         |
| R2048      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2049,2050 | ERDS2TJ104   | 1/4W 100K               | 2         |         |
| R2051      | ERDS2TJ472   | 1/4W 4.7K               | 1         |         |
| R2052      | ERDS2TJ222   | 1/4W 2.2K               | 1         |         |
| R2053      | ERDS2TJ181   | 1/4W 180                | 1         |         |
|            |              | Variable 200K           | 1         |         |
| R2055      | EVN3ACA00B25 | Variable 200K           | 1         |         |
| R2056      | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R2057      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2058      | EVN3ACA00B25 | Variable 200K           | 1         |         |
| R2059      | ERDS2TJ393   | 1/4W 39K                | 1         |         |
| R2060      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2061      | ERDS2TJ562   | 1/4W 5.6K               | 1         |         |
| R2062      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2063      | ERDS2TJ271   | 1/4W 270                | 1         |         |
| R2064      | ERDS2TJ471   | 1/4W 470                | 1         |         |
| R2065      | ERDS2TJ104   | 1/4W 100K               | 1         |         |
| R2066      | ERDS2TJ223   | 1/4W 22K                | 1         |         |
| R2067      | EVN3ACA00B24 | Variable 20K            | 1         |         |
| R2068      | ERDS2TJ153   | 1/4W 15K                | 1         |         |
| R2069      | ERDS2TJ332   | 1/4W 3.3K               | 1         |         |
| R2070      | ERDS2TJ222   | 1/4W 2.2K               | 1         |         |
| R2071      | ERDS2TJ334   | 1/4W 330K               | 1         |         |
| R2072      | ERDS2TJ104   | 1/4W 100K               | 1         |         |
| R2073      | ERDS2TJ224   | 1/4W 220K               | 1         |         |
| R2074      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2075      | ERDS2TJ332   | 1/4W 3.3K               | 1         |         |
| R2076      | ERDS2TJ562   | 1/4W 5.6K               | 1         |         |
| R2077,2078 | ERDS2TJ104   | 1/4W 100K               | 2         |         |
| R2079      | EVN3ACA00B25 | Variable 200K           | 1         |         |
| R2080      | ERDS2TJ823   | 1/4W 82K                | 1         |         |
| R2081-2084 | ERDS2TJ563   | 1/4W 56K                | 4         |         |
| R2085      | ERDS2TJ562   | 1/4W 5.6K               | 1         |         |
| R2086      | ERDS2TJ104   | 1/4W 100K               | 1         |         |
| R2087      | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R2088      | ERDS2TJ562   | 1/4W 5.6K               | 1         |         |
| R2089      | ERDS2TJ224   | 1/4W 220K               | 1         |         |
| R2090      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R2091      | ERDS2TJ223   | 1/4W 22K                | 1         |         |
| R2093      | ERDS2TJ104   | 1/4W 100K               | 1         |         |
| R2094      | ERDS2TJ394   | 1/4W 390K               | 1         |         |
| R2095      | ERDS2TJ124   | 1/4W 120K               | 1         |         |
| R2096      | ERDS2TJ154   | 1/4W 150K               | 1         |         |
| R2097      | ERDS2TJ331   | 1/4W 330                | 1         |         |
| R2098      | ERDS2TJ221   | 1/4W 220                | 1         |         |
|            |              | Capacitors              |           |         |
| C2001      | ECCFIH470K   | Ceramic 50V 47P         | 1         |         |
| C2002      | ECEAOJK010   | Electrolytic 6.3V       | 1         |         |
| C2003      | ECWM1H102KZ  | Mylar 50V 0.001         | 1         |         |
| C2004      | ECEAOEKN2R2  | Electrolytic 25V 2.2    | 1         |         |
| C2005      | ECWM1H152KZ  | Mylar 50V 0.0015        | 1         |         |
| C2006      | ECSF16ER1    | Tantalum 16V 0.1        | 1         |         |
| C2007      | ECKFIH222KB  | Ceramic 50V 2200P       | 1         |         |
| C2008      | ECEAIHKR33   | Electrolytic 50V 0.33   | 1         |         |
| C2009      | ECEAIHKNO10  | Electrolytic 50V        | 1         |         |
| C2010      | ECEAIKKN2R2  | Electrolytic 25V 2.2    | 1         |         |
| C2011      | ECEAIHKO10   | Electrolytic 50V        | 1         |         |
| C2012,2013 | ECWM1H562KZ  | Mylar 50V 0.0056        | 2         |         |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks | Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks |
|------------|--------------|-------------------------|-----------|---------|------------|--------------|-------------------------|-----------|---------|
| C2014      | ECSF16ER1    | Tantalum 16V 0.1        | 1         |         |            |              | Luminance Section       |           |         |
| C2015,2016 | ECEAOJK470   | Electrolytic 6.3V 47    | 2         |         |            |              |                         |           |         |
| C2017      | ECEA1CK100   | Electrolytic 16V 10     | 1         |         |            |              | Integrated Circuits     |           |         |
| C2018      | ECEA1HK010   | Electrolytic 50V 1      | 1         |         | IC3001     | VEFY003      | FIC Y-3                 | 1         |         |
| C2019      | ECCF1H050CC  | Ceramic 50V 5P          | 1         |         | IC3002     | VCR0042      |                         | 1         |         |
| C2020      | ECWM1H562KZ  | Mylar 50V 0.0056        | 1         |         | IC3003     | AN6326       |                         | 1         |         |
| C2021      | ECEA1HK0R1   | Electrolytic 50V 0.1    | 1         |         | IC3004     | VCR0043      |                         | 1         |         |
| C2022,2023 | ECEAOJK470   | Electrolytic 6.3V 47    | 2         |         |            |              |                         |           |         |
| C2024      | ECWN1H182KZ  | Mylar 50V 0.0018        | 1         |         |            |              |                         |           |         |
| C2025,2026 | ECEA1CK100   | Electrolytic 16V 10     | 2         |         |            |              |                         |           |         |
| C2027      | ECEAOJK470   | Electrolytic 6.3V 47    | 1         |         |            |              | Transistors             |           |         |
| C2028      | ECWM1H223KZ  | Mylar 50V 0.022         | 1         |         | Q3001      | 2SD636       |                         | 1         | (Q,R,S) |
| C2029      | ECEAOJK470   | Electrolytic 6.3V 47    | 1         |         | Q3002      | 2SC2206      |                         | 1         | (B,C)   |
| C2030      | ECWM1H472KZ  | Mylar 50V 0.0047        | 1         |         | Q3003      | 2SD636       |                         | 1         | (Q,R,S) |
| C2031      | ECWM1H123KZ  | Mylar 50V 0.012         | 1         |         | Q3004-3006 | 2SC2206      |                         | 3         | (B,C)   |
| C2032      | ECV1ZW20X53N | Trimmer 500V 20P        | 1         |         | Q3007      | 2SD636       |                         | 1         | (Q,R,S) |
| C2033      | ECWM1H472KZ  | Mylar 50V 0.0047        | 1         |         | Q3008      | 2SB641       |                         | 1         | (Q,R)   |
| C2035      | ECEAOJK470   | Electrolytic 6.3V 47    | 1         |         | Q3009,3010 | 2SC2206      |                         | 2         | (B,C)   |
| C2036      | ECEA1CK100   | Electrolytic 16V 10     | 1         |         | Q3012,3013 | 2SD636       |                         | 2         | (Q,R,S) |
| C2037      | ECEA1HK2R2   | Electrolytic 50V 2.2    | 1         |         | Q3014,3015 | 2SC2206      |                         | 2         | (B,C)   |
| C2038      | ECCF1H270KC  | Ceramic 50V 27P         | 1         |         |            |              |                         |           |         |
| C2039      | ECWM1H153KZ  | Mylar 50V 0.015         | 1         |         |            |              |                         |           |         |
| C2040      | ECWM1H332KZ  | Mylar 50V 0.0033        | 1         |         |            |              |                         |           |         |
| C2041      | ECEA1HK3R3   | Electrolytic 50V 3.3    | 1         |         |            |              | Diodes                  |           |         |
| C2042      | ECEAOJK470   | Electrolytic 6.3V 47    | 1         |         | D3001,3002 | MA165        |                         | 2         |         |
| C2043      | ECEA1HKR22   | Electrolytic 50V 0.22   | 1         |         | D3003      | RD3.3EB      | Zener                   | 1         |         |
| C2044      | ECWM1H223KZ  | Mylar 50V 0.022         | 1         |         | D3004-3006 | 1S899        |                         | 3         |         |
| C2045      | ECEA1AK220   | Electrolytic 10V 22     | 1         |         | D3007      | MA165        |                         | 1         |         |
| C2046      | ECQV05184JZ  | Mylar 0.18              | 1         |         | D3008,3009 | 1S899        |                         | 2         |         |
| C2047      | ECEA1HK010   | Electrolytic 50V 1      | 1         |         |            |              |                         |           |         |
| C2048      | ECKF1H472KB  | Ceramic 50V 4700P       | 1         |         |            |              | Resistors               |           |         |
|            |              |                         |           |         | R3001,3002 | ERDS2TJ103   | 1/4W 10K                | 2         |         |
|            |              |                         |           |         | R3003      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              | Coils                   |           |         | R3004      | ERDS2TJ271   | 1/4W 270                | 1         |         |
| L2001      | VLQEL06F471K | 470 $\mu$ H             | 1         |         | R3005      | ERDS2TJ681   | 1/4W 680                | 1         |         |
| L2002      | VLQEL05R220K | 22 $\mu$ H              | 1         |         | R3006      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              |                         |           |         | R3007      | ERDS2TJ222   | 1/4W 2.2K               | 1         |         |
|            |              |                         |           |         | R3008      | ERDS2TJ100   | 1/4W 10                 | 1         |         |
|            |              |                         |           |         | R3009      | ERDS2TJ331   | 1/4W 330                | 1         |         |
|            |              |                         |           |         | R3010      | ERDS2TJ684   | 1/4W 680K               | 1         |         |
|            |              | Crystal                 |           |         | R3011      | EVN3ACA00B13 | Variable 1K             | 1         |         |
| X2001      | VSK0091      |                         | 1         |         | R3012      | ERDS2TJ820   | 1/4W 82                 | 1         |         |
|            |              |                         |           |         | R3013      | ERDS2TJ821   | 1/4W 820                | 1         |         |
|            |              |                         |           |         | R3014      | ERDS2TJ681   | 1/4W 680                | 1         |         |
|            |              |                         |           |         | R3015,3016 | ERDS2TJ393   | 1/4W 39K                | 2         |         |
|            |              |                         |           |         | R3017      | ERDS2TJ470   | 1/4W 47                 | 1         |         |
|            |              |                         |           |         | R3018,3019 | ERDS2TJ100   | 1/4W 10                 | 2         |         |
|            |              |                         |           |         | R3020,3021 | EVN3ACA00B13 | Variable 1K             | 2         |         |
|            |              |                         |           |         | R3022      | ERDS2TJ391   | 1/4W 390                | 1         |         |
|            |              |                         |           |         | R3023      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              |                         |           |         | R3024      | ERDS2TJ391   | 1/4W 390                | 1         |         |
|            |              |                         |           |         | R3025,3026 | ERDS2TJ102   | 1/4W 1K                 | 2         |         |
|            |              |                         |           |         | R3027      | ERDS2TJ152   | 1/4W 1.5K               | 1         |         |
|            |              |                         |           |         | R3028      | ERDS2TJ681   | 1/4W 680                | 1         |         |
|            |              |                         |           |         | R3029      | ERDS2TJ152   | 1/4W 1.5K               | 1         |         |
|            |              |                         |           |         | R3030      | ERDS2TJ471   | 1/4W 470                | 1         |         |
|            |              |                         |           |         | R3031      | ERDS2TJ152   | 1/4W 1.5K               | 1         |         |
|            |              |                         |           |         | R3032      | ERDS2TJ561   | 1/4W 560                | 1         |         |
|            |              |                         |           |         | R3033      | ERDS2TJ103   | 1/4W 10K                | 1         |         |
|            |              |                         |           |         | R3034      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              |                         |           |         | R3035      | ERDS2TJ270   | 1/4W 27                 | 1         |         |
|            |              |                         |           |         | R3036      | ERDS2TJ561   | 1/4W 560                | 1         |         |
|            |              |                         |           |         | R3037      | ERDS2TJ392   | 1/4W 3.9K               | 1         |         |
|            |              |                         |           |         | R3038      | ERDS2TJ152   | 1/4W 1.5K               | 1         |         |
|            |              |                         |           |         | R3039      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              |                         |           |         | R3040      | ERDS2TJ331   | 1/4W 330                | 1         |         |
|            |              |                         |           |         | R3041      | ERDS2TJ561   | 1/4W 560                | 1         |         |
|            |              |                         |           |         | R3043      | ERDS2TJ102   | 1/4W 1K                 | 1         |         |
|            |              |                         |           |         | R3044      | ERDS2TJ222   | 1/4W 2.2K               | 1         |         |





| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks | Ref. No.   | Part No.    | Part Name & Description     | Pcs / Set | Remarks |
|------------|--------------|-------------------------|-----------|---------|------------|-------------|-----------------------------|-----------|---------|
|            |              | Audio Section           |           |         |            |             | Loading Motor Drive Section |           |         |
|            |              | Integrated Circuits     |           |         |            |             | Integrated Circuit          |           |         |
| IC4001     | VEFA001      | FIC A-1                 | 1         |         | IC6401     | VCR0045     |                             | 1         |         |
| IC4002     | VEFA003      | FIC A-3                 | 1         |         |            |             |                             |           |         |
|            |              | Transistor              |           |         |            |             | Transistors                 |           |         |
| Q4001      | 2SD636       |                         | 1         | (Q,R,S) | Q6401      | 2SB772      |                             | 1         | (P,Q)   |
|            |              | Resistors               |           |         | Q6402      | 2SB819      |                             | 1         | (Q,R)   |
| R4001      | ERDS2TJ472   | 1/4W 4.7K               | 1         |         | Q6403,6404 | 2SD892      |                             | 2         | (Q,R)   |
| R4002      | ERDS2TJ010   | 1/4W 100                | 1         |         | Q6405,6406 | 2SD636      |                             | 2         | (Q,R,S) |
| R4003      | ERDS2TJ5R6   | 1/4W 5.6                | 1         |         | Q6407      | 2SB774      |                             | 1         | (Q,R,S) |
| R4004      | ERDS2TJ221   | 1/4W 220                | 1         |         |            |             | Diodes                      |           |         |
| R4005      | ERDS2TJ183   | 1/4W 18K                | 1         |         | D6401      | RD11JB      | Zener                       | 1         |         |
| R4006      | ERDS2TJ223   | 1/4W 22K                | 1         |         | D6402-6405 | MA165       |                             | 4         |         |
| R4007      | ERDS2TJ101   | 1/4W 100                | 1         |         | D6406      | 11DQ04FE7   |                             | 1         |         |
| R4008      | ERDS2TJ151   | 1/4W 150                | 1         |         | D6407-6411 | MA165       |                             | 5         |         |
| R4009      |              | Variable                | 50K       | 1       |            |             | Resistors                   |           |         |
| R4010      | EVN3ACA00B15 | Variable                | 100K      | 1       | R6401      | ERDS2TJ102  | 1/4W 1K                     | 1         |         |
| R4011      | ERDS2TJ333   | 1/4W 33K                | 1         |         | R6402      | ERX12ANJR51 | Metal 1/2W 0.51             | 1         |         |
| R4012      | ERDS2TJ681   | 1/4W 680                | 1         |         | R6403      | ERDS2TJ220  | 1/4W 22                     | 1         |         |
| R4013      | ERDS2TJ103   | 1/4W 10K                | 1         |         | R6404      | ERDS2TJ823  | 1/4W 82K                    | 1         |         |
| R4014      | ERDS2TJ391   | 1/4W 390                | 1         |         | R6405      | ERDS2TJ102  | 1/4W 1K                     | 1         |         |
| R4015      | ERDS2TJ473   | 1/4W 47K                | 1         |         | R6406      | ERDS2TJ221  | 1/4W 220                    | 1         |         |
|            |              | Capacitors              |           |         | R6407      | ERDS2TJ683  | 1/4W 68K                    | 1         |         |
| C4001      | ECKFIH103ZF  | Ceramic 50V 0.01        | 1         |         | R6408,6409 | ERDS2TJ223  | 1/4W 22K                    | 2         |         |
| C4002      | ECEA1EK3R3   | Electrolytic 25V 3.3    | 1         |         | R6410      | ERDS2TJ562  | 1/4W 5.6K                   | 1         |         |
| C4003      | ECEA1AK330   | Electrolytic 10V 33     | 1         |         | R6411      | ERDS2TJ563  | 1/4W 56K                    | 1         |         |
| C4004      | ECEA1HK2R2   | Electrolytic 50V 2.2    | 1         |         | R6412      | ERDS2TJ333  | 1/4W 33K                    | 1         |         |
| C4005      | ECQV05474JZ  | Mylar 50V 0.47          | 1         |         | R6413,6414 | ERDS2TJ563  | 1/4W 56K                    | 2         |         |
| C4006      | ECEA1AK330   | Electrolytic 10V 33     | 1         |         | R6415,6416 | ERDS2TJ683  | 1/4W 68K                    | 2         |         |
| C4007      | ECEA1HK010   | Electrolytic 50V 1      | 1         |         | R6417      | ERDS2TJ103  | 1/4W 10K                    | 1         |         |
| C4008      | ECEA0JK220   | Electrolytic 6.3V 22    | 1         |         | R6418      | ERDS2TJ473  | 1/4W 47K                    | 1         |         |
| C4010      | ECQP1152JZ   | Mylar 100V0.0015        | 1         |         | R6419,6420 | ERDS2TJ333  | 1/4W 33K                    | 2         |         |
| C4011      | ECWM1H153KZ3 | Mylar 50V 0.015         | 1         |         | R6421      | ERDS2TJ102  | 1/4W 1K                     | 1         |         |
| C4012      | ECKZ1H472ZF  | Ceramic 50V 4700P       | 1         |         |            |             | Capacitors                  |           |         |
| C4013,4014 | ECEA1CK100   | Electrolytic 16V 10     | 2         |         | C6401      | ECEA1CK220  | Electrolytic 16V 22         | 1         |         |
| C4015      | ECEA0JK101   | Electrolytic 6.3V 100   | 1         |         | C6402      | ECEA1HK010  | Electrolytic 50V 1          | 1         |         |
| C4016      | ECEA1CK100   | Electrolytic 16V 10     | 1         |         | C6403      | ECEA1CK330  | Electrolytic 16V 33         | 1         |         |
| C4017      | ECEA0JK470   | Electrolytic 6.3V 47    | 1         |         | C6404      | ECEA1HK010  | Electrolytic 50V 1          | 1         |         |
| C4018      | ECQV05184JZ  | Mylar 50V 0.18          | 1         |         | C6405      | ECKFIH103ZF | Ceramic 50V 0.01            | 1         |         |
| C4019      | ECWM1H153JZ  | Mylar 50V 0.015         | 1         |         |            |             | Relay                       |           |         |
| C4020      | ECWM1R473KZ  | Mylar 50V 0.047         | 1         |         | RY6401     | VSY1016     |                             | 1         |         |
| C4022      | ECEA1CK100   | Electrolytic 16V 10     | 1         |         |            |             |                             |           |         |
| C4023      | ECEA0JK470   | Electrolytic 6.3V 47    | 1         |         |            |             |                             |           |         |
| C4024      | ECEA1EK3R3   | Electrolytic 25V 3.3    | 1         |         |            |             |                             |           |         |
| C4025      | ECEA1ASS101  | Electrolytic 10V 100    | 1         |         |            |             |                             |           |         |
| C4027      | ECEA0CK100   | Electrolytic 6.3V 10    | 1         |         |            |             |                             |           |         |
| C4028      | ECCFIH391    | Ceramic 50V 390P        | 1         |         |            |             |                             |           |         |
| C4029      | ECKFIH102KB  | Ceramic 50V 1000P       | 1         |         |            |             |                             |           |         |
|            |              | Coils                   |           |         |            |             |                             |           |         |
| L4001-4004 | VLQEL06F471K | 470uH                   | 1         |         |            |             |                             |           |         |
|            |              | Transformers            |           |         |            |             |                             |           |         |
| T4001      | ELM7Q207E    |                         | 1         |         |            |             |                             |           |         |
| T4002      | VLQ0096      |                         | 1         |         |            |             |                             |           |         |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks                |
|------------|--------------|-------------------------|-----------|------------------------|
|            |              | Jack Panel Section      |           |                        |
|            |              | Integrated Circuit      |           |                        |
| IC6501     | VCR0056      |                         | 1         |                        |
|            |              | Transistors             |           |                        |
| Q6501      | 2SD636       |                         | 1         | (Q,R,S)                |
| Q6502      | 2SB641       |                         | 1         | (Q,R)                  |
| Q6503      | 2SD636       |                         | 1         | (Q,R,S)                |
| Q6504      | 2SB641       |                         | 1         | (Q,R)                  |
| Q6505,6506 | 2SD636       |                         | 2         | (Q,R,S)                |
| Q6507      | 2SB641       |                         | 1         | (Q,R)                  |
| Q6508      | 2SD636       |                         | 1         | (Q,R,S)                |
| Q6509      | 2SB641       |                         | 1         | (Q,R)                  |
|            |              | Diodes                  |           |                        |
| D6501-6507 | MA165        |                         | 7         |                        |
| D6508      | ERC0402E3    |                         | 1         |                        |
| D6509      | ERC81004H    |                         | 1         |                        |
| D6510,6511 | MA165        |                         | 2         |                        |
|            |              | Resistors               |           |                        |
| R6501      | ERDS2TJ750   | 1/4W 75                 | 1         |                        |
| R6502      | ERDS2TJ680   | 1/4W 68                 | 1         |                        |
| R6503      | ERDS2TJ104   | 1/4W 100K               | 1         |                        |
| R6505      | ERDS2TJ223   | 1/4W 22K                | 1         |                        |
| R6506      | ERDS2TJ471   | 1/4W 470                | 1         |                        |
| R6507      | ERDS2TJ681   | 1/4W 680                | 1         | or ERDS2TJ103 1/4W 10K |
| R6508      | ERDS2TJ750   | 1/4W 75                 | 1         |                        |
| R6509      | ERDS2TJ563   | 1/4W 56K                | 1         |                        |
| R6510      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6511      | ERDS2TJ182   | 1/4W 1.8K               | 1         |                        |
| R6512      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6513      | ERDS2TJ222   | 1/4W 2.2K               | 1         |                        |
| R6514      | ERDS2TJ563   | 1/4W 56K                | 1         |                        |
| R6515      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6516      | ERDS2TJ272   | 1/4W 2.7K               | 1         |                        |
| R6517      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6518      | ERDS2TJ224   | 1/4W 220K               | 1         |                        |
| R6519      | ERDS2TJ474   | 1/4W 470K               | 1         |                        |
| R6520      | ERDS2TJ682   | 1/4W 6.8K               | 1         |                        |
| R6521      | ERDS2TJ153   | 1/4W 15K                | 1         |                        |
| R6522-6524 | ERDS2TJ104   | 1/4W 100K               | 3         |                        |
| R6525,6526 | FVJ5LA007B15 | Variable 100K           | 2         |                        |
| R6527      | ERDS2TJ103   | 1/4W 10K                | 1         |                        |
| R6528      | ERDS2TJ104   | 1/4W 100K               | 1         |                        |
| R6529      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6530      | ERDS2TJ104   | 1/4W 100K               | 1         |                        |
| R6531      | ERDS2TJ102   | 1/4W 1K                 | 1         |                        |
| R6532      | ERDS2TJ331   | 1/4W 330                | 1         |                        |
| R6533      | ERDS2TJ222   | 1/4W 2.2K               | 1         |                        |
|            |              | Capacitors              |           |                        |
| C6501,6502 | ECEA1AK330   | Electrolytic 10V 33     | 2         |                        |
| C6503,6504 | ECC21H121K   | Ceramic 50V 120P        | 2         |                        |
| C6505      | ECEA1EK4R7   | Electrolytic 25V 4.7    | 1         |                        |
| C6506      | ECEA1HKR33   | Electrolytic 50V 0.33   | 1         |                        |
| C6507      | ECEA1HK010   | Electrolytic 50V 1      | 1         |                        |
| C6508      | ECEA1HKN010  | Electrolytic 50V 1      | 1         |                        |
| C6509      | ECKZ1H331KB  | Ceramic 50V 330P        | 1         |                        |
| C6510      | EC5F35ER33   | Tantalum 35V 0.33       | 1         |                        |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set | Remarks          |
|------------|--------------|-------------------------|-----------|------------------|
| C6511      | ECEA1VK4R7   | Electrolytic 35V 4.7    | 1         |                  |
| C6512      | ECEA1EK220   | Electrolytic 25V 22     | 1         |                  |
| C6513,6514 | ECEA1HK010   | Electrolytic 50V 1      | 2         |                  |
|            |              | Relay                   |           |                  |
| RY6501     | VSY2028      |                         | 1         |                  |
|            |              | Fuse                    |           |                  |
| F6501      | XBA2C20TR0   |                         | 1         | △                |
|            | VGT0273      | Tracking VR Knob        | 1         |                  |
|            |              | Chrominance Section     |           |                  |
|            |              | Integrated Circuits     |           |                  |
| IC8001     | VEFC003      | FIC C-3                 | 1         |                  |
| IC8002     | VEFC004      | FIC C-4                 | 1         |                  |
| IC8003     | VEFC005      | FIC C-5                 | 1         | NV-100EG         |
|            |              | Transistors             |           |                  |
| Q8001      | 2SD636       |                         | 1         | (Q,R,S)          |
| Q8002      | 2SC2206      |                         | 1         | (B,C)            |
| Q8003      | 2SD636       |                         | 1         | (Q,R,S)          |
| Q8004      | 2SD636       |                         | 1         | (Q,R,S) NV-100EG |
|            |              | Diode                   |           |                  |
| D8001      | MA165        |                         | 1         | NV-100EG         |
|            |              | Resistors               |           |                  |
| R8001      | ERDS2TJ102   | 1/4W 1K                 | 1         |                  |
| R8002-8004 | ERDS2TJ221   | 1/4W 220                | 3         |                  |
| R8005      | ERDS2TJ181   | 1/4W 180                | 1         |                  |
| R8006      | ERDS2TJ151   | 1/4W 150                | 1         |                  |
| R8007      | ERDS2TJ121   | 1/4W 120                | 1         |                  |
| R8008      | ERDS2TJ101   | 1/4W 100                | 1         |                  |
| R8009      | ERDS2TJ271   | 1/4W 270                | 1         | NV-100EG         |
| R8010      | ERDS2TJ102   | 1/4W 1K                 | 1         |                  |
| R8011      | ERDS2TJ102   | 1/4W 1K                 | 1         |                  |
| R8012      | ERDS2TJ154   | 1/4W 150K               | 1         |                  |
| R8013      | ERDS2TJ681   | 1/4W 680                | 1         |                  |
| R8014      | ERDS2TJ152   | 1/4W 1.5K               | 1         |                  |
| R8015      | EVN3ACA00B23 | Variable 2K             | 1         |                  |
| R8016      | ERDS2TJ331   | 1/4W 330                | 1         |                  |
| R8017,8018 | ERDS2TJ393   | 1/4W 39K                | 2         |                  |
| R8019      | ERDS2TJ471   | 1/4W 470                | 1         |                  |
| R8020      | ERDS2TJ222   | 1/4W 2.2K               | 1         | NV-100EG         |



| Ref. No.   | Part No.    | Part Name & Description          | Pcs<br>Set | Remarks | Ref. No.    | Part No.    | Part Name & Description          | Pcs<br>/ Set | Remarks |
|------------|-------------|----------------------------------|------------|---------|-------------|-------------|----------------------------------|--------------|---------|
| C2503      | ECKFIH472ZF | Ceramic 50V 4700P                | 1          |         |             | VEP06164A   | System Control P.C.Board<br>Unit |              |         |
| C2504      | ECWMIH682K2 | Mylar 50V 6800P                  | 1          |         |             |             |                                  |              |         |
| C2505      | ECEA1EK3R3  | Electrolytic 25V 3.3             | 1          |         |             |             |                                  |              |         |
| C2506      | ECSFI6ER22K | Tantalum 16V 0.22                | 1          |         |             |             |                                  |              |         |
| C2507      | ECKFIH102KB | Ceramic 50V 1000P                | 1          |         |             |             | Integrated Circuits              |              |         |
| C2508      | ECEA1CK470  | Electrolytic 16V 47              | 1          |         | IC6001      | μPD7502G090 |                                  | 1            |         |
| C2509-2511 | ECEA1EKN2R2 | Electrolytic 25V 2.2             | 3          |         | IC6002      | MN1455AVA   |                                  | 1            |         |
| C2512      | ECSFI6ER15K | Tantalum 16V 0.15                | 1          |         | IC6003      | MN1455AVB   |                                  | 1            |         |
| C2513      | ECKFIH102KB | Ceramic 50V 1000P                | 1          |         | IC6004,6005 | μPD4503BC   |                                  | 2            |         |
| C2514      | ECEA1AK330  | Electrolytic 10V 33              | 1          |         | IC6006      | μPC393C     |                                  | 1            |         |
|            |             |                                  |            |         |             |             |                                  |              |         |
|            |             | Miscellaneous                    |            |         |             |             |                                  |              |         |
| P15        | VJP1235     | Connector 8P                     | 1          |         |             |             | Transistors                      |              |         |
| TP2501     | VJH0196     | Check Terminal                   | 2          |         | Q6001-6008  | 2SB641      |                                  | 8            | (Q,R,S) |
| GND        |             |                                  |            |         | Q6009,6010  | 2SD636      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6012       | 2SD636      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6013,6014  | 2SB641      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6015,6016  | 2SD636      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6017       | 2SB641      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6018       | 2SD636      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6019       | 2SD992      |                                  | 1            | (K,L)   |
|            |             |                                  |            |         | Q6010-6022  | 2SD636      |                                  | 3            | (Q,R,S) |
|            |             |                                  |            |         | Q6023       | 2SB641      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6024       | 2SC2594     |                                  | 1            |         |
|            |             |                                  |            |         | Q6025,6026  | 2SD636      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6027       | 2SB641      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6028       | 2SD636      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6029       | 2SB641      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6030       | 2SD638      |                                  | 1            | (Q,R,S) |
|            |             |                                  |            |         | Q6031-6035  | 2SB641      |                                  | 5            | (Q,R,S) |
|            |             |                                  |            |         | Q6036,6037  | 2SD636      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6039,6040  | 2SD636      |                                  | 2            | (Q,R,S) |
|            |             |                                  |            |         | Q6041       | 2SC2603     |                                  | 1            | (E2,F)  |
|            |             |                                  |            |         |             |             |                                  |              |         |
|            | VEK1475     | Capstan Drive P.C. Board<br>Unit |            |         |             |             | Diodes                           |              |         |
|            |             |                                  |            |         | D6001-6007  | BR3902S     | LED                              | 7            |         |
|            |             |                                  |            |         | D6008       | MA27W       |                                  | 1            |         |
|            |             |                                  |            |         | D6009-6022  | MA165       |                                  | 14           |         |
|            |             |                                  |            |         | D6023       | 10E1        |                                  | 1            |         |
| IC2701     | AN6676      |                                  | 1          |         | D6024-6030  | MA165       |                                  | 7            |         |
| IC2702     | VEFS001     | FIC S-1                          | 1          |         | D6032-6034  | MA165       |                                  | 3            |         |
|            |             |                                  |            |         | D6036,6037  | MA165       |                                  | 2            |         |
|            |             | Transistors                      |            |         | D6038       | MA27W       |                                  | 1            |         |
| Q2701-2703 | 2SB819      |                                  | 3          | (P,Q,R) | D6039       | MA165       |                                  | 1            |         |
|            |             |                                  |            |         |             |             |                                  |              |         |
|            |             | Resistors                        |            |         |             |             |                                  |              |         |
| R2701-2703 | ERD2FCC220  |                                  | 22         | 3       |             |             | Resistors                        |              |         |
| R2704      | ERX12ANJR56 | Metal Oxide 1/2W 0.56            | 1          |         | R6001       | ERDS2TJ561  | 1/4W 560                         | 1            |         |
| R2705      | ERD10TJ392  |                                  | 3.9K       | 1       | R6002-6005  | ERDS2TJ223  | 1/4W 22K                         | 4            |         |
|            |             |                                  |            |         | R6006       | ERDS2TJ821  | 1/4W 820                         | 1            |         |
|            |             |                                  |            |         | R6007,6008  | ERDS2TJ223  | 1/4W 22K                         | 2            |         |
|            |             |                                  |            |         | R6009       | ERDS2TJ103  | 1/4W 10K                         | 1            |         |
|            |             |                                  |            |         | R6010,6011  | ERDS2TJ223  | 1/4W 22K                         | 2            |         |
| C2701-2703 | ECEA1HK2R2  | Electrolytic 50V 2.2             | 3          |         | R6012       | ERDS2TJ562  | 1/4W 5.6K                        | 1            |         |
| C2704      | ECEA1HK0R1  | Electrolytic 50V 0.1             | 1          |         | R6013       | ERDS2TJ223  | 1/4W 22K                         | 1            |         |
| C2705,2706 | ECEA1CK220  | Electrolytic 16V 22              | 2          |         | R6014       | ERDS2TJ561  | 1/4W 560                         | 1            |         |
|            |             |                                  |            |         | R6015       | ERDS2TJ223  | 1/4W 22K                         | 1            |         |
|            |             |                                  |            |         | R6016,6017  | ERDS2TJ563  | 1/4W 56K                         | 2            |         |
|            |             |                                  |            |         | R6018       | ERDS2TJ223  | 1/4W 22K                         | 1            |         |
|            |             |                                  |            |         | R6019       | ERDS2TJ473  | 1/4W 47K                         | 1            |         |
| P31        | VJP1237T    | Connector 10P                    | 1          |         | R6020       | ERDS2TJ223  | 1/4W 22K                         | 1            |         |
|            |             |                                  |            |         | R6021       | ERDS2TJ104  | 1/4W 100K                        | 1            |         |
|            |             | Spacer                           |            |         | R6022       | ERDS2TJ331  | 1/4W 330                         | 1            |         |
|            | VMX0424     |                                  | 1          |         | R6023-6025  | ERDS2TJ563  | 1/4W 56K                         | 3            |         |
|            |             |                                  |            |         | R6026       | ERDS2TJ123  | 1/4W 12K                         | 1            |         |
|            |             |                                  |            |         | R6027-6029  | ERDS2TJ104  | 1/4W 100K                        | 3            |         |
|            |             |                                  |            |         | R6030       | ERDS2TJ153  | 1/4W 15K                         | 1            |         |
|            |             |                                  |            |         | R6032       | ERDS2TJ331  | 1/4W 330                         | 1            |         |
|            |             |                                  |            |         | R6033,6034  | ERDS2TJ562  | 1/4W 5.6K                        | 2            |         |

| Ref. No.   | Part No.     | Part Name & Description | Pcs / Set   | Remarks | Ref. No.    | Part No.     | Part Name & Description | Pcs / Set | Remarks |
|------------|--------------|-------------------------|-------------|---------|-------------|--------------|-------------------------|-----------|---------|
| R6037-6039 | EROS2TLG1003 | Metal                   | 100K 3      |         | R6134,6135  | ERDS2TJ563   | 1/4W 56K                | 2         |         |
| R6040      | EROS2TKG2003 | Metal                   | 200K 1      |         | R6136       | ERDS2TJ103   | 1/4W 10K                | 1         |         |
| R6041      | ERDS2TJ123   |                         | 1/4W 12K 1  |         | R6139,6140  | ERDS2TJ563   | 1/4W 56K                | 2         |         |
| R6042      | ERDS2TJ222   |                         | 1/4W 2.2K 1 |         | R6141       | ERDS2TJ390   | 1/4W 39                 | 1         |         |
| R6043-6045 | ERDS2TJ223   |                         | 1/4W 22K 3  |         | R6142       | ERDS2TJ563   | 1/4W 56K                | 1         |         |
| R6046      | ERDS2TJ683   |                         | 1/4W 68K 1  |         | R6143       | ERDS2TJ124   | 1/4W 120K               | 1         |         |
| R6047      | ERDS2TJ153   |                         | 1/4W 15K 1  |         |             |              |                         |           |         |
| R6048      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6049      | ERDS2TJ682   |                         | 1/4W 6.8K 1 |         |             |              |                         |           |         |
| R6050      | ERDS2TJ223   |                         | 1/4W 22K 1  |         |             |              |                         |           |         |
| R6051,6052 | ERDS2TJ103   |                         | 1/4W 10K 2  |         |             |              | Capacitors              |           |         |
| R6053      | ERDS2TJ105   |                         | 1/4W 1M 1   |         | C6001       | ECEA1HKL010  | Electrolytic 50V        | 1 1       |         |
| R6054      | ERDS2TJ104   |                         | 1/4W 100K 1 |         | C6002,6003  | ECKZ1H221KB  | Ceramic 50V 220P        | 2         |         |
| R6055      | ERDS2TJ332   |                         | 1/4W 3.3K 1 |         | C6004-6006  | ECKZ1H102KB  | Ceramic 50V 1000P       | 3         |         |
| R6056      | ERDS2TJ271   |                         | 1/4W 270 1  |         | C6007       | ECKF1H103ZF  | Ceramic 50V 0.01        | 1         |         |
| R6057      | ERDS2TJ223   |                         | 1/4W 22K 1  |         | C6008       | ECEA1HKL010  | Electrolytic 50V        | 1 1       |         |
| R6058      | ERDS2TJ823   |                         | 1/4W 82K 1  |         | C6011       | ECKF1H103ZF  | Ceramic 50V 0.01        | 1         |         |
| R6059      | ERDS2TJ223   |                         | 1/4W 22K 1  |         | C6012,6013  | ECKZ1H561KB  | Ceramic 50V 560P        | 2         |         |
| R6060      | ERDS2TJ124   |                         | 1/4W 120K 1 |         | C6014       | ECKF1H103ZF  | Ceramic 50V 0.01        | 1         |         |
| R6061      | ERDS2TJ223   |                         | 1/4W 22K 1  |         | C6015       | ECEA0JK470   | Electrolytic 6.3V 47    | 1         |         |
| R6062      | ERDS2TJ823   |                         | 1/4W 82K 1  |         | C6016       | ECEA1HKL010  | Electrolytic 50V        | 1 1       |         |
| R6063      | ERDS2TJ223   |                         | 1/4W 22K 1  |         | C6017       | ECEA1EKL4R7  | Electrolytic 25V 4.7    | 1         |         |
| R6064      | ERDS2TJ682   |                         | 1/4W 6.8K 1 |         | C6018       | ECKF1H472KB  | Ceramic 50V 4700P       | 1         |         |
| R6065      | ERDS2TJ563   |                         | 1/4W 56K 1  |         | C6019       | ECKF1H222KB  | Ceramic 50V 2200P       | 1         |         |
| R6066,6067 | ERDS2TJ103   |                         | 1/4W 10K 2  |         | C6020       | ECKF1H103ZF  | Ceramic 50V 0.01        | 1         |         |
| R6068      | ERDS2TJ221   |                         | 1/4W 220 1  |         | C6021       | ECEA0JK220   | Electrolytic 6.3V 22    | 1         |         |
| R6069      | ERDS2TJ103   |                         | 1/4W 10K 1  |         | C6022       | ECKF1H103ZF  | Ceramic 50V 0.01        | 1         |         |
| R6070-6072 | ERDS2TJ104   |                         | 1/4W 100K 3 |         | C6023       | ECWM1H473KZ  | Ceramic 50V 0.047       | 1         |         |
| R6073      | ERDS2TJ224   |                         | 1/4W 220K 1 |         | C6024       | ECQV050104JB | Mylar 50V 0.1           | 1         |         |
| R6074      | ERDS2TJ104   |                         | 1/4W 100K 1 |         |             |              |                         |           |         |
| R6075      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6076      | ERDS2TJ223   |                         | 1/4W 22K 1  |         |             |              |                         |           |         |
| R6077,6078 | ERDS2TJ563   |                         | 1/4W 56K 2  |         |             |              | Switches                |           |         |
| R6079      | ERDS2TJ103   |                         | 1/4W 10K 1  |         | SW6001,6002 | EVQQS107K    |                         | 2         |         |
| R6080      | ERDS2TJ333   |                         | 1/4W 33K 1  |         | SW6003      | EVQQS107KA   |                         | 1         |         |
| R6081      | ERDS2TJ561   |                         | 1/4W 560 1  |         | SW6004-6006 | EVQQS107K    |                         | 3         |         |
| R6082,6083 | ERDS2TJ563   |                         | 1/4W 56K 2  |         | SW6007-6009 | EVQQS107KA   |                         | 3         |         |
| R6084      | ERDS2TJ103   |                         | 1/4W 100K 1 |         | SW1010,6011 | EVQQS107K    |                         | 2         |         |
| R6085      | ERDS2TJ333   |                         | 1/4W 33K 1  |         | SW6012      | ESD14184     |                         | 1         |         |
| R6086      | ERD25TJ560   |                         | 1/4W 56 1   |         | SW6014      | EMR2511      |                         | 1         |         |
| R6087      | ERDS2TJ273   |                         | 1/4W 27K 1  |         |             |              |                         |           |         |
| R6088      | EVN3ACA00B14 | Variable                | 10K 1       |         |             |              |                         |           |         |
| R6089      | ERDS2TJ563   |                         | 1/4W 56K 1  |         |             |              |                         |           |         |
| R6090,6091 | ERDS2TJ223   |                         | 1/4W 22K 2  |         |             |              |                         |           |         |
| R6092      | ERDS2TJ104   |                         | 1/4W 100K 1 |         |             |              | Connectors              |           |         |
| R6093      | EROS2TKG1803 | Metal                   | 180K 1      |         | JA-JD       | VJPI235T     | 8P                      | 4         |         |
| R6094      | ERO25CKF4703 | Metal                   | 470K 1      |         | P6020       | VJPI230T     | 3P                      | 1         |         |
| R6095      | ERDS2TJ564   |                         | 1/4W 560K 1 |         | P6021       | VJPI231T     | 4P                      | 1         |         |
| R6096      | ERDS2TJ223   |                         | 1/4W 22K 1  |         | P6022       | VJPI237T     | 10P                     | 1         |         |
| R6097      | ERDS2TJ334   |                         | 1/4W 330K 1 |         | P6023,6024  | VJPI233T     | 6P                      | 2         |         |
| R6098      | ERDS2TJ123   |                         | 1/4W 12K 1  |         | P6025       | VJPI237T     | 10P                     | 1         |         |
| R6099      | ERDS2TJ104   |                         | 1/4W 100K 1 |         |             |              |                         |           |         |
| R6100      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6101,6102 | ERDS2TJ223   |                         | 1/4W 22K 2  |         |             |              |                         |           |         |
| R6103      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6104,6105 | ERDS2TJ223   |                         | 1/4W 22K 2  |         |             |              |                         |           |         |
| R6106,6107 | ERDS2TJ104   |                         | 1/4W 100K 2 |         |             |              |                         |           |         |
| R6108      | ERDS2TJ472   |                         | 1/4W 4.7K 1 |         |             |              |                         |           |         |
| R6109-6111 | ERDS2TJ103   |                         | 1/4W 10K 3  |         |             |              |                         |           |         |
| R6112-6115 | ERDS2TJ223   |                         | 1/4W 22K 4  |         |             |              |                         |           |         |
| R6116      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6119-6124 | ERDS2TJ223   |                         | 1/4W 22K 6  |         |             |              |                         |           |         |
| R6125      | ERDS2TJ103   |                         | 1/4W 10K 1  |         |             |              |                         |           |         |
| R6126      | ERDS2TJ104   |                         | 1/4W 100K 1 |         |             |              |                         |           |         |
| R6127      | ERDS2TJ102   |                         | 1/4W 1K 1   |         |             |              |                         |           |         |
| R6128      | ERDS2TJ153   |                         | 1/4W 15K 1  |         |             |              |                         |           |         |
| R6129,6130 | ERDS2TJ104   |                         | 1/4W 100K 2 |         |             |              |                         |           |         |
| R6131      | ERDS2TJ562   |                         | 1/4W 5.6K 1 |         |             |              |                         |           |         |
| R6132      | ERDS2TJ104   |                         | 1/4W 100K 1 |         |             |              |                         |           |         |
| R6133      | ERDS2TJ223   |                         | 1/4W 22K 1  |         |             |              |                         |           |         |





| Ref. No. | Part No.   | Part Name & Description    | Pcs / Set | Remarks | Ref. No. | Part No.      | Part Name & Description | Pcs / Set | Remarks    |
|----------|------------|----------------------------|-----------|---------|----------|---------------|-------------------------|-----------|------------|
|          |            | Safety Tab SW P.C. Board   |           |         |          | ENC17553      | RF Converter            |           | NV-100E/EG |
|          |            |                            |           |         |          |               | Integrated Circuits     |           |            |
|          | VSH0017    | Safety Tab SW              | 1         |         | IC1      | AN6395        |                         | 1         |            |
|          |            |                            |           |         | UO-1     |               | UHF Oscillator          | 1         |            |
|          |            |                            |           |         |          |               | Transistors             |           |            |
|          | VJP1229T   | 2P Connector               | 1         |         | Q1,2     | 2SD636        |                         | 2         |            |
|          |            |                            |           |         | Q3,4     | 2SC1215       |                         | 2         | (R)        |
|          |            |                            |           |         |          |               | Diodes                  |           |            |
|          |            | Supply Photo TR P.C. Board |           |         | D1       | 1S953         |                         | 1         |            |
|          |            |                            |           |         | D3       | 1SS86         |                         | 1         |            |
|          |            |                            |           |         | D4       | MA1075        | Zener                   | 1         | or RD7.5E  |
|          | PN150NV    | Photo Transistor           | 1         |         |          |               | Resistors               |           |            |
|          | MA165      | Diode                      | 2         |         | R1       | ERD10TJ333    | 33K                     | 1         |            |
|          |            | Capacitor                  |           |         | R2       | ERJ8GCJ103    | Chip 10K                | 1         |            |
|          | ECEA1CK100 | Electrolytic 16V 10        | 2         |         | R3       | ERJ8GCJ331    | Chip 330                | 1         |            |
|          | VJP1230R   | 3P Connector               | 1         |         | R4       | ERJ8GCJ474    | Chip 470K               | 1         |            |
|          |            |                            |           |         | R5       | ERJ8GCJ392    | Chip 3.9K               | 1         |            |
|          |            |                            |           |         | R6       | ERJ8GCJ182    | Chip 1.8K               | 1         |            |
|          |            |                            |           |         | R7       | ERJ8GCJ122    | Chip 1.2K               | 1         |            |
|          |            |                            |           |         | R8       | ERJ8GCJ821    | Chip 820                | 1         |            |
|          |            |                            |           |         | R9       | ERJ8GCJ562    | Chip 5.6K               | 1         |            |
|          |            |                            |           |         | R10      | ERJ8GCJ151    | Chip 150                | 1         |            |
|          |            |                            |           |         | R11      | ERD10TJ472    | 4.7K                    | 1         |            |
|          |            |                            |           |         | R12,13   | ERJ8GCJ101    | Chip 100                | 2         |            |
|          |            |                            |           |         | R15      | ERJ8GCJ270    | Chip 27                 | 1         |            |
|          |            |                            |           |         | R16      | ERD10TJ751    | 750                     | 1         |            |
|          |            |                            |           |         | R17      | ERJ8GCJ121    | Chip 120                | 1         |            |
|          |            |                            |           |         | R18      | ERD10TJ393    | 39K                     | 1         |            |
|          |            |                            |           |         | R19      | ERD25FJ470    | 1/4W 47                 | 1         |            |
|          |            |                            |           |         | R20,21   | ERD10TJ822    | 8.2K                    | 2         | (UO-1)     |
|          |            |                            |           |         | R22      | ERD10TJ391    | 390                     | 1         | (UO-1)     |
|          |            |                            |           |         | VR1      | EVX138CA00B13 | Variable 1K             | 1         |            |
|          |            |                            |           |         | VR2      | EVX138CA00B14 | Variable 10K            | 1         |            |
|          |            |                            |           |         |          |               | Capacitors              |           |            |
|          |            |                            |           |         | C1       | ECEA1AK330    | Electrolytic 10V 33     | 1         |            |
|          |            |                            |           |         | C2       | ECEA1HK3R3    | Electrolytic 50V 3.3    | 1         |            |
|          |            |                            |           |         | C3       | ECCF1H101KZ   | Ceramic 50V 100P        | 1         |            |
|          |            |                            |           |         | C4       | CP2040CC      | Chip 4P                 | 1         |            |
|          |            |                            |           |         | C5       | CP2222MD      | Chip 2200P              | 1         |            |
|          |            |                            |           |         | C6       | CP2150CC      | Chip 15P                | 1         |            |
|          |            |                            |           |         | C7       | ECCF1H820KZ   | Ceramic 82P             | 1         |            |
|          |            |                            |           |         | C8       | CP2050CC      | Chip 5P                 | 1         |            |
|          |            |                            |           |         | C9       | CT1152ZX      | Semiconductor 1500P     | 1         |            |
|          |            |                            |           |         | C10      | ECEA1EK4R7    | Electrolytic 25V 4.7    | 1         |            |
|          |            |                            |           |         | C11      | CP2103MD      | Chip 0.01               | 1         |            |
|          |            |                            |           |         | C12      | CP2150J       | Chip 15P                | 1         |            |
|          |            |                            |           |         | C13      | CP2680J       | Chip 68P                | 1         |            |
|          |            |                            |           |         | C14      | CP2151J       | Chip 150P               | 1         |            |
|          |            |                            |           |         | C15      | CP2390J       | Chip 39P                | 1         |            |
|          |            |                            |           |         | C16      |               | Chip 27P                | 1         |            |
|          |            |                            |           |         | C17      | ECV1ZW25X53N  | Trimmer 25P             | 1         |            |
|          |            |                            |           |         | C18,19   | CP2181J       | Chip 180P               | 2         |            |
|          |            |                            |           |         | C20      | CY2102PE      | 1000P                   | 1         | (UO-1)     |
|          |            |                            |           |         | C21      | CX2331KB      | 330P                    | 1         | (UO-1)     |
|          |            |                            |           |         | C22      | CX2140K       | 14P                     | 1         | (UO-1)     |
|          |            |                            |           |         | C23      | CX2040C       | 4P                      | 1         | (UO-1)     |




**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

Electronic Tuner/Timer Unit

Vol. 5

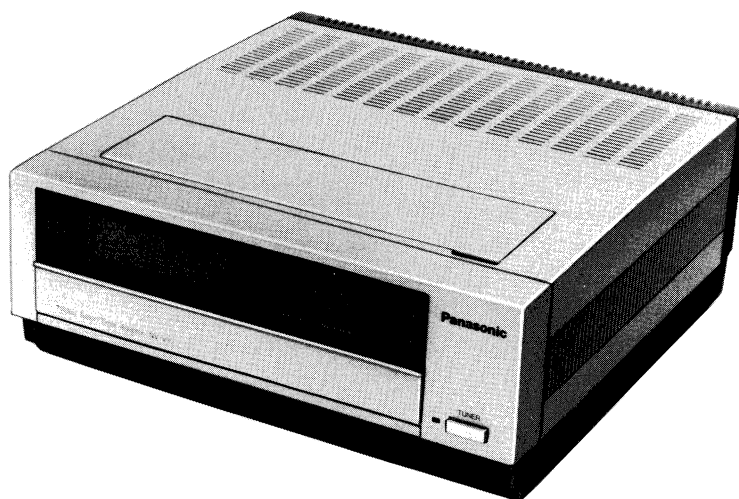Panasonic **VHS**NV-V10 <sup>-E</sup><sub>-B</sub><sub>-EO</sub>

## SPECIFICATIONS

|                    |                                                                                                                                                           |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power Source:      | NV-V100E, EO: 220 V<br>NV-V10B: 240 V AC, 50/60 Hz                                                                                                        |
| Power Consumption: | Approx. 43 watts                                                                                                                                          |
| Television System: | CCIR: 625 lines, 50 fields<br>PAL colour signal                                                                                                           |
| Timer:             | 14 day/4-programme timer with 1-hour<br>battery back-up system                                                                                            |
| Input:             | NV-V10E<br>VHF ch. 2—12.<br>UHF ch. 21—69.<br>NV-V10B<br>UHF ch. 21—69.<br>NV-V10EO<br>VHF ch. E2—S3 (Low)<br>M1—U9 (High)                                |
| Output:            | 75 $\Omega$ unbalanced (DIN)<br>Video: (11P connector)<br>1.0Vp-p, 75 $\Omega$ unbalanced<br>Audio: (11P connector)<br>130mVp-p, 2.2k $\Omega$ unbalanced |
| Weight:            | 3.4 kg                                                                                                                                                    |
| Dimensions:        | 232(W) $\times$ 95(H) $\times$ 261(D) mm                                                                                                                  |

Weight and dimensions shown are approximate.  
Specifications are subject to change without notice.

# Panasonic

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan

# CONTENTS

|                                                       |       |
|-------------------------------------------------------|-------|
| SPECIFICATIONS .....                                  | Cover |
| OPERATING INSTRUCTIONS .....                          | 5- 1  |
| ELECTRICAL ADJUSTMENT PROCEDURES .....                | 5-10  |
| LOCATION OF TEST POINT & CONTROLS .....               | 5-20  |
| CIRCUIT BOARD LAYOUT .....                            | 5-21  |
| PROGRAMMABLE TIMER BLOCK DIAGRAM .....                | 5-22  |
| POWER SUPPLY AND HIGH SPEED CHARGE BLOCK DIAGRAM .... | 5-23  |
| TV DEMODULATOR BLOCK DIAGRAM (NV-V10E/EO) .....       | 5-24  |
| TV DEMODULATOR BLOCK DIAGRAM (NV-V10B) .....          | 5-24  |
| PROGRAMMABLE TIMER CIRCUIT (NV-V10E/EO)               |       |
| [Timer, Timer Display, Switch, Selector, Selector     |       |
| Sub, IR Receiver & Back Up] .....                     | 5-25  |
| PROGRAMMABLE TIMER CIRCUIT (NV-V10B)                  |       |
| [Timer, Timer Display, Switch, Selector, Selector     |       |
| Sub, IR Receiver & Back Up] .....                     | 5-27  |
| TV DEMODULATOR CIRCUIT (NV-V10E/EO)                   |       |
| [TV Demodulator, Power Supply Sub, Fuse, Antenna,     |       |
| & Booster] .....                                      | 5-29  |
| TV DEMODULATOR CIRCUIT (NV-V10B)                      |       |
| [TV Demodulator, Power Supply Sub, Fuse, Antenna,     |       |
| & Booster] .....                                      | 5-31  |
| EXPLODED VIEWS .....                                  | 5-33  |
| MECHANICAL REPLACEMENT PARTS LIST .....               | 5-33  |
| ELECTRICAL REPLACEMENT PARTS LIST .....               | 5-34  |

## FEATURES

- 1. 16 station voltage synthesizer electronic tuner**  
The tuner is automatically tuned in to broadcasting station by using the search buttons.
- 2. 16 channel up-down selector channel indicator**  
When pressing the up or down button, you can easily find the desired channel.
- 3. Recording TV programmes and unattended recording.**  
The built-in tuner of the unit enables you to record TV programmes with the NV-100 Portable Video Cassette Recorder. The built-in programmable timer permits unattended recording of up to 4 programmes. It can be preset 2 weeks in advance to record your favorite TV programmes. It turns the recorder on and off and changes channels automatically. All you have to do is to set the timer, the recording will start and stop on schedule no matter where you are.
- 4. Recording while watching another programme.**  
The tuner permits you to record a programme on one channel while watching a different programme on TV.
- 5. Battery back-up**  
In the event of a power failure for less than 1 hour the programmed timer memory will be retained.

### IMPORTANT

**"Unauthorized recording of copyrighted television programmes, films, video tapes and other materials may infringe on the rights of copyright owners and be contrary to copyright laws."**

## PRECAUTIONS

- Before trying to operate the unit, make sure that the Timer Rec Switch is OFF.
- Do not block or cover the ventilation slots on the top, rear, and bottom of the unit, especially by soft material such as cloth or paper.
- Use this unit horizontally and do not place anything heavy on the unit, e.g. Portable Video Cassette Recorder etc.
- Do not attempt to disassemble the tuner. There are no user serviceable parts inside.

### CAUTION:


The NV-V10 is made for exclusively use with the NV-100 Portable Video Cassette Recorder.

### WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.




## INSTALLATION

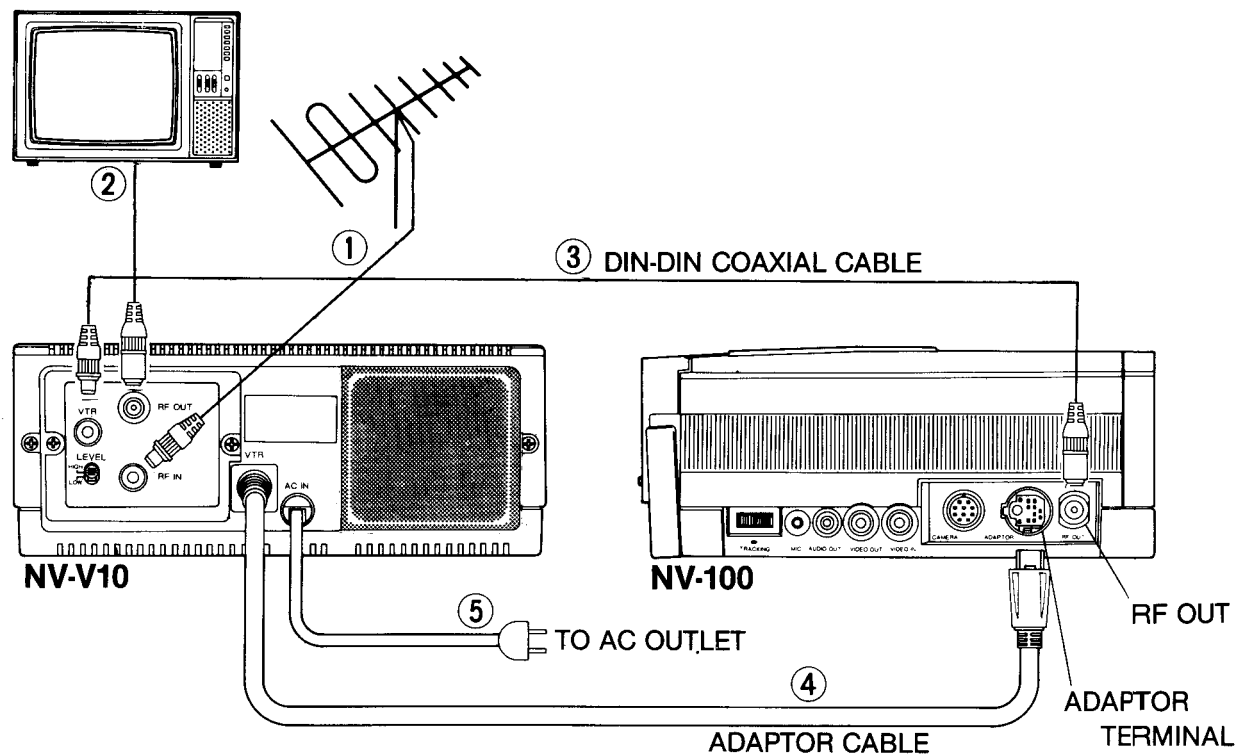

- ① Connect the external antenna to RF IN of the unit.
- ② Connect the TV to RF OUT of the unit.
- ③ The RF OUT of the recorder to VTR of the unit with the DIN-DIN Coaxial Cable supplied with the recorder.
- ④ Connect the Adaptor Cable to ADAPTOR TERMINAL of the recorder.
- ⑤ Plug in the unit.


Do not place the NV-100 portable video cassette recorder on top of the unit for use.

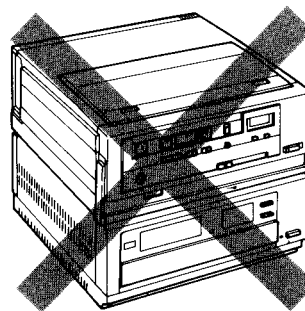


- Keep the unit away from the radio.

# CONTROLS AND COMPONENTS

## Top and FRONT

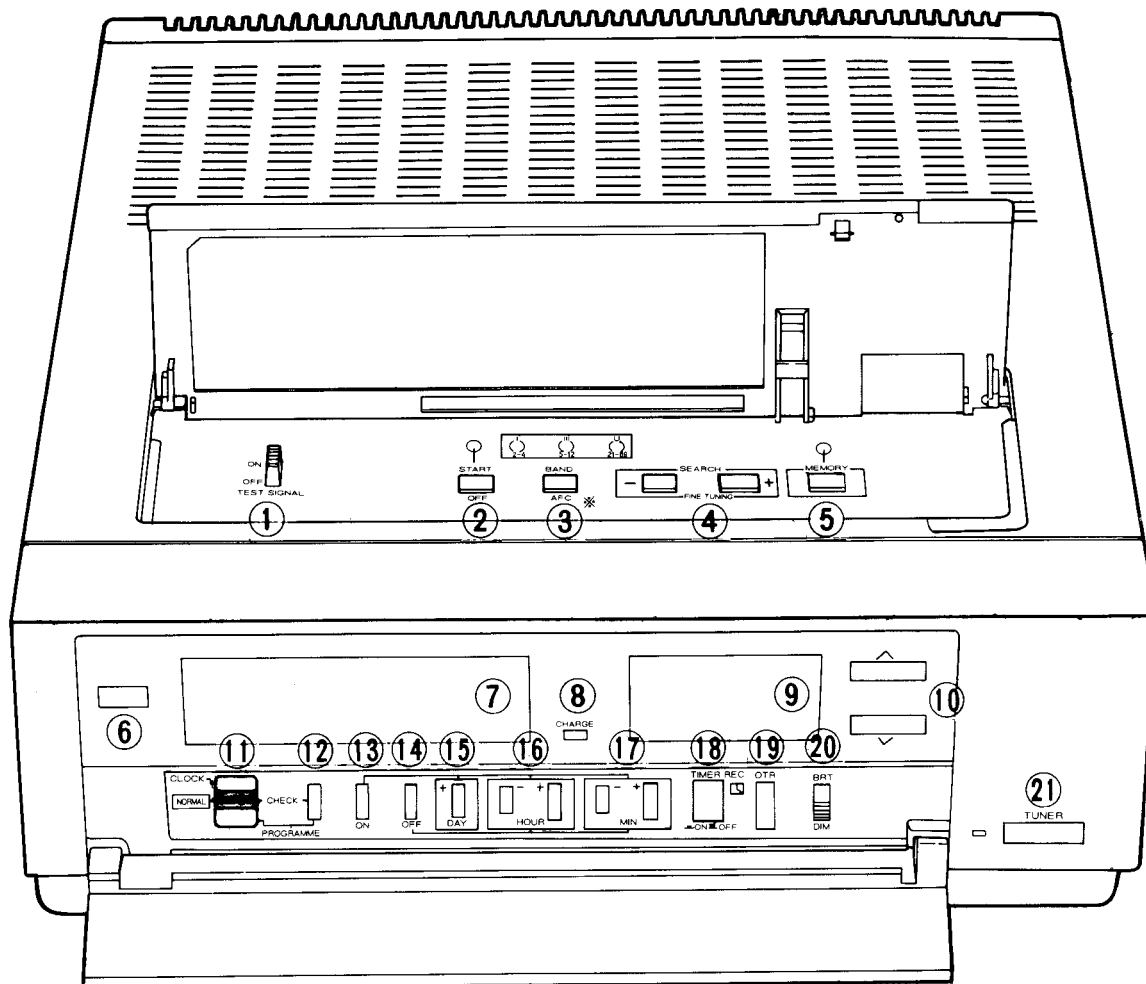

## REAR

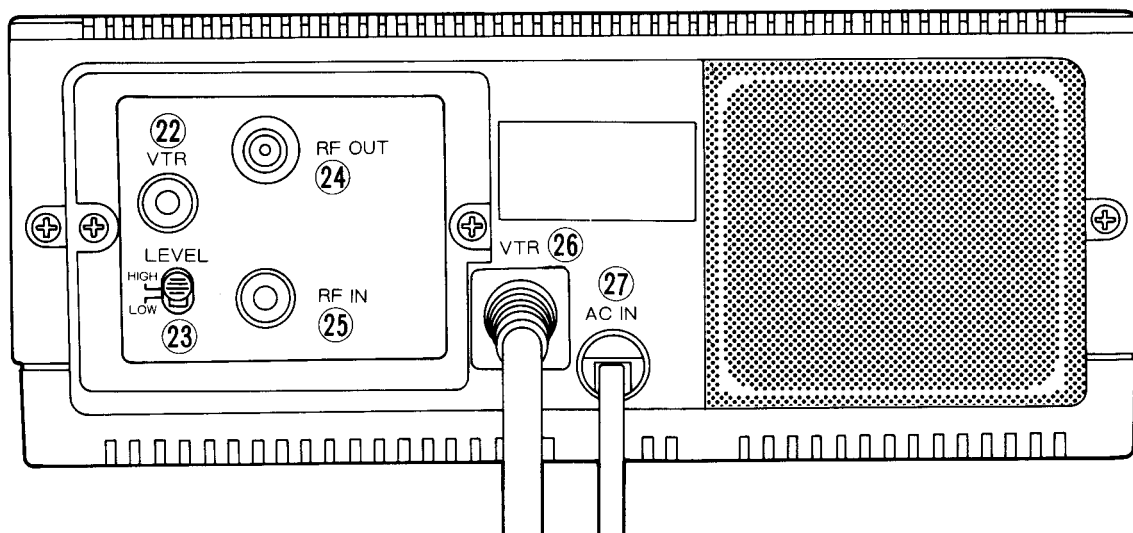

\* ③ The NV-V10-B (for the U.K.) does not come with a band button and band display lamps.

## TOP and FRONT

### ① Test Signal Switch [TEST SIGNAL]

This switch should normally be set to "OFF". To adjust the playback image (RF output channel): To tune the VHS RF output channel on TV, move this switch to "ON".

### ② Start Button [START]

This button is for the function of the SEARCH/FINE TUNING.

ON..... for BAND, SEARCH operation

OFF..... for AFC, FINE Tuning operation

When the SEARCH is working, the Start Button Lamp is flashing.

### ③ BAND/AFC Button [BAND/AFC]

BAND..... for selecting the position of UHF, VHF (high or low).

AFC..... Locks onto signal to keep the picture clear at all times.

The NV-V10-B (for the U.K.) does not come with a band button and band display lamps.

### ④ SEARCH/FINE TUNING Button [SEARCH/FINE TUNING]

SEARCH..... for tuning in the tuner to the broadcasting station.

FINE TUNING..... for fine adjustment.

### ⑤ Memory Button [MEMORY]

This function memorizes the station selected by the Start Button operation.

### ⑥ Remote Control Signal Receiver Window

Receive the signal from the Wireless Remote Control. (NV-A17 optional).

### ⑦ Programmable Clock/Timer

This built-in programmable clock/timer constantly displays the time of day and is used for timer recording.

### ⑧ Charging Indicator Lamp [CHARGE]

Lights up while the battery pack of the recorder is being charged.

When charging has been completed, this lamp will go off. Charging will not occur during operation of the recorder therefore, this lamp will not light up when the recorder is ON.

### ⑨ Channel, CH. Lock, AFC Indicator

Indicates the CH. Lock, AFC, the channel number.

The CH. Lock is displayed on the channel display panel when the recording or OTR is working.

The AFC is displayed on the channel display panel when the AFC is working.

### ⑩ Channel Up and Down Buttons

Press to change the channel upwards or downwards.

### ⑪ Mode Selector Switch

"CLOCK" position is for setting Digital Clock for Time of Day. "NORMAL" position is for normal clock operation, and for check on programmed times.

"PROGRAMME" position is for presetting of unattended recording.

### ⑫ PROGRAMME Button [PROGRAMME]

Used to select a programme number to be set for unattended recording and to confirm the contents of preset programmes.

### ⑬ ON Button [ON]

Push to preset a starting time for recording.

### ⑭ OFF Button [OFF]

Push to preset a stop time for recording.

### ⑮ DAY Buttons [DAY]

For setting of the Day.

"+" Button will advance days.

### ⑯ HOUR Buttons [HOUR]

For setting of the Hour.

"+" Button will advance hours and "-" Button will retrace hours.

### ⑰ Min Buttons [MIN]

For setting of the Minute.

"+" Button will advance minutes and "-" Button will retrace minutes.

### ⑱ Timer Rec Switch [TIMER REC]

Push after programming unattended recording.

When TIMER REC is ON, you CANNOT operate the unit and the recorder manually.

### ⑲ One Touch Timer Recording Button [OTR]

Enables you to do impromptu recordings at any time. Just select the channel and push the OTR Button for 30, 60, 90 or 120 minutes of recordings.

### ⑳ Dim/Bright Switch [BRT/DIM]

Changes the brightness of the Digital Clock.

### ㉑ Operation Switch [TUNER]

Turns the unit on and off.

## REAR

### ㉒ VTR Connector [VTR]

For connection with RF OUT of the recorder.

### ㉓ RF Signal Level Switch [LEVEL]

Used to attenuate the reception of the VHF and/or UHF antenna signals.

If the reception is normal, set to "HIGH". If the signal strength is high and the striped pattern appears at the top of the picture on TV, set to "LOW".

### ㉔ RF Output Connector [RF OUT]

For connection to the antenna terminal (COAXIAL type) of TV with the DIN-DIN Coaxial Cable supplied with the recorder.

### ㉕ RF Input Connector [RF IN]

For connection with the external antenna.

### ㉖ Adaptor Cable [VTR]

Connect to Adaptor Terminal of the recorder.


### ㉗ AC Power Cord [AC IN]

Connect to a AC outlet.

## RF OUTPUT CHANNEL

An RF converter built into the Portable Recorder NV-100 will allow you to play back the tape on a TV set through an unused broadcast channel. For this purpose your TV must be tuned to the RF Output channel in the following way.

1. Make connection as shown in the section "INSTALLATION".
2. Turn TV on and select a spare channel that will be used for playback, in some cases this may be marked A/V or VCR.
3. Turn on the unit and the recorder.
4. Set TEST SIGNAL to "ON" and adjust TV until the pattern shown below is received.

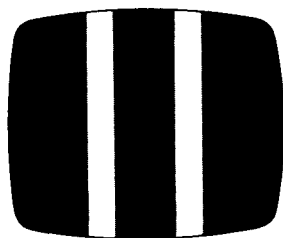

5. Set TEST SIGNAL to "OFF". Your TV is now ready to receive the RF output signal from the recorder.



**Note:**

When TEST SIGNAL is in "ON", the striped pattern will be seen on TV. When it is in "OFF", you can use the unit normally.

## TUNER SETTING

- Your NV-V10 can receive up to 16 TV stations. The tuner can be received any channel within the range of channels as shown in the table.

|                  | VHF             |                    | UHF                  |
|------------------|-----------------|--------------------|----------------------|
|                  | I               | III                | U                    |
| <b>NV-V10-B</b>  | —               | —                  | 21 — 69              |
| <b>NV-V10-E</b>  | Band I<br>2 — 4 | Band III<br>5 — 12 | Band IV/V<br>21 — 69 |
| <b>NV-V10-EO</b> | E2 — S3         | M1 — U9            | 21 — 69              |

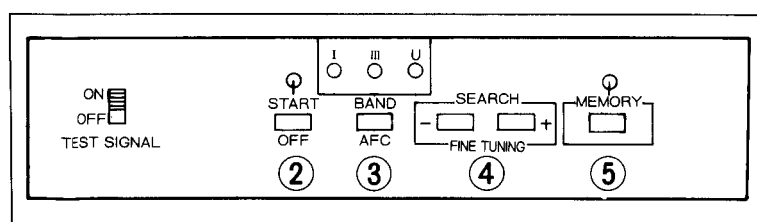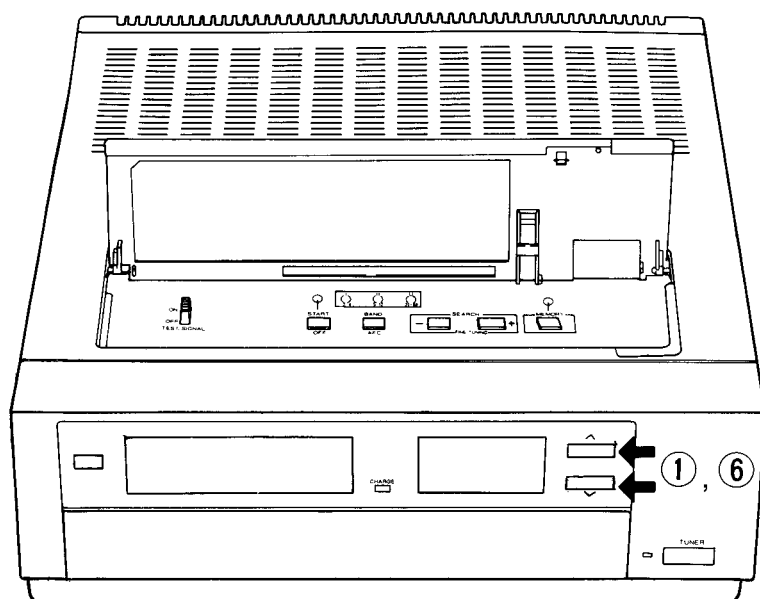

- Connect the deck (NV-100) and TV set to the tuner, switch on the power and set the Timer Rec button to OFF. Turn TV Tuner and Recorder ON.

- ① Select the channel.
  - ② Press the Start Button. The corresponding lamp lights up.
  - ③ The band can be selected by pressing the BAND Button. Push this button once to advance to the next band. (The corresponding lamp lights up.)
- It may be faster to press the Band Button to select the band than to press the Search Button.
  - The NV-V10-B (for the U.K.) does not come with a band button. Therefore, this operation is not necessary if you have purchased this particular model.

- ④ The broadcasting stations are automatically tuned in by pressing the (+) or (–) SEARCH Button once. (The START Lamp will flash on and off during Search).

When the tuner is tuned in to the station, the START Lamp changes to a lighted state, the AFC Indicator appears on the channel display panel and the search operation is concluded.

If the station received is not the desired one, press the (+) or (–) SEARCH Button again.

When the (+) button is pressed, “ ■ ” on the channel display increases one by one to 6 pieces (to high channel range).

When the (–) button is pressed, “ ■ ” on the channel display panel decreases one by one to 0 (to low channel range).


- ⑤ The tuner is tuned in to the desired station, push the MEMORY Button to memorize it.
- ⑥ To set the next channel, select the Channel Up and Down Switch and then repeat steps ③ through ⑤
- ⑦ After all the desired channels have been set, push the Start Button OFF. The lamp goes OFF and the AFC Indicator appear on the channel display panel.

## TO FINE TUNE THE CHANNEL


If it should be necessary to fine tune a channel to obtain a clear picture, adjust the fine tuning manually as follows.

1. Check that the START Button is set to OFF.
  2. Press and hold “+” or “–” FINE TUNING Button – the AFC indicator on the channel display panel will disappear – until the best possible picture is obtained. Release the Button when you get a clear picture.
  3. After the fine tuning is completed, push the MEMORY Button to lock the fine tuning of channel.
- If you wish to restore the AFC function, set the AFC Button to ON.


## RECORDING TV PROGRAMMES

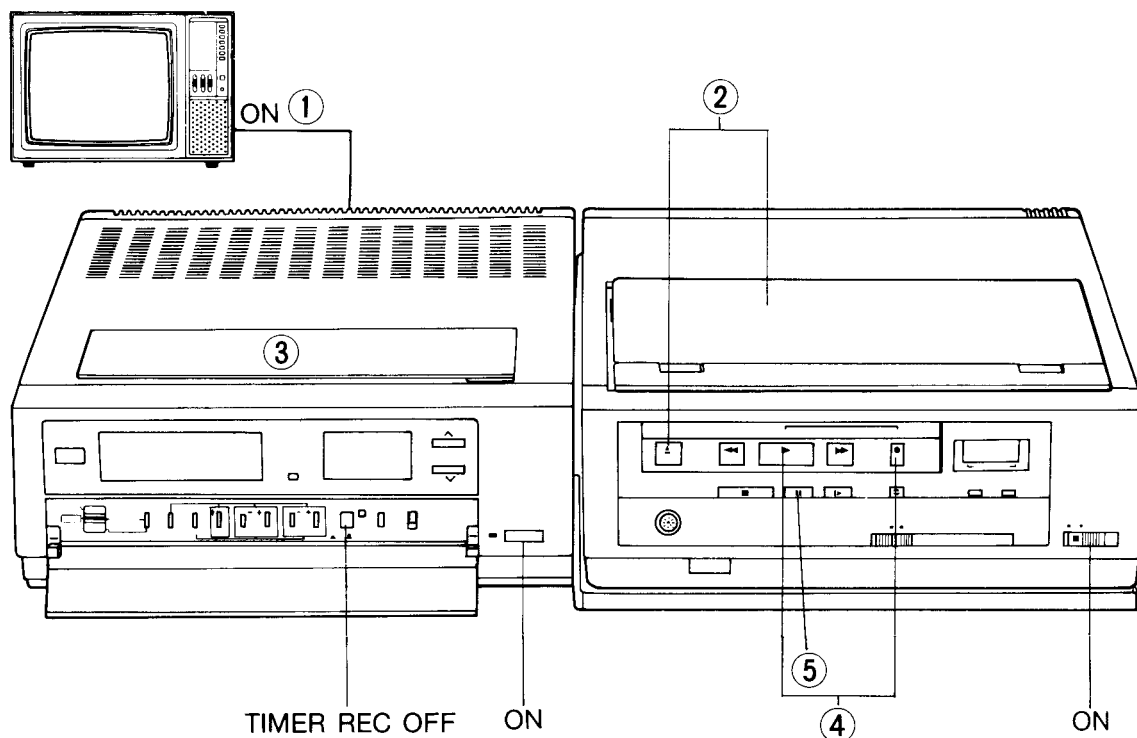

- ① Turn the TV on and tune it to the RF Output channel.
- ② Insert a cassette.
- ③ Select a programme to be recorded and confirm proper reception on TV.
- ④ Push REC together with PLAY.

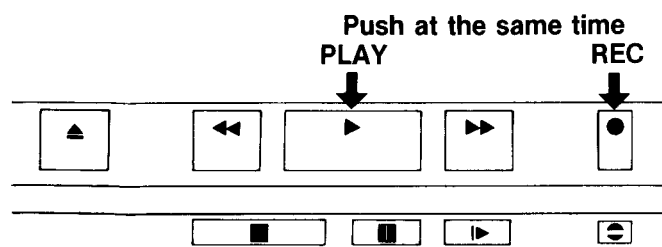

- ⑤ Push PAUSE/STILL to stop the tape temporarily if you wish to avoid recording unwanted material of a TV programme.

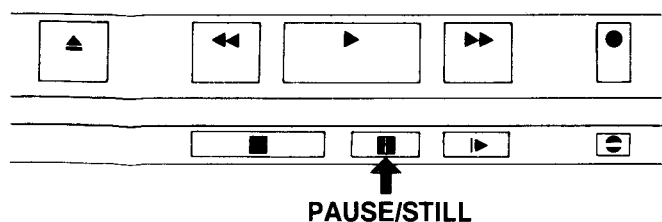


### Notes:

- Do not keep the recorder in the pause mode in excess of 4 minutes at a time. The recorder will automatically release after about 5 minutes and stop.
- When joining a new recording to already recorded material from the stop mode, first play back the last part of the already recorded material in order to confirm its end point, and then start recording after stopping the tape temporarily.
- If the cassette tab is missing no recording can be performed.
- Connect the Wired Remote Controller (NV-A13, optional) to REMOTE to operate Rec, Rec-Pause mode from a distance. Wireless Remote Controller (NV-A17, optional) can also operate the unit from a distance.
- If you wish to view another programme while you are recording, select the channel to be viewed on TV.




## PLAYBACK

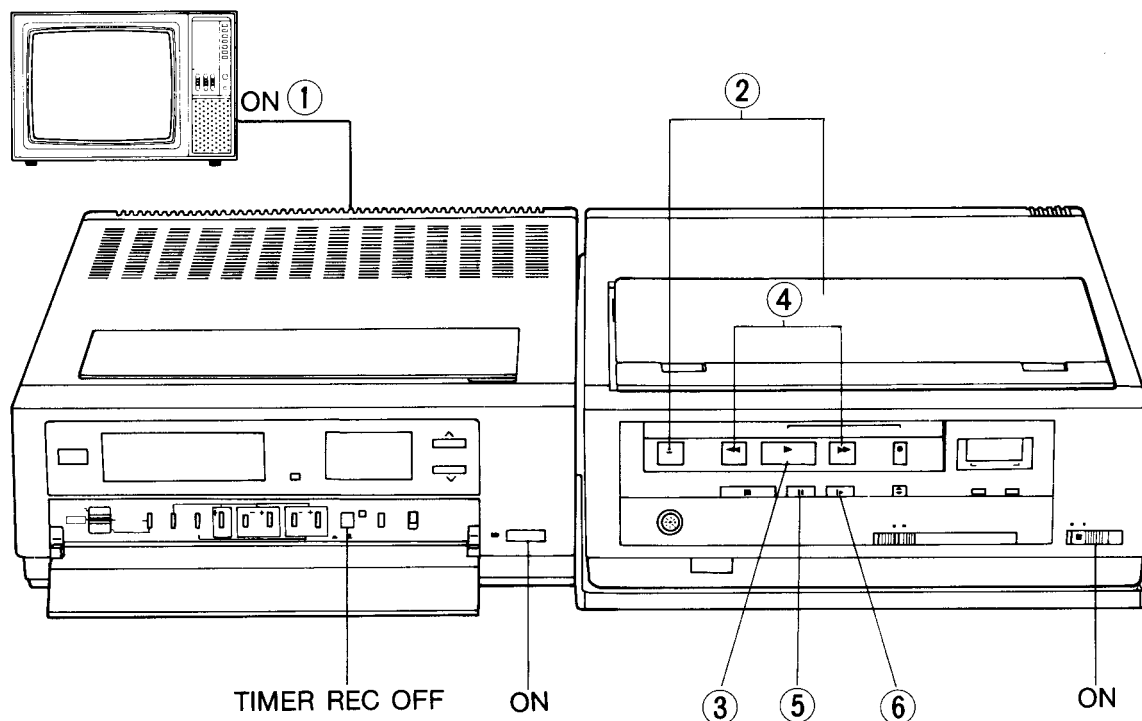

① Turn the TV on and tune it to the RF Output channel.


② Insert a cassette.

③ Push PLAY.

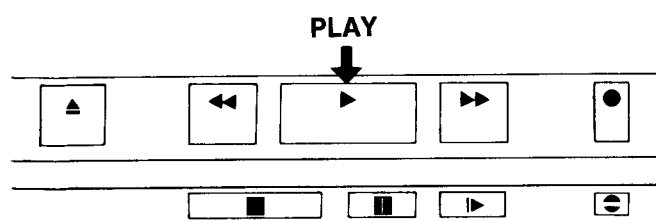


● Use CUE/REVIEW, PAUSE/STILL or SLOW if you wish to view multi-motion pictures.


④ Press REVIEW or CUE to rapidly locate a particular segment. (about 5 times normal speed).

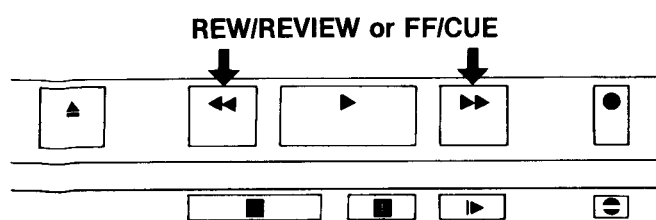

⑤ Push PAUSE/STILL to view a still-frame picture.

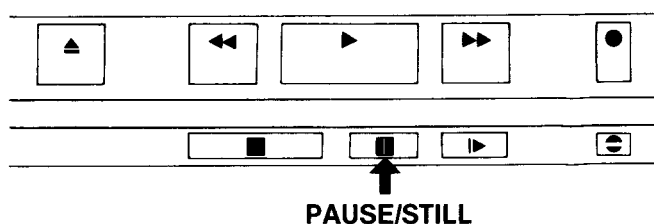


⑥ Push SLOW to view a fine-slow picture. (about 1/5 normal speed)

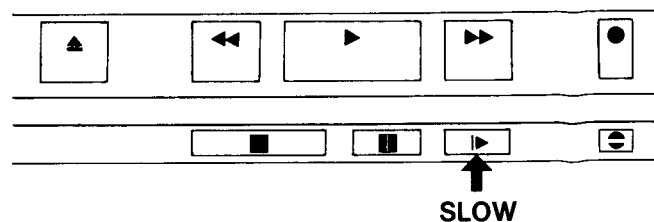

The Remote Controller (option) — Wireless remote controller (NV-A17), Wired remote controller (NV-A13) — can operate the multi-motion playback from a distance.

## BATTERY CHARGING

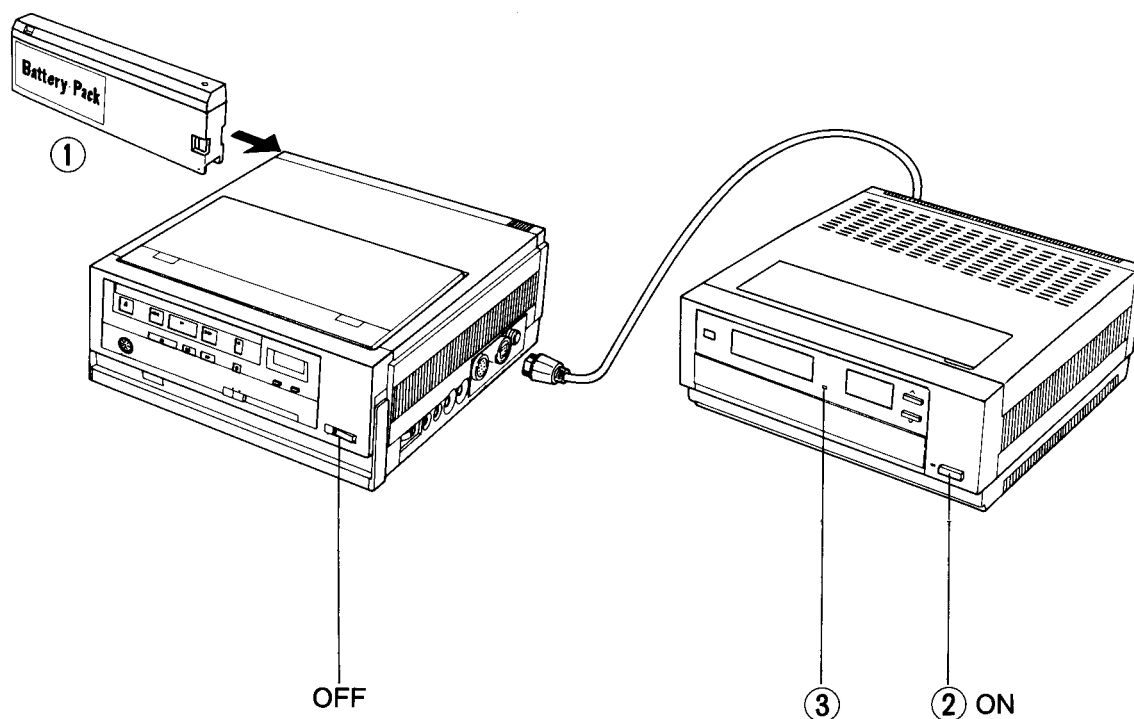

- Turn the unit on and set TIMER REC off.
- Set the both unit power off and connect the Adaptor-Cable of the Tuner to the Adaptor Terminal of the recorder.

- ① Insert the battery pack into the battery compartment of the recorder.
- ② Turn the unit on, and the battery pack in the recorder will start to charge.
- ③ The CHARGE Lamp will light up during charging.

### Notes:

- The CHARGE lamp will usually go off in 2 hours, but charging time varies according to the battery pack's condition (the suitable ambient temperature is 10°C~30°C). Continue charging for 2 hours after the CHARGE lamp goes off to prolong the life of the battery pack.
- Overcharging will make the battery pack's life shorter. Do not keep charging more than 24 hours.
- The useful operation time of the battery pack will gradually decrease after several discharges and recharges. The battery pack is no longer serviceable if the operation time is too short even after a sufficient charge.

# ELECTRICAL ADJUSTMENT PROCEDURES

This section provides complete electrical adjustment procedure which may be required for electronic circuits of ELECTRONIC TUNER/TIMER UNIT.

## 1. Test Equipment

To perform the electrical adjustments completely, the following equipments are required.

1. DVM (Digital Volt Meter)  
Voltage Range: 0.01 - 50V
2. Frequency Counter  
Frequency Range: 0 - 10MHz
3. DC Voltage Supply: (0 - 20V)
4. Dual-Trace Oscilloscope  
Voltage Range: 0.05 - 50V/Div.  
Frequency Range: DC - 10MHz  
Probes: 10:1, 1:1
5. TV Channel Signal Generator
6. DC Amperemeter  
Current Range: 0 - 10A
7. VIF Sweep & Trap Generator
8. Spectrum Analyzer
9. Color TV Receiver or Monitor
10. Attenuator (-0dB - -50dB)
11. Monitor Scope
12. Non-metallic Screwdriver (Using TV Demodulator Section) and Plastic Tip Driver.

## 2. Adjustment Procedures

These adjustment procedures consist of the following sections.

1. Power Supply Section
2. TV Demodulator Section (NV-V10E/EO)
3. TV Demodulator Section (NV-V10B)
4. Timer Section

### 2-1. Power Supply Section

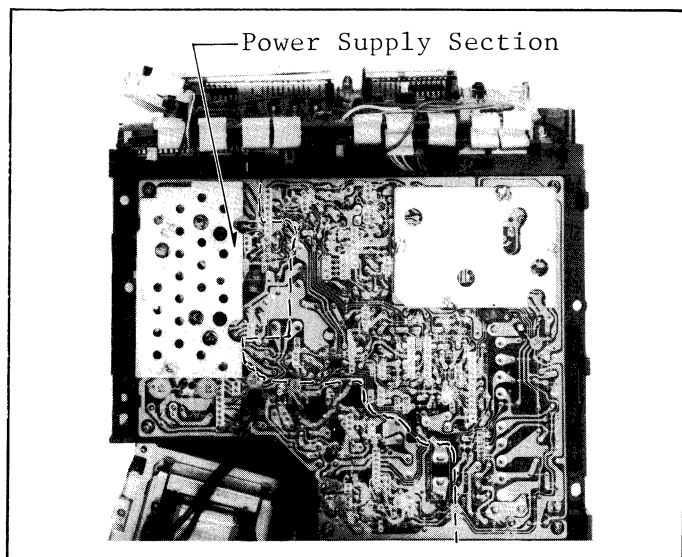


Fig. E1

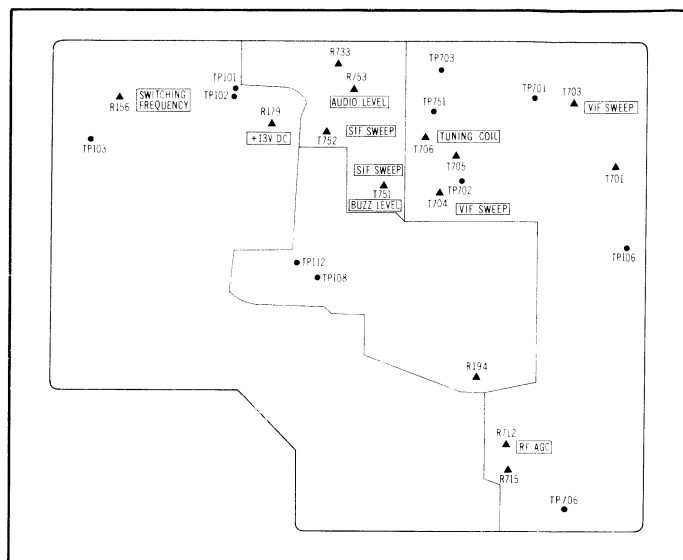


Fig. E2

### 2-1-1. Switching Frequency Adjustment

Test Point: Q157 (C)

Adjustment: R156

1. Connect the 10.8Ω Resistor between pin 5 and pin 6 of P105.
2. Connect the oscilloscope to the collector of Q157.
3. Adjust R156 so that the frequency is  $25\text{kHz} \pm 0.5\text{kHz}$ .

### 2-1-2. +13V DC Adjustment

Test Point: TP102

Adjustment: R179

1. Connect the 10.8Ω Resistor between pin 5 and pin 6 of P105.
2. Connect the D.V.M to TP102.
3. Adjust R179 so that the voltage is  $13.0 \pm 0.1\text{V DC}$ .

## 2-2. TV Demodulator Section

Model No. NV-V10E

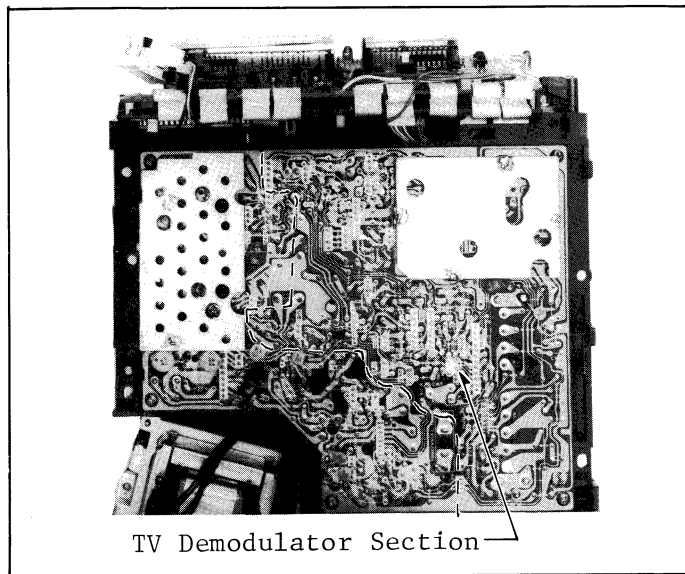


Fig. E3

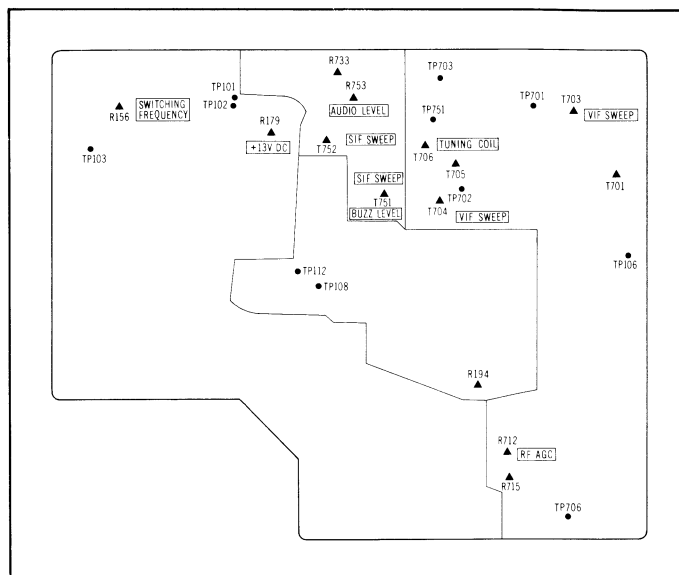


Fig. E4

This section provides complete electrical adjustment procedures which may be required for TV demodulator circuit.

### Test Equipment

To make adjustments completely, following equipments are required.

1. VIF Sweep Generator  
.....38.9MHz
2. SIF Sweep Generator  
.....5.5MHz  $\pm$  150kHz
3. Digital Volt Meter
4. Oscilloscope

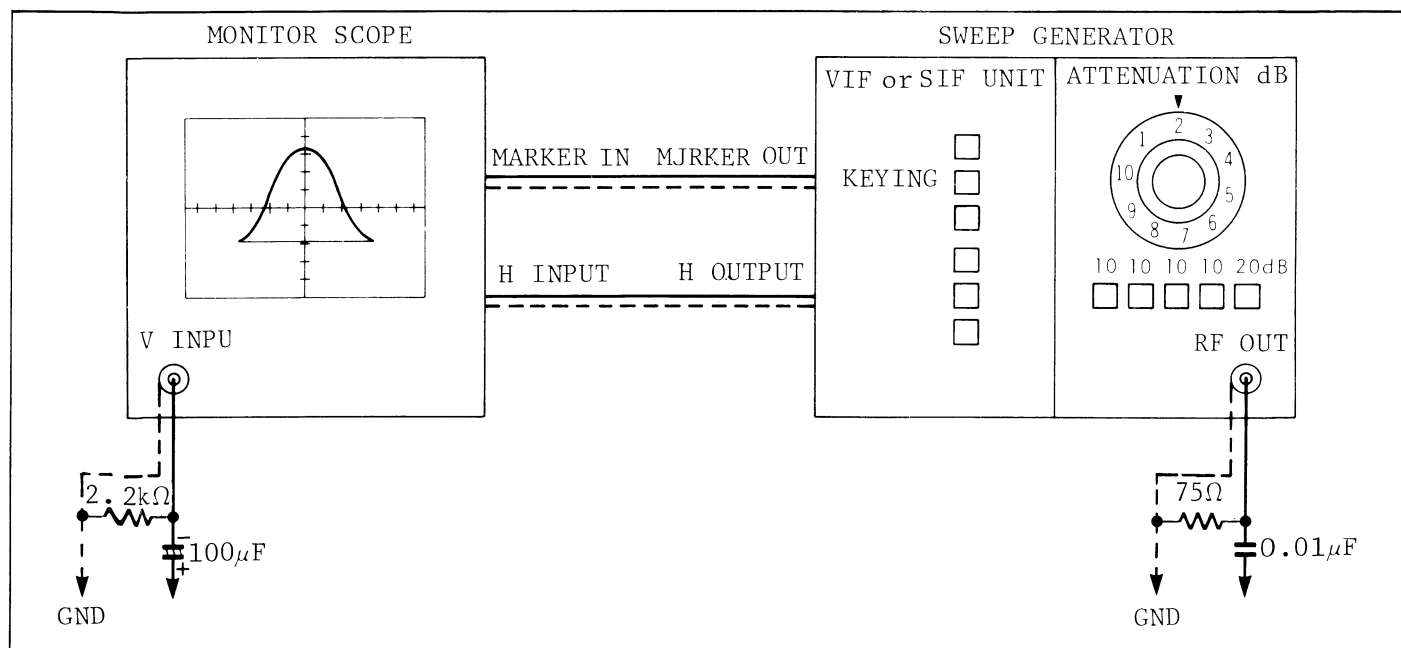


Fig. E5 Connection of Measuring Equipment

#### 2-2-1. 38.3MHz Tuning Coil Adjustment

Test Point: TP706

Adjustment: T706, T705

1. Connect the H-Out of the VIF Sweep Generator to the H-In of the scope.
2. Connect the Marker-Out of the VIF Sweep Generator to the Marker-In or Z Terminal of the Scope.
3. Connect the output of the VIF Sweep Generator to TP702.
4. Connect the scope to TP706.
5. Supply the DC Voltage ( $4 \sim 5V$ ) to TP701 so that the noise level on the sweep waveform becomes minimum.
6. Turn T706 2 turns clockwise or counterclockwise.
7. Adjust the output of the VIF Sweep Generator so that the sweep wave becomes  $0.1Vp-p$ .
8. Adjust T705 so that the marker position of 38.9MHz becomes maximum as shown in Fig. E6.

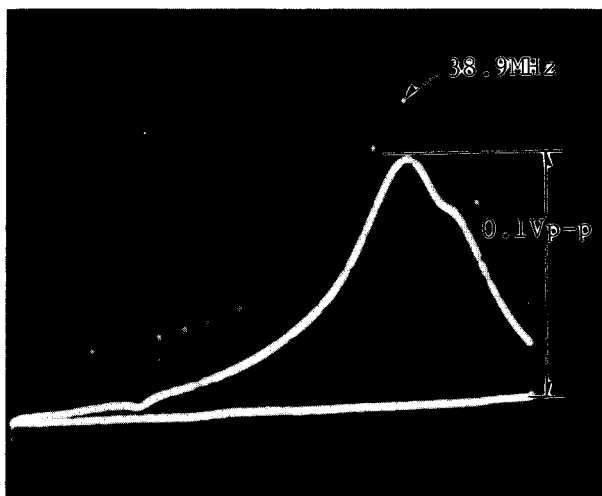


Fig. E6.

9. After this completed adjustment, adjust T706 so that 38.9MHz marker position is shown in Fig. E7.

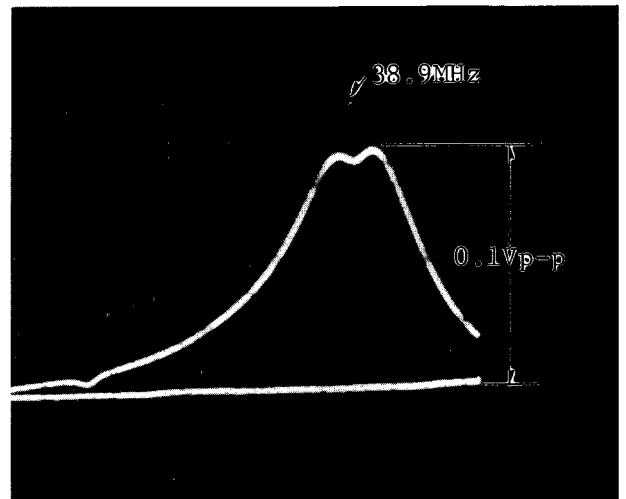


Fig. E7.

#### 2-2-2. VIF Tuner Converter Coil Adjustment

Test Point: TUNER TP

Adjustment: TUNER CONVERTER COIL

1. Connection of measuring equipments is shown in Fig. E5.
2. Set the channel selector to the VHF High position ( $V_H$ ) and set the tuning button so that the voltage at pin 1 of P7001 (BT Voltage) becomes  $10V \pm 0.5$  Volts DC.
3. Connect the DC Voltage Regulator ( $6.5V \pm 0.2V$ ) to AFC terminal of Tuner Unit.
4. Connect the jumper wire between TP703 and GND.
5. Connect the output of VIF Sweep Generator to Tuner test point.
6. Connect the scope to TP707.
7. Adjust the attenuator of VIF Sweep Generator so that the amplitude of output waveform becomes  $0.1Vp-p$ .
8. Adjust the tuner converter coil so that the amplitude at 34.47MHz marker position and 38.9MHz marker position are same.

### 2-2-3. VIF Sweep Adjustment

Test Point: TP706

Adjustment: T704, T703

1. Connection of measuring equipments is the same as in the 38.9 MHz Turning Coil Adjustment.
2. Set the Channel Selector to the VHF High position (VH) and see the tuning button so that the voltage at pin 1 of P7001 becomes  $10 \pm 0.5$  Volts DC.
3. Connect the jumper wire between TP703 (RF AGC) and ground.
4. Connect the  $100\Omega$  resistor between TP704 and TP705.
5. Connect the scope to TP706.
6. Connect the output of VIF Sweep Generator to tuner test point.
7. Adjust the output of the VIF Sweep Generator so that the level of VIF waveform becomes 1.0Vp-p.
8. Release 20dB from the attenuator of the Sweep Generator.
9. Set DC Voltage Regulator to TP701, and supply the Voltage so that the level of VIF waveform becomes 1.0Vp-p.
10. Adjust T704 so that the attenuation of the 33.4MHz trap becomes maximum.
11. Adjust T703 (A) so that the attenuation of the 40.4MHz trap becomes maximum.
12. Adjust T701 and (C)(D)(E)(F) of T703 so that the Sweep output waveform becomes as shown Fig. E8.

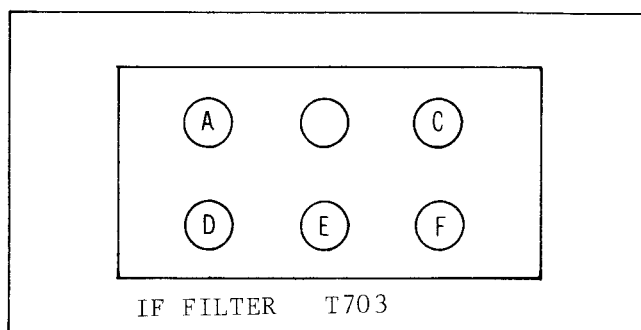


Fig. E9

### 2-2-4. RF AGC Adjustment

Test Point: TP703

Adjustment: R712

1. Set the AFC SW to ON.
2. Tune in VHF colour bar signal.
3. Set the input level of electric field to  $65 \pm 2$  dB.  
(Using the Attenuator and Spectrum Analyzer)
4. Connect the D.V.M to TP703.
5. Turn the VHF AGC (R712) fully counterclockwise from component side. (Set to the maximum voltage)
6. Then slowly turn the R712 till just before the Voltage drop.
7. Change the input electric field from 65dB to 68dB.
8. Confirm that the voltage at TP703 is dropped more than 1.5 Volts.
9. Next tune in UHF colour bar signal.
10. Set the input level at electric field to  $60 \pm 2$  dB.
11. Turn the UHF AGC (R715) fully counterclockwise from component side. (Set to the maximum voltage)
12. Then slowly turn the R715 till just before the voltage drop.
13. Change the input electric field from 60dB to 63dB.
14. Confirm that the voltage at TP703 is dropped more than 1.5 Volts.

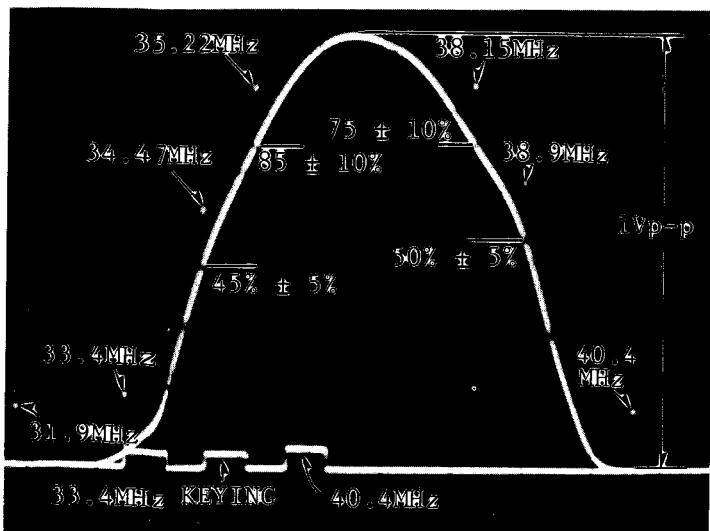


Fig. E8. VIF Waveform

#### 2-2-5. SIF Sweep Adjustment

Test Point: TP752

Adjustment: T752, T751

1. Connect the H-Out of the SIF Sweep Generator to the H-In of the scope.
2. Connect the Marker-Out of the SIF Sweep Generator to the Marker-In or Z-terminal of the scope.
3. Connect the oscilloscope to the output of the SIF Sweep Generator and set the sweep output to 6mVp-p.
4. Connect the output of the SIF Sweep Generator to TP751.
5. Connect the scope to TP752.
6. Connect the jumper wire between TP701 and GND.
7. Adjust T752 and T751 so that the amplitude at 5.5MHz is maximum.
8. Adjust T752 so that the 5.5MHz trap becomes maximum.

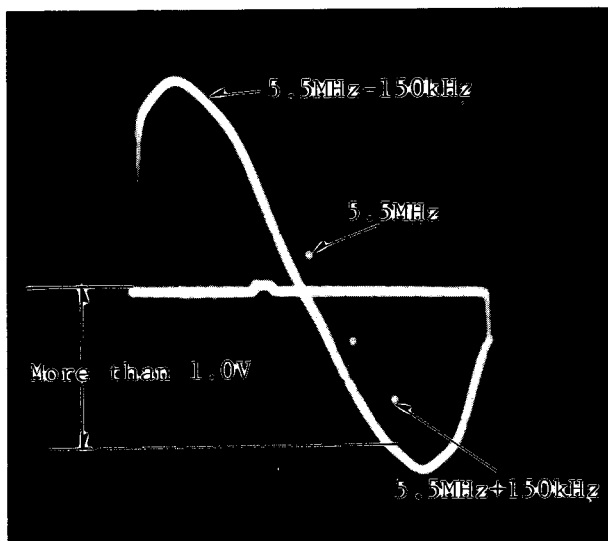


Fig. E10. SIF Waveform

#### 2-2-6. Audio Level Adjustment

Test Point: Pin 13 of one touch connector

Adjustment: R753

1. Set the AFC SW to ON.
2. Tune a audio signal of 1kHz with 30% modulated frequency. (VHF)
3. Connect the oscilloscope to pin 13 of one touch connector (2.2k $\Omega$  BALANCE).
4. Adjust R753 so that the level is  $240 \pm 50$ mVp-p.

#### 2-2-7. Buzz Level Adjustment

Test Point: Pin 13 of one touch connector

Adjustment: T751

1. Set the AFC SW to ON.
2. Tune a Philips test pattern with NO audio. (VHF)
3. Connect the oscilloscope to pin 13 of one touch connector. (2.2k $\Omega$  BALANCE).
4. Adjust T751 so that Buzz level is minimum.



## 2-3. TV Demodulator Section

Model No. NV-V10B

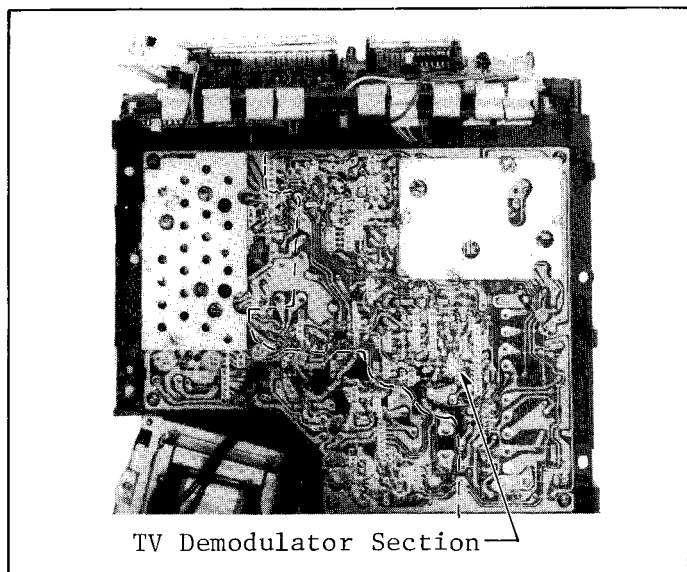


Fig. E11

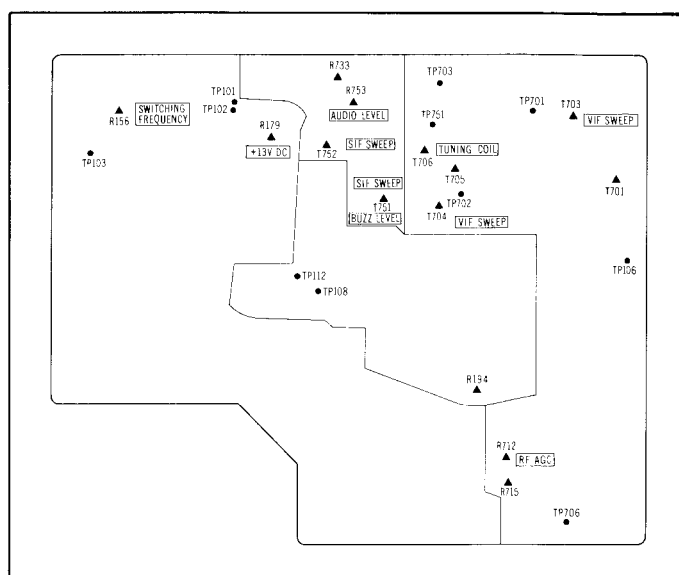


Fig. E12

This section provides complete electrical adjustment procedures which may be required for TV demodulator circuit.

### Test Equipment

To make adjustments completely, following equipments are required.

1. VIF Sweep Generator  
..... 39.5MHz
2. SIF Sweep Generator  
..... 6.0MHz  $\pm$  150kHz
3. Digital Volt Meter
4. Oscilloscope

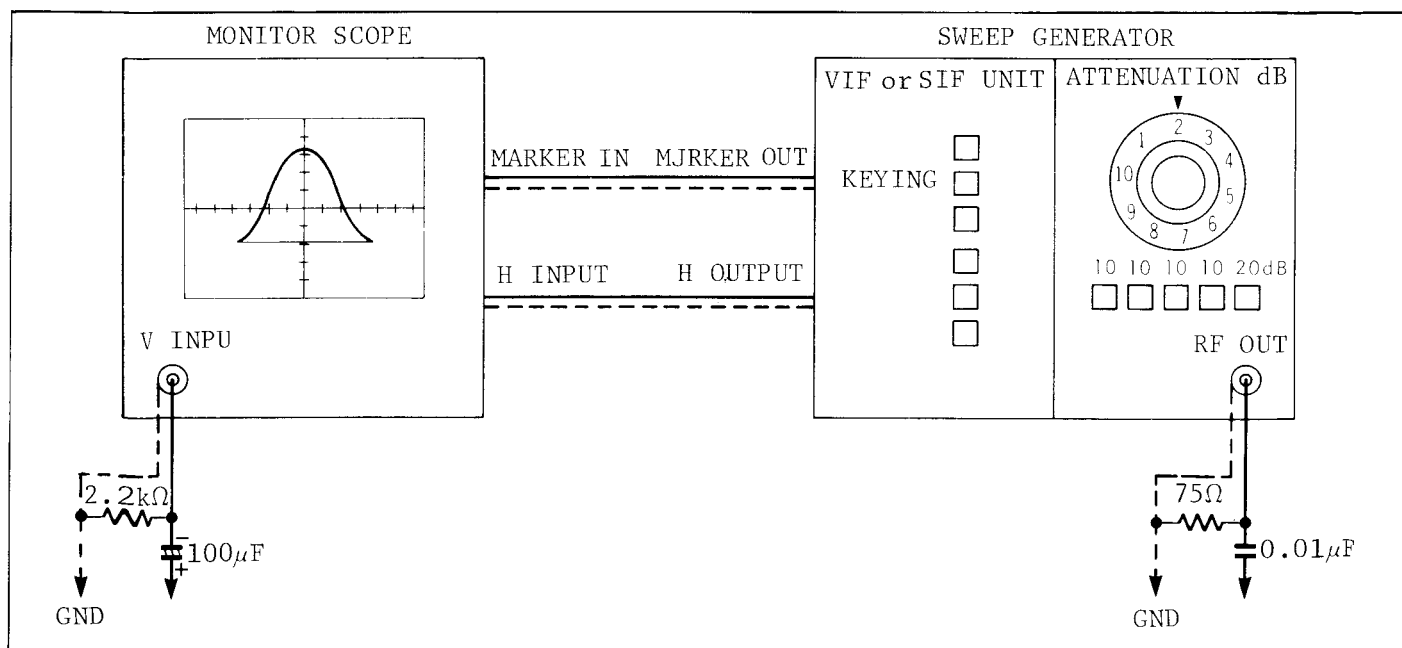


Fig. E13. Connection of Measuring Equipment

### 2-3-1. 39.5MHz Tuning Coil Adjustment

Test Point: TP706

Adjustment: T706, T705

1. Connect the H-Out of the VIF Sweep Generator to the H-In of the scope.
2. Connect the Marker-Out of the VIF Sweep Generator to the Marker IN or Z Terminal of the Scope.
3. Connect the output of the VIF Sweep Generator to TP702.
4. Connect the scope to TP706.
5. Supply the DC Voltage ( $4 \sim 5V$ ) to TP701 so that the noise level on the sweep waveform becomes minimum.
6. Turn T706 2 turns clockwise or counterclockwise.
7. Adjust the output of the VIF Sweep Generator so that the Sweep wave becomes  $0.1Vp-p$ .
8. Adjust T705 so that the marker position of 39.5MHz becomes maximum as shown in Fig. E14.

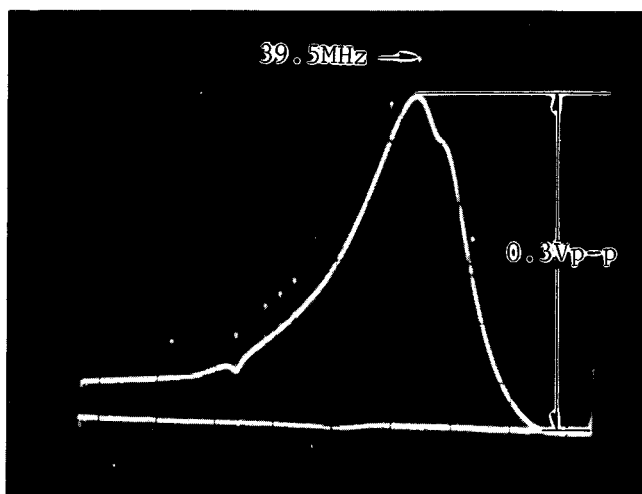


Fig. E14.

9. After this completed adjustment, adjust T706 so that 39.5MHz marker position is shown in Fig. E15.

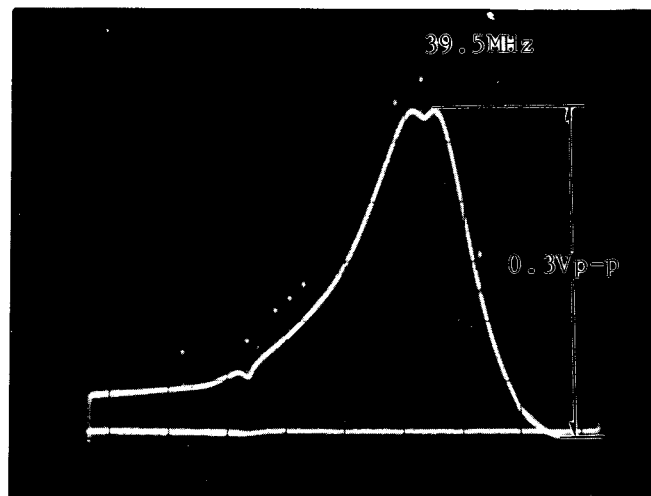


Fig. E15.

### 2-3-2. VIF Tuner Converter Coil Adjustment

Test Point: Tuner TP

Adjustment: Tuner Converter Coil

1. Connection of measuring equipments is shown in Fig. E13.
2. Set the channel selector to the VHF High position ( $V_H$ ) and set the tuning button so that the voltage at pin 1 of P7001 (BT Voltage) becomes  $11V \pm 0.5Volts$  DC.
3. Connect the DC Voltage Regulator ( $6.5V \pm 0.2V$ ) to AFC terminal of Tuner Unit.
4. Connect the jumper wire between TP703 and GND.
5. Connect the output of VIF Sweep Generator to Tuner test point.
6. Connect the scope to TP707.
7. Adjust the attenuator of VIF Sweep Generator so that the amplitude of output waveform becomes  $0.1Vp-p$ .
8. Adjust the tuner converter coil so that the amplitude at 35.07 MHz marker position and 39.5MHz marker position are same.

### 2-3-3. VIF Sweep Adjustment

Test Point: TP706

Adjustment: T704, T703

1. Connection of measuring equipments is the same as in the 39.5MHz Turning Coil Adjustment.
2. Set the Channel Selector to the VHF High position (VH) and set the tuning button so that the voltage at pin 1 of P7001 becomes  $11 \pm 0.5V$  DC.
3. Connect the jumper wire between TP703 (RF AGC) and ground.
4. Connect the  $100\Omega$  resistor between TP704 and TP705.
5. Connect the scope to TP706.
6. Connect the output of VIF Sweep Generator to tuner test point.
7. Adjust the output of the VIF Sweep Generator so that the level of VIF waveform becomes  $1.0V_{p-p}$ .
8. Release 20dB from the attenuator of the Sweep Generator.
9. Set DC Voltage Regulator to TP701, and supply the Voltage so that the level of VIF waveform becomes  $1.0V_{p-p}$ .
10. Adjust T704 so that the attenuation of the 33.5MHz trap becomes maximum.
11. Adjust T703 (A) so that the attenuation of the 41.5MHz trap becomes maximum.
12. Adjust T701 and (C)(D)(E)(G) of T703 so that the sweep output waveform becomes as shown Fig. E16.

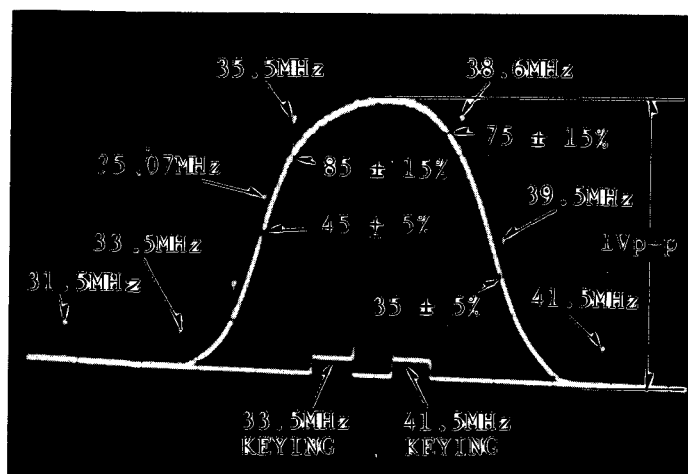


Fig. E16. VIF Waveform

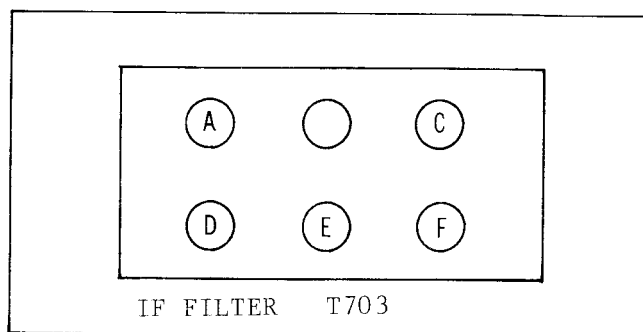


Fig. E17

### 2-3-4. RF AGC Adjustment

Test Point: TP703

Adjustment: R715

1. Set the AFC SW to ON.
2. Tune in UHF colour bar signal.
3. Set the input level of electric field to  $60 \pm 2dB$ .  
(Using the Attenuator and Spectrum Analyzer)
4. Connect the D.V.M to TP703.
5. Turn the UHF AGC (R715) fully counterclockwise from component side. (Set to the maximum voltage)
6. Then slowly turn the R715 till just before the Voltage drop.
7. Change the input electric field from 60dB to 63dB.
8. Confirm that the voltage at TP703 is dropped more than 1.5Volts.

### 2-3-5. SIF Sweep Adjustment

Test Point: TP752

Adjustment: T752, T751

1. Connect the H-Out of the SIF Sweep Generator to the H-In of the scope.
2. Connect the Marker-Out of the SIF Sweep Generator to the Marker-In or Z-terminal of the scope.
3. Connect the oscilloscope to the output of the SIF Sweep Generator and set the sweep output to 6 mVp-p.
4. Connect the output of the SIF Sweep Generator to TP751.
5. Connect the scope to TP752.
6. Connect the jumper wire between TP701 and GND.
7. Adjust T752 and T751 so that the amplitude at 6.0MHz is maximum.
8. Adjust T752 so that the 6.0MHz trap becomes maximum.

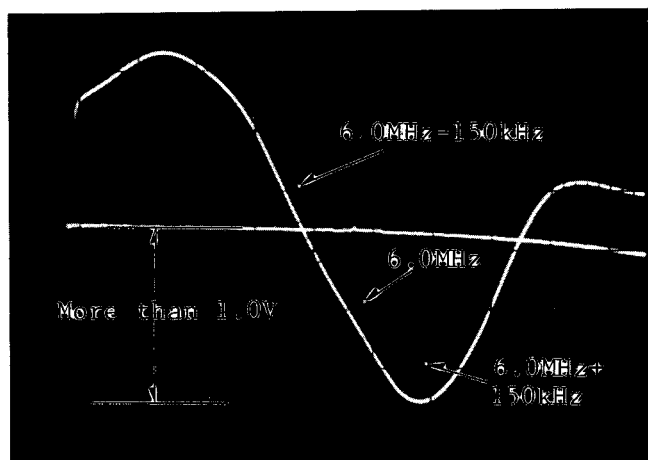


Fig. E18

### 2-3-6. Audio Level Adjustment

Test Point: Pin 13 of one touch connector

Adjustment: R753

1. Set the AFC SW to ON.
2. Tune a audio signal of 1kHz with 30% modulated frequency. (UHF)
3. Connect the oscilloscope to pin 13 of one touch connector (2.2k $\Omega$  BALANCE).
4. Adjust R753 so that the level is  $240 \pm 50\text{mVp-p}$ .

### 2-3-7. Buzz Level Adjustment

Test Point: Pin 13 of one touch connector

Adjustment: T751

1. Set the AFC SW to ON.
2. Tune a Philips test pattern with NO audio. (UHF)
3. Connect the oscilloscope to pin 13 of one touch connector. (2.2k $\Omega$  BALANCE).
4. Adjust T751 so that Buzz level is minimum.

### 2-3. Programmable Timer Section

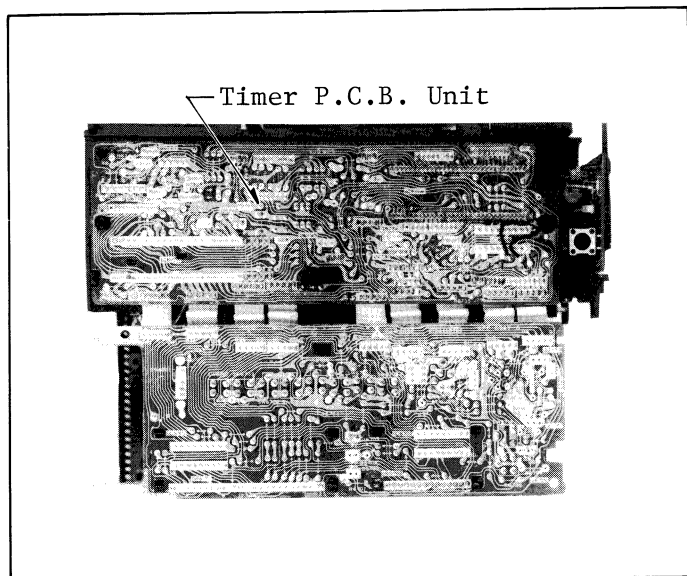


Fig. E19

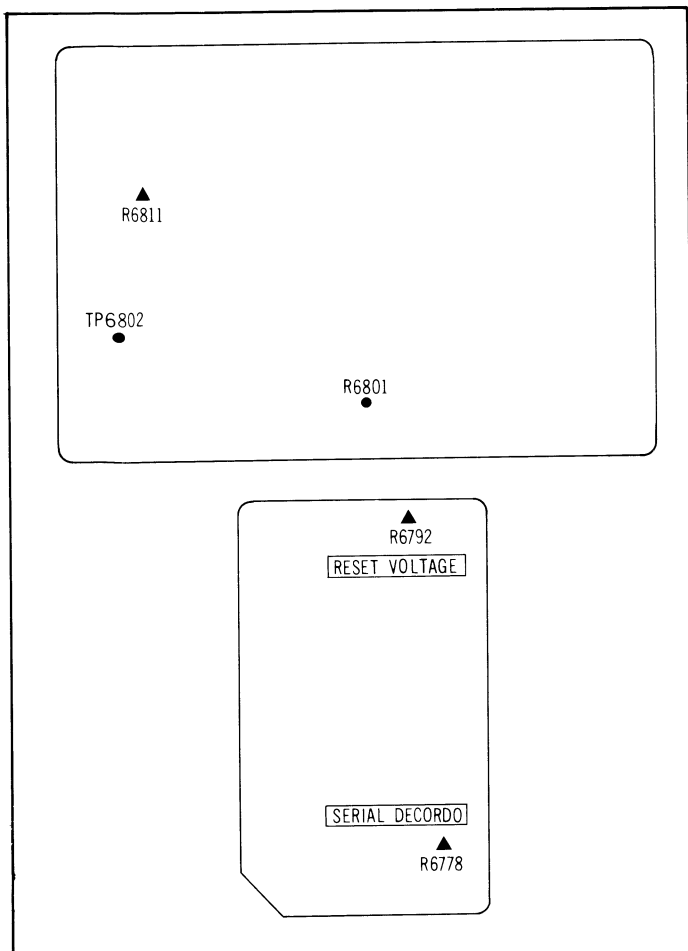


Fig. E20

#### 2-3-1. Reset Voltage Adjustment

Test Point: Collector of Q6792

Adjustment: R6792

1. Disconnect the AC plug from the AC output.
2. Disconnect the connector P6703, P6705 and P6704.
3. Connect the 100k $\Omega$  Resistor between the collector of Q6792 and emitter of Q6793.
4. Connect the D.V.M to the collector of Q6792.
5. Set the DC power Regulator to  $4 \pm 0.05V$  DC and connect it to the emitter of Q6793.
6. Connect the jumper wire between anode and cathode of D6793.
7. Turn the RESET (R6723) fully clockwise from component side.
8. Then slowly adjust R6723 counter-clockwise so that the read of D.V.M is suddenly changed. (The point is changed from the 3V over to the 1V down.)

#### 2-3-2. Serial Decoder Adjustment



Test Point: Q6774 (C)

Adjustment: R6778



1. Disconnect P6703 and P6705.
2. Supply the DC Voltage  $4.5 \pm 0.05V$  to pin 2 of P6705.
3. Connect the D.V.M to the collector of Q6774.
4. Turn R6778 fully clockwise from component side.
5. Then slowly adjust R6778 counter-clockwise so that the read of D.V.M is suddenly changed.

# LOCATION OF TEST POINT & CONTROLS

TV DEMODULATOR BOARD (NV-100E; VEP04114A)  
(NV-100B; VEP04114B)  
(NV-100EO; VEP04114C)

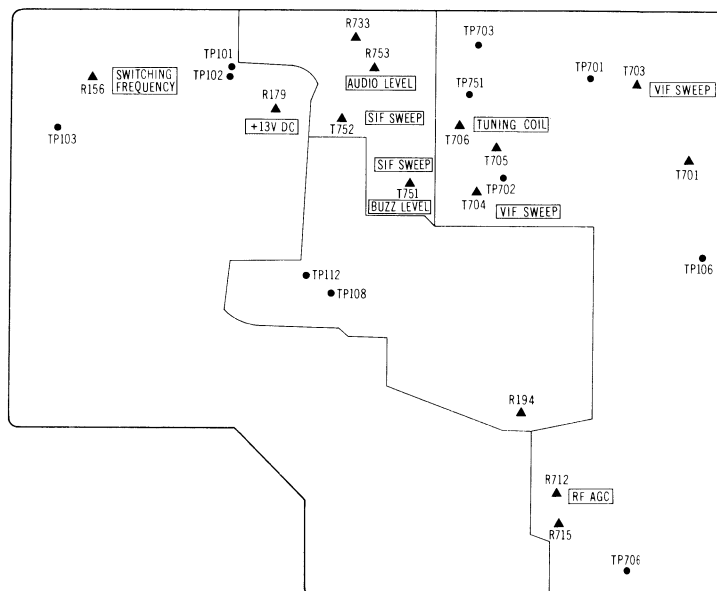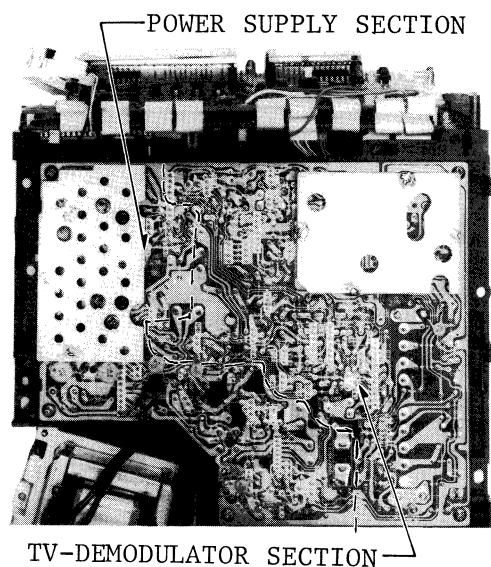


TIMER P.C.B. UNIT (NV-100E/EO; VEP4051A)  
(NV-100B ; VEP4054B)

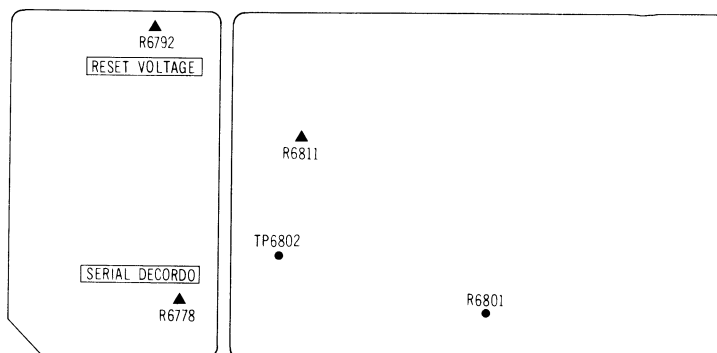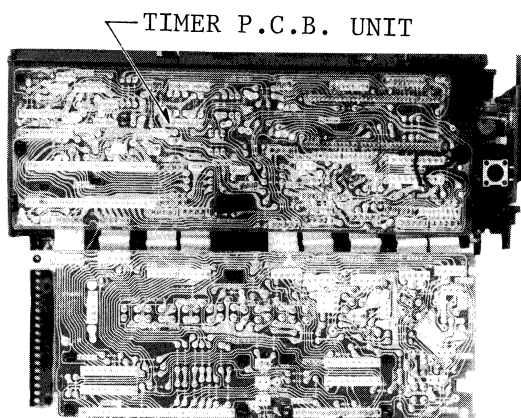


# CIRCUIT BOARD LAYOUT


TOP VIEW

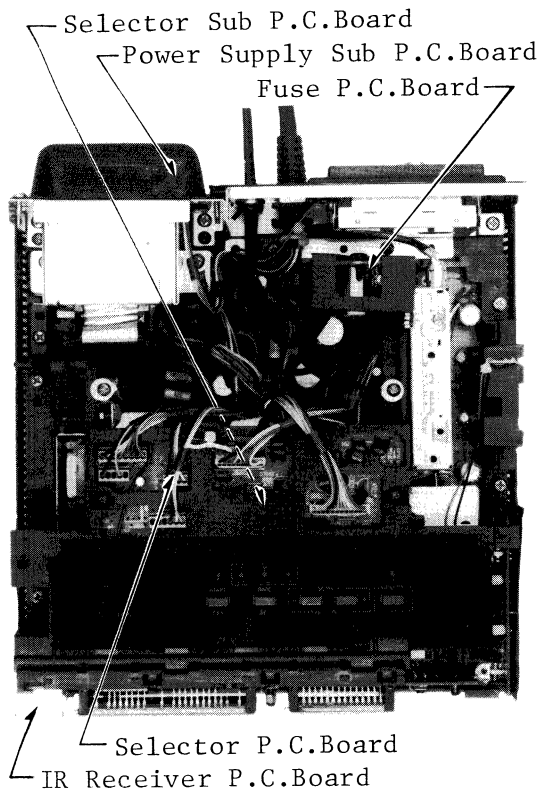


FRONT VIEW

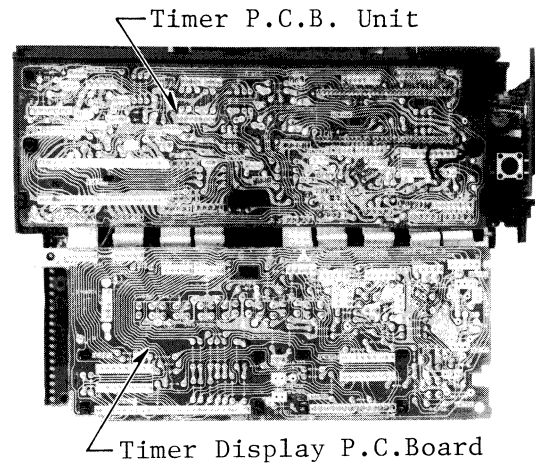

BOTTOM VIEW

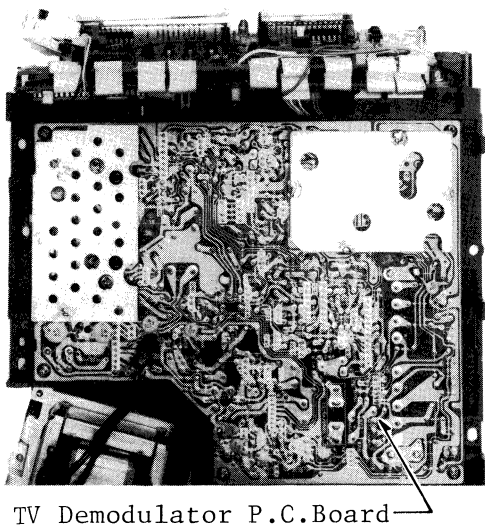



RIGHT VIEW

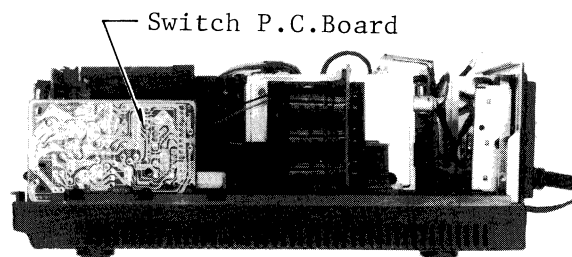




## PROGRAMMABLE TIMER BLOCK DIAGRAM

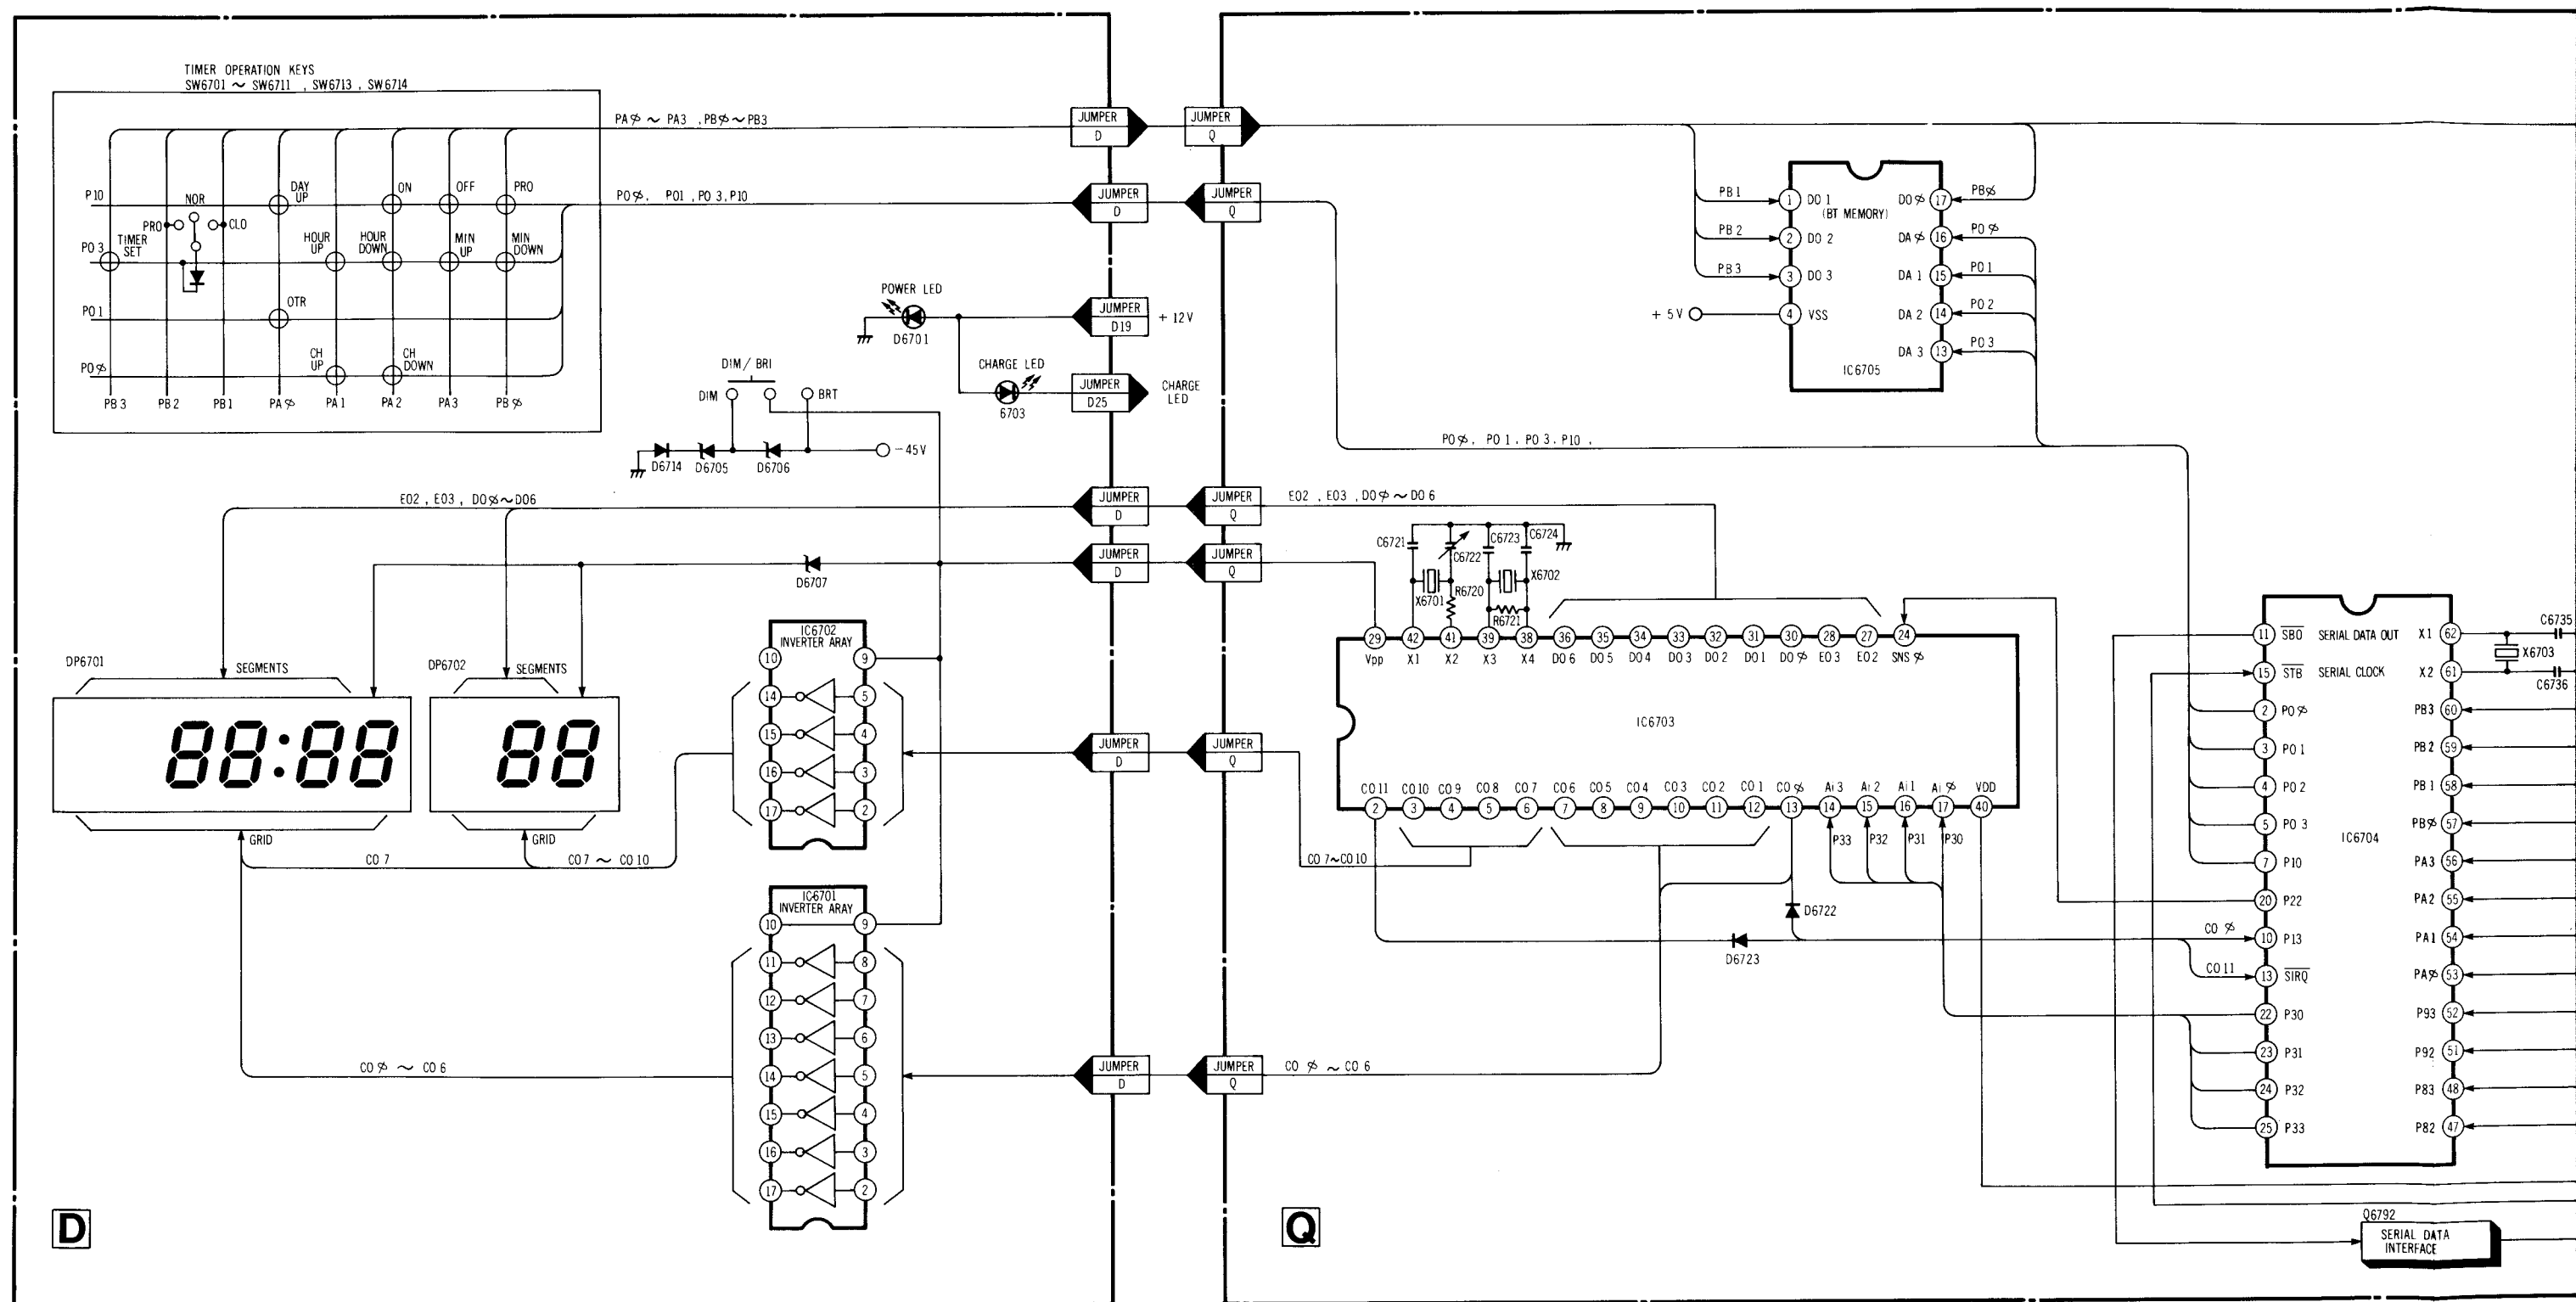


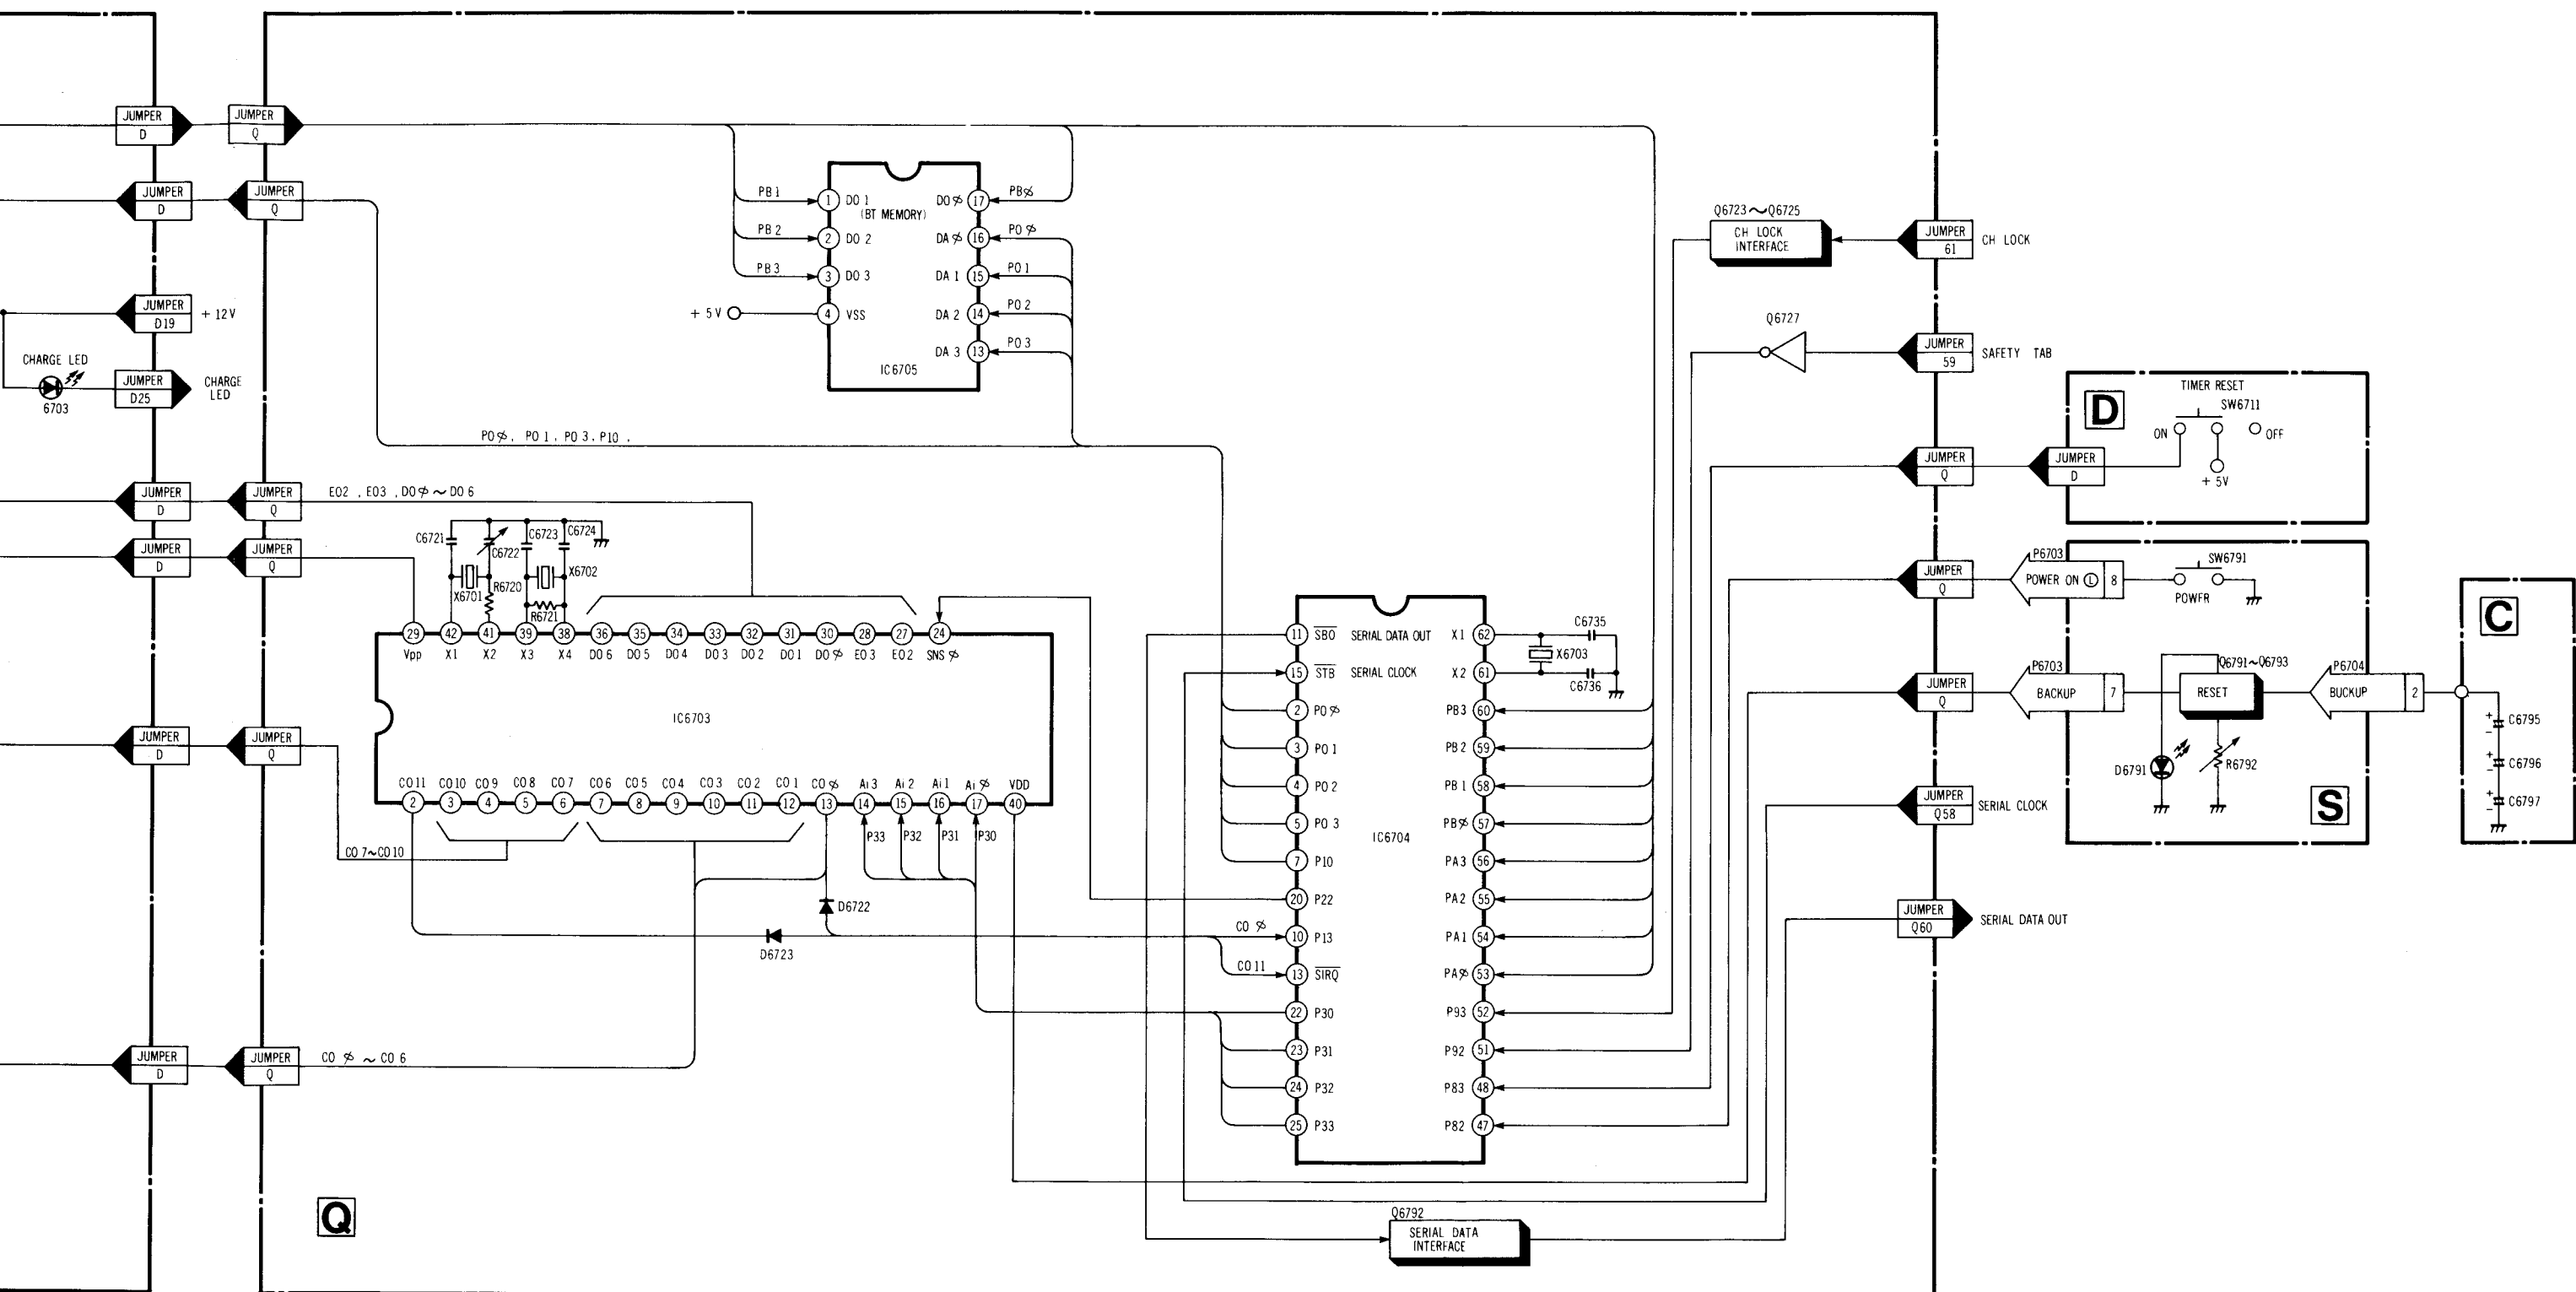


# POWER SUPPLY AND HIGH SPEED CHARGE BLOCK DIAGRAM

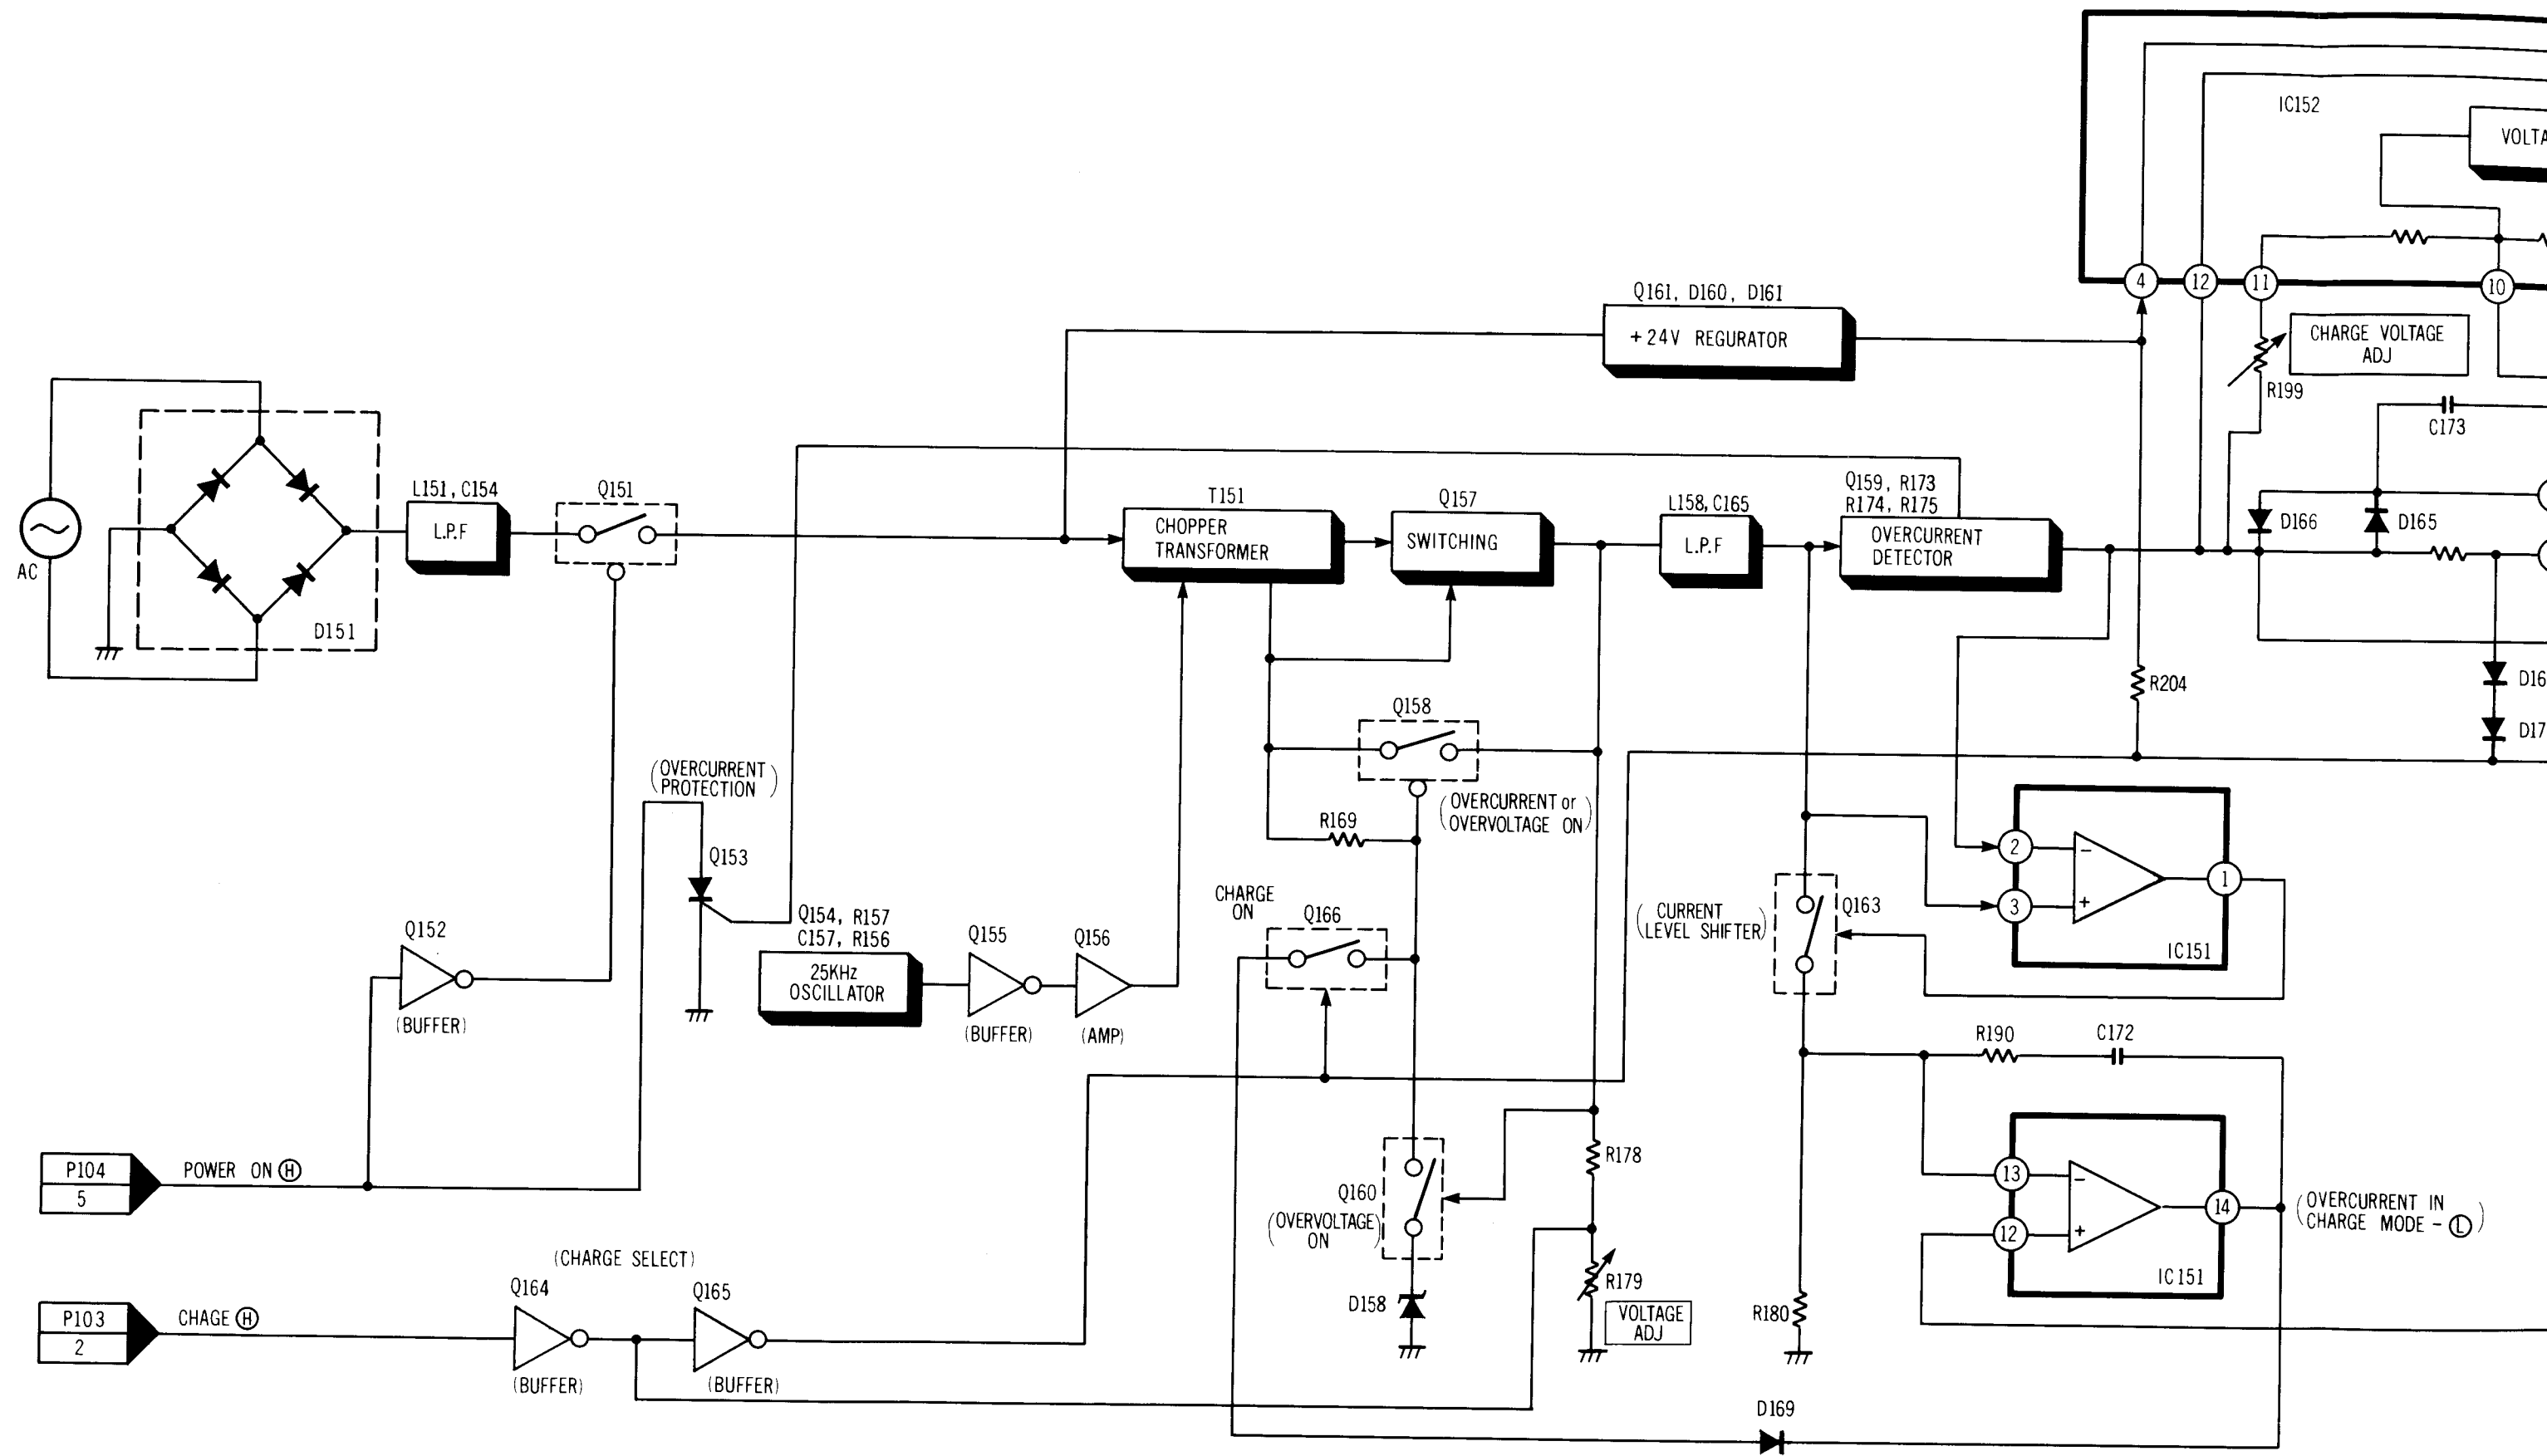


# CK DIAGRAM

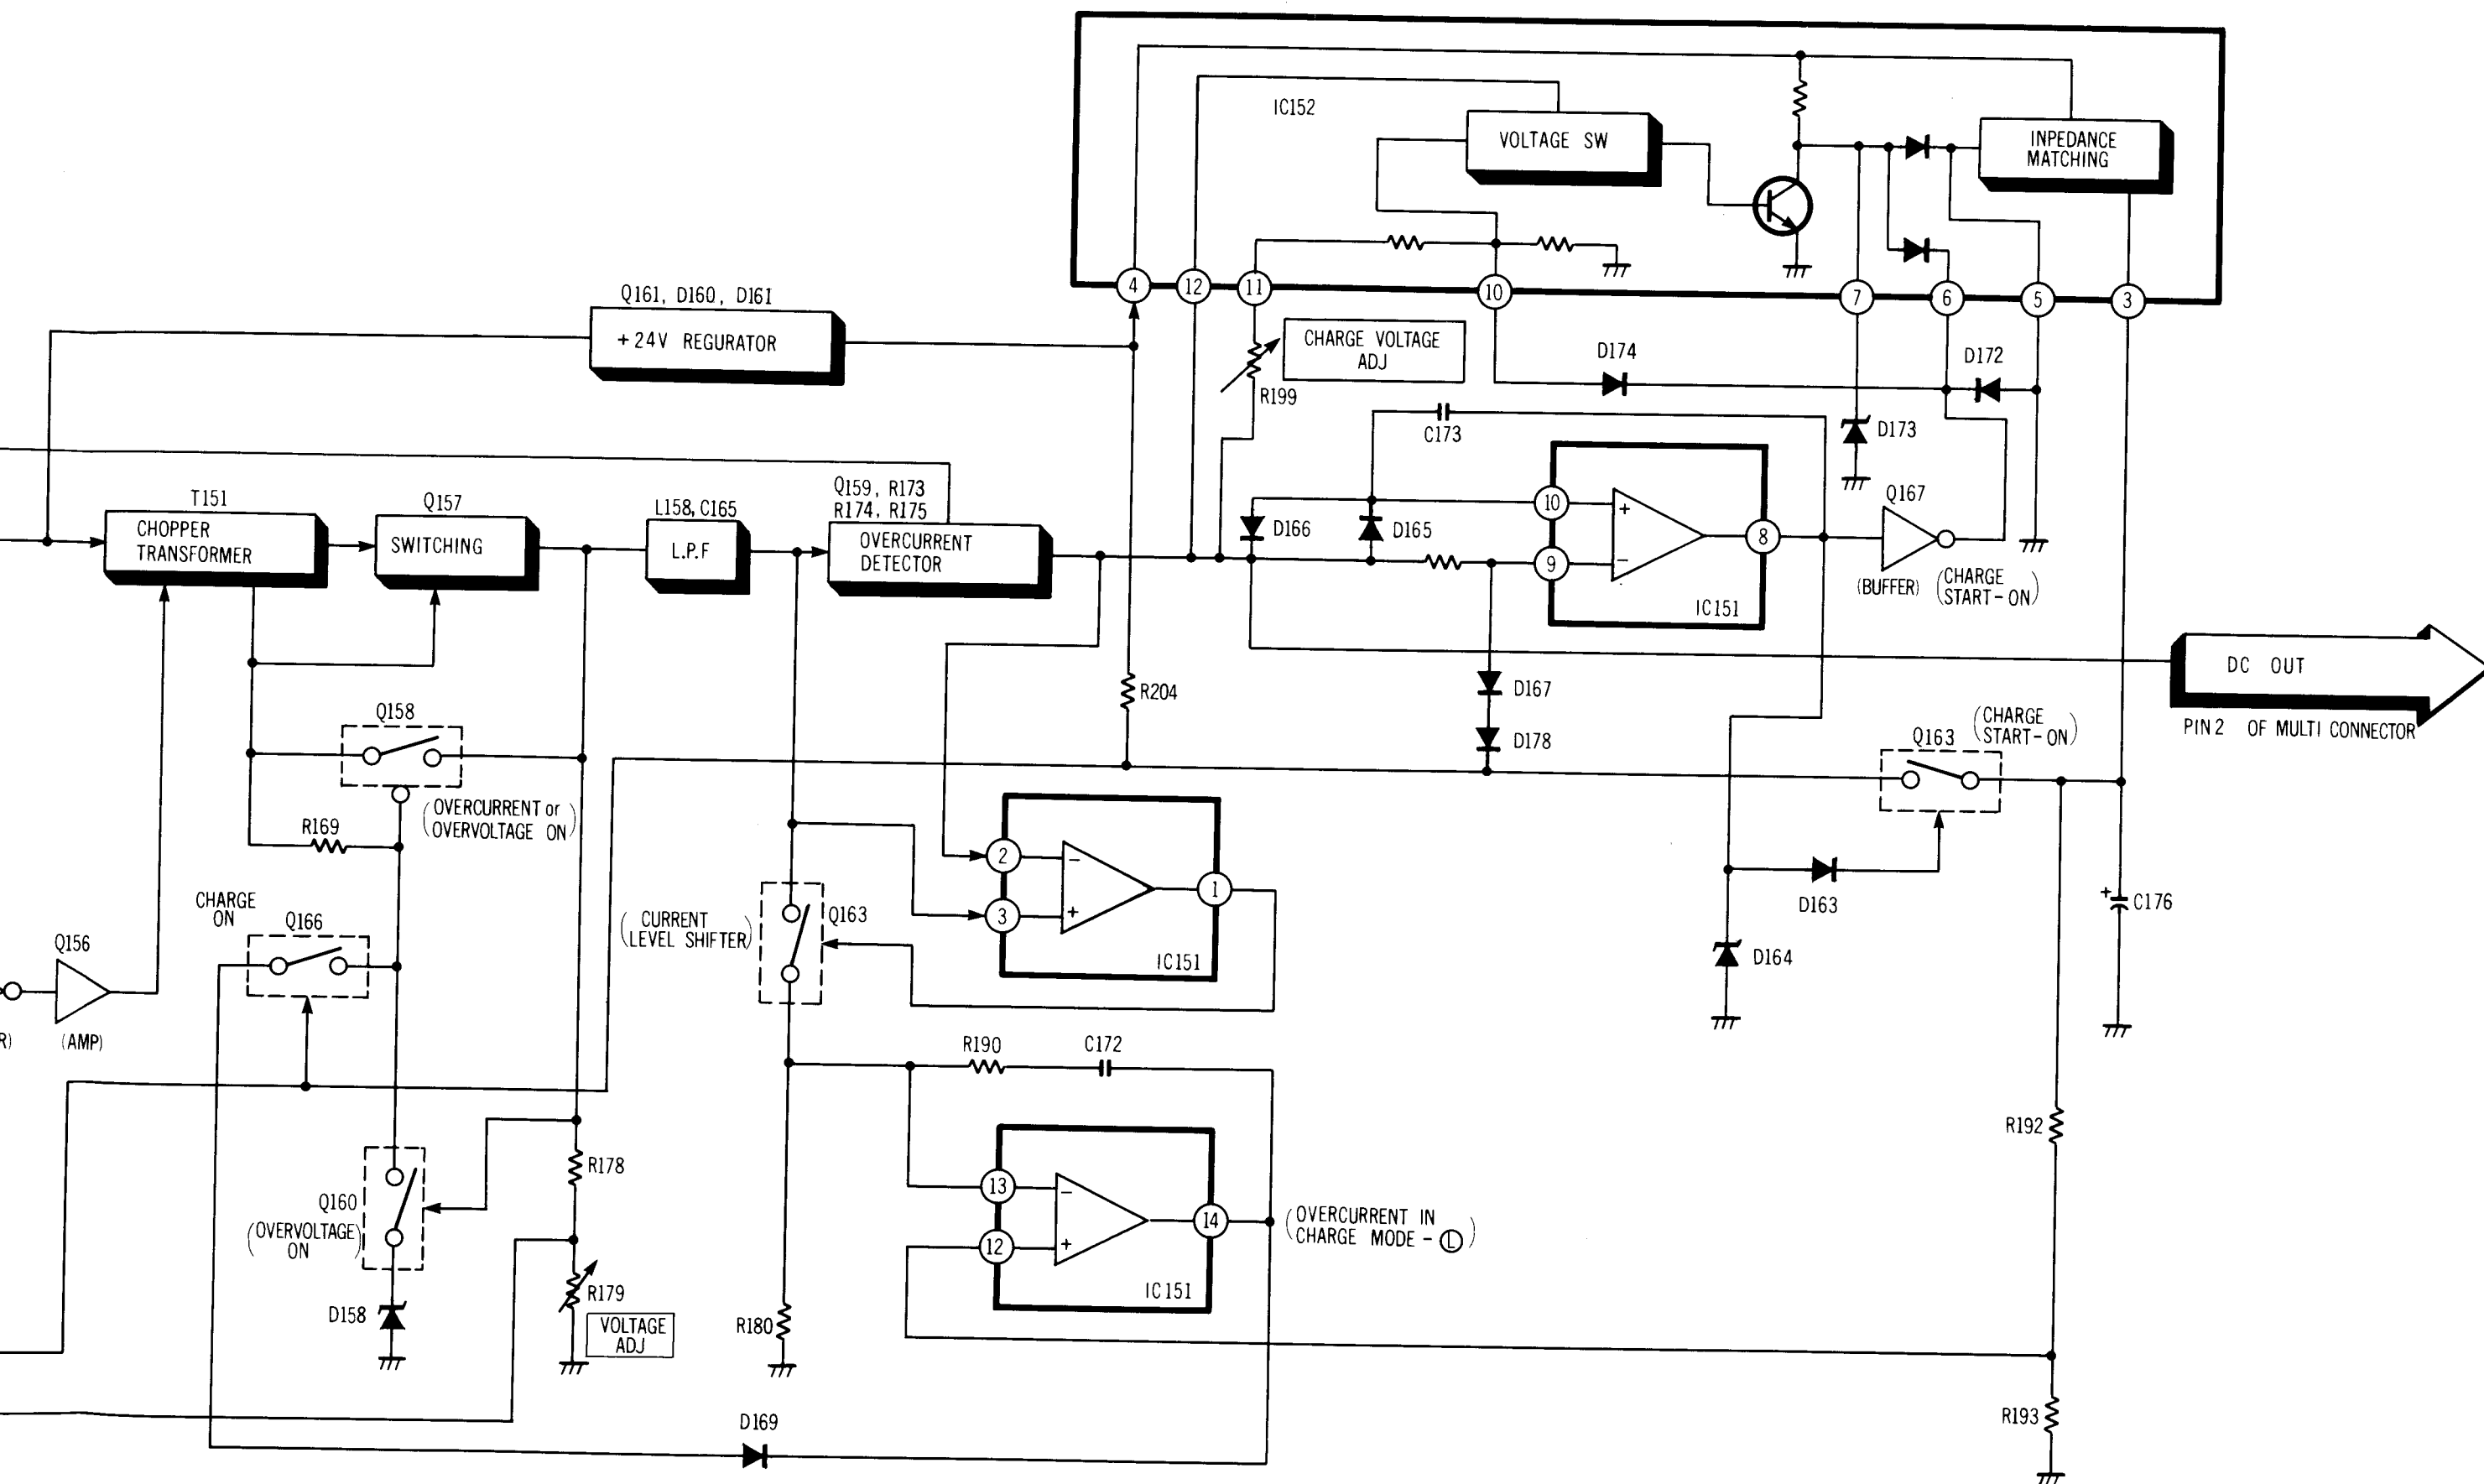

TV DEMODULATOR BLOCK DIAGRAM (NV-V10E/EO)

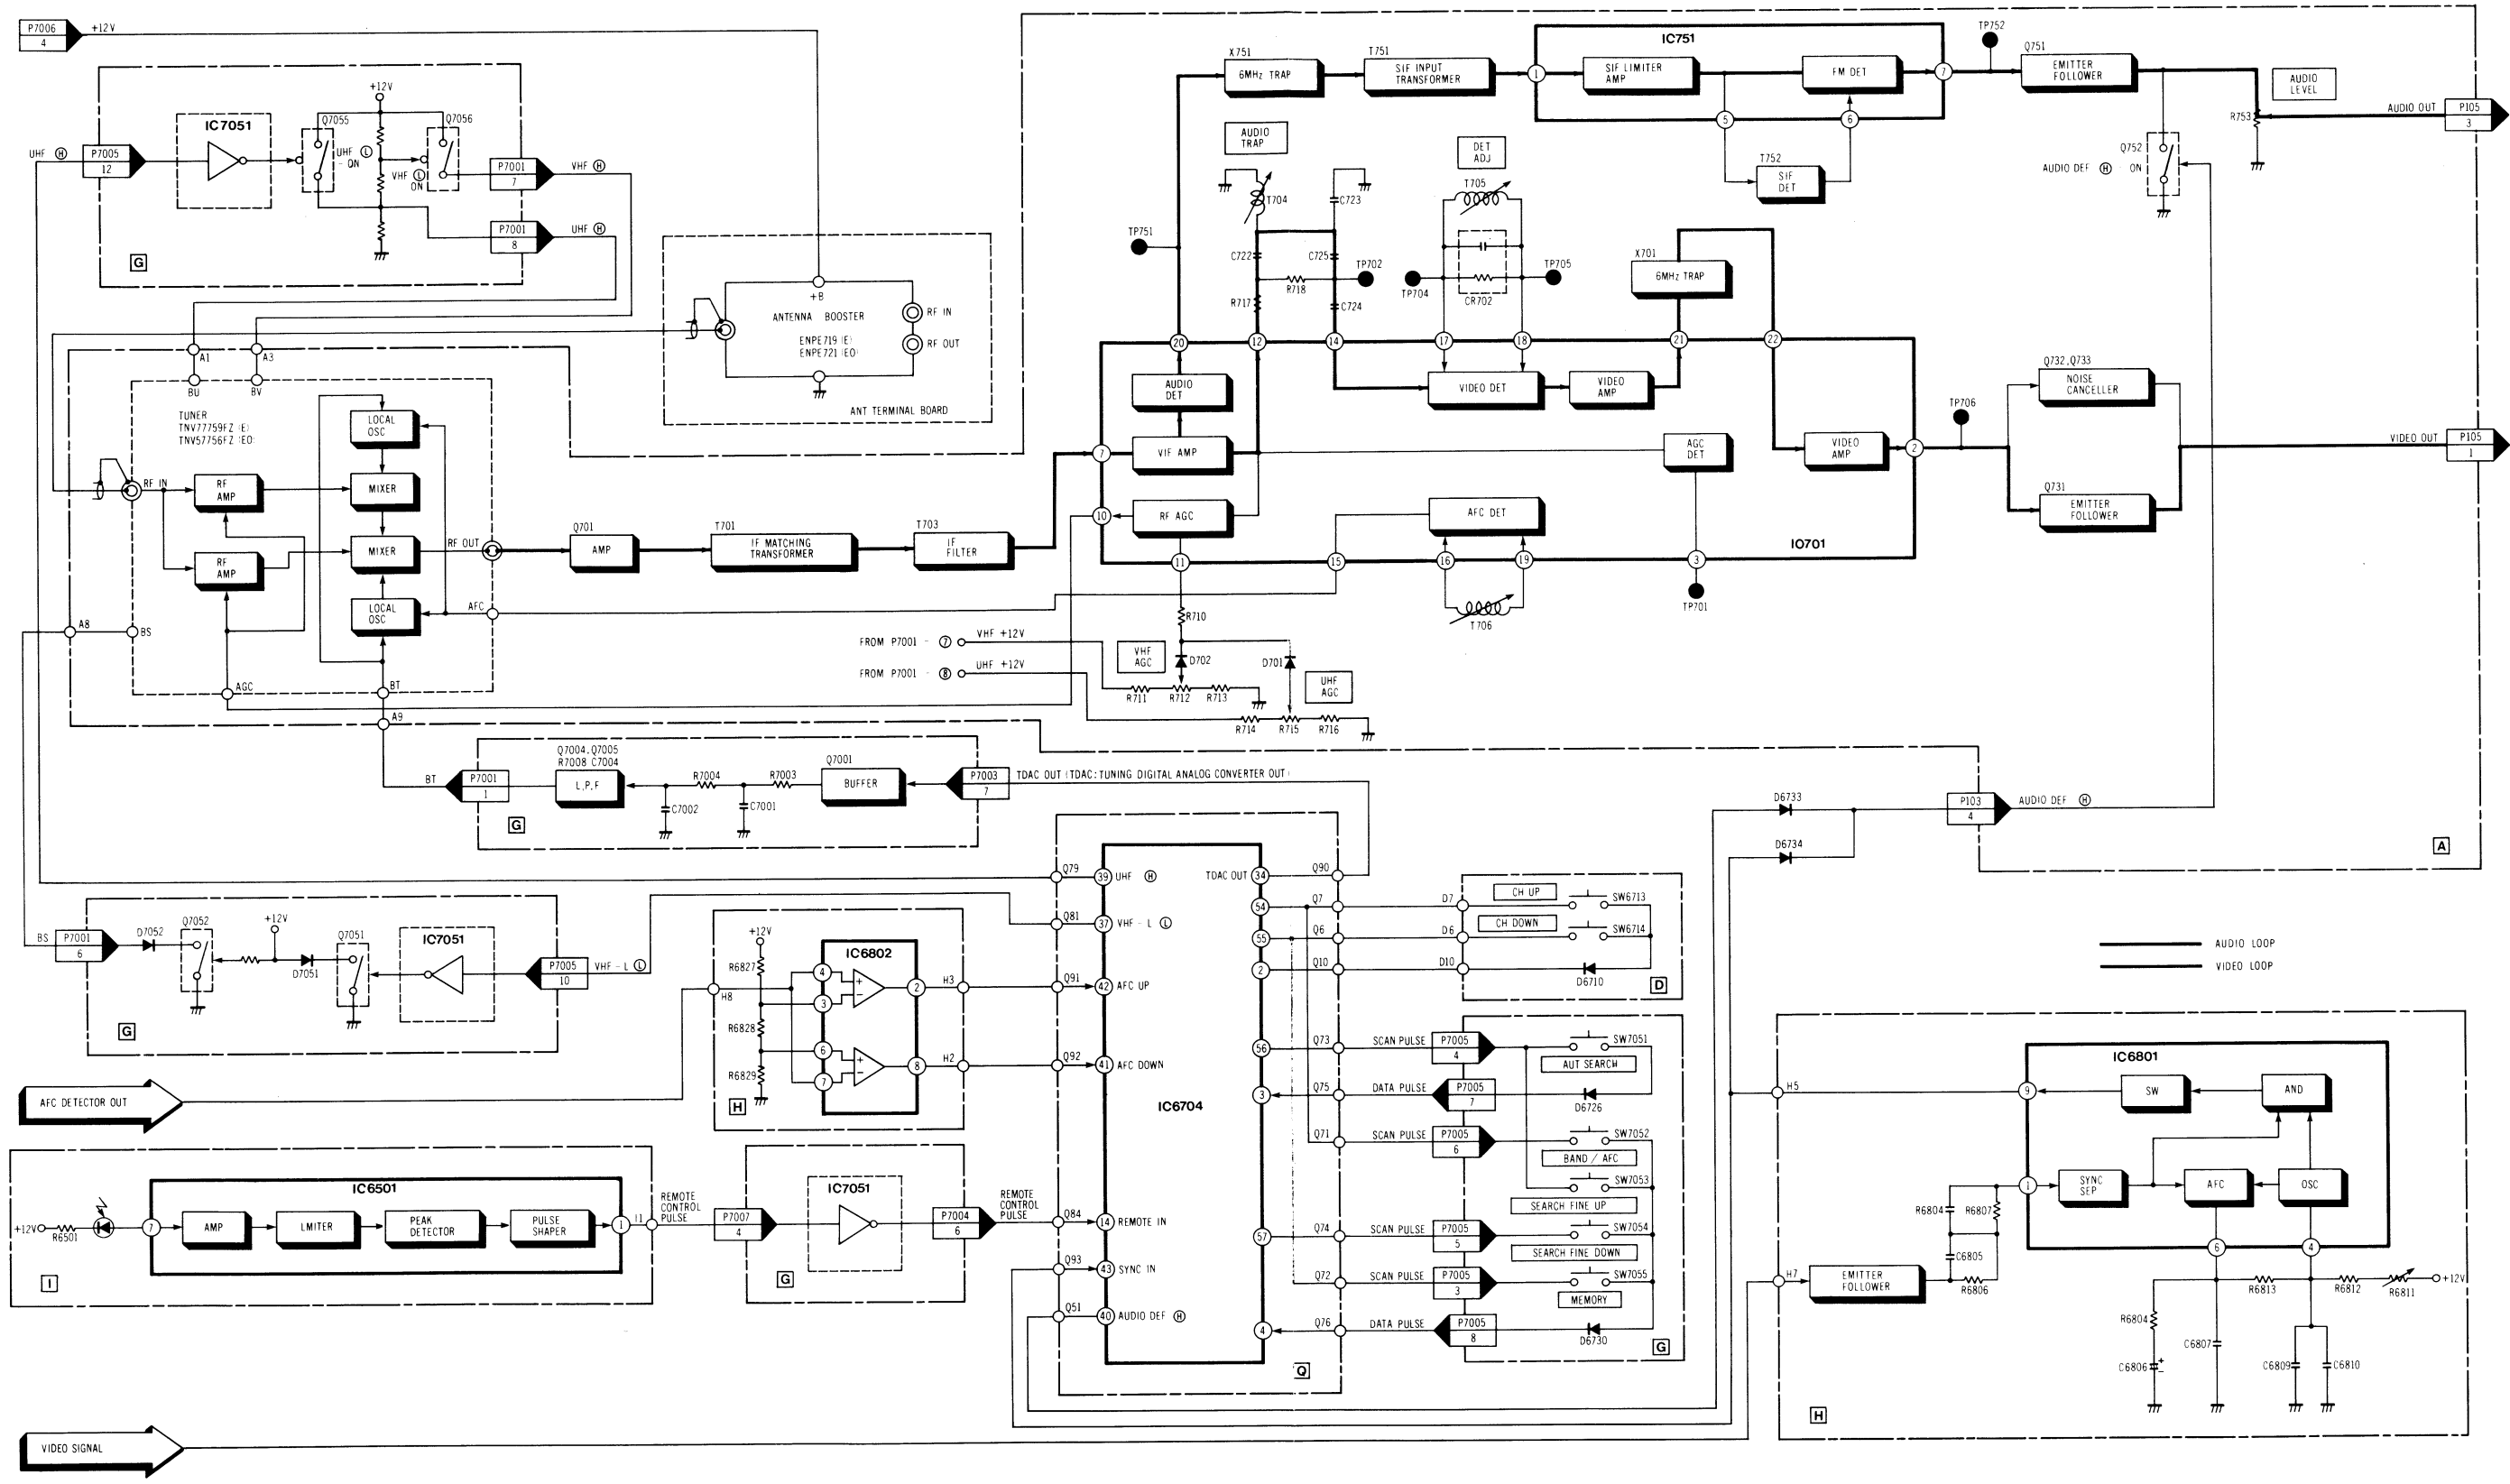


## TV DEMODULATOR BLOCK DIAGRAM (NV-V10B)

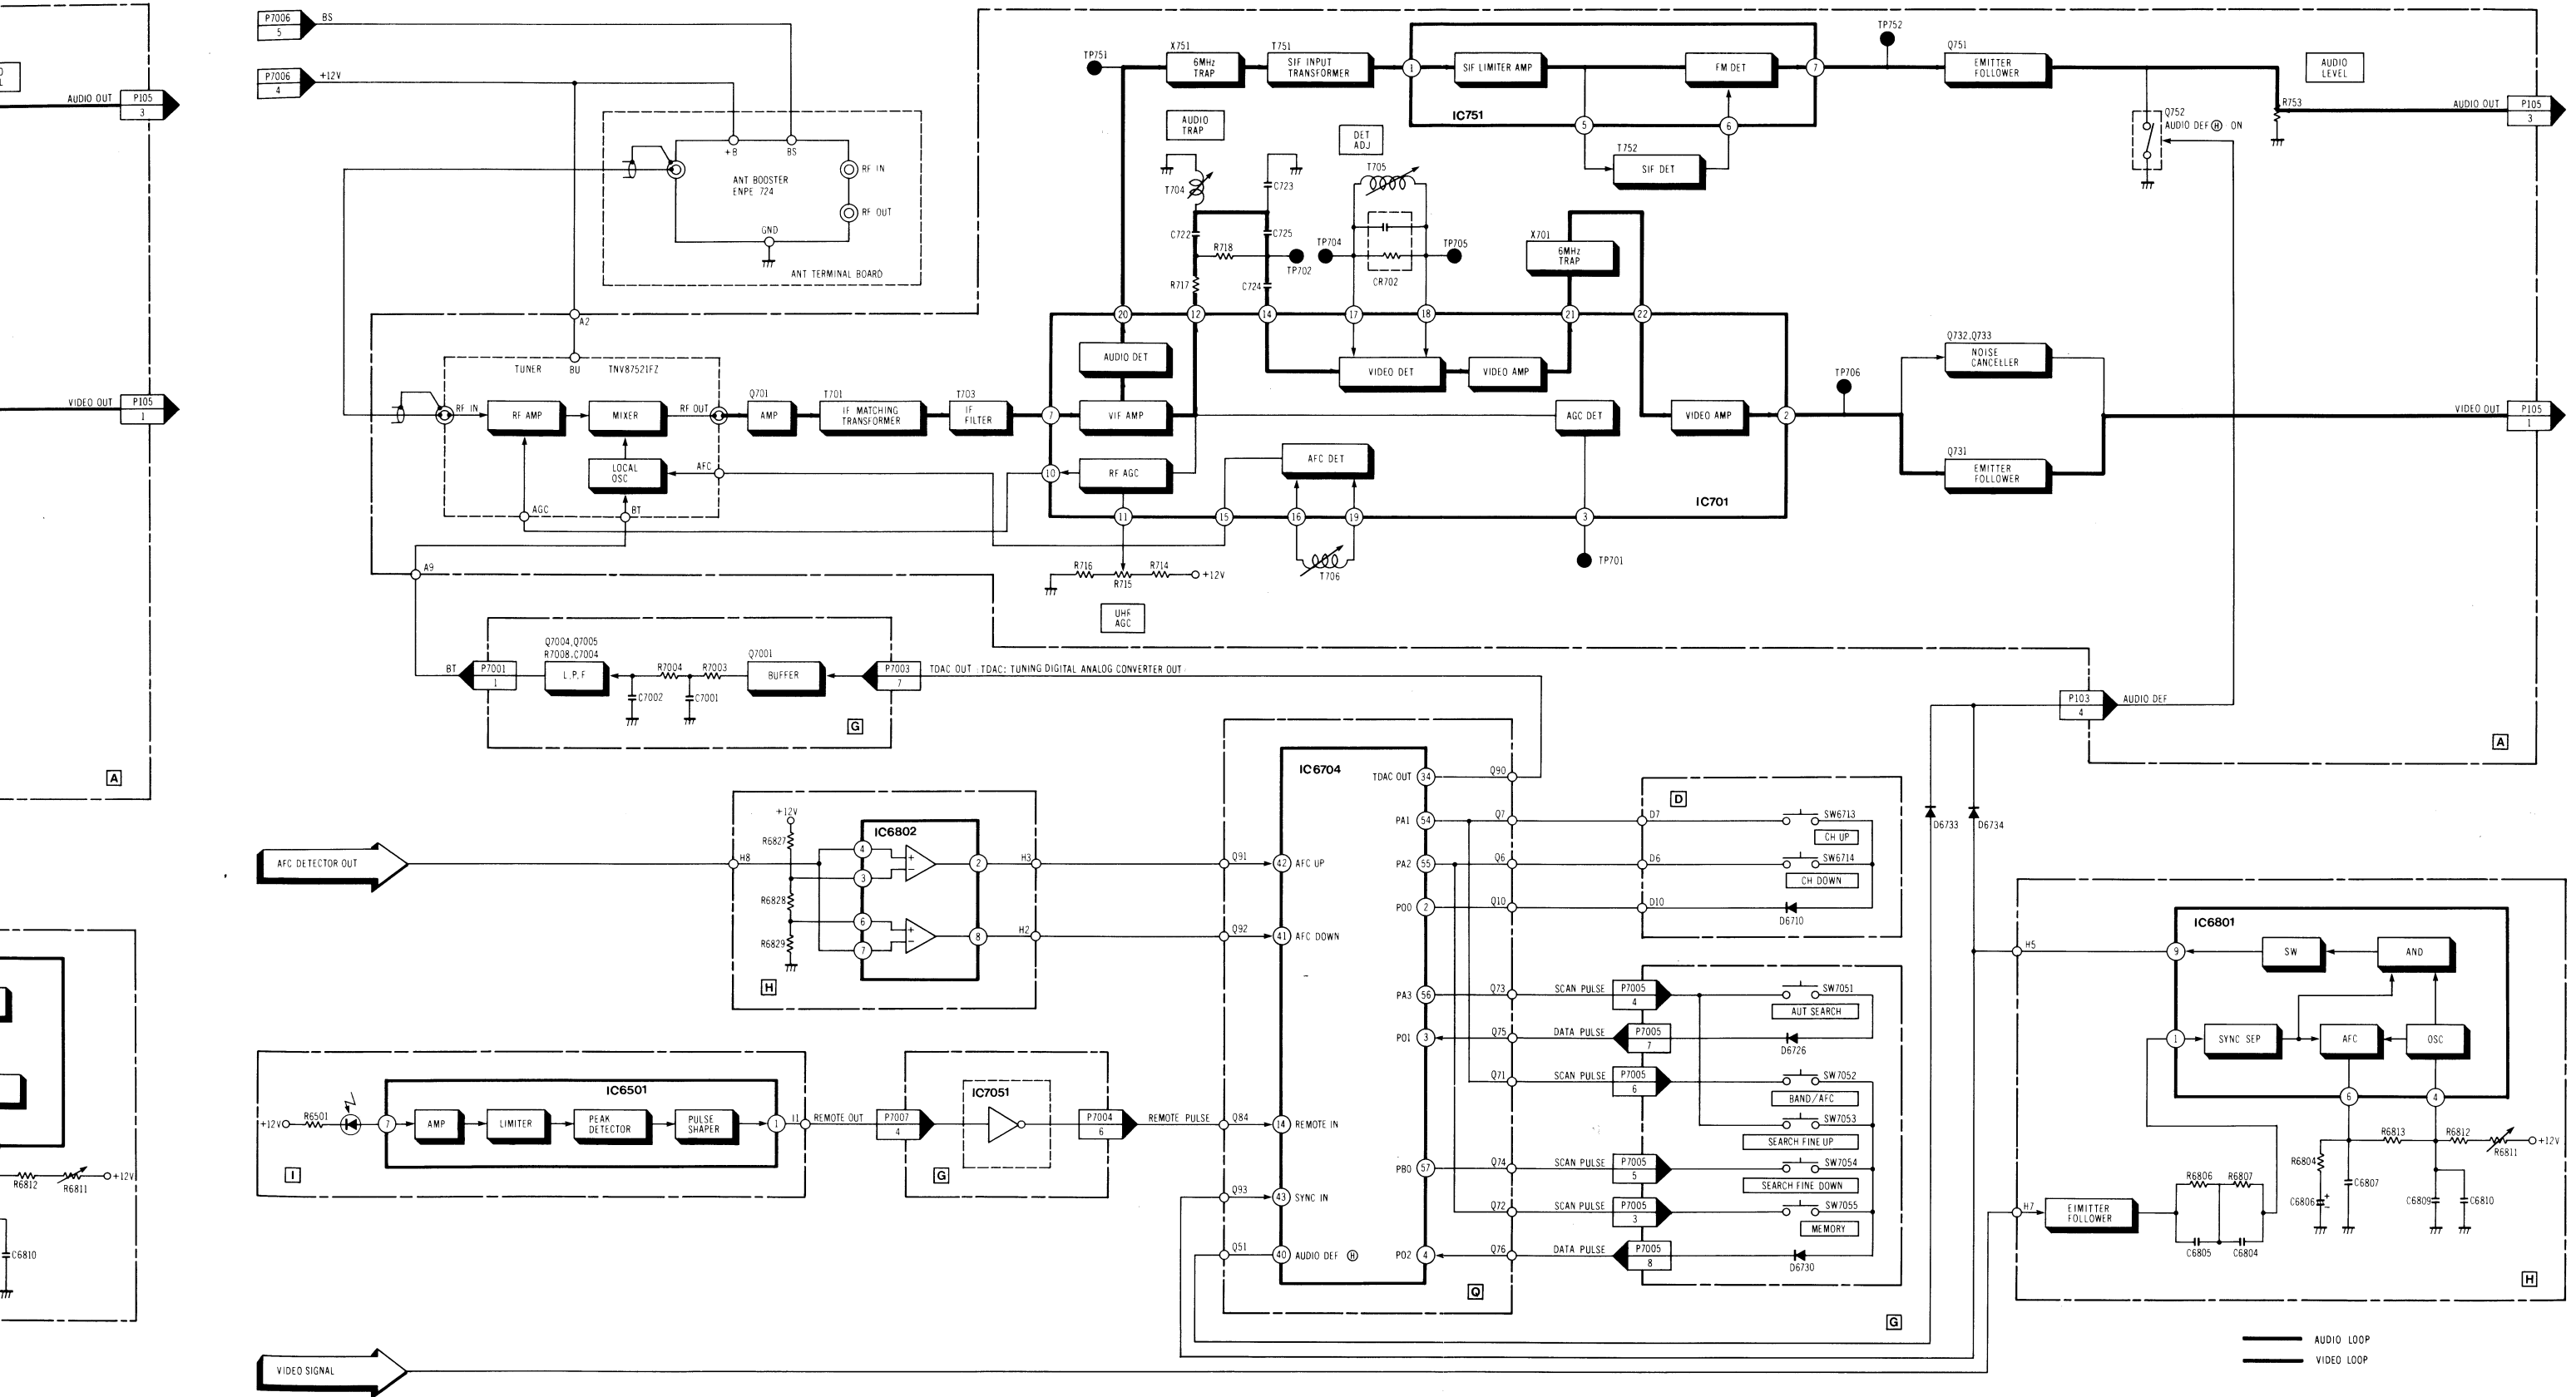




TIMER BOARD (NV-V10E/EO; VEP4051A)

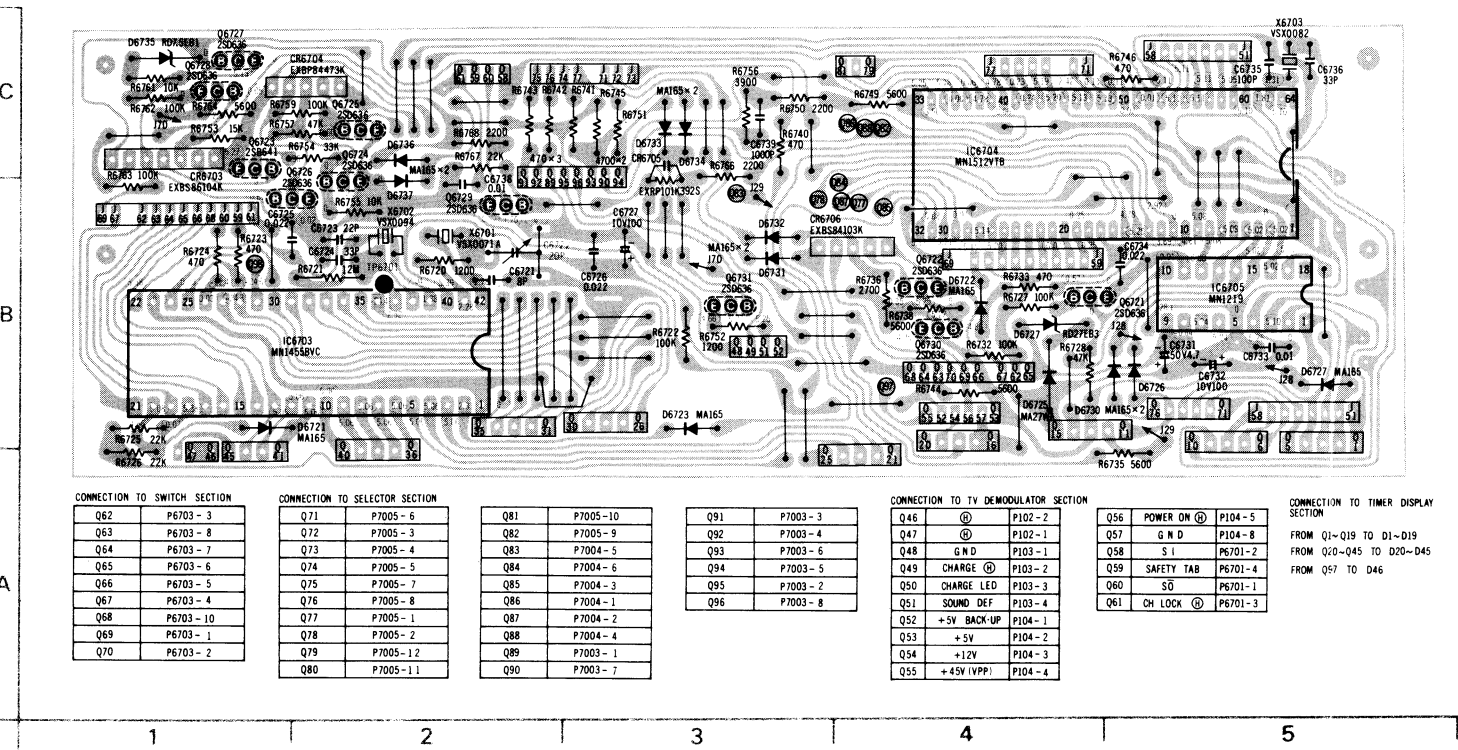


| Timer  |     |
|--------|-----|
| Q6721  | B-4 |
| Q6722  | B-4 |
| Q6723  | C-1 |
| Q6724  | B-2 |
| Q6725  | C-2 |
| Q6726  | B-2 |
| Q6727  | C-1 |
| Q6728  | C-1 |
| Q6729  | B-2 |
| Q6730  | B-4 |
| Q6731  | B-3 |
| IC6703 | B-2 |
| IC6704 | C-4 |
| IC6705 | B-5 |


SELECTOR BOARD (NV-V10E/EO; VEP4051A)

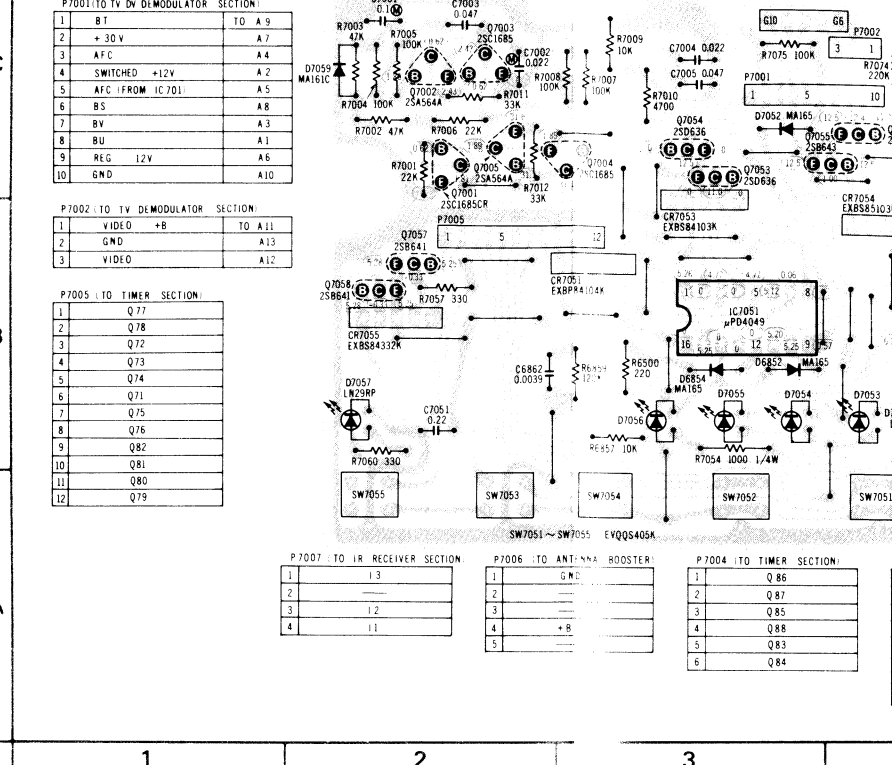

TIMER DISPLAY BOARD (VEP4052A)

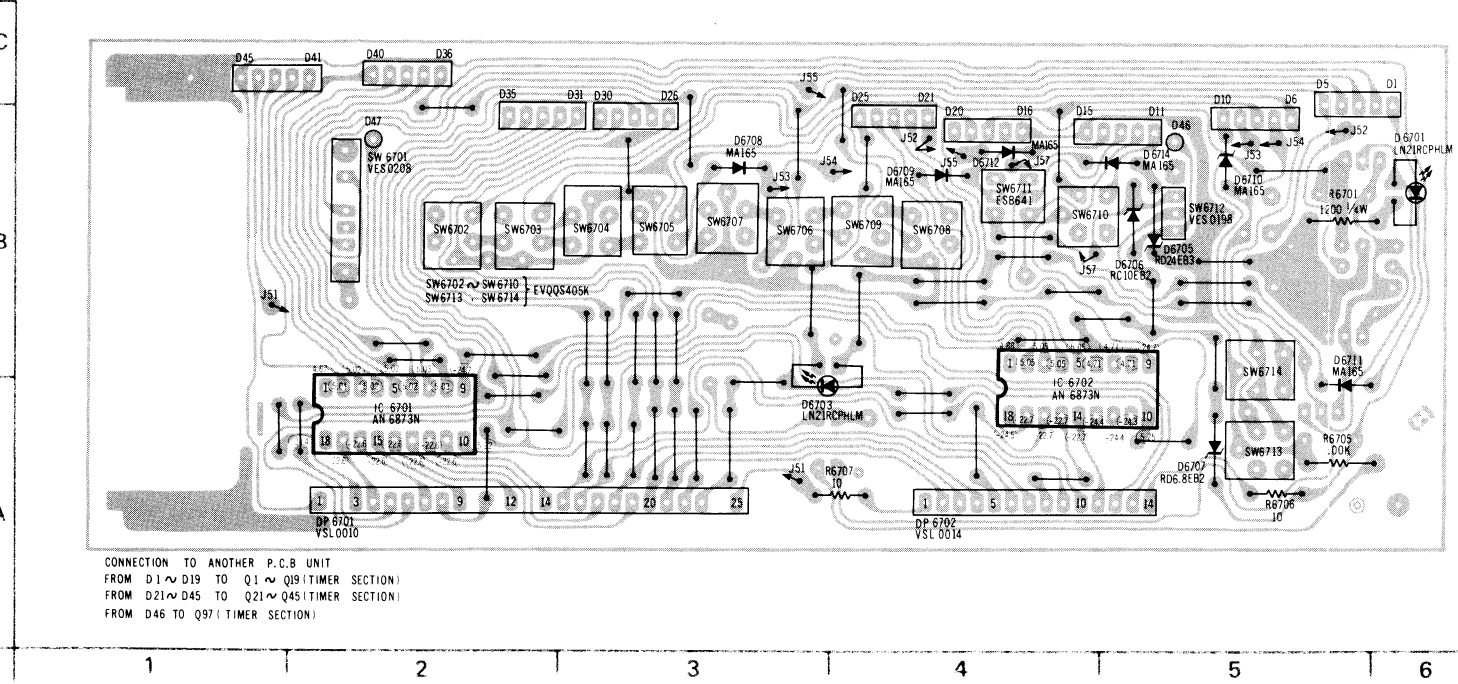


SWITCH BOARD (VEP4047A) SELECTOR BOARD (VEP4047A)

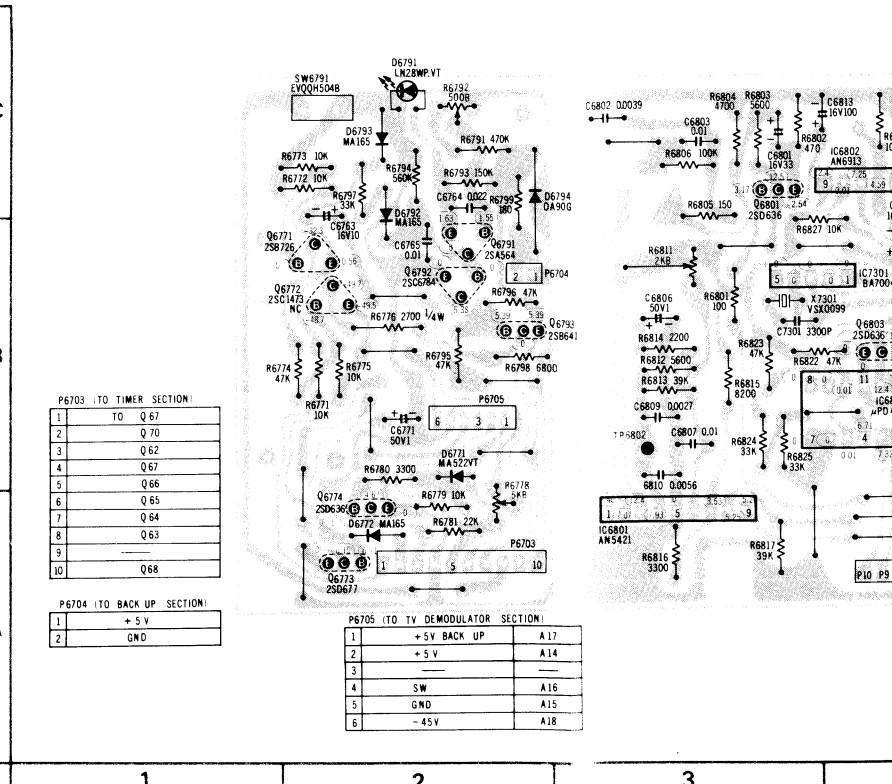






RD (NV-V10E/EO; VEP4050A)

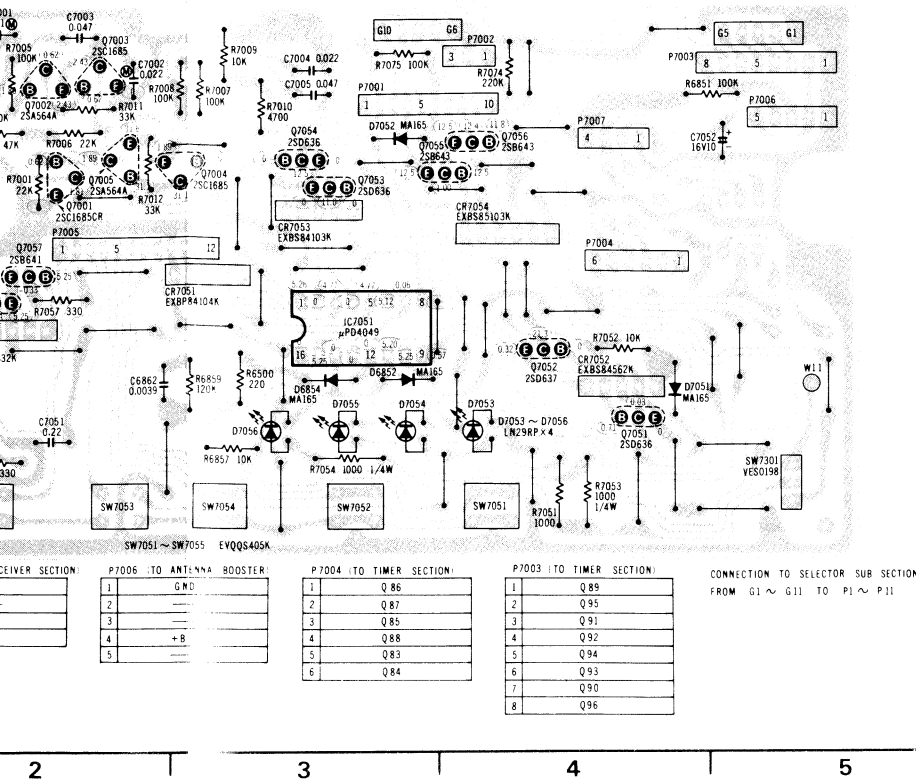


| Selector P.C.B |     |
|----------------|-----|
| Q7001          | C-2 |
| Q7002          | C-2 |
| Q7003          | C-2 |
| Q7004          | C-3 |
| Q7005          | C-2 |
| Q7051          | B-4 |
| Q7052          | B-4 |
| Q7053          | C-3 |
| Q7054          | C-3 |
| Q7055          | C-3 |
| Q7056          | C-4 |
| Q7057          | B-2 |
| Q7058          | B-2 |
| IC7051         | B-3 |


IR RECEIVER BOARD (VEP4053A)

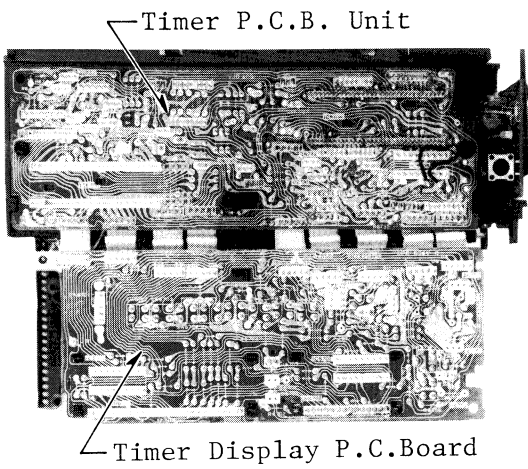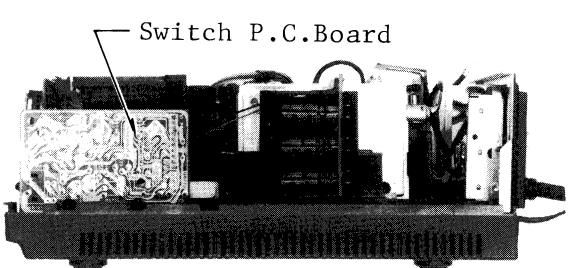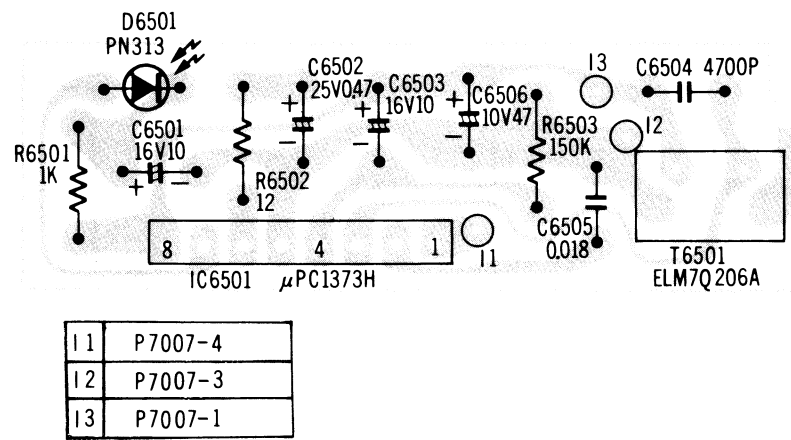



BACK UP BOARD (VEP4049A)

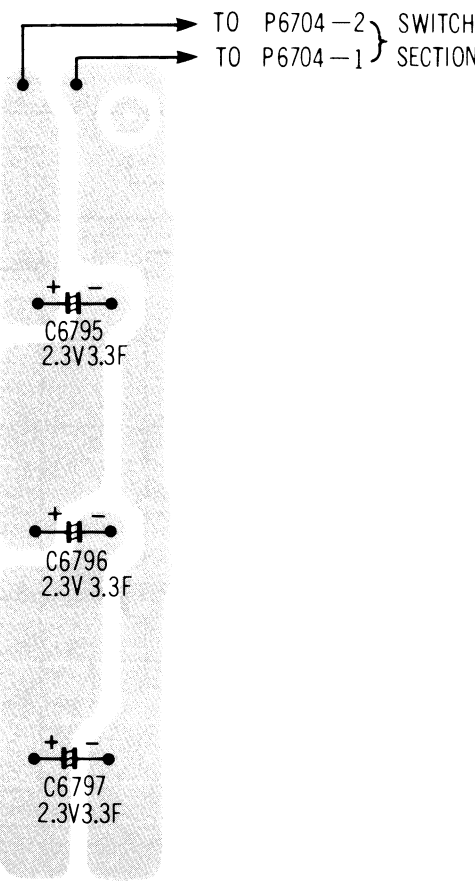


0 (VEP4047A) SELECTOR SUB BOARD (VEP4048A)

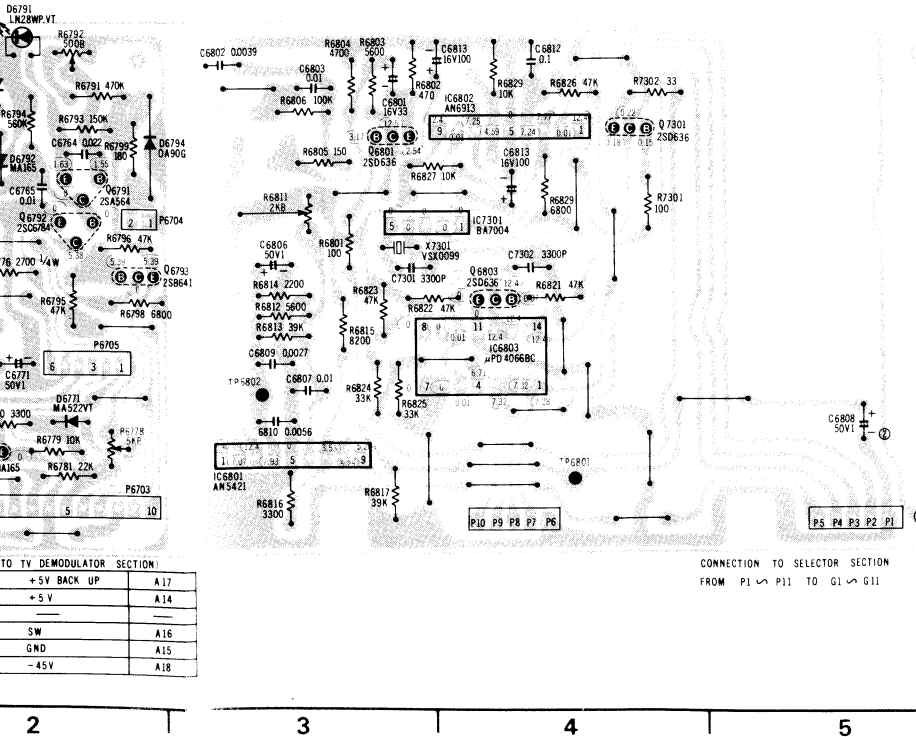


| Switch Selector Sub |     |
|---------------------|-----|
| Q6771               | B-2 |
| Q6772               | B-2 |
| Q6773               | A-2 |
| Q6774               | A-2 |
| Q6791               | B-2 |
| Q6792               | B-2 |
| Q6793               | B-2 |
| Q6801               | C-3 |
| Q6803               | B-4 |
| Q7301               | C-4 |
| IC6801              | A-3 |
| IC6802              | C-4 |
| IC6803              | B-4 |
| IC7301              | B-4 |



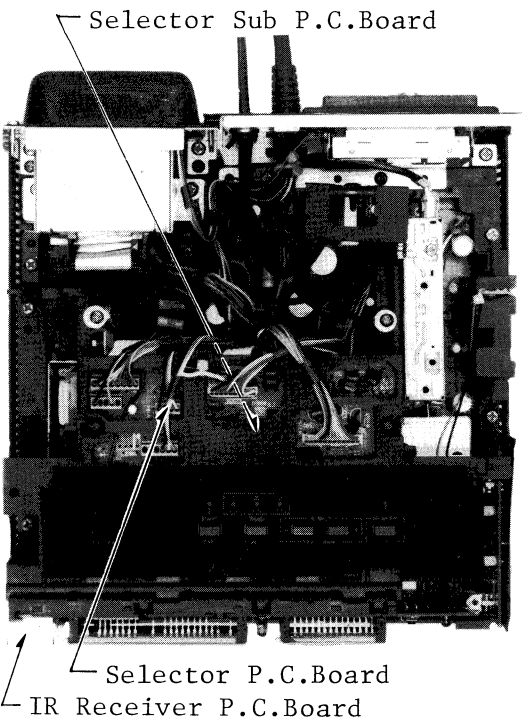
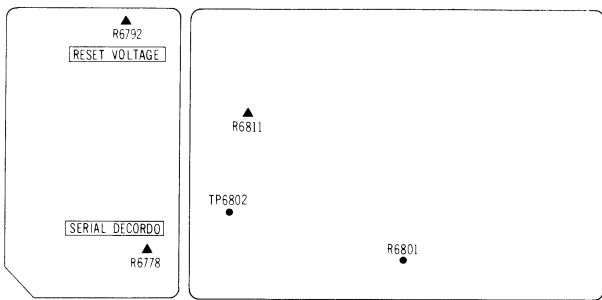


# PROGRAMMABLE TIMER SCHEMATIC DIAGRAM (TIMER, TIMER DISPLAY, SWITCH, SELECTOR, SELECTOR SUB, IR RECEIVER BACK UP) ;

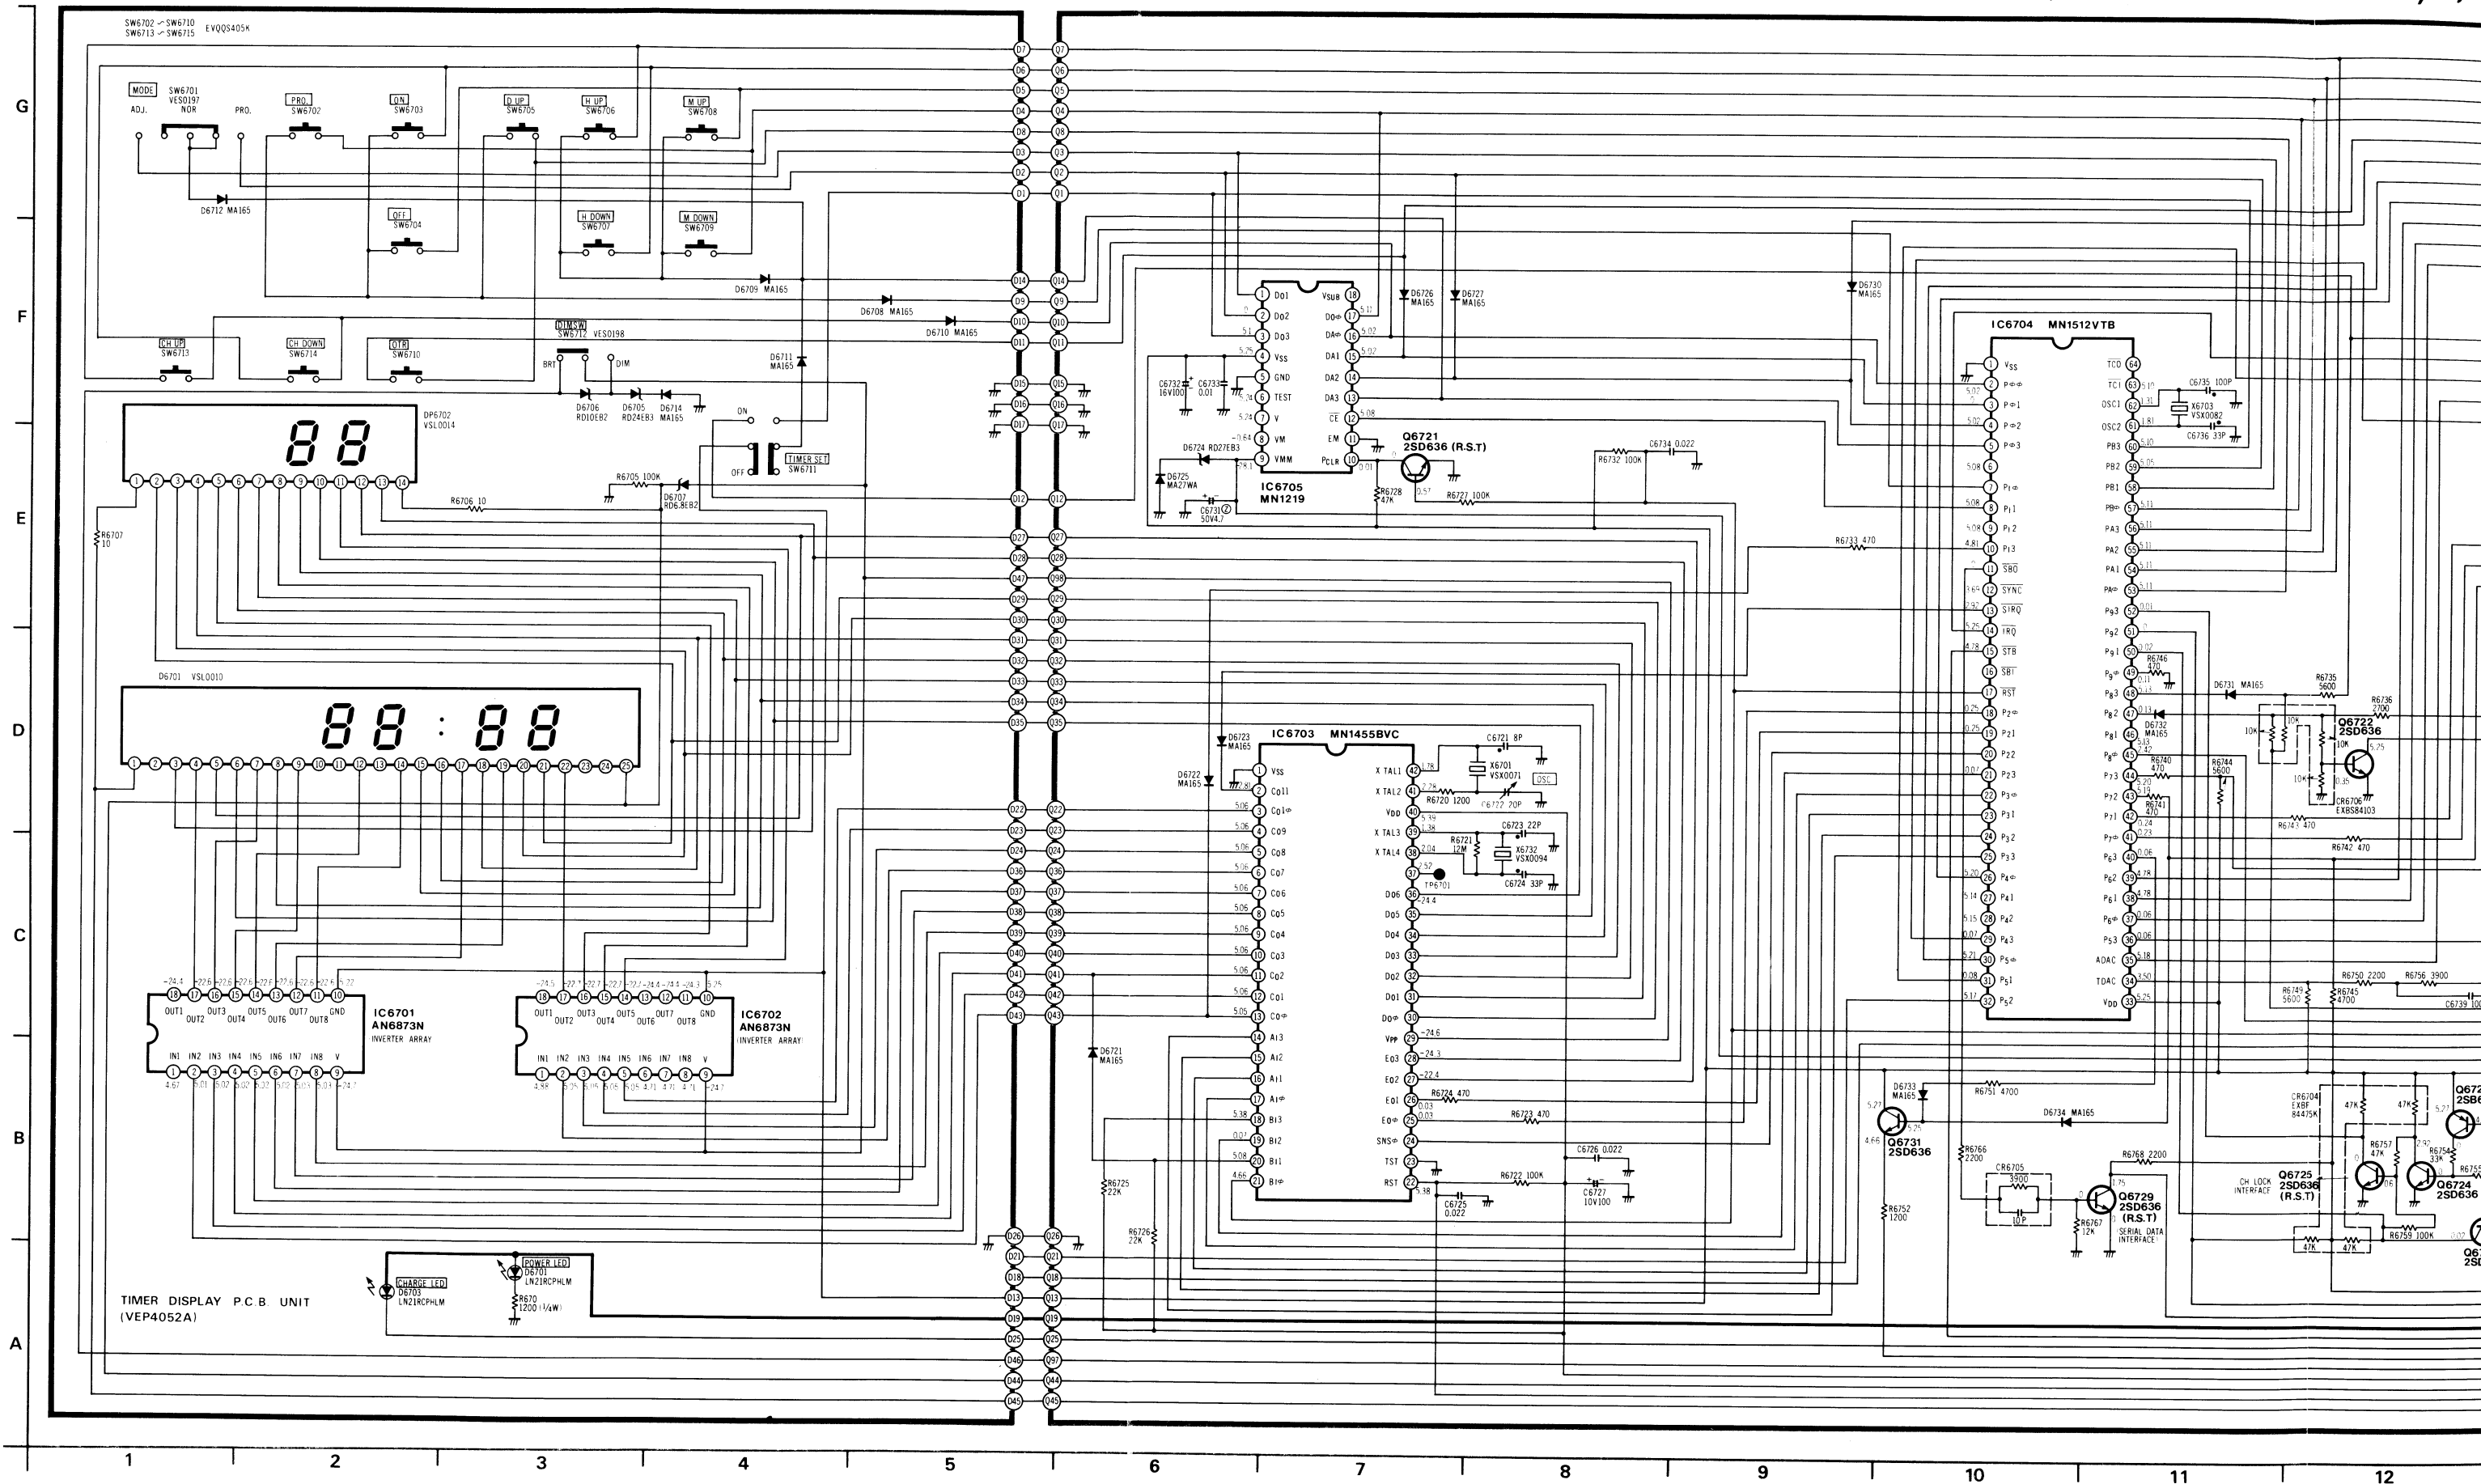

**TIMER, TIMER DISPLAY, SWITCH, SELECTOR, SELECTOR SUB, IR RECEIVER BACK UP) ; NV-V10E/EO**

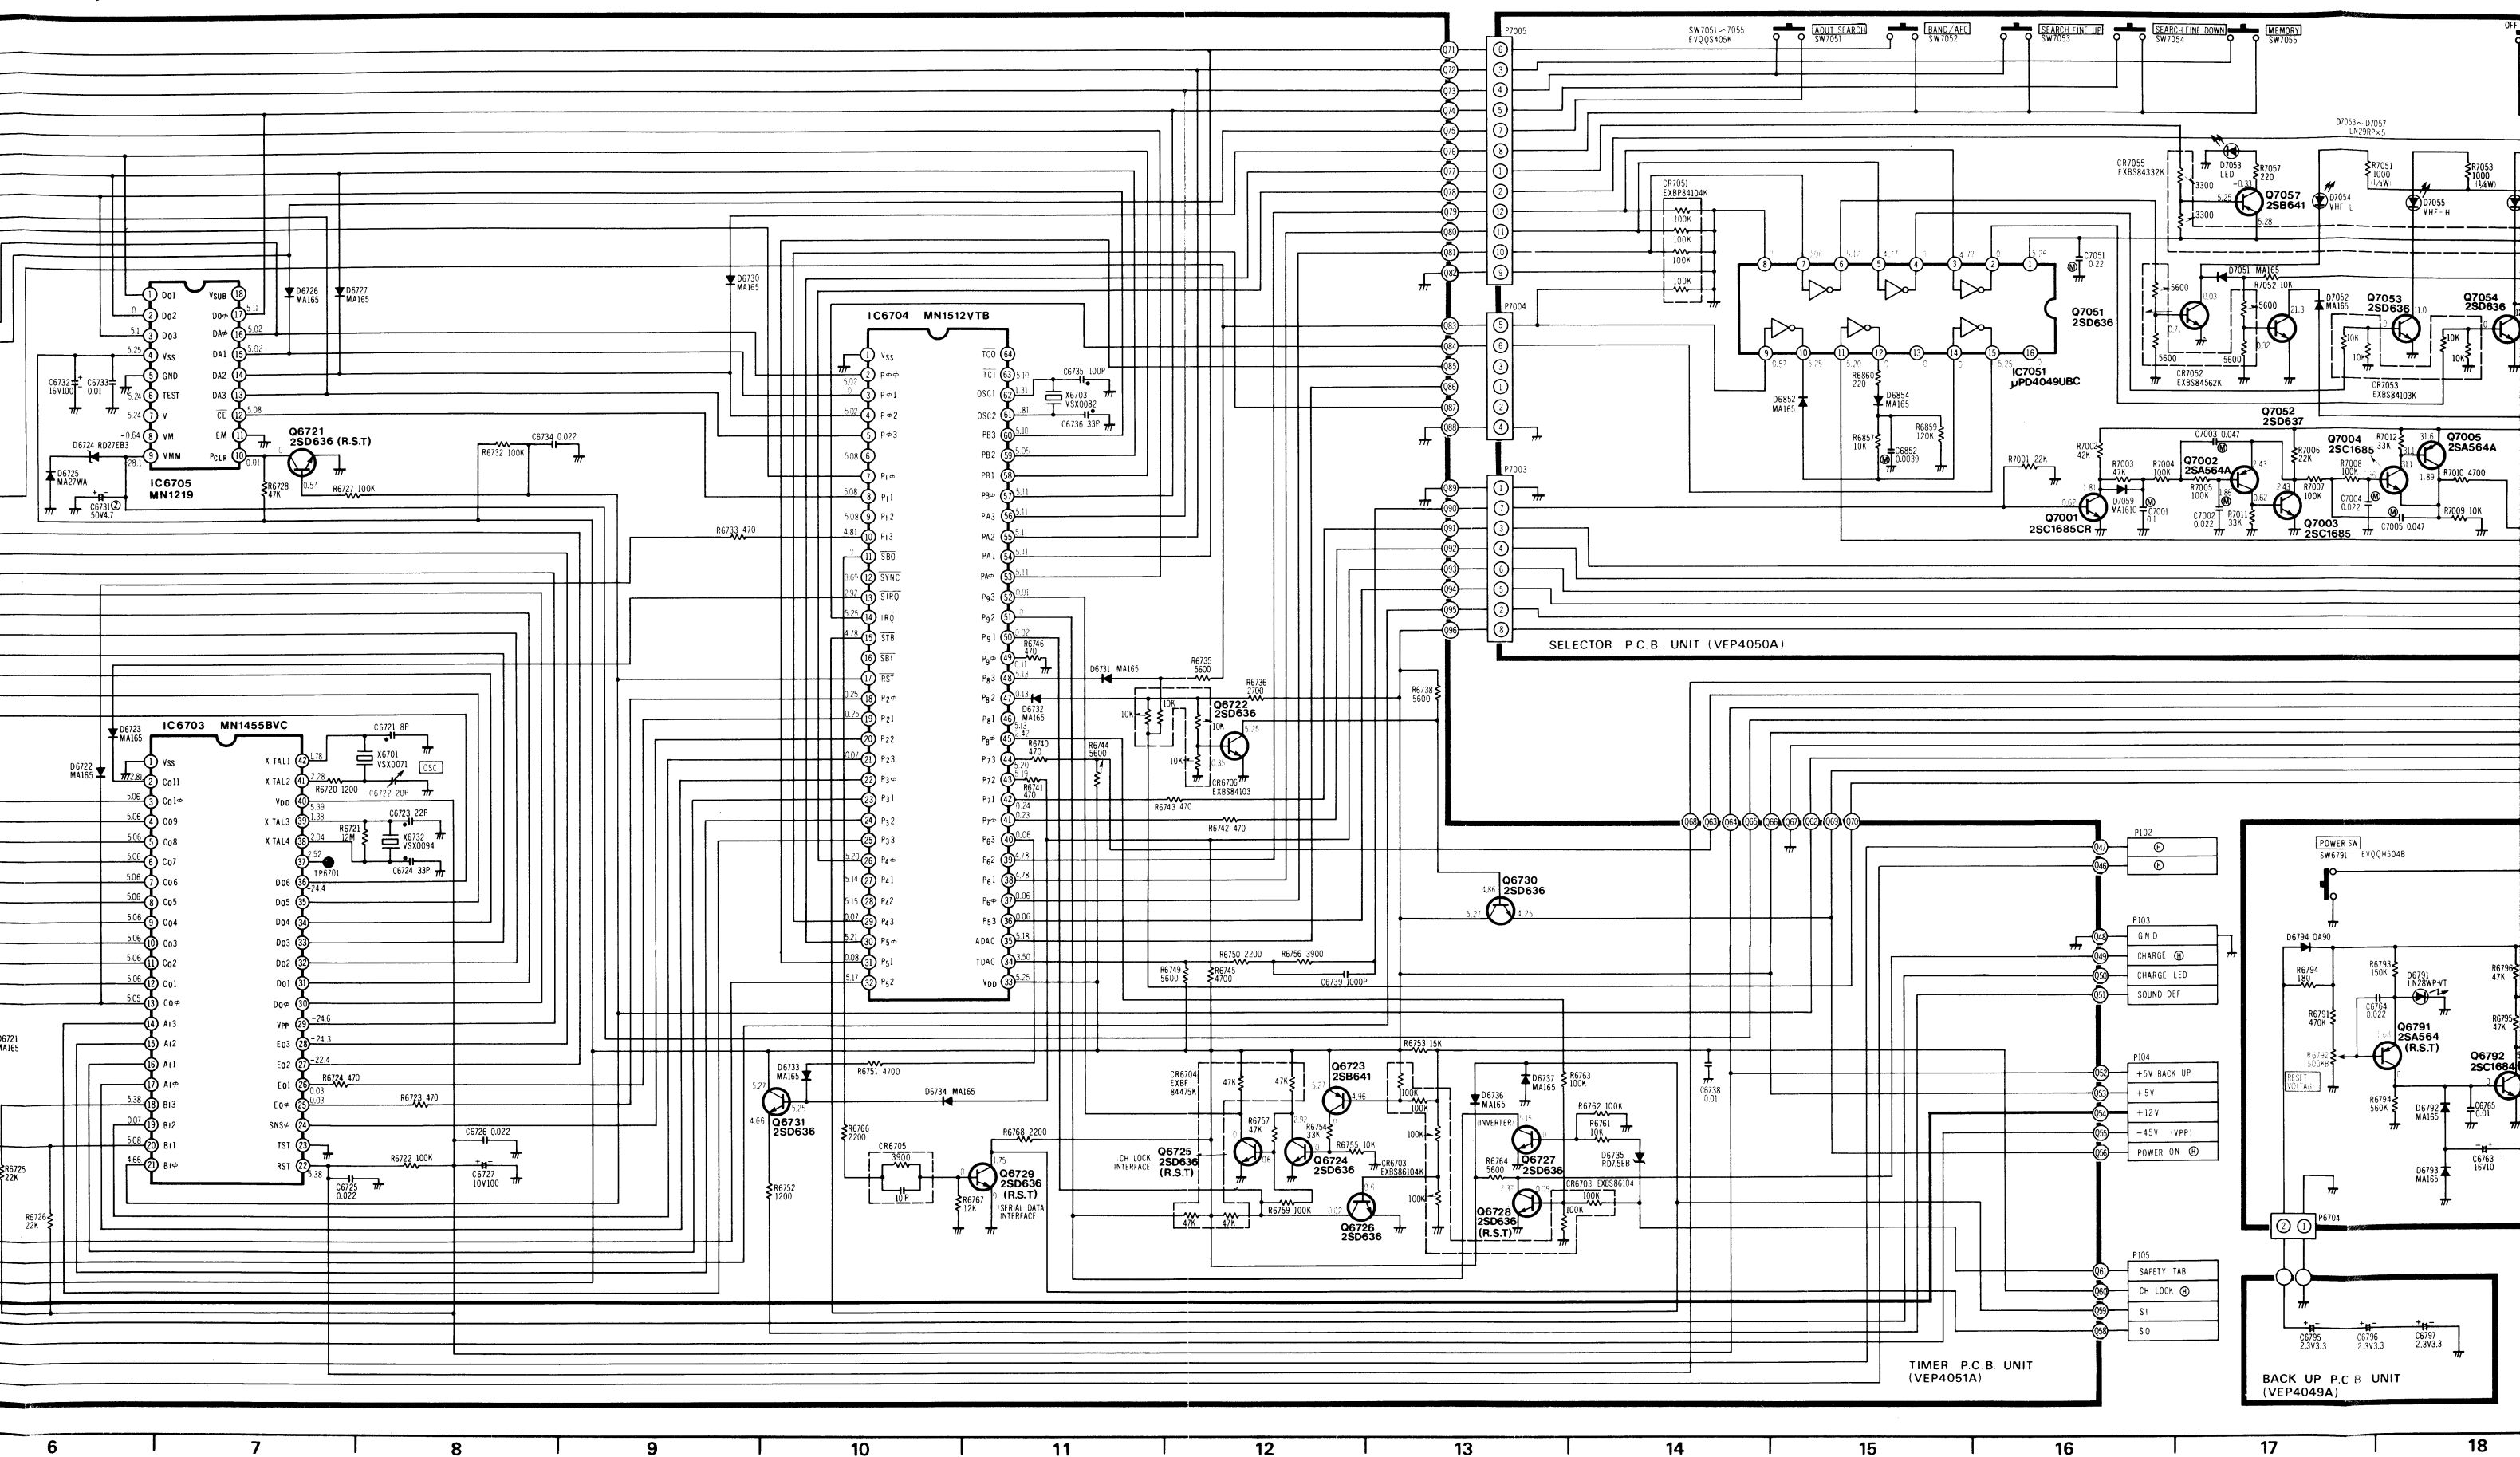

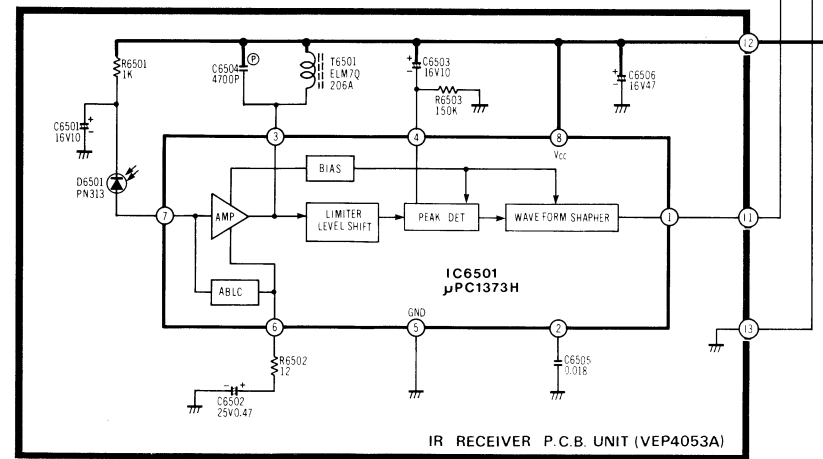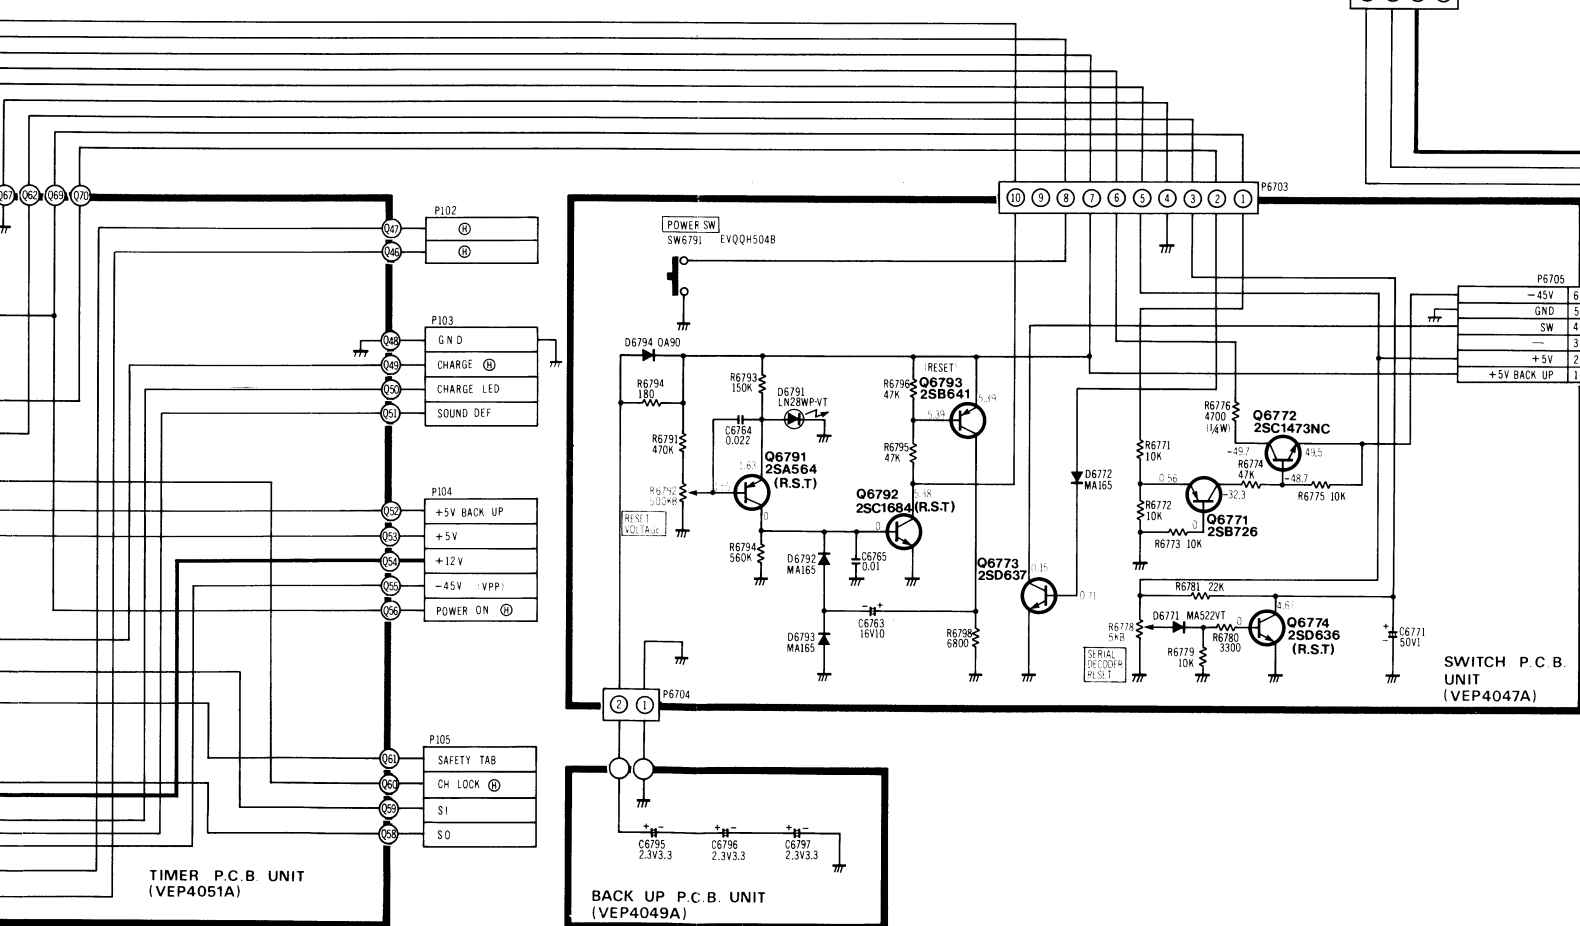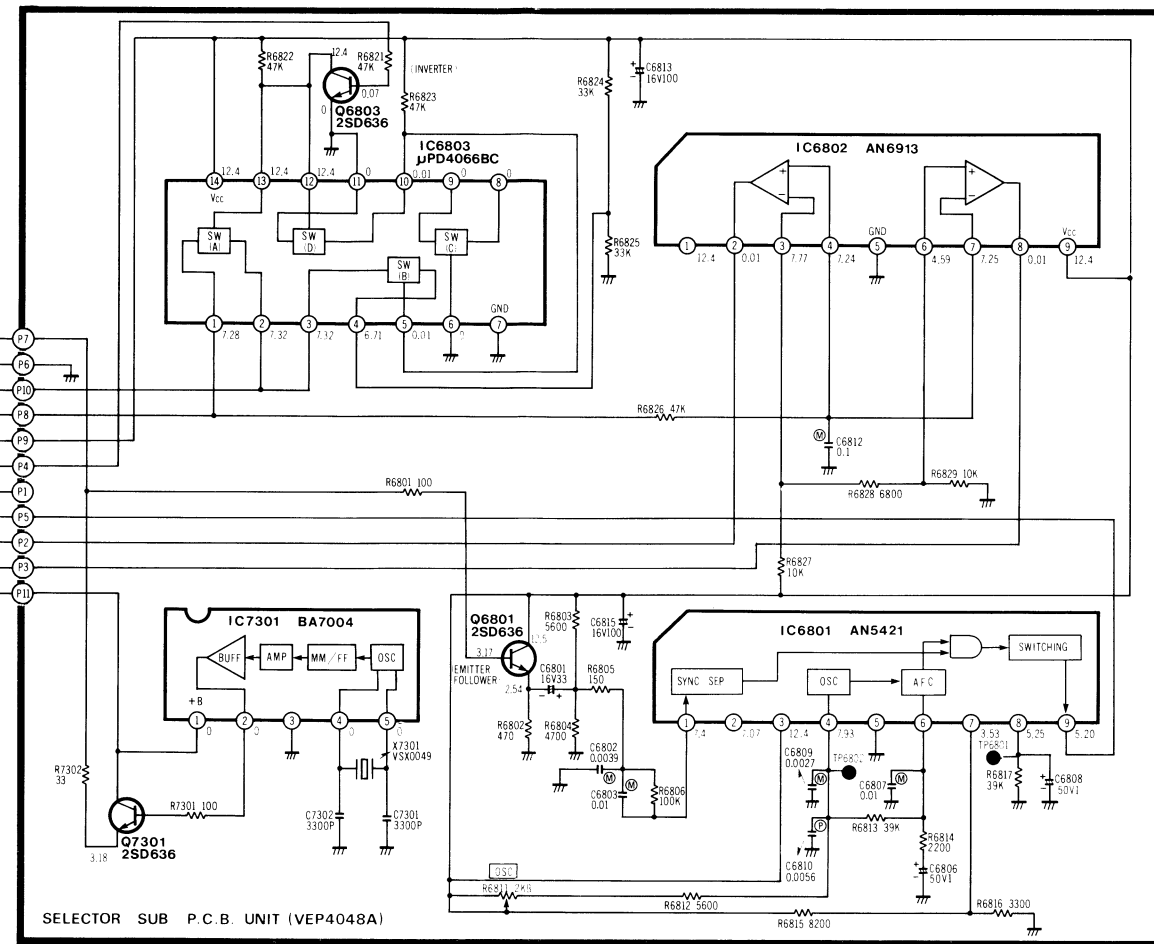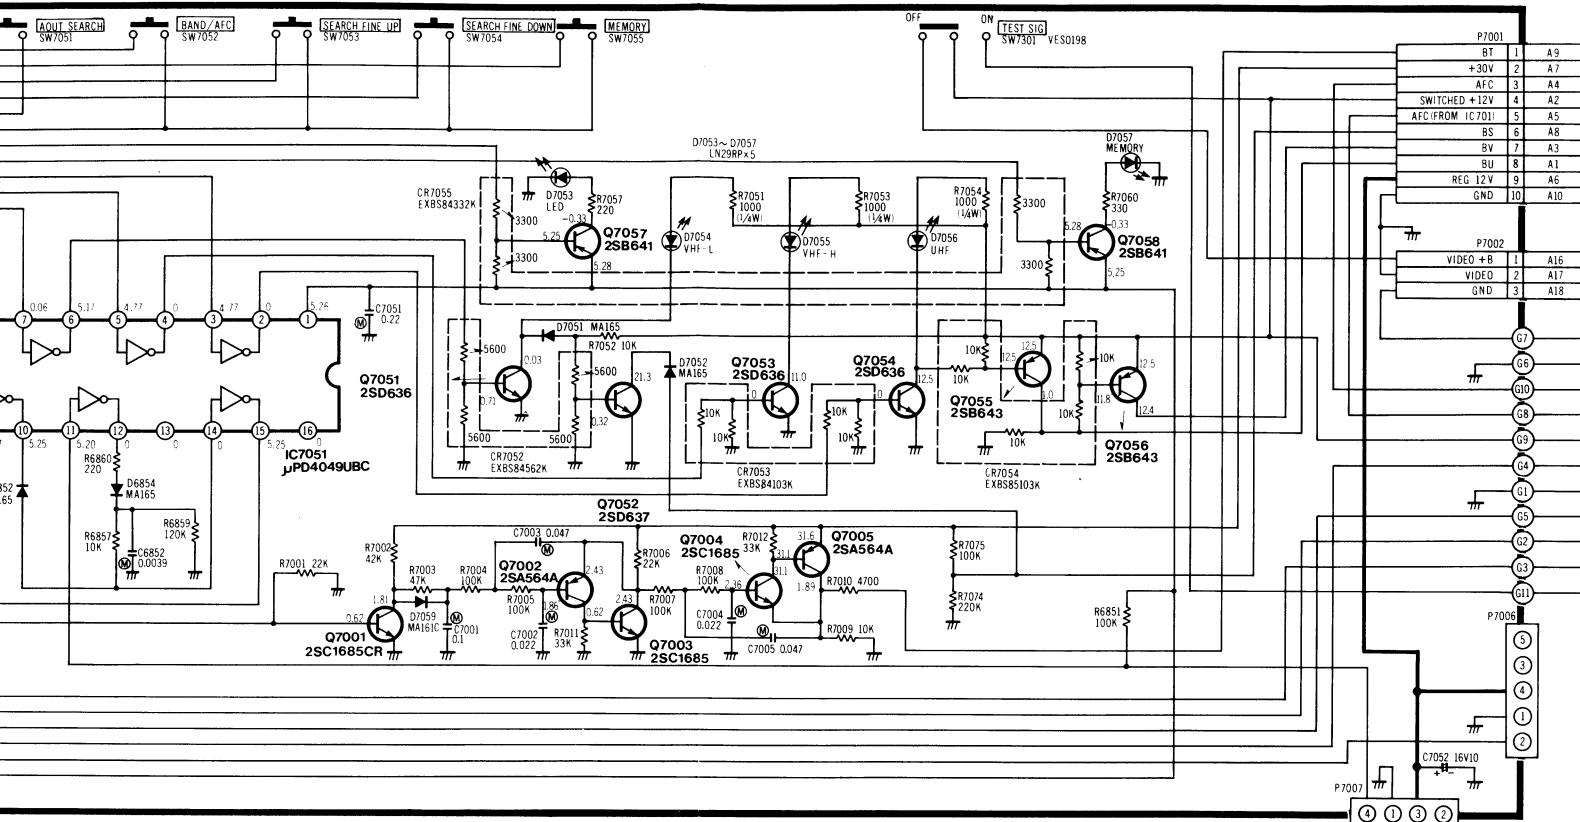

| Timer  |      |
|--------|------|
| Q6721  | E-7  |
| Q6722  | D-12 |
| Q6723  | C-12 |
| Q6724  | B-12 |
| Q6725  | B-12 |
| Q6726  | B-12 |
| Q6727  | B-13 |
| Q6728  | B-13 |
| Q6729  | B-11 |
| Q6730  | C-13 |
| Q6731  | B-10 |
| IC6703 | D-7  |
| IC6704 | F-10 |
| IC6705 | E-7  |

| Timer Display |     |
|---------------|-----|
| IC6701        | C-2 |
| IC6702        | C-4 |


| Selector |      |
|----------|------|
| Q7001    | E-16 |
| Q7002    | E-17 |
| Q7003    | E-17 |
| Q7004    | E-18 |
| Q7005    | E-18 |
| Q7051    | F-17 |
| Q7052    | F-17 |
| Q7053    | F-18 |
| Q7054    | F-18 |
| Q7055    | F-19 |
| Q7056    | F-19 |
| Q7057    | G-17 |
| Q7058    | G-19 |

| Selector Sub |      |
|--------------|------|
| Q6801        | E-23 |
| Q6803        | G-22 |
| Q7301        | D-22 |
| IC6801       | E-24 |
| IC6802       | G-24 |
| IC6803       | G-23 |
| IC7301       | E-22 |


| Switch |      |
|--------|------|
| Q6771  | B-19 |
| Q6772  | C-20 |
| Q6773  | B-19 |
| Q6774  | B-20 |
| Q6791  | B-18 |
| Q6792  | B-18 |
| Q6793  | C-18 |

| IR Receiver |      |
|-------------|------|
| IC6501      | B-24 |



## PROGRAMMABLE TIMER SCHEMATIC DIAGRAM (TIMER, TIMER DISPLAY, SWITCH, SELECTOR SUB, IR RECEIVER, BACK UP) ; NV-V10B

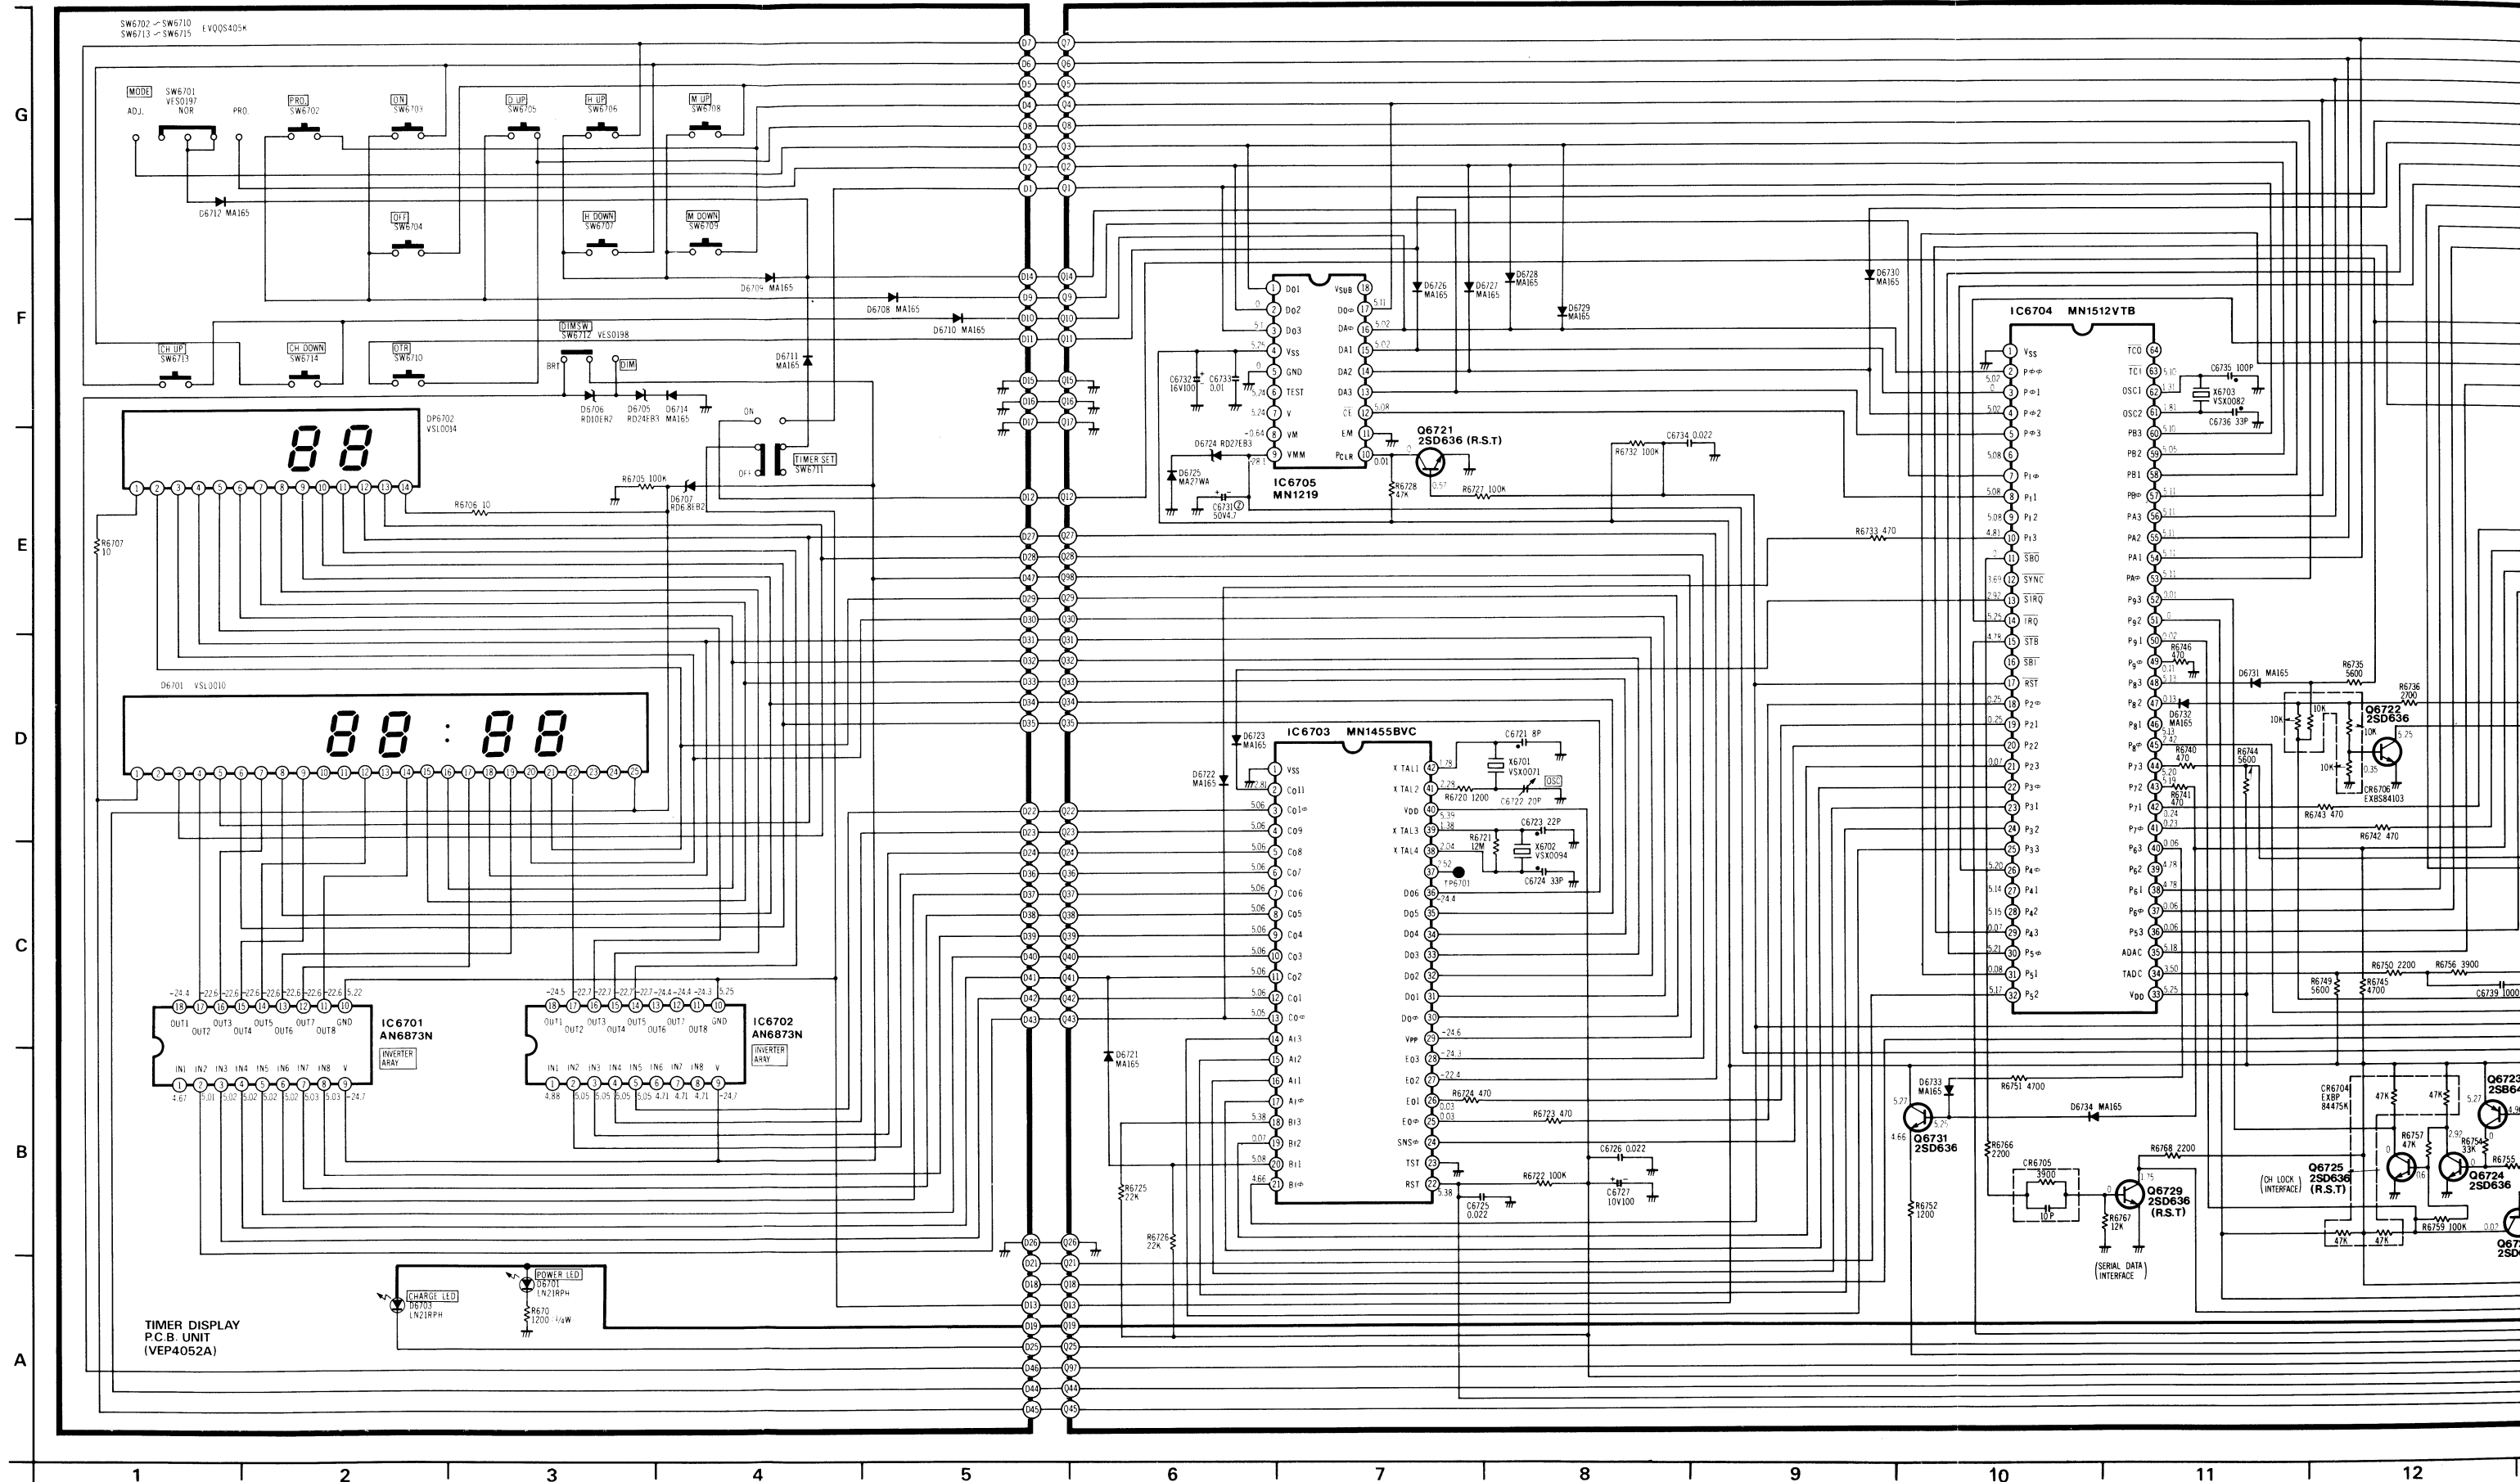

**SELECTOR SUB, IR RECEIVER, BACK UP) ; NV-V10B**

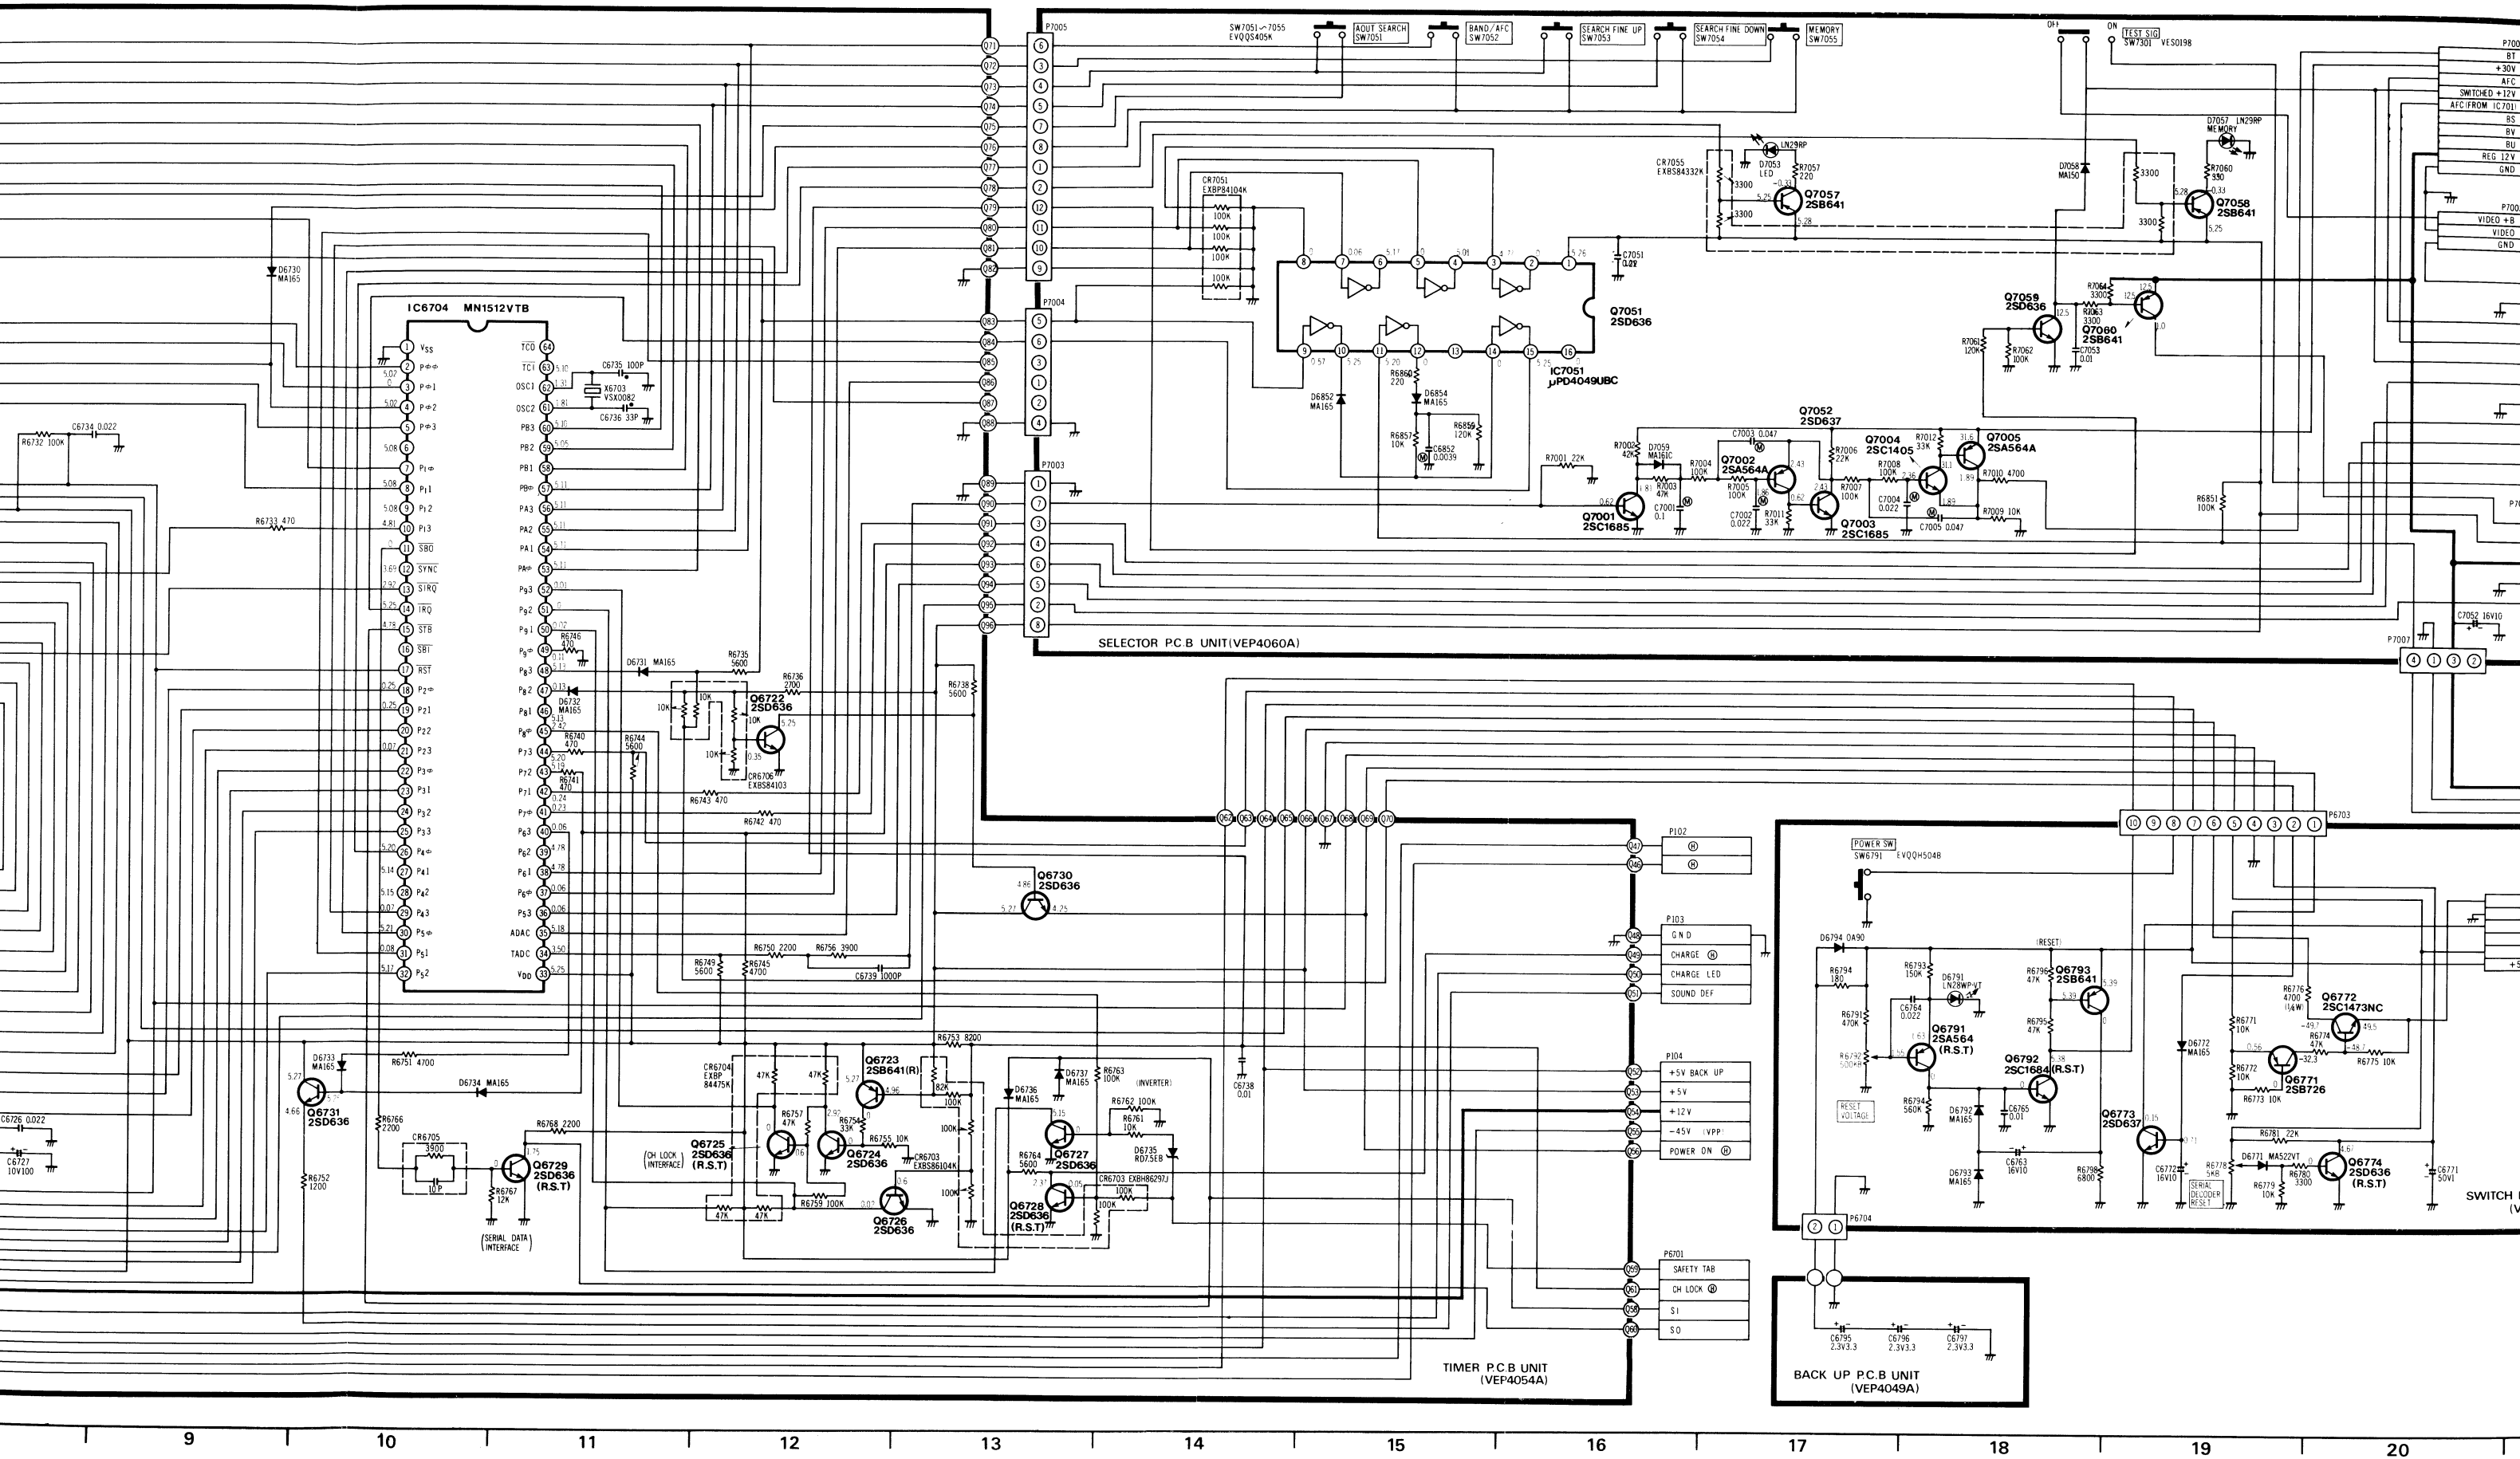



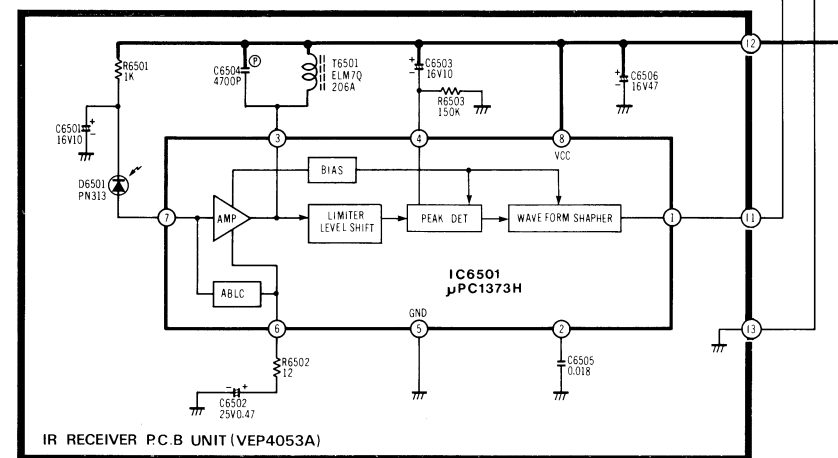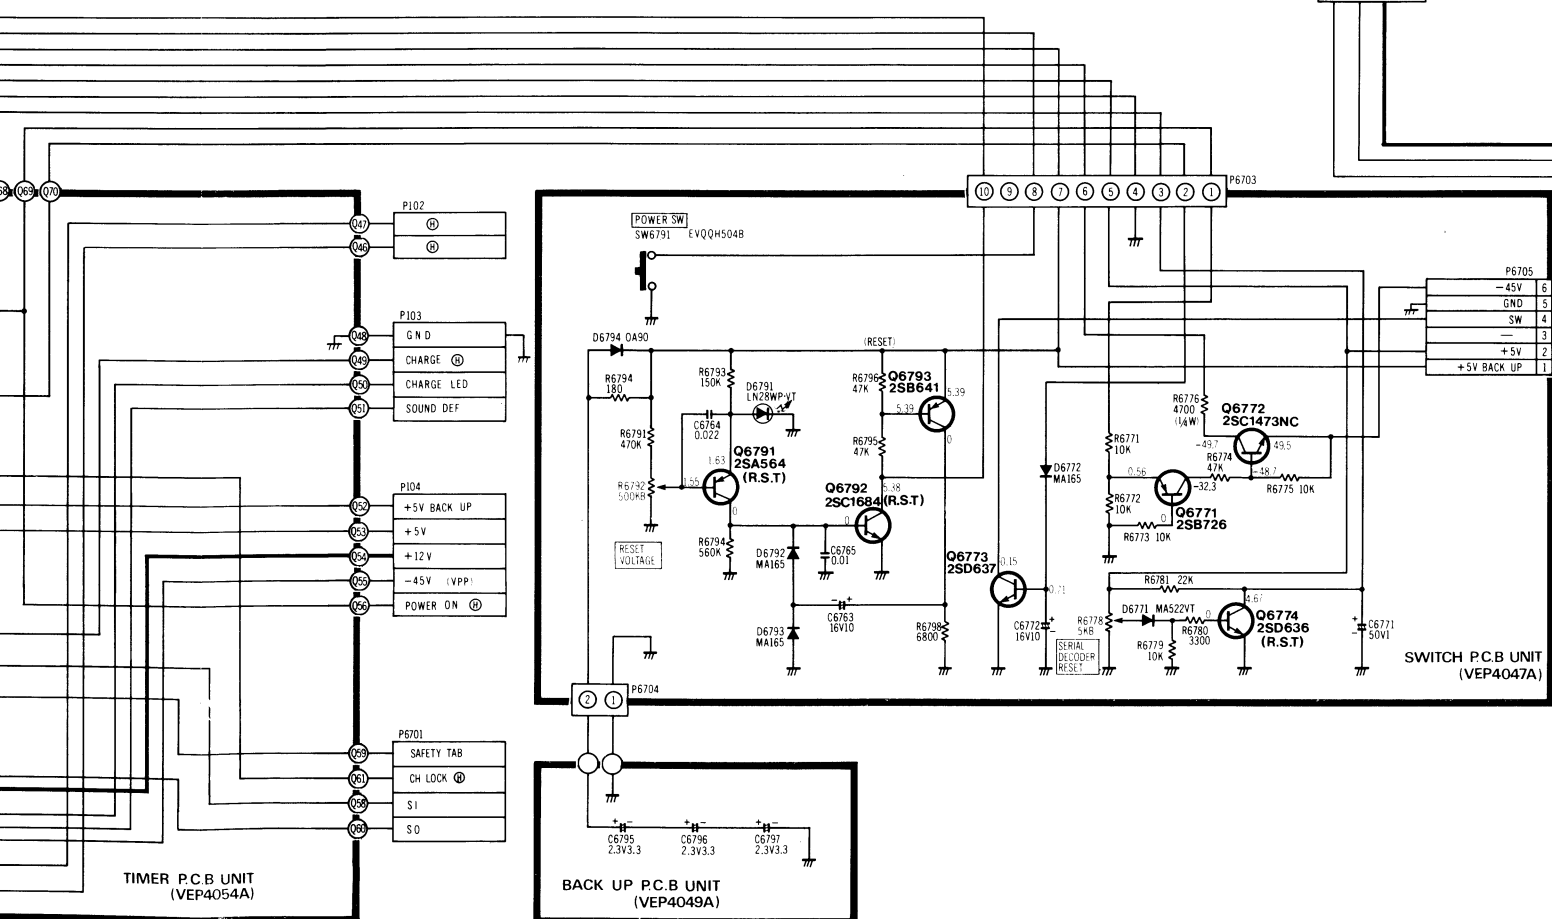


|             |      |
|-------------|------|
| IR Receiver |      |
| IC6501      | B-24 |




SELECTOR BOARD (NV-V10B; VEP400)


TIMER BOARD (NV-V10B; VEP4054A)

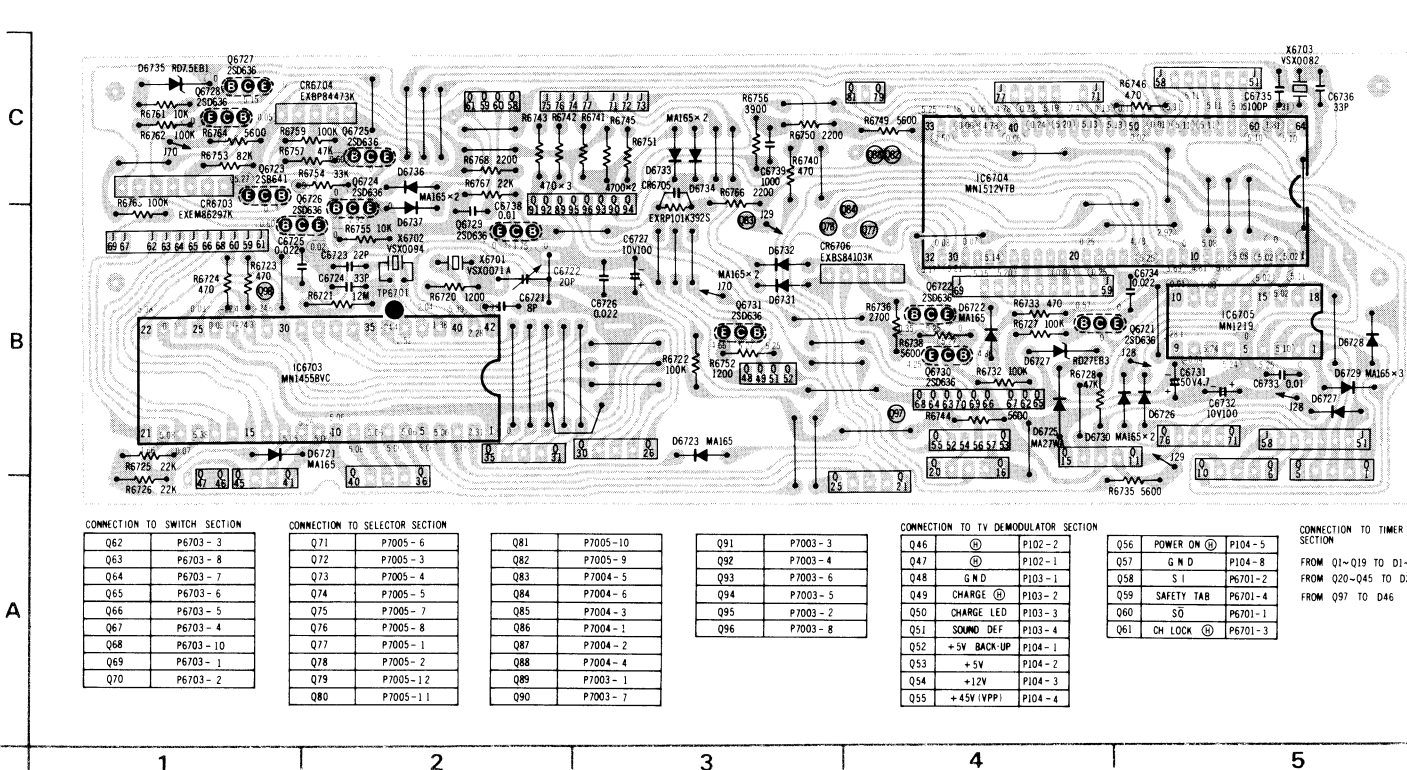


BOARD (NV-V10B; VEP4060B)

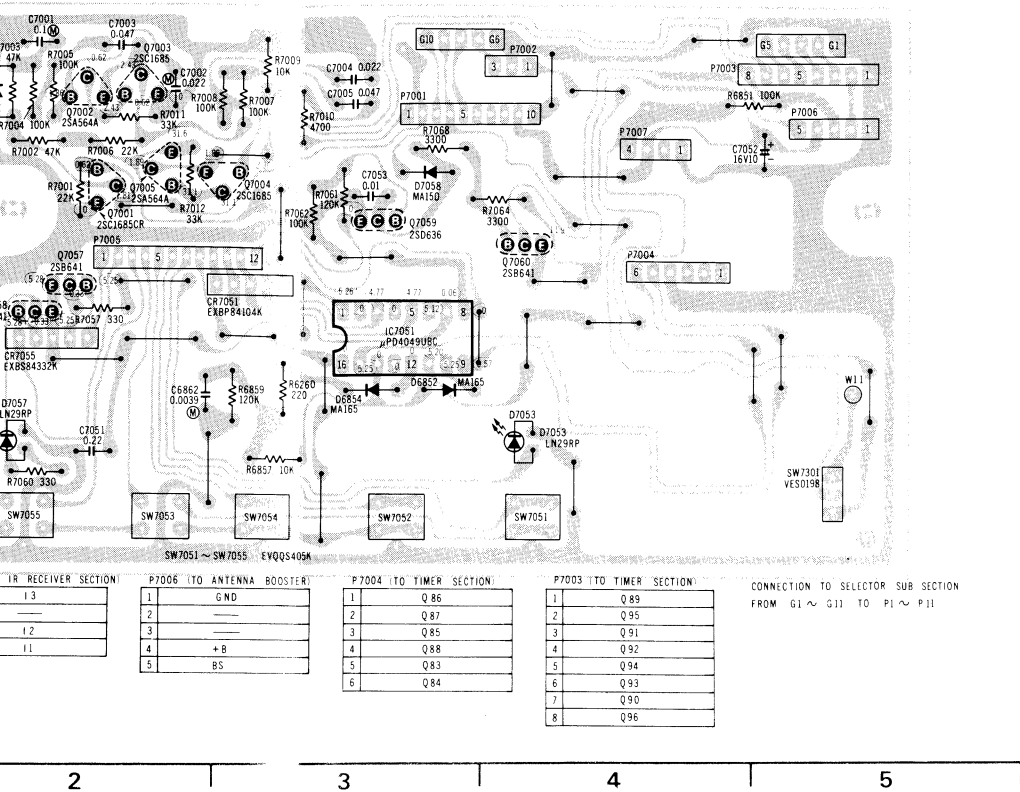


IR RECEIVER BOARD (VEP4053A)

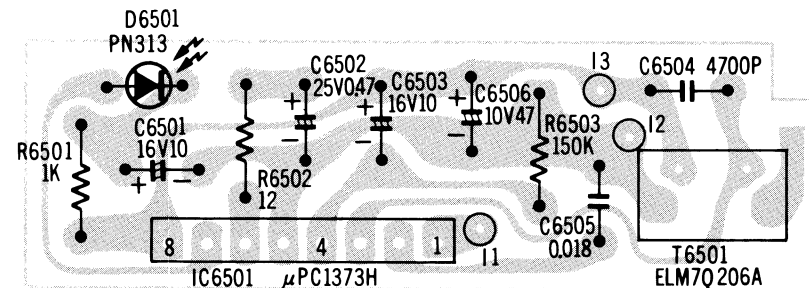

|    |         |
|----|---------|
| 11 | P7007-4 |
| 12 | P7007-3 |
| 13 | P7007-1 |

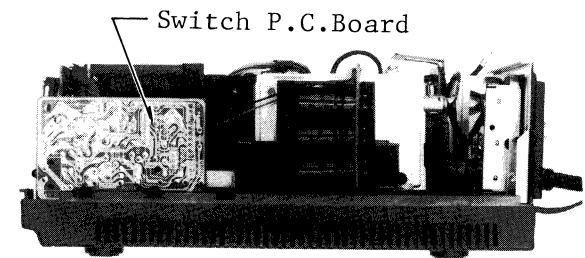


Timer P.C.B. Unit

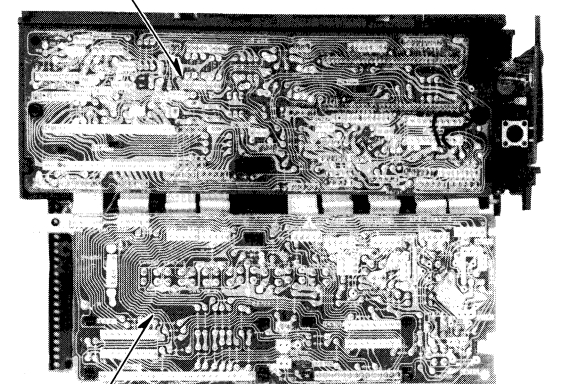


Timer Display P.C.Board


BACK UP BOARD (VEP4049A)

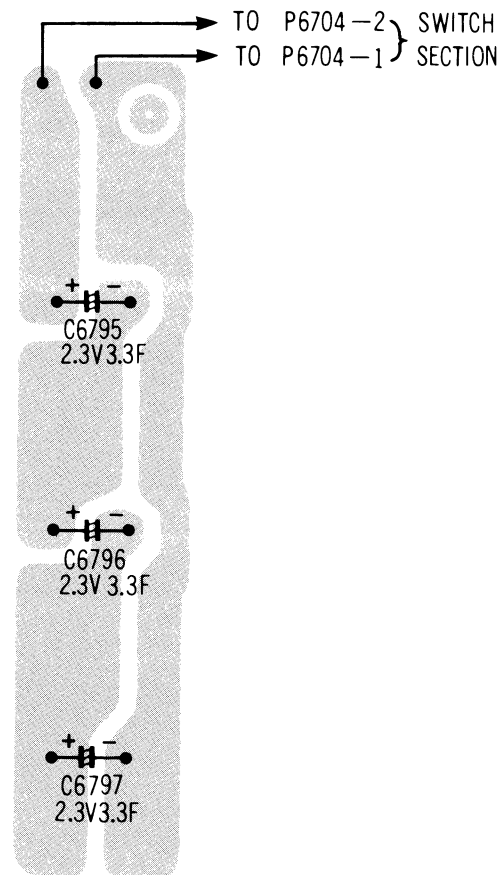


D (VEP4047A) SELECTOR SUB BOARD (VEP4048A)

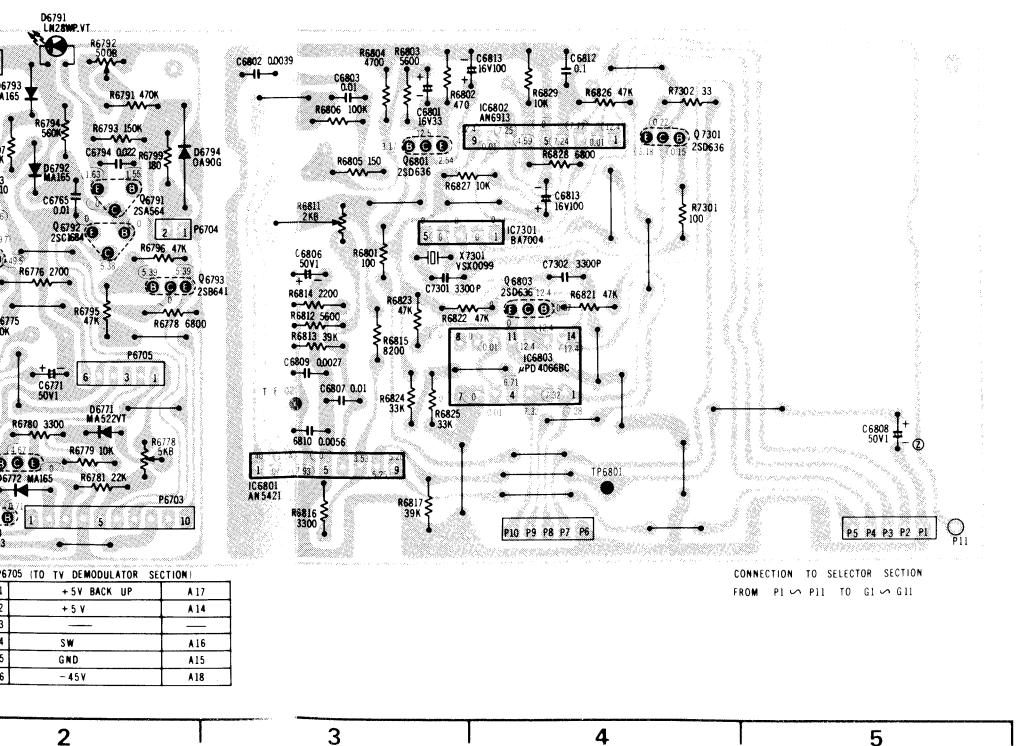

| Switch, Selector Sub |     |
|----------------------|-----|
| Q6771                | B-2 |
| Q6772                | B-2 |
| Q6773                | A-2 |
| Q6774                | A-2 |
| Q6791                | B-2 |
| Q6792                | B-2 |
| Q6793                | B-2 |
| Q6801                | C-3 |
| Q6803                | B-4 |
| Q7301                | C-4 |
| IC6801               | A-3 |
| IC6802               | C-4 |
| IC6803               | B-4 |
| IC7301               | B-4 |

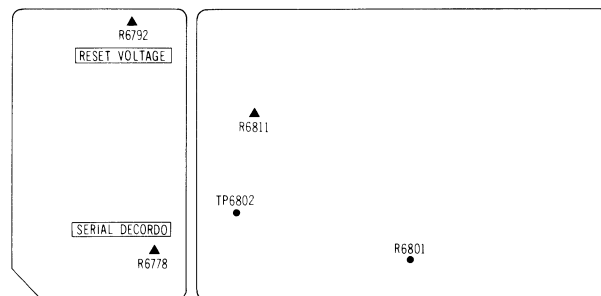

Selector Sub P.C.Board

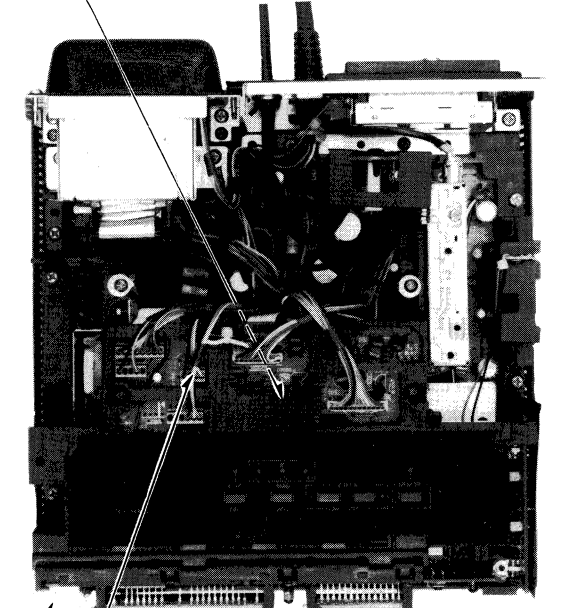

Selector P.C.Board


IR Receiver P.C.Board

## TV DEMODULATOR SCHEMATIC DIAGRAM (TV DEMODULATOR, POWER SUPPLY SUB, FUSE, ANTENNA BOOSTER) ; NV-V10E/EO



# POWER SUPPLY SUB BOARD (VEP4046A)



| TV Demodulator |      |
|----------------|------|
| Q101           | G-17 |
| Q102           | G-17 |
| Q103           | F-10 |
| Q104           | G-8  |
| Q151           | E-14 |
| Q152           | C-14 |
| Q153           | C-14 |
| Q154           | C-14 |
| Q155           | C-13 |
| Q156           | C-13 |
| Q157           | D-12 |
| Q158           | C-12 |
| Q159           | D-12 |
| Q160           | B-12 |
| Q161           | E-12 |
| Q162           | E-11 |
| Q163           | C-11 |
| Q164           | B-8  |
| Q165           | B-8  |
| Q166           | B-9  |
| Q167           | C-8  |
|                |      |
| Q701           | G-5  |
| Q731           | B-3  |
| Q732           | B-4  |
| Q733           | A-4  |
| Q751           | A-6  |
| Q752           | A-7  |
|                |      |
| IC101          | G-7  |
| IC151          | D-10 |
| IC152          | E-8  |
|                |      |
| IC701          | D-5  |
| IC751          | B-5  |

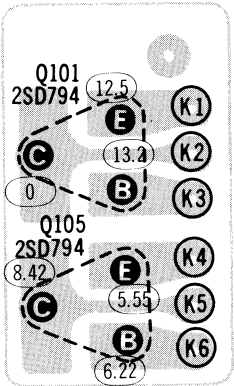


## CONNECTION TO TV DEMODULATOR SECTION

|    |          |
|----|----------|
| K1 | P109 — 4 |
| K2 | P109 — 2 |
| K3 | P109 — 1 |
| K4 | P109 — 6 |
| K5 | P109 — 5 |
| K6 | P109 — 3 |

| Demodu |     |
|--------|-----|
| Q103   | A-5 |
| Q104   | B-4 |
| Q151   | C-2 |
| Q152   | C-3 |
| Q153   | C-3 |
| Q154   | E-2 |
| Q155   | E-2 |
| Q156   | D-2 |
| Q157   | D-2 |
| Q158   | D-2 |
| Q159   | D-3 |
| Q160   | D-3 |
| Q161   | C-3 |
| Q162   | C-4 |
| Q163   | B-5 |
| Q164   | C-4 |
| Q165   | C-4 |
| Q166   | B-5 |
| Q167   | C-5 |
|        |     |
| Q701   | D-6 |
| Q730   | E-5 |
| Q732   | E-5 |
| Q733   | E-4 |
| Q751   | E-4 |
| Q752   | E-3 |
|        |     |
| IC101  | B-4 |
| IC151  | C-5 |
|        |     |
| IC701  | D-5 |

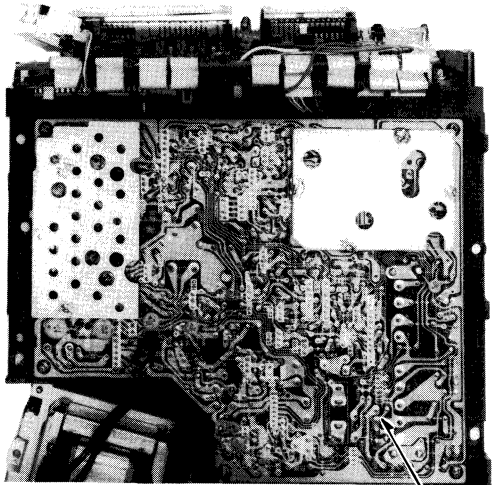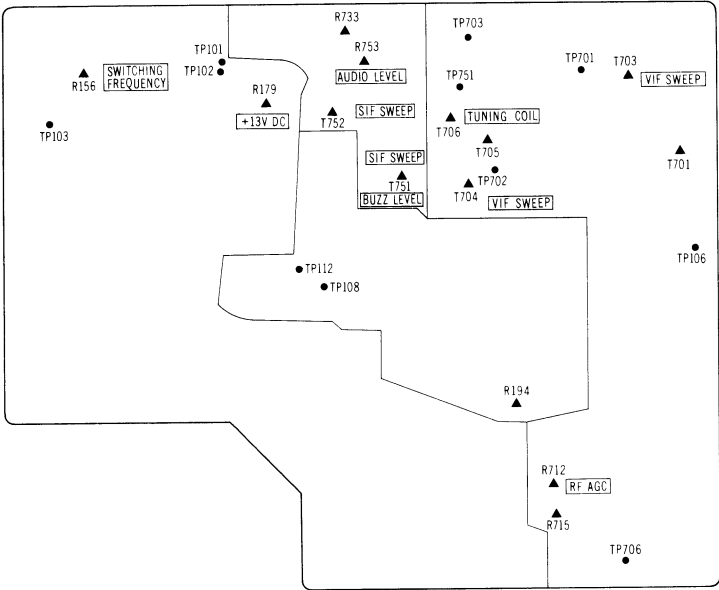


TV Demodulator P.C.Board

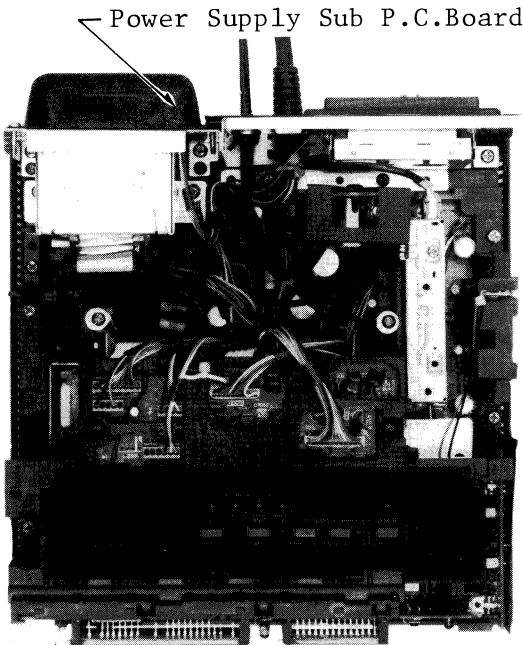



TV DEMODULATOR BOARD (NV-V10E; VEP4114A) (NV-V10EO; VEP4114C) FUSE BOARD (VEP4045A)

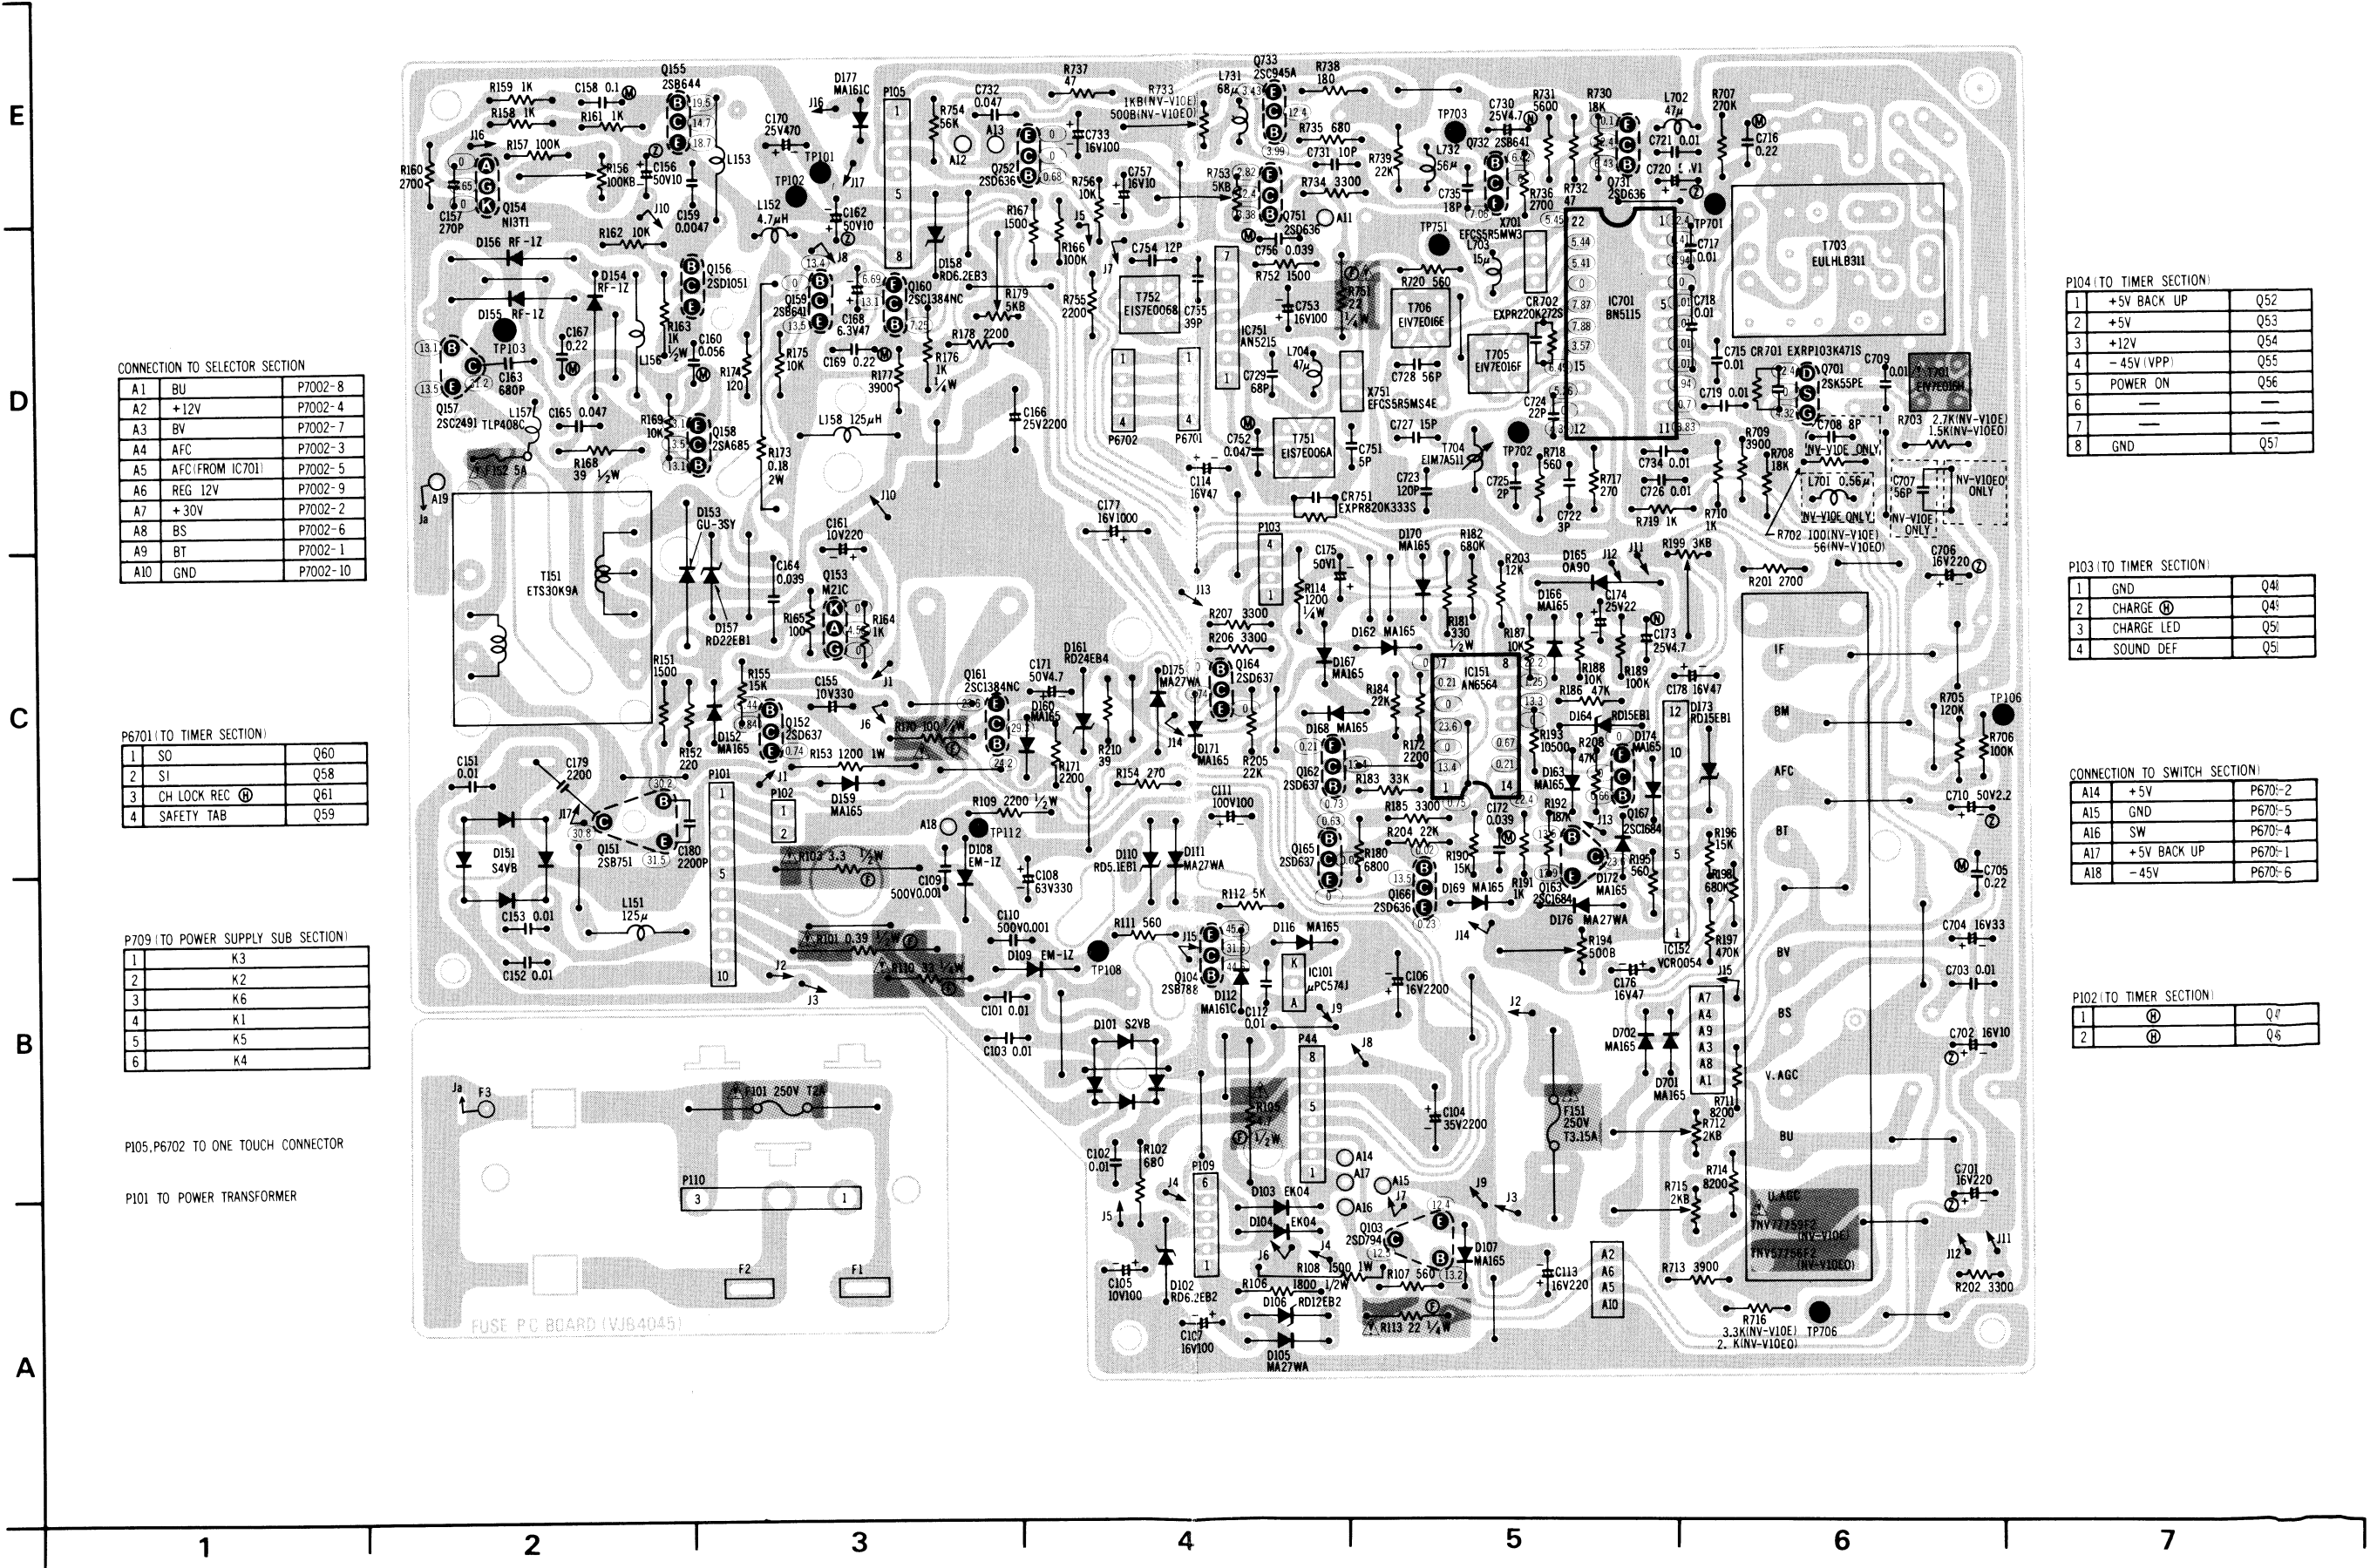

CONNECTION TO SELECTOR SECTION

|     |                  |          |
|-----|------------------|----------|
| A1  | BU               | P7002-8  |
| A2  | +12V             | P7002-4  |
| A3  | BV               | P7002-7  |
| A4  | AFC              | P7002-3  |
| A5  | AFC (FROM IC701) | P7002-5  |
| A6  | REG 12V          | P7002-9  |
| A7  | +30V             | P7002-2  |
| A8  | BS               | P7002-6  |
| A9  | BT               | P7002-1  |
| A10 | GND              | P7002-10 |

P6701 (TO TIMER SECTION)

|   |             |     |
|---|-------------|-----|
| 1 | SO          | Q60 |
| 2 | SI          | Q58 |
| 3 | CH LOCK REC | Q61 |
| 4 | SAFETY TAB  | Q59 |

P709 (TO POWER SUPPLY SUB SECTION)

|   |    |
|---|----|
| 1 | K3 |
| 2 | K2 |
| 3 | K6 |
| 4 | K1 |
| 5 | K5 |
| 6 | K4 |

P105, P6702 TO ONE TOUCH CONNECTOR

P101 TO POWER TRANSFORMER

P104 (TO TIMER SECTION)

|   |             |     |
|---|-------------|-----|
| 1 | +5V BACK UP | Q52 |
| 2 | +5V         | Q53 |
| 3 | +12V        | Q54 |
| 4 | -45V (VPP)  | Q55 |
| 5 | POWER ON    | Q56 |
| 6 |             |     |
| 7 |             |     |
| 8 | GND         | Q57 |

P103 (TO TIMER SECTION)

|   |            |     |
|---|------------|-----|
| 1 | GND        | Q41 |
| 2 | CHARGE     | Q41 |
| 3 | CHARGE LED | Q51 |
| 4 | SOUND DEF  | Q51 |

CONNECTION TO SWITCH SECTION

|     |             |         |
|-----|-------------|---------|
| A14 | +5V         | P6701-2 |
| A15 | GND         | P6701-5 |
| A16 | SW          | P6701-4 |
| A17 | +5V BACK UP | P6701-1 |
| A18 | -45V        | P6701-6 |

P102 (TO TIMER SECTION)

|   |    |    |
|---|----|----|
| 1 | Q4 | Q4 |
| 2 | Q5 | Q5 |

# TV DEMODULATOR BOARD (NV-V10B; VEP4114B)

CONNECTION TO SELECTOR SECTION

|     |                  |          |
|-----|------------------|----------|
| A1  | BU               | P7002-8  |
| A2  | +12V             | P7002-4  |
| A3  | BV               | P7002-7  |
| A4  | AFC              | P7002-3  |
| A5  | AFC (FROM IC701) | P7002-5  |
| A6  | REG 12V          | P7002-9  |
| A7  | +30V             | P7002-2  |
| A8  | BS               | P7002-6  |
| A9  | BT               | P7002-1  |
| A10 | GND              | P7002-10 |

P6701 (TO TIMER SECTION)


|   |             |     |
|---|-------------|-----|
| 1 | SO          | Q60 |
| 2 | SI          | Q58 |
| 3 | CH LOCK REC | Q61 |
| 4 | SAFETY TAB  | Q59 |

P709 (TO POWER SUPPLY SUB SECTION)

|   |    |
|---|----|
| 1 | K3 |
| 2 | K2 |
| 3 | K6 |
| 4 | K1 |
| 5 | K5 |
| 6 | K4 |

PI05, P6702 TO ONE TOUCH CONNECTOR

PI01 TO POWER TRANSFORMER

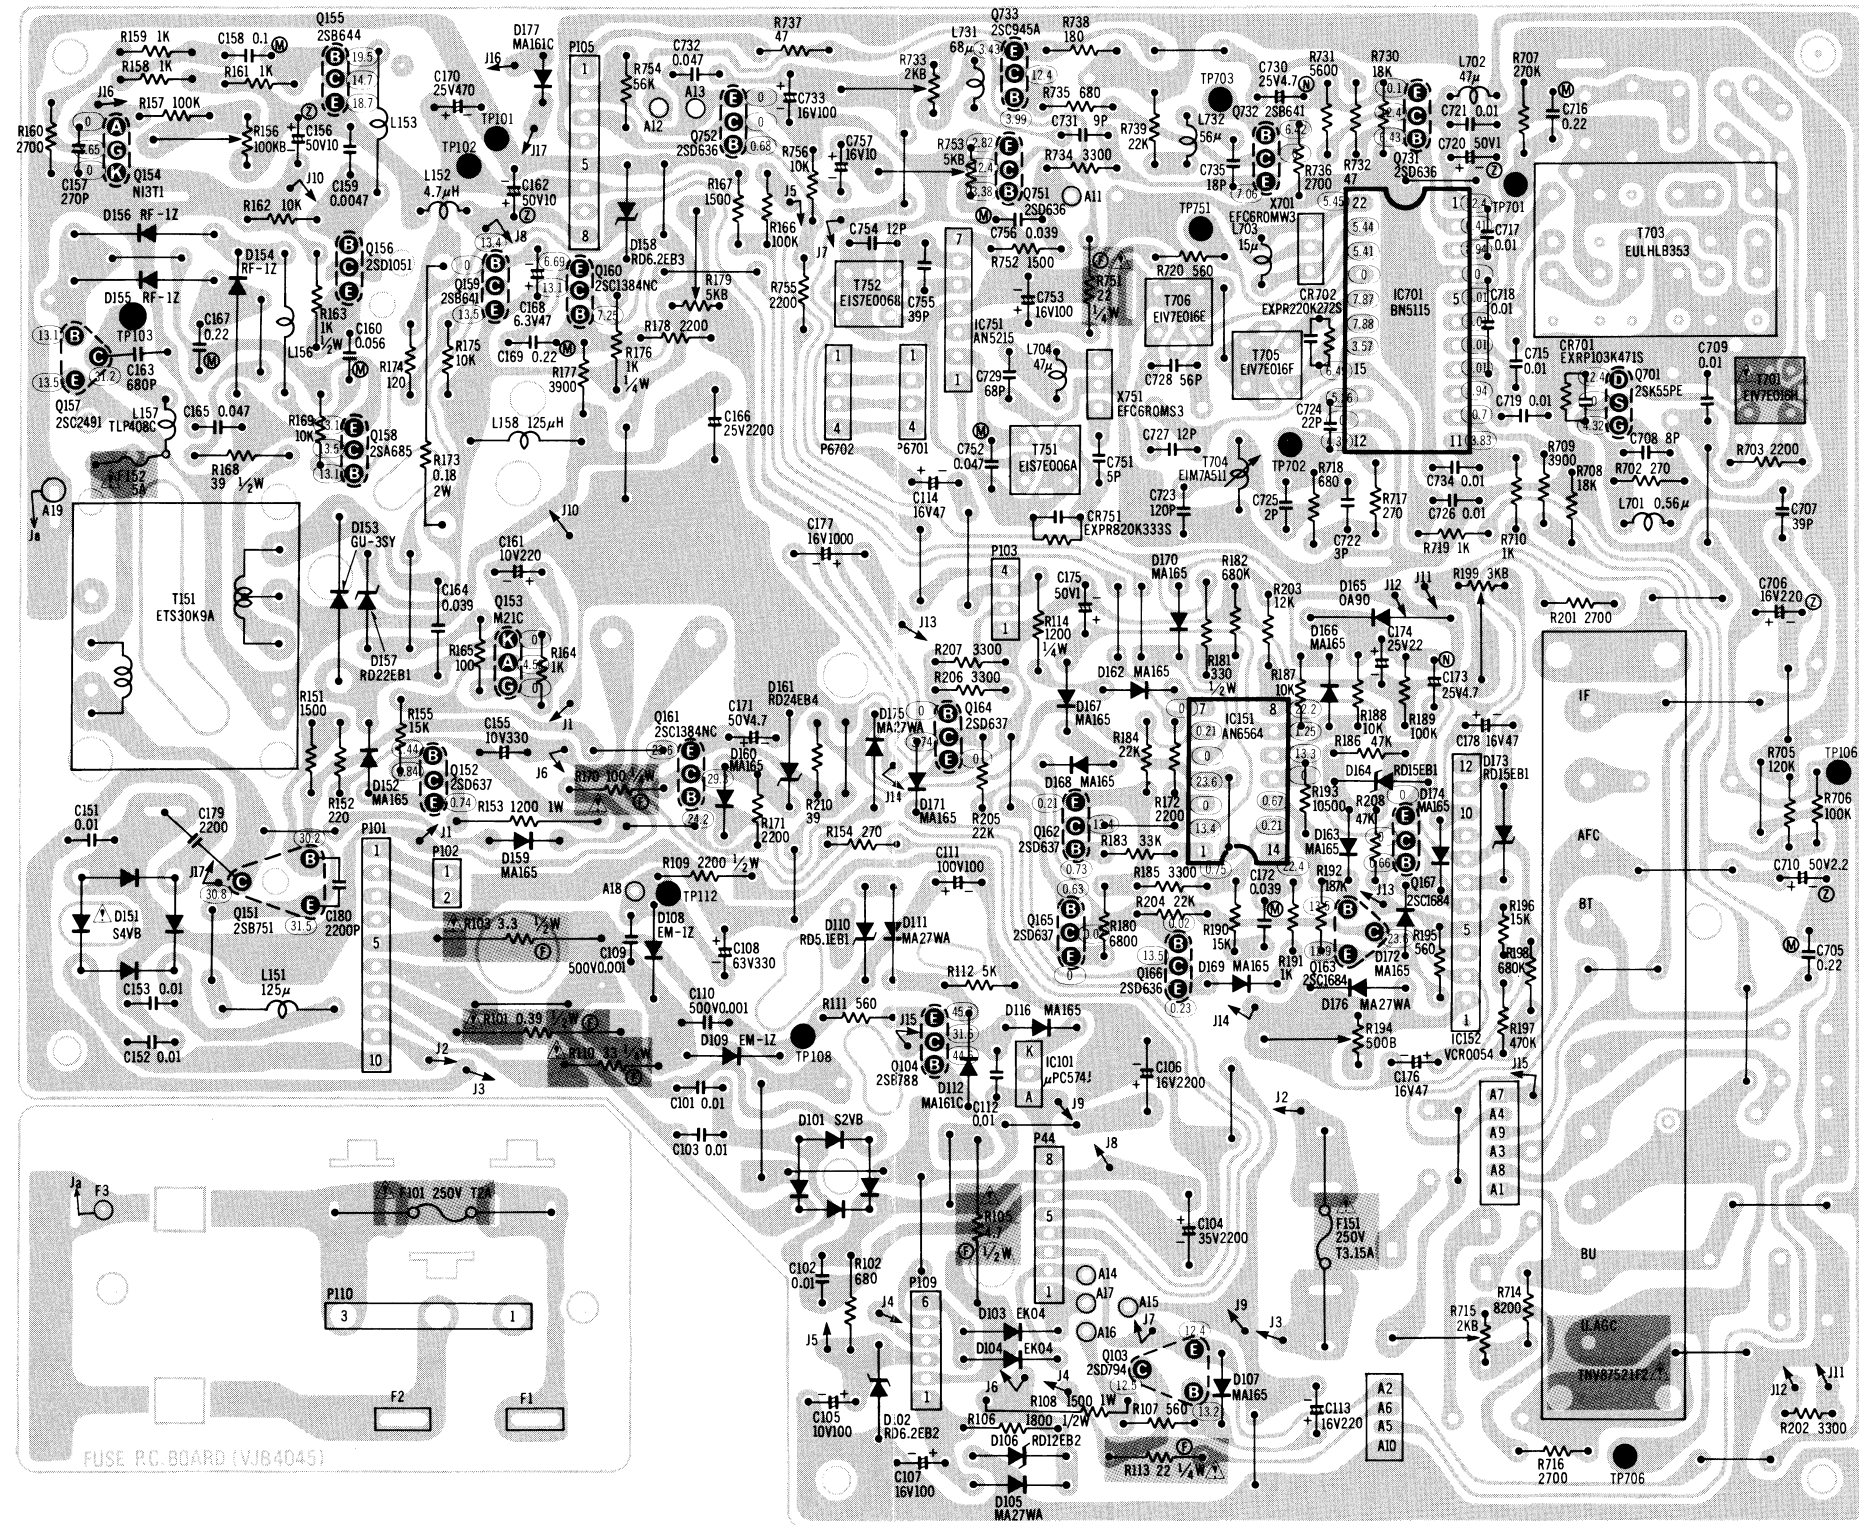

PI04 (TO TIMER SECTION)

|   |             |     |
|---|-------------|-----|
| 1 | +5V BACK UP | Q52 |
| 2 | +5V         | Q53 |
| 3 | +12V        | Q54 |
| 4 | -45V (VPP)  | Q55 |
| 5 | POWER ON    | Q56 |
| 6 |             |     |
| 7 |             |     |
| 8 | GND         | Q57 |

PI03 (TO TIMER SECTION)

|   |            |     |
|---|------------|-----|
| 1 | GND        | Q48 |
| 2 | CHARGE     | Q49 |
| 3 | CHARGE LED | Q50 |
| 4 | SOUND DEF  | Q51 |

CONNECTION TO SWITCH SECTION

|     |             |         |
|-----|-------------|---------|
| A14 | +5V         | P6705-2 |
| A15 | GND         | P6705-5 |
| A16 | SW          | P6705-4 |
| A17 | +5V BACK UP | P6705-1 |
| A18 | -45V        | P6705-6 |


PI02 (TO TIMER SECTION)

|   |   |     |
|---|---|-----|
| 1 | Ⓢ | Q47 |
| 2 | Ⓢ | Q46 |



# POWER SUPPLY SUB BOARD (VEP4046A)



| Demodu |     |
|--------|-----|
| Q103   | A-5 |
| Q104   | B-4 |
| Q151   | C-2 |
| Q152   | C-3 |
| Q153   | C-3 |
| Q154   | E-2 |
| Q155   | E-2 |
| Q156   | D-2 |
| Q157   | D-2 |
| Q158   | D-2 |
| Q159   | D-3 |
| Q160   | D-3 |
| Q161   | C-3 |
| Q162   | C-4 |
| Q163   | B-5 |
| Q164   | C-4 |
| Q165   | C-4 |
| Q166   | B-5 |
| Q167   | C-5 |
|        |     |
| Q701   | D-6 |
| Q730   | E-5 |
| Q732   | E-5 |
| Q733   | E-4 |
| Q751   | E-4 |
| Q752   | E-3 |
|        |     |
| IC101  | B-4 |
| IC151  | C-5 |
|        |     |
| IC701  | D-5 |

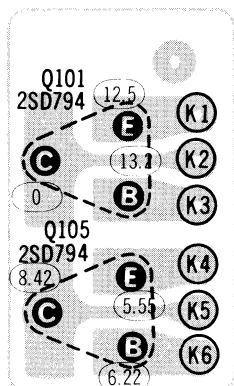


## CONNECTION TO TV DEMULATOR SECTION

|    |          |
|----|----------|
| K1 | P109 — 4 |
| K2 | P109 — 2 |
| K3 | P109 — 1 |
| K4 | P109 — 6 |
| K5 | P109 — 5 |
| K6 | P109 — 3 |

| TV Demodulator |      |
|----------------|------|
| Q101           | G-17 |
| Q102           | G-17 |
| Q103           | F-10 |
| Q104           | G-8  |
| Q151           | E-14 |
| Q152           | C-14 |
| Q153           | C-14 |
| Q154           | C-14 |
| Q155           | C-13 |
| Q156           | B-13 |
| Q157           | D-12 |
| Q158           | C-12 |
| Q159           | D-12 |
| Q160           | B-12 |
| Q161           | F-12 |
| Q162           | E-11 |
| Q163           | C-11 |
| Q164           | B-8  |
| Q165           | B-8  |
| Q166           | B-9  |
| Q167           | C-8  |
|                |      |
| Q701           | G-5  |
| Q731           | B-3  |
| Q732           | B-4  |
| Q733           | A-4  |
| Q751           | A-6  |
| Q752           | A-7  |
|                |      |
| IC101          | G-7  |
| IC151          | D-10 |
| IC152          | E-8  |
|                |      |
| IC701          | D-5  |
| IC751          | B-5  |

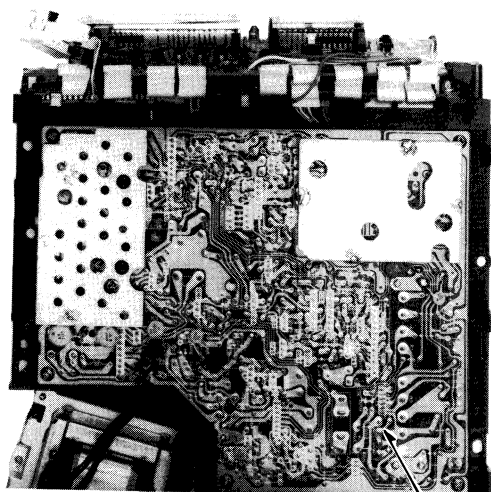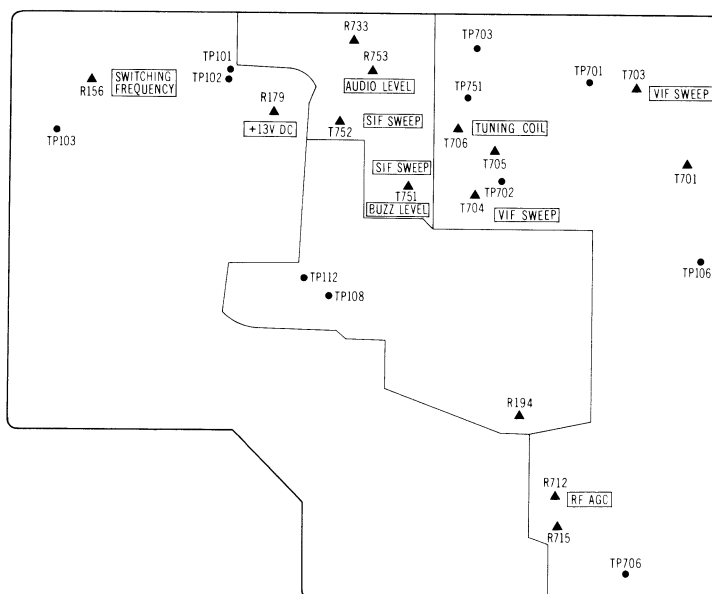



TV Demodulator P.C.Board

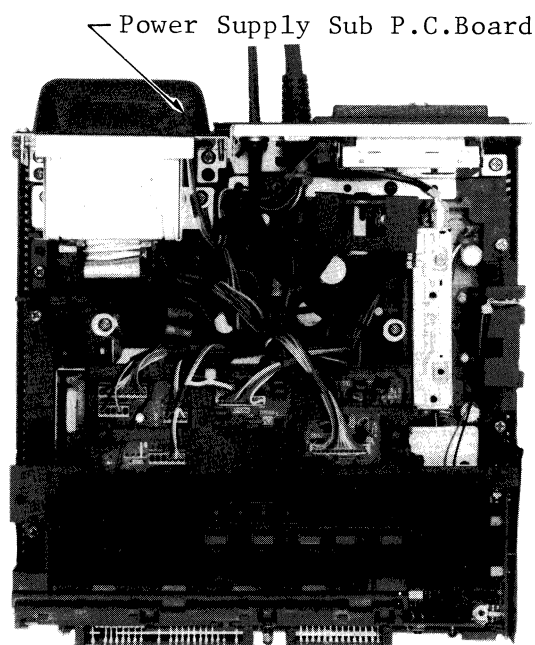


TV DEMODULATOR SCHEMATIC DIAGRAM (TV DEMODULATOR, POWER SUPPLY SUB, FUSE, ANTENNA BOOSTER) ; NV-V10B

FUSE BO

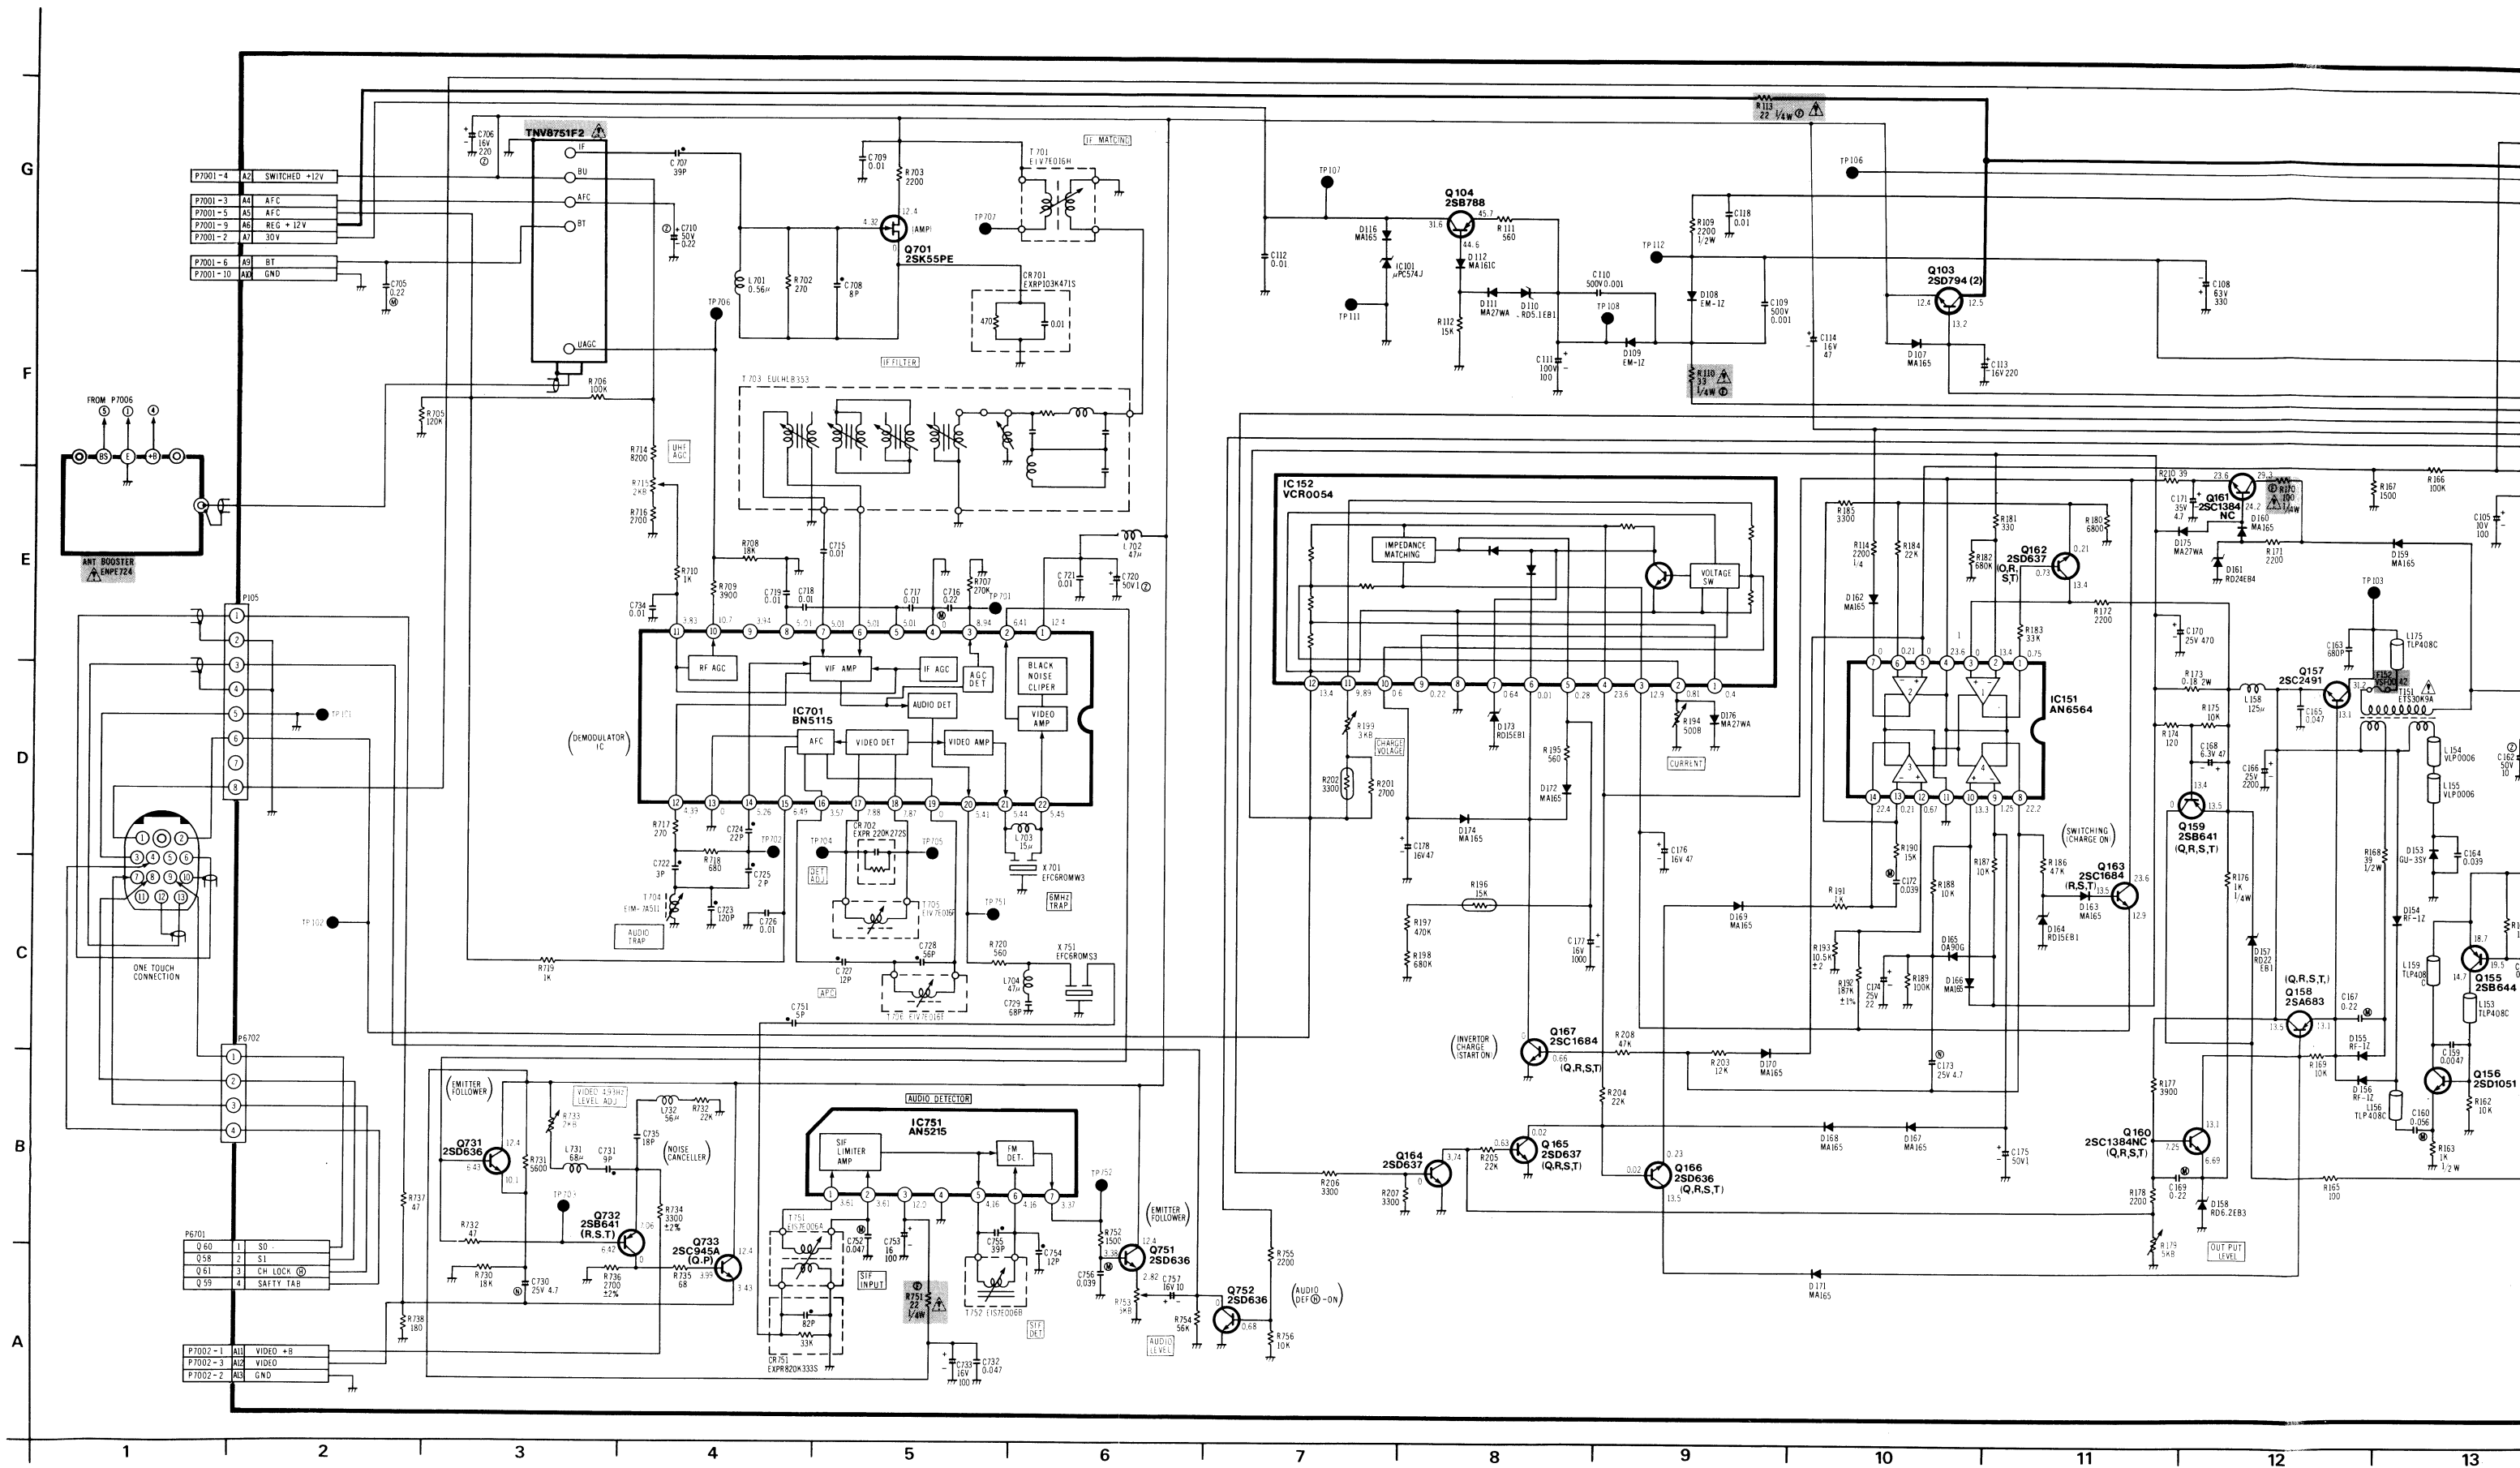


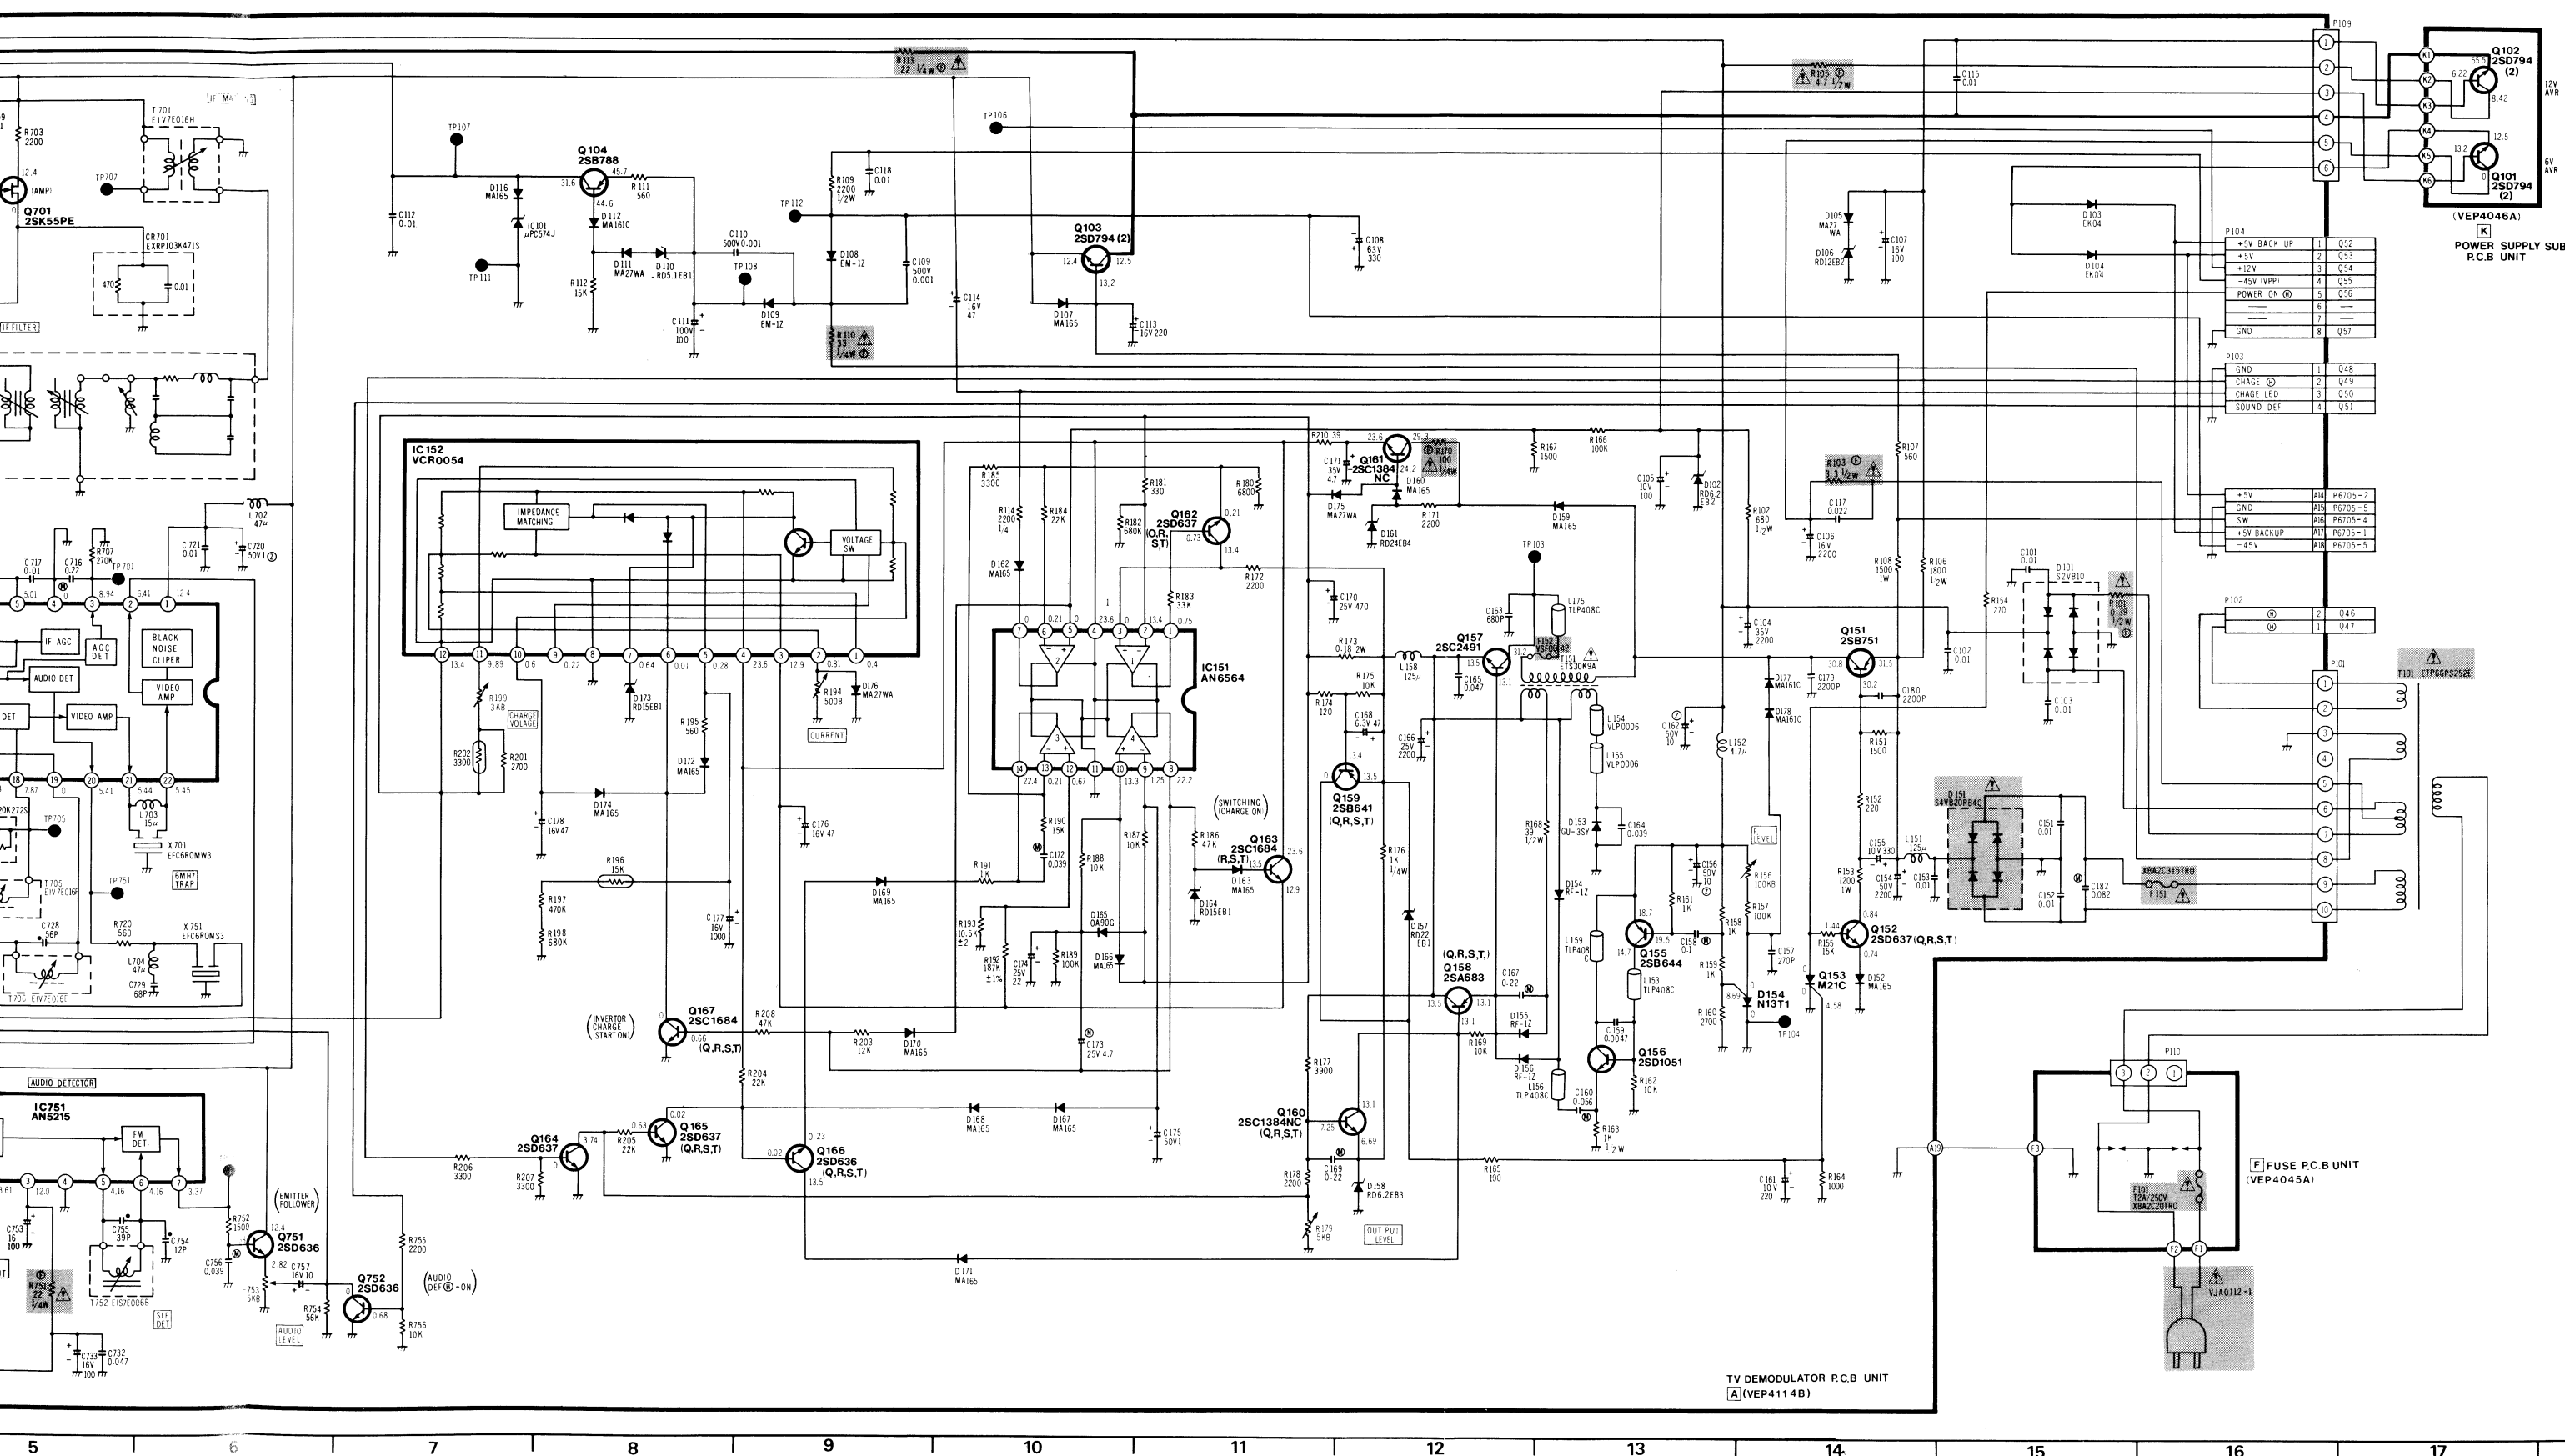

**EXPLODED VIEWS ① Programmable  
Timer/Tuner Section -(1)**

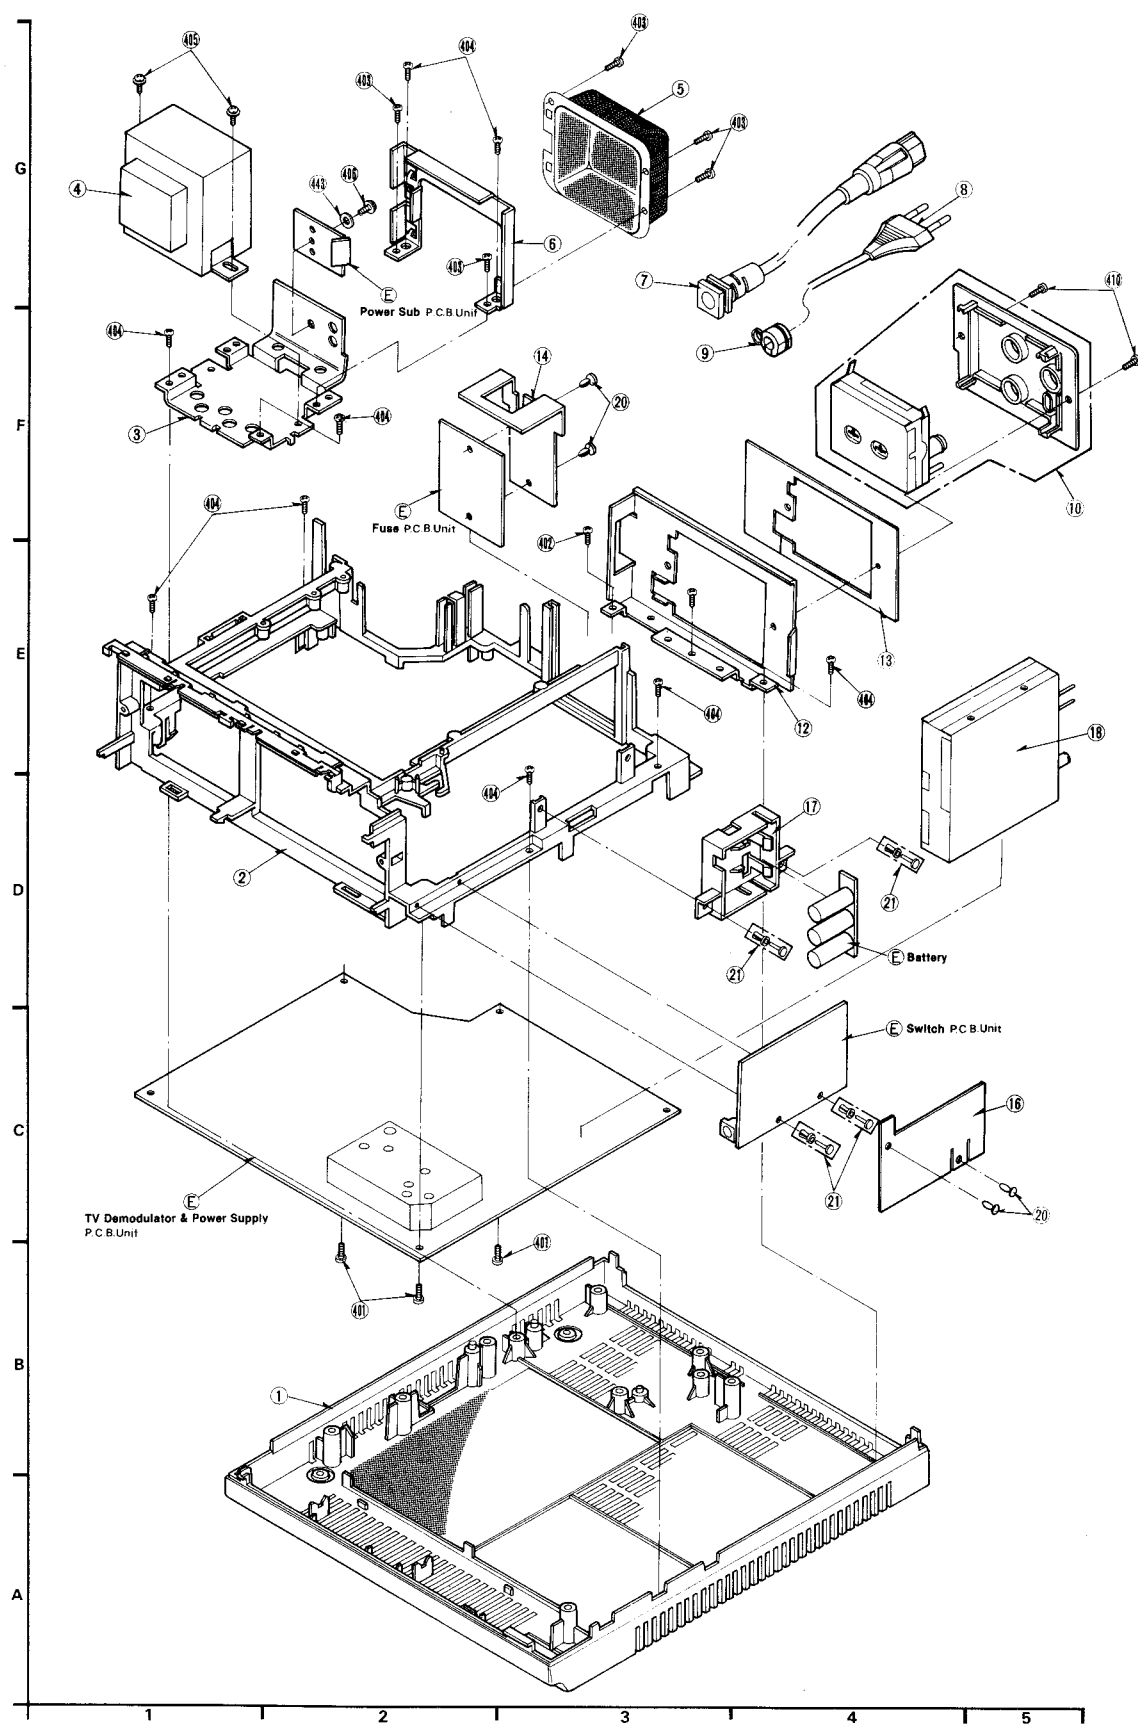

### ③ IR Remote Controller Transmitter Section

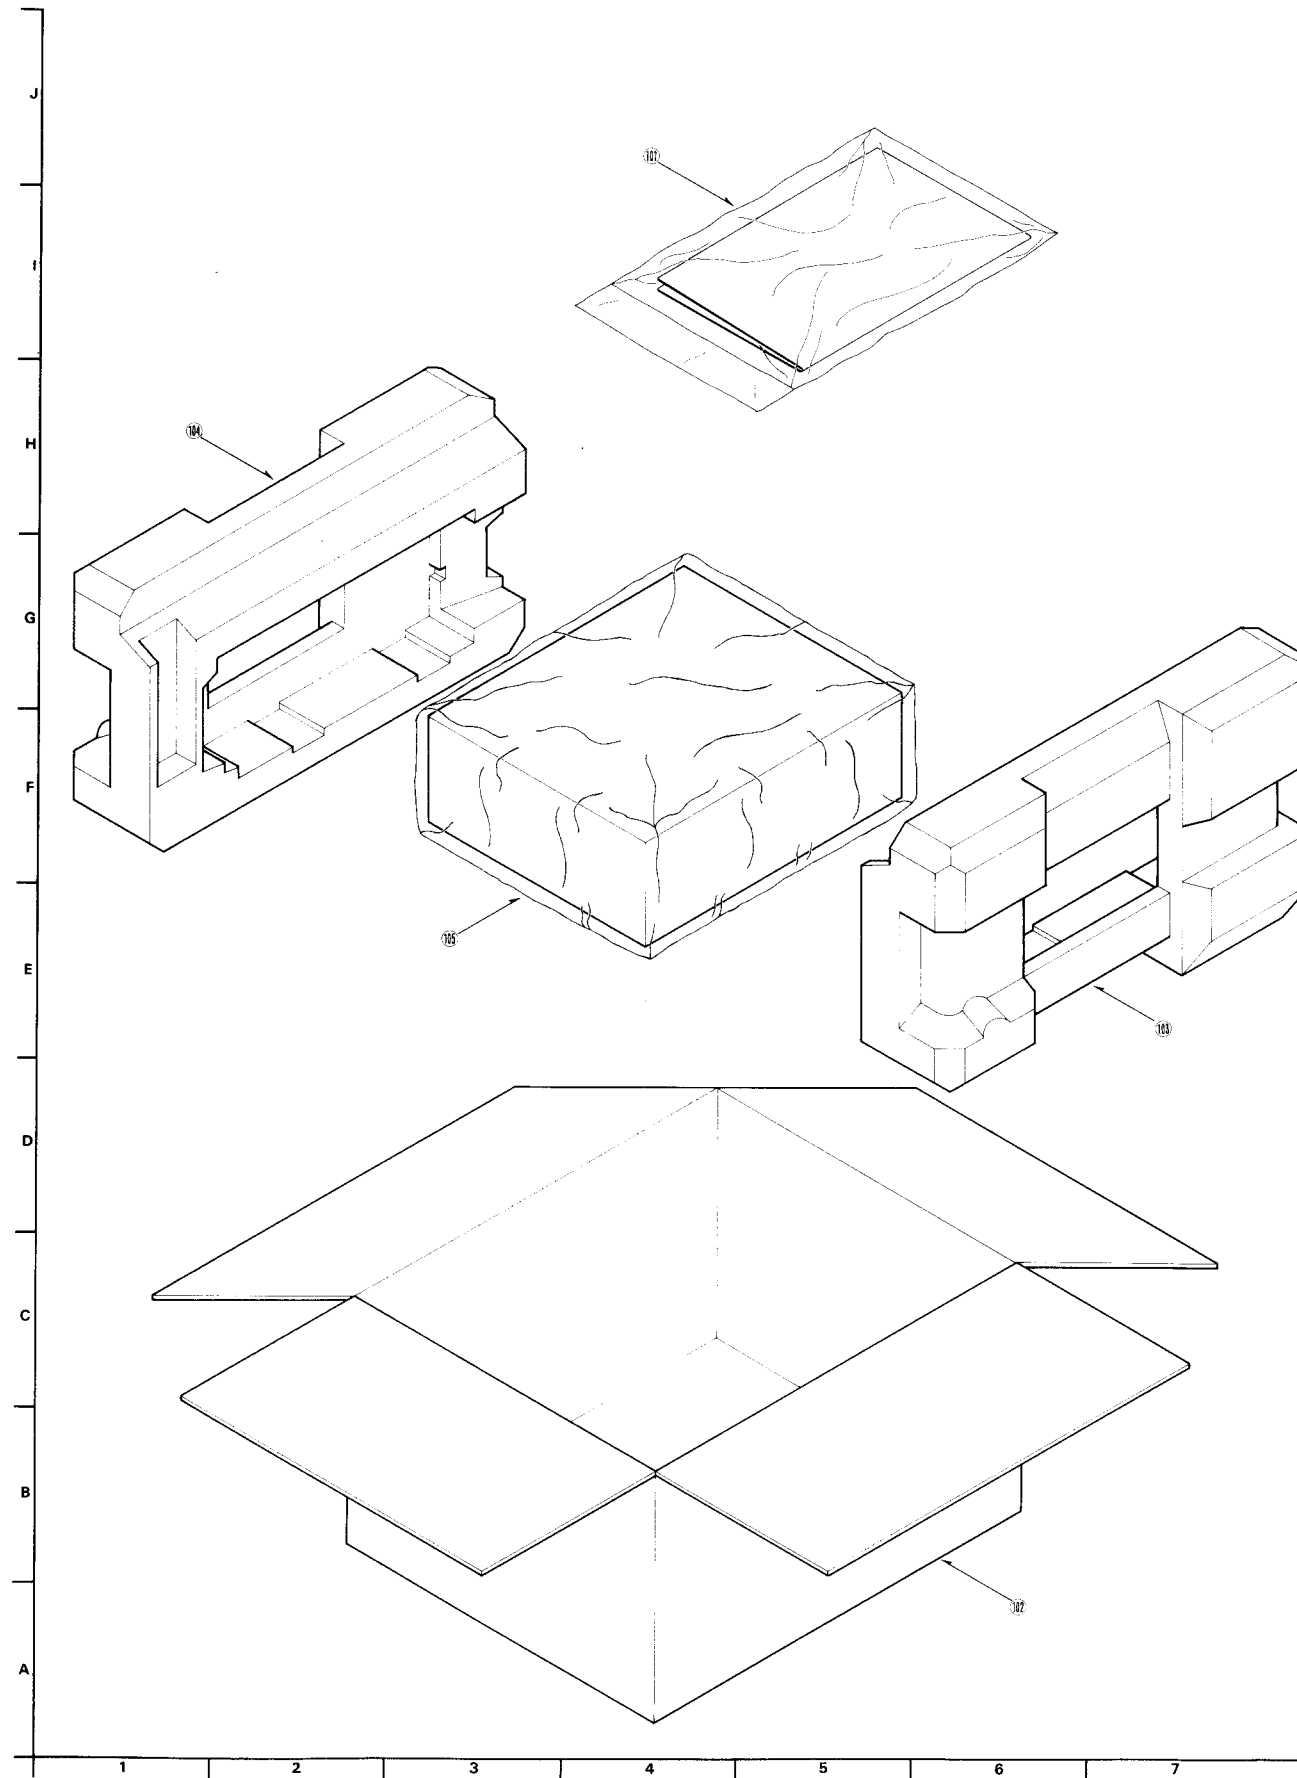

### MECHANICAL REPLACEMENT PARTS LIST

Model No. NV-V10E/B/E0

Notes:  
1. \* Be sure to make your orders of replacement parts according to this list.



| Ref. No. | Part No.    | Part Name & Description                  | Pcs / Set | Remarks     | Ref. No.  | Part No.  | Part Name & Description | Pcs / Set | Remarks     |
|----------|-------------|------------------------------------------|-----------|-------------|-----------|-----------|-------------------------|-----------|-------------|
|          |             |                                          |           |             | 101 (3)   | VQF0867   | Fan Bag                 | 1         | NV-V10E, E0 |
|          |             |                                          |           |             | 101 (3)   | VQF0868   | Fan Bag                 | 1         | NV-V10B     |
|          |             |                                          |           |             | 102 (3)   | VPG1144   | Packing Case            | 1         | NV-V10E     |
|          |             |                                          |           |             | 102 (3)   | VPG1167   | Packing Case            | 1         | NV-V10B     |
|          |             |                                          |           |             | 102 (3)   | VPG1166   | Packing Case            | 1         | NV-V10E0    |
| 1 (1)    | VYK0347     | Bottom Case Unit                         | 1         |             | 103 (3)   | VPN0779   | Right Cushion           | 1         |             |
| 2 (1)    | VMD0352     | Chassis Frame                            | 1         |             | 104 (3)   | VPN0780   | Left Cushion            | 1         |             |
| 3 (1)    | VMA5787     | Power Transformer Angle                  | 1         |             | 105 (3)   | VPF0167   | Polyethylene Bag        | 1         |             |
| 4 (1)    | ETP66PS251E | Power Transformer                        | 1         | NV-V10E, E0 |           |           |                         |           |             |
| 4 (1)    | ETP66PE252E | Power Transformer                        | 1         | NV-V10B     |           |           |                         |           |             |
| 5 (1)    | VGK1047     | Power Transformer Cover                  | 1         |             |           |           |                         |           |             |
| 6 (1)    | VMA5787     | Angle, Power Transformer Cover           | 1         |             |           |           |                         |           |             |
| 7 (1)    | VEC0287     | 13 PIN Cable                             | 1         |             |           |           |                         |           |             |
| 8 (1)    | VJA0111     | AC Cord                                  | 1         | NV-10E/E0   |           |           |                         |           |             |
| 8 (1)    | VJA0112     | AC Cord                                  | 1         | NV-10B      |           |           |                         |           |             |
| 9 (1)    | VJF0017     | AC Cord Bushing                          | 1         |             |           |           |                         |           |             |
| 10 (1)   | ENPE719     | Antenna Terminal Unit                    | 1         | NV-V10E     |           |           |                         |           |             |
| 10 (1)   | ENPE724     | Antenna Terminal Unit                    | 1         | NV-V10B     | 401 (1,2) | XTV3+10A  |                         | 8         |             |
| 10 (1)   | ENPE721     | Antenna Terminal Unit                    | 1         | NV-V10E0    | 402 (1)   | XTB4+12A  |                         | 10        |             |
|          | VJH0233     | Mounting Angle For Antenna Terminal Unit | 1         |             | 403 (1,2) | XTV3+8B   |                         |           |             |
| 12 (1)   | VMA6010     | Rear Angle                               | 1         |             | 404 (1)   | XTN4+12A  |                         |           |             |
| 13 (1)   | VGN1938     | Rear Angle Plate                         | 1         | NV-V10E     | 405 (1)   | XYN4+P8S  |                         |           |             |
| 13 (2)   | VGN1965     | Rear Angle Plate                         | 1         | NV-V10E0    | 406 (1)   | XYN3+C8   |                         |           |             |
| 13 (2)   | VGN1966     | Rear Angle Plate                         | 1         | NV-V10B     | 407 (1)   | XYE3+EB8  |                         |           |             |
| 14 (1)   | VMZ0434     | Fuse P.C.Board Barrier                   | 1         |             | 408 (1)   | XYE4+E8   |                         |           |             |
|          |             |                                          |           |             | 409 (1)   | XYN3+E5   |                         | 1         |             |
| 16 (1)   | VMZ0355     | Power Switch Board Barrier               | 1         |             | 411 (1,2) | XSB3+8FZS |                         |           |             |
| 17 (1)   | VKM0124     | Battery Cover                            | 1         |             | 412 (2)   | XWA3      |                         |           |             |
| 18 (1)   | TNV77759F2  | Tuner Unit                               | 1         | NV-V10E     | 413 (1)   | XWG3F10   |                         |           |             |
| 18 (1)   | TNV87521F2  | Tuner Unit                               | 1         | NV-V10B     |           |           |                         |           |             |
| 18 (1)   | TNV57756F2  | Tuner Unit                               | 1         | NV-V10E0    |           |           |                         |           |             |
| 20 (1)   | TMM6490     | Clip                                     | 4         |             |           |           |                         |           |             |
| 21 (1,2) | TMM6489     | Rivet                                    | 7         |             |           |           |                         |           |             |
| 22 (2)   | VYP0575     | Top Case                                 | 1         |             |           |           |                         |           |             |
| 23 (2)   | VYK0423     | Channel Preset Door                      | 1         | NV-V10E, E0 |           |           |                         |           |             |
| 23 (2)   | VYK0429     | Channel Preset Door                      | 1         | NV-V10B     |           |           |                         |           |             |
| 24 (2)   | VKM0147     | Remote Control Receiver Filter           | 1         |             |           |           |                         |           |             |
| 25 (2)   | VSC0806     | Remote Control Receiver Shield Plate     | 1         |             |           |           |                         |           |             |
| 26 (2)   | VSC0800     | Shield Case (1)                          | 1         |             |           |           |                         |           |             |
| 27 (2)   | VSC0801     | Shield Case (2)                          | 1         |             |           |           |                         |           |             |
| 28 (2)   | VKF0463     | Timer Control Door                       | 1         |             |           |           |                         |           |             |
| 29 (2)   | VYP0669     | Front Panel                              | 1         |             |           |           |                         |           |             |
| 30 (2)   | VXU0205     | Channel Preset Bracket                   | 1         | NV-V10E, E0 |           |           |                         |           |             |
| 30 (2)   | VXU0207     | Channel Preset Bracket                   | 1         | NV-V10B     |           |           |                         |           |             |
| 38 (2)   | VMZ0354     | Timer P.C.Board Barrier                  | 1         |             |           |           |                         |           |             |

**Model No. NV-V10E/B/EO**

**Notes:**

1. \* Be sure to make your orders of replacement parts according to this list.
2. **IMPORTANT SAFETY NOTICE**  
Components identified by  $\Delta$  have special characteristics important for safety.  
When replacing any of these components, use only the original ones.
3. Unless otherwise specified,  
All resistors are in OHMS ( $\Omega$ ),  $1/8W \pm 5\%$  carbon.  $K=1,000\Omega$ ,  $M=1,000K\Omega$ .  
All capacitors are in MICROFARADS ( $\mu F$ ),  $\pm 10\%$   $P=\mu\mu F$ .

| Ref. No. | Part No.     | Part Name & Description    | Pcs / Set | Remarks    |
|----------|--------------|----------------------------|-----------|------------|
|          | VEP4114A/B/C | TV Demodulator P.C.B. Unit |           |            |
|          |              |                            |           |            |
|          |              | Integrated Circuits        |           |            |
| IC101    | μPC574J      |                            | 1         |            |
| IC151    | AN6564       |                            | 1         |            |
| IC152    | VCR0054      |                            | 1         |            |
| IC701    | BN5115       | VIF IC                     | 1         |            |
| IC751    | AN5215       | SIF IC                     | 1         |            |
|          |              |                            |           |            |
|          |              |                            |           |            |
|          |              |                            |           |            |
|          |              | Transistors                |           |            |
| Q103     | 2SD794       |                            | 1         |            |
| Q104     | 2SB788       |                            | 1         |            |
| Q151     | 2SB751LB     |                            | 1         |            |
| Q152     | 2SD637       |                            | 1         |            |
| Q153     | M21C         |                            | 1         |            |
| Q154     | N13T1        |                            | 1         |            |
| Q155     | 2SB644       |                            | 1         |            |
| Q156     | 2SD1051      |                            | 1         |            |
| Q157     | 2SC2491      |                            | 1         |            |
| Q158     | 2SA683       |                            | 1         |            |
| Q159     | 2SB641       |                            | 1         |            |
| Q160,161 | 2SC1384NC    |                            | 2         |            |
| Q162     | 2SD637       |                            | 1         |            |
| Q163     | 2SD1684      |                            | 1         |            |
| Q164,165 | 2SD637       |                            | 2         |            |
| Q166     | 2SD636       |                            | 1         |            |
| Q167     | 2SC1684      |                            | 1         |            |
| Q701     | 2SK55PE      |                            | 1         |            |
| Q731     | 2SD636       |                            | 1         |            |
| Q732     | 2SB641       |                            | 1         |            |
| Q733     | 2SC945A      |                            | 1         |            |
| Q751,752 | 2SD636       |                            | 2         |            |
|          |              |                            |           |            |
|          |              |                            |           |            |
|          |              | Diodes                     |           |            |
| D101     | S2VB10F1     |                            | 1         |            |
| D102     | RD6.2EB2     | Zener                      | 1         |            |
| D103,104 | EK04         |                            | 2         |            |
| D105     | MA27WA       |                            | 1         |            |
| D106     | RD12EB2      | Zener                      | 1         |            |
| D107     | MA165        |                            | 1         |            |
| D108,109 | EM1Z         |                            | 2         |            |
| D110     | RD5.1EB1     | Zener                      | 1         |            |
| D111     | MA27WA       |                            | 1         |            |
| D112     | MA161C       |                            | 1         |            |
| D116     | MA161C       |                            | 1         |            |
| D151     | S4VB20F4     |                            | 1         | ⚠          |
| D152     | MA165        |                            | 1         |            |
| D153     | GU3SYLF175   |                            | 1         |            |
| D154-156 | RF1Z         |                            | 3         |            |
| D157     | RD22EB1      | Zener                      | 1         |            |
| D158     | RD6.2EB3     | Zener                      | 1         |            |
| D159,160 | MA165        |                            | 2         |            |
| D161     | RD24EB4      | Zener                      | 1         |            |
| D162,163 | MA165        |                            | 2         |            |
| D164     | RD15EB1      | Zener                      | 1         |            |
| D165     | OA90G        |                            | 1         |            |
| D166-172 | MA165        |                            | 7         |            |
| D173     | RD15EB1      | Zener                      | 1         |            |
| D174     | MA165        |                            | 1         |            |
| D175,176 | MA27WA       |                            | 2         |            |
| D177,178 | MA161C       |                            | 2         |            |
| D701     | MA165        |                            | 1         | NV-V10E/F0 |
| D701     | T3A205       |                            | 1         | NV-V10B    |

| Ref. No. | Part No.     | Part Name & Description | Pcs / Set | Remarks    | Ref. No. | Part No.     | Part Name & Description | Pcs / Set | Remarks    |
|----------|--------------|-------------------------|-----------|------------|----------|--------------|-------------------------|-----------|------------|
| D702     | MA165        |                         | 1         | NV-V10E/EO | R208     | ERD10TJ473   | 47K                     | 1         |            |
|          |              |                         |           |            | R210     | ERD10TJ390   | 39                      | 1         |            |
|          |              |                         |           |            | R702     | ERD10TJ271   | 270                     | 1         | NV-V10E/B  |
|          |              |                         |           |            | R702     | ERD10TJ560   | 56                      | 1         | NV-V10EO   |
|          |              |                         |           |            | R703     | ERD10TJ152   | 1.5K                    | 1         | NV-V10E/EO |
|          |              |                         |           |            | R703     | ERD10TJ222   | 2.2K                    | 1         | NV-V10B    |
|          |              | Resistors               |           |            | R705     | ERD10TJ124   | 120K                    | 1         |            |
| R101     | ERQ12HKR39   | 1/2W 0.39               | 1         | △          | R706     | ERD10TJ104   | 100K                    | 1         |            |
| R102     | ERDS1TJ681   | 1/2W 680                | 1         |            | R707     | ERD10TJ274   | 270K                    | 1         |            |
| R103     | ERQ12HJ3R3   | 1/2W 3.3                | 1         | △          | R708     | ERD10TJ183   | 18K                     | 1         |            |
| R105     | ERQ12HJ4R7   | 1/2W 4.7                | 1         |            | R709     | ERD10TJ392   | 3.9K                    | 1         |            |
| R106     | ERDS1TJ182   | 1/2W 1.8K               | 1         |            | R710     | ERD10TJ102   | 1K                      | 1         |            |
| R107     | ERD10TJ561   | 560                     | 1         |            | R711     | ERD10TJ822   | 8.2K                    | 1         | NV-V10E/EO |
| R108     | ERGIANJ152   | 1W 1.5K                 | 1         |            | R712     | EVN61AA00B23 | Variable                | 2K        | NV-V10E/EO |
| R109     | ERDS1TJ222   | 1/2W 2.2K               | 1         |            | R713     | ERD10TJ392   | 3.9K                    | 1         | NV-V10E/EO |
| R110     | ERQ14AJ330   | 1/4W 33                 | 1         | △          | R714     | ERD10TJ822   | 8.2K                    | 1         |            |
| R111     | ERD10TJ561   | 560                     | 1         |            | R715     | EVN61AA00B23 | Variable                | 2K        |            |
| R112     | ERD10TJ153   | 15K                     | 1         |            | R716     | ERD10TJ332   | 3.3K                    | 1         | NV-V10E    |
| R113     | ERQ14AJ220   | 1/4W 22                 | 1         | △          | R716     | ERD10TJ392   | 3.9K                    | 1         | NV-V10EO   |
| R114     | ERD25TJ122   | 1/4W 1.2K               | 1         |            | R717     | ERD10TJ271   | 270                     | 1         |            |
| R151     | ERD10TJ152   | 1.5K                    | 1         |            | R718     | ERD10TJ561   | 560                     | 1         | NV-V10E/EO |
| R152     | ERD10TJ221   | 220                     | 1         |            | R718     | ERD10TJ681   | 680                     | 1         | NV-V10B    |
| R153     | ERGIANJ122   | 1W 1.2K                 | 1         |            | R719     | ERD10TJ102   | 1K                      | 1         |            |
| R154     | ERD10TJ271   | 270                     | 1         |            | R720     | ERD10TJ561   | 560                     | 1         |            |
| R155     | ERD10TJ153   | 15K                     | 1         |            | R730     | ERD10TJ183   | 18K                     | 1         |            |
| R156     | EVN61AA00B15 | Variable                | 100K      | 1          | R731     | ERD10TJ562   | 5.6K                    | 1         |            |
| R157     | ERD10TJ104   | 100K                    | 1         |            | R732     | ERD10TJ470   | 47                      | 1         |            |
| R158,159 | ERD10TJ102   | 1K                      | 2         |            | R733     | EVN61AA00B13 | Variable                | 1K        | NV-V10E    |
| R160     | ERD10TJ272   | 2.7K                    | 1         |            | R733     | EVN61AA00B23 | Variable                | 2K        | NV-V10B    |
| R161     | ERD10TJ102   | 1K                      | 1         |            | R733     | EVN61AA00B52 | Variable                | 500       | NV-V10EO   |
| R162     | ERD10TJ103   | 10K                     | 1         |            | R734     | ERO10TKG3301 | 3.3K                    | 1         |            |
| R163     | ERDS1TJ102   | 1/2W 1K                 | 1         |            | R735     | ERD10TJ680   | 68                      | 1         |            |
| R164     | ERD10TJ102   | 1K                      | 1         |            | R736     | ERO10TKG2701 | 2.7K                    | 1         |            |
| R165     | ERD10TJ101   | 100                     | 1         |            | R737     | ERD10TJ470   | 47                      | 1         |            |
| R166     | ERD10TJ104   | 100K                    | 1         |            | R738     | ERD10TJ181   | 180                     | 1         |            |
| R167     | ERD10TJ152   | 1.5K                    | 1         |            | R739     | ERD10TJ123   | 12K                     | 1         |            |
| R168     | ERDS1TJ390   | 1/2W 39                 | 1         |            | R751     | ERQ14AJ220   | 1/4W 22                 | 1         | △          |
| R169     | ERD10TJ103   | 10K                     | 1         |            | R752     | ERD10TJ152   | 1.5K                    | 1         |            |
| R170     | ERQ14AJ101   | 1/4W 100                | 1         |            | R753     | EVN61AA00B53 | Variable                | 5K        |            |
| R171,172 | ERD10TJ222   | 2.2K                    | 2         |            | R754     | ERD10TJ563   | 56K                     | 1         |            |
| R173     | ERF2AJR18    | 2W 0.18                 | 1         |            | R755     | ERD10TJ222   | 2.2K                    | 1         |            |
| R174     | ERD10TJ121   | 120                     | 1         |            | R756     | ERD10TJ103   | 10K                     | 1         |            |
| R175     | ERD10TJ103   | 10K                     | 1         |            |          |              |                         |           |            |
| R176     | ERD25TJ102   | 1/4W 1K                 | 1         |            |          |              |                         |           |            |
| R177     | ERD10TJ392   | 3.9K                    | 1         |            |          |              |                         |           |            |
| R178     | ERD10TJ222   | 2.2K                    | 1         |            |          |              |                         |           |            |
| R179     | EVN61AA00B53 | Variable                | 5K        | 1          |          |              |                         |           |            |
| R180     | ERD10TJ682   | 6.8K                    | 1         |            |          |              |                         |           |            |
| R181     | ERDS1TJ331   | 1/2W 330                | 1         |            |          |              |                         |           |            |
| R182     | ERD10TJ684   | 680K                    | 1         |            |          |              |                         |           |            |
| R183     | ERD10TJ333   | 33K                     | 1         |            |          |              |                         |           |            |
| R184     | ERD10TJ223   | 22K                     | 1         |            |          |              |                         |           |            |
| R185     | ERD10TJ332   | 3.3K                    | 1         |            |          |              |                         |           |            |
| R186     | ERD10TJ473   | 47K                     | 1         |            |          |              |                         |           |            |
| R187,188 | ERD10TJ103   | 10K                     | 2         |            |          |              |                         |           |            |
| R189     | ERD10TJ104   | 100K                    | 1         |            |          |              |                         |           |            |
| R190     | ERD10TJ153   | 15K                     | 1         |            |          |              |                         |           |            |
| R191     | ERD10TJ102   | 1K                      | 1         |            |          |              |                         |           |            |
| R192     | ERO10AKF1873 | 187K                    | 1         |            |          |              |                         |           |            |
| R193     | ERO10AKG1052 | 10.5K                   | 1         |            |          |              |                         |           |            |
| R194     | EVN61AA00B52 | Variable                | 500       | 1          |          |              |                         |           |            |
| R195     | ERD10TJ561   | 560                     | 1         |            |          |              |                         |           |            |
| R196     | ERTD2FHL153  | Thermistor              | 1         |            |          |              |                         |           |            |
| R197     | ERD10TJ474   | 470K                    | 1         |            |          |              |                         |           |            |
| R198     | ERD10TJ684   | 680K                    | 1         |            |          |              |                         |           |            |
| R199     | EVN61AA00B33 | Variable                | 3K        | 1          |          |              |                         |           |            |
| R201     | ERD10TJ272   | 2.7K                    | 1         |            |          |              |                         |           |            |
| R202     | ERTD2FHL332  | Thermistor              | 1         |            |          |              |                         |           |            |
| R203     | ERD10TJ123   | 12K                     | 1         |            |          |              |                         |           |            |
| R204,205 | ERD10TJ223   | 22K                     | 2         |            |          |              |                         |           |            |
| R206,207 | ERD10TJ332   | 3.3K                    | 2         |            |          |              |                         |           |            |
|          |              |                         |           |            |          |              | Capacitors              |           |            |
|          |              |                         |           |            | C101-103 | ECKFIH103ZF  | Ceramic 50V 0.01        | 3         |            |
|          |              |                         |           |            | C104     | ECEA1VS222   | Electrolytic 35V 2200   | 1         |            |
|          |              |                         |           |            | C105     | ECEA1AG101   | Electrolytic 10V 100    | 1         |            |
|          |              |                         |           |            | C106     | ECEA1CS222   | Electrolytic 16V 2200   | 1         |            |
|          |              |                         |           |            | C107     | ECEA1CS101   | Electrolytic 16V 100    | 1         |            |
|          |              |                         |           |            | C108     | ECEA1JS331   | Electrolytic 63V 330    | 1         |            |
|          |              |                         |           |            | C109,110 | ECKF2H102KB  | Ceramic 100V 0.001      | 2         |            |
|          |              |                         |           |            | C111     | ECEA2AS101   | Electrolytic 100V 100   | 1         |            |
|          |              |                         |           |            | C112     | ECKFIH103ZF  | Ceramic 50V 0.01        | 1         |            |
|          |              |                         |           |            | C113     | ECEA1CS221   | Electrolytic 16V 220    | 1         |            |
|          |              |                         |           |            | C114     | ECEA1CS470   | Electrolytic 16V 47     | 1         |            |
|          |              |                         |           |            | C115     | ECKFIH103ZF  | Ceramic 50V 0.01        | 1         |            |
|          |              |                         |           |            | C117     | ECKFIH223ZF  | Ceramic 50V 0.022       | 1         |            |
|          |              |                         |           |            | C118     | ECKFIH103ZF  | Ceramic 50V 0.01        | 1         |            |
|          |              |                         |           |            | C151-153 | ECKFIH103ZF  | Ceramic 50V 0.01        | 3         |            |
|          |              |                         |           |            | C154     | ECET50R222   | Electrolytic 50V 2200   | 1         |            |
|          |              |                         |           |            | C155     | ECEA10T330   | Electrolytic 10V 330    | 1         |            |
|          |              |                         |           |            | C156     | ECEA50Z10    | Electrolytic 50V 10     | 1         |            |
|          |              |                         |           |            | C157     | ECKFIH271KB  | Ceramic 50V 270P        | 1         |            |
|          |              |                         |           |            | C158     | ECQV05104JZ  | Mylar 50V 0.1           | 1         |            |
|          |              |                         |           |            | C159     | ECKFIH472KB  | Ceramic 50V 0.0047      | 1         |            |
|          |              |                         |           |            | C160     | ECQM1H563KV  | Mylar 50V 0.056         | 1         |            |



| Ref. No. | Part No.    | Part Name & Description | Pcs / Set | Remarks    | Ref. No.   | Part No.    | Part Name & Description | Pcs / Set | Remarks    |
|----------|-------------|-------------------------|-----------|------------|------------|-------------|-------------------------|-----------|------------|
| C161     | ECEA10T220  | Electrolytic 10V 220    | 1         |            |            |             | Coils                   |           |            |
| C162     | ECEA50Z10   | Electrolytic 50V 10     | 1         |            | L151       | VTQ0017     |                         | 1         |            |
| C163     | ECKF2H681KB | Ceramic 100V 680P       | 1         |            | L152       | TLT047K999G |                         | 1         |            |
| C164     | ECQP1393JZ  | Mylar 100V 0.039        | 1         |            | L153       | TLP408C     |                         | 1         |            |
| C165     | ECKFIH473ZF | Ceramic 50V 0.047       | 1         |            | L154,155   | VLP0006     |                         | 2         |            |
| C166     | ECEA1ES222  | Electrolytic 25V 2200   | 1         |            | L156       | TLP408C     |                         | 1         |            |
| C167     | ECQV05224JZ | Mylar 50V 0.22          | 1         |            | L157       | TSC909      |                         | 1         |            |
| C168     | ECEA0JS470  | Electrolytic 6.3V 47    | 1         |            | L158       | VTQ0017     |                         | 1         |            |
| C169     | ECQV05224JZ | Mylar 50V 0.22          | 1         |            | L159       | TLP408C     |                         | 1         |            |
| C170     | ECEA1ES471  | Electrolytic 25V 470    | 1         |            | L701       | TLQR56N205C |                         | 1         | NV-V10E/B  |
| C171     | ECEA1HG4R7  | Electrolytic 50V 4.7    | 1         |            | L702       | TLT470K999G |                         | 1         |            |
| C172     | ECQM1H393KZ | Mylar 50V 0.039         | 1         |            | L703       | TLQ150K205C |                         | 1         |            |
| C173     | ECEA1EN4R7  | Electrolytic 25V 4.7    | 1         |            | L704       | TLQ470K205C |                         | 1         |            |
| C174     | ECEA1ES220  | Electrolytic 25V 22     | 1         |            | L731       | TLT680J999G |                         | 1         |            |
| C175     | ECEA1HS010  | Electrolytic 50V 1      | 1         |            | L732       | TLT680J999G |                         | 1         |            |
| C176     | ECEA1CS470  | Electrolytic 16V 47     | 1         |            |            |             |                         |           |            |
| C177     | ECEA16V102  | Electrolytic 16V 1000   | 1         |            |            |             |                         |           |            |
| C178     | ECEA1CS470  | Electrolytic 16V 47     | 1         |            |            |             |                         |           |            |
| C179,180 | ECKF2H222KB | Ceramic 100V0.0022      | 2         |            |            |             |                         |           |            |
| C182     | ECQV05283JZ | Mylar 50V 0.082         | 1         |            |            |             | Filters                 |           |            |
| C701     | ECEA16Z220  | Electrolytic 16V 220    | 1         | NV-V10E/EO | X701       | EFC55R5MW3  |                         | 1         | NV-V10E/EO |
| C702     | ECEA16Z10   | Electrolytic 16V 10     | 1         |            | X701       | EFC56R0MW3  |                         | 1         | NV-V10B    |
| C703     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         | NV-V10E/EO | X751       | EFC55R5MS4E |                         | 1         | NV-V10E/EO |
| C704     | ECEA1CS330  | Electrolytic 16V 33     | 1         | NV-V10E/EO | X751       | EFC56R0MS3  |                         | 1         | NV-V10B    |
| C705     | ECQV05224JZ | Mylar 50V 0.22          | 1         |            |            |             |                         |           |            |
| C706     | ECEA16Z220  | Electrolytic 16V 220    | 1         |            |            |             |                         |           |            |
| C707     | ECCFIH560JC | Ceramic 50V 56P         | 1         | NV-V10E    |            |             |                         |           |            |
| C707     | ECCFIH390JC | Ceramic 50V 39P         | 1         | NV-V10B    |            |             |                         |           |            |
| C708     | ECCFIH080DC | Ceramic 50V 8P          | 1         |            |            |             | Connectors              |           |            |
| C709     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         |            | P101       | VJP1146     | 10P                     | 1         |            |
| C710     | ECEA50Z2R2  | Electrolytic 50V 2.2    | 1         |            | P102       | VJP1141     | 2P                      | 1         |            |
| C715     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         |            | P103       | VJP1231     | 4P                      | 1         |            |
| C716     | ECQV05224JZ | Mylar 50V 0.22          | 1         |            | P104       | VJP1235     | 8P                      | 1         |            |
| C717-719 | ECKFIH103ZF | Ceramic 50V 0.01        | 3         |            | P105       | VJP1145     | 8P                      | 1         |            |
| C720     | ECEA50Z1    | Electrolytic 50V 1      | 1         |            | P109       | VJP1233     | 6P                      | 1         |            |
| C721     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         |            | P6701,6702 | VJP1188     | 4P                      | 2         |            |
| C722     | ECCFIH030CC | Ceramic 50V 3P          | 1         |            |            |             |                         |           |            |
| C723     | ECCFIH121JL | Ceramic 50V 120P        | 1         |            |            |             |                         |           |            |
| C724     | ECCFIH220JC | Ceramic 50V 22P         | 1         |            |            |             |                         |           |            |
| C725     | ECCFIH020CC | Ceramic 50V 2P          | 1         |            |            |             |                         |           |            |
| C726     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         |            |            |             | Transformers            |           |            |
| C727     | ECCFIH150JC | Ceramic 50V 15P         | 1         | NV-V10E/EO | T151       | ETS30K9A    |                         | 1         |            |
| C727     | ECCFIH120JC | Ceramic 50V 12P         | 1         | NV-V10B    | T701       | EIV7E016H   |                         | 1         |            |
| C728     | ECCFIH560JR | Ceramic 50V 56P         | 1         |            | T703       | EULHLB311   |                         | 1         | NV-V10E/EO |
| C729     | ECCFIH680JP | Ceramic 50V 68P         | 1         |            | T703       | EULHLB353   |                         | 1         | NV-V10B    |
| C730     | ECEA1EN4R7  | Electrolytic 25V 4.7    | 1         |            | T704       | ETM7A511    |                         | 1         |            |
| C731     | ECCFIH100DC | Ceramic 50V 10P         | 1         | NV-V10E/EO | T705,706   | EIV7E016F   |                         | 2         |            |
| C731     | ECCFIH090CC | Ceramic 50V 9P          | 1         | NV-V10B    | T751       | EIS7E006A   |                         | 1         |            |
| C732     | ECKFIH473ZF | Ceramic 50V 0.047       | 1         |            | T752       | EIS7E006B   |                         | 1         |            |
| C733     | ECEA1CS101  | Electrolytic 16V 100    | 1         |            |            |             |                         |           |            |
| C734     | ECKFIH103ZF | Ceramic 50V 0.01        | 1         |            |            |             |                         |           |            |
| C735     | ECCFIH330JC | Ceramic 50V 33P         | 1         |            |            |             |                         |           |            |
| C751     | ECCFIH050CC | Ceramic 50V 5P          | 1         |            |            |             | Miscellaneous           |           |            |
| C752     | ECQM1H473KV | Mylar 50V 0.047         | 1         |            |            | VSC0863     | Heat Sink               | 1         |            |
| C753     | ECEA1CS101  | Electrolytic 16V 100    | 1         |            |            | XTV3+6B     | Screw                   | 1         |            |
| C754     | ECCFIH120JC | Ceramic 50V 12P         | 1         |            |            | VMA6114     | Mounting Angle          | 1         |            |
| C755     | ECCFIH390JP | Ceramic 50V 39P         | 1         |            |            |             | for Temp. Fuse          |           |            |
| C756     | ECQM1H393JZ | Mylar 50V 0.039         | 1         |            |            | VSC0691     | Heat Sink               | 1         |            |
| C757     | ECEA1CS100  | Electrolytic 16V 10     | 1         |            | F151       | TJC6320     | Fuse Holder             | 2         | ⚠          |
|          |             |                         |           |            | F152       | VSP0024     | Temp. Fuse              | 1         | ⚠          |
|          |             |                         |           |            |            | XNG3BS      |                         | 1         |            |
|          |             |                         |           |            |            | XSN3+12S    |                         | 1         |            |
|          |             |                         |           |            |            | XWA3        |                         | 1         |            |
|          |             |                         |           |            |            | XWG3        |                         | 1         |            |
| CR701    | EXRP103P471 |                         | 1         |            |            | TNV77759F2  | Tuner                   | 1         | NV-V10E    |
| CR702    | EXPR220K272 |                         | 1         |            |            | TNV87521F2  | Tuner                   | 1         | NV-V10B    |
| CR751    | EXPR820K333 |                         | 1         |            |            | TNV57756F2  | Tuner                   | 1         | NV-V10EO   |
|          |             |                         |           |            |            | VSC0694     | VIF Shield Case         | 1         |            |
|          |             |                         |           |            |            | VSC0827     | VIF Shield Case         | 1         |            |
|          |             | Complex Components      |           |            |            |             |                         |           |            |



| Ref. No.   | Part No.    | Part Name & Description | Pcs / Set | Remarks | Ref. No.   | Part No.    | Part Name & Description | Pcs / Set | Remarks    |
|------------|-------------|-------------------------|-----------|---------|------------|-------------|-------------------------|-----------|------------|
| R6824,6825 | ERD10TJ333  |                         | 33K 2     |         |            | VEP4050A    | Selector P.C.B. Unit    |           |            |
| R6826      | ERD10TJ473  |                         | 47K 1     |         |            | VEP4060A    |                         |           |            |
| R6827      | ERD10TJ103  |                         | 10K 1     |         |            |             | Integrated Circuits     |           |            |
| R6828      | ERD10TJ682  |                         | 6.8K 1    |         | IC7051     | LPD4049UBC  | Inverter IC             | 1         |            |
| R6829      | ERD10TJ103  |                         | 10K 1     |         |            |             |                         |           |            |
| R7301      | ERD10TJ101  |                         | 100 1     |         |            |             |                         |           |            |
| R7302      | ERD10TJ330  |                         | 33 1      |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             | Transistors             |           |            |
|            |             | Capacitors              |           |         | Q7001      | 2SC1685     |                         | 1         |            |
| C6801      | ECEA1CS330  | Electrolytic 16V        | 33 1      |         | Q7002      | 2SA564A     |                         | 1         |            |
| C6802      | ECQM1H392KZ | Mylar 50V 0.0039        | 1         |         | Q7003,7004 | 2SC1685     |                         | 2         |            |
| C6803      | ECQM1H103KZ | Mylar 50V 0.01          | 1         |         | Q7005      | 2SA564      |                         | 1         |            |
| C6806      | ECEA1HS010  | Electrolytic 50V        | 1 1       |         | Q7051      | 2SD636      |                         | 1         | NV-V10E/EO |
| C6807      | ECQM1H103KZ | Mylar 50V 0.01          | 1         |         | Q7052      | 2SD637      |                         | 1         | NV-V10E/EO |
| C6808      | ECEA5021    | Electrolytic 50V        | 1 1       |         | Q7053,7054 | 2SD636      |                         | 2         | NV-V10E/EO |
| C6809      | ECQM1H272JZ | Mylar 50V 0.0027        | 1         |         | Q7055,7056 | 2SB643      |                         | 2         | NV-V10E/EO |
| C6810      | ECQP1562JZ  | Mylar 100V0.0056        | 1         |         | Q7057,7058 | 2SB641      |                         | 2         |            |
| C6812      | ECQV05104KB | Mylar 50V 0.1           | 1         |         | Q7059      | 2SD636      |                         | 1         | NV-V10B    |
| C6813      | ECEA1CS101  | Electrolytic 16V        | 100 1     |         | Q7060      | 2SB641      |                         | 1         | NV-V10B    |
| C6815      | ECEA1CS101  | Electrolytic 16V        | 100 1     |         |            |             |                         |           |            |
| C7301,7302 | ECKW1H332KB | Ceramic 50V 0.0033      | 2         |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             | Diodes                  |           |            |
|            |             |                         |           |         | D6852      | MA165       |                         | 1         |            |
|            |             |                         |           |         | D6854      | MA165       |                         | 1         |            |
|            |             | Crystal                 |           |         | D7051,7052 | MA165       |                         | 2         | NV-V10E/EO |
| X7301      | VSX0099     |                         | 1         |         | D7053      | LN29RP      | LED                     | 1         |            |
|            |             |                         |           |         | D7054-7056 | LN29RP      | LED                     | 1         | NV-V10E/EO |
|            |             |                         |           |         | D7057      | LN29RP      | LED                     | 1         |            |
|            |             |                         |           |         | D7058      | MA150       |                         | 1         | NV-V10B    |
|            |             |                         |           |         | D7059      | MA161C      |                         | 1         |            |
|            |             |                         |           |         |            |             |                         |           |            |
|            | VEP4049A    | Back up P.C.B. Unit     |           |         |            |             | Resistors               |           |            |
|            |             |                         |           |         | R6851      | ERD10TJ104  |                         | 100K 1    |            |
|            |             | Capacitors              |           |         | R6857      | ERD10TJ103  |                         | 10K 1     |            |
| C6795-6797 | EECW2R3A3R3 | Gold 2.3V 3.3           | 3         |         | R6859      | ERD10TJ124  |                         | 120K 1    |            |
|            |             |                         |           |         | R6860      | ERD10TJ221  |                         | 220 1     |            |
|            |             |                         |           |         | R7001      | ERD10TJ223  |                         | 22K 1     |            |
|            |             |                         |           |         | R7002,7003 | ERD10TJ473  |                         | 47K 2     |            |
|            |             |                         |           |         | R7004,7005 | ERD10TJ104  |                         | 100K 2    |            |
|            |             |                         |           |         | R7006      | ERD10TJ223  |                         | 22K 1     |            |
|            |             | Miscellaneous           |           |         | R7007,7008 | ERD10TJ104  |                         | 100K 2    |            |
|            | VKM0124     | Battery Case            | 1         |         | R7009      | ERD10TJ103  |                         | 10K 1     |            |
|            |             |                         |           |         | R7010      | ERD10TJ472  |                         | 4.7K 1    |            |
|            |             |                         |           |         | R7011,7012 | ERD10TJ333  |                         | 33K 2     |            |
|            |             |                         |           |         | R7051      | ERD25TJ102  | 1/4W 1K                 | 1         | NV-V10E/EO |
|            |             |                         |           |         | R7052      | ERD10TJ103  | 10K                     | 1         | NV-V10E/EO |
|            |             |                         |           |         | R7053,7054 | ERD25TJ102  | 1/4W 1K                 | 2         | NV-V10E/EO |
|            |             |                         |           |         | R7057      | ERD10TJ331  | 330                     | 1         |            |
|            |             |                         |           |         | R7060      | ERD10TJ331  | 330                     | 1         |            |
|            |             |                         |           |         | R7061      | ERD10TJ124  | 120K                    | 1         | NV-V10B    |
|            |             |                         |           |         | R7062      | ERD10TJ104  | 100K                    | 1         | NV-V10B    |
|            |             |                         |           |         | R7063,7064 | ERD10TJ332  | 3.3K                    | 2         | NV-V10B    |
|            |             |                         |           |         | R7074      | ERD10TJ224  | 220K                    | 1         | NV-V10E/EO |
|            |             |                         |           |         | R7075      | ERD10TJ104  | 100K                    | 1         | NV-V10E/EO |
|            |             |                         |           |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             |                         |           |            |
|            |             |                         |           |         |            |             | Capacitors              |           |            |
|            |             |                         |           |         | C6852      | ECQM1H392KZ | Mylar 50V 0.0039        | 1         |            |
|            |             |                         |           |         | C7001      | ECQV05014JB | Mylar 50V 0.1           | 1         |            |
|            |             |                         |           |         | C7002      | ECQV05223JB | Mylar 50V 0.022         | 1         |            |
|            |             |                         |           |         | C7003      | ECQV05473JB | Mylar 50V 0.047         | 1         |            |
|            |             |                         |           |         | C7004      | ECQV05223JB | Mylar 50V 0.022         | 1         |            |
|            |             |                         |           |         | C7005      | ECQV05473JB | Mylar 50V 0.047         | 1         |            |
|            |             |                         |           |         | C7051      | ECQV05224JZ | Mylar 50V 0.22          | 1         |            |





**Panasonic**  
**MATSUSHITA ELECTRIC**

Printed in Japan

# Service Manual

**Vol. 6**AC Adaptor  
**NV-B11-E**  
**-B**

## SPECIFICATIONS

Power Source: 220, 240 V AC 50/60 Hz  
Power Consumption: 50 W  
Output: 12 V DC. 1.6 A  
15 V DC for battery charge  
Weight: 2.6 kg  
Dimensions: 146(W) × 92.5(H) × 240(D) mm

Weight and dimensions shown are approximate.  
Specifications are subject to change without notice.

**CAUTION:** FOR USE WITH VIDEO TAPE RECORDER, MODEL NV-100.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**Panasonic**

**Matsushita Electric Trading Co., Ltd.**  
P.O. Box 288, Central Osaka Japan



This unit is an AC adaptor for the NV-100 Portable Video Recorder: for a power supply to the recorder and the colour video camera, and for recharging of the battery pack.

**CAUTION:** This unit is for use with video tape recorder, model NV-100.

**WARNING:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

## FEATURES

### 1. TV/VTR Switch

When the VTR and the TV set are connected to this unit, TV/VTR switch enables you to watch TV normally or to view playback of video recording.

### 2. Simultaneous power supply

This unit supplies power to the colour camera through the recorder NV-100.

### 3. Voltage selector

This unit can also be used in other countries where voltages are different (220, 240 V AC: NV-B11) by setting the voltage selector to the local voltage.


### 4. Battery pack can be recharged in 90 minutes. Simultaneous charging.

A battery pack in the battery compartment on the unit can be charged while at the same charging the battery pack in the recorder.


## CONTENTS

|                                         |       |
|-----------------------------------------|-------|
| SPECIFICATIONS .....                    | Cover |
| FUNCTION OF CONTROLS .....              | 6- 1  |
| OPERATION .....                         | 6- 2  |
| BATTERY CHARGING .....                  | 6- 2  |
| DISASSEMBLY METHOD .....                | 6- 3  |
| ELECTRICAL ADJUSTMENT PROCEDURES .....  | 6- 4  |
| CIRCUIT BOARD LAYOUT .....              | 6- 6  |
| AC ADAPTOR BLOCK DIAGRAM .....          | 6- 7  |
| AC ADAPTOR SCHEMATIC DIAGRAM .....      | 6- 8  |
| MAIN POWER SUPPLY C.B.A .....           | 6- 9  |
| EXPLODED VIEWS .....                    | 6-10  |
| MECHANICAL REPLACEMENT PARTS LIST ..... | 6-10  |
| ELECTRICAL REPLACEMENT PARTS LIST ..... | 6-11  |

## FRONT

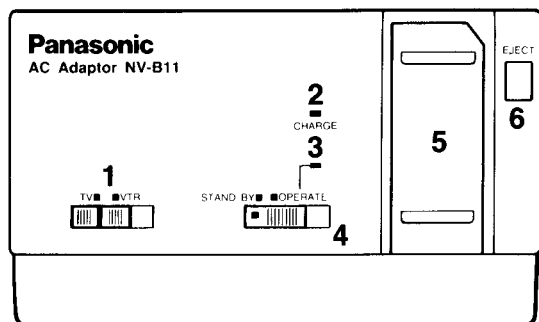

## REAR

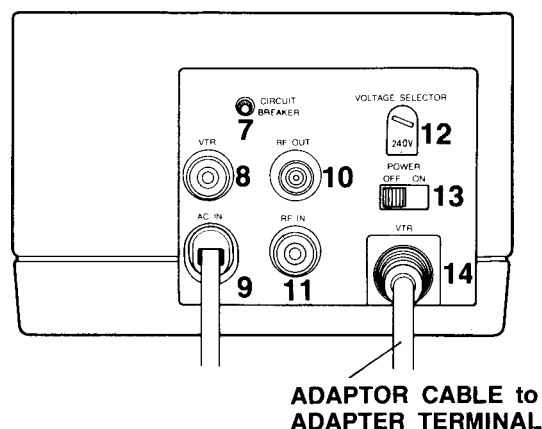


## FUNCTION OF CONTROLS

### FRONT

1. **TV/VTR switch**  
VTR—To watch playback of video recording  
TV— To watch TV normally
2. **Charging Indicator Lamp**  
Lights up during charging of the battery pack, and extinguishes when charging is complete. Please refer to page 6.
3. **Pilot Lamp**  
When the Operation Switch is turned to "OPERATE" position, this lamp lights up.
4. **Operation Switch**  
Set to "OPERATE" to turn the unit on.
5. **Battery Compartment**  
When the battery pack is to be charged, insert it to this compartment.
6. **Battery Eject Button**  
When the Eject Button pushed, the battery pack is ejected.

### REAR

7. **Circuit Breaker Button**  
The ADAPTOR Cable terminal will short-circuit if the terminal is mistakenly placed in contact with any conductive object other than the ADAPTOR terminal while the power cord is plugged in. The protective circuit will operate to break the circuit at this time, button will stick out and the Pilot Lamp will go off. To restore the unit to normal operation, connect the ADAPTOR Cable to the ADAPTOR terminal, wait one or two minutes, then depress this button.
8. **VTR Terminal**  
Connect it to RF OUT of the recorder.
9. **Power Cord**  
For connection to an ordinary power source.
10. **RF OUT Terminal**  
Connect it to TV.
11. **RF IN Terminal**  
Connect it to an aerial.
12. **Voltage Selector**  
Ensure that the selector is set at the same indication as the local mains voltage before plugging in the unit.

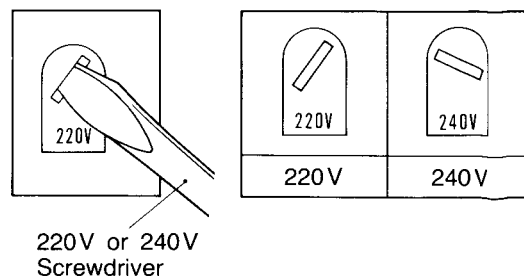


#### Note:

Power Switch must be off and Power Cord disconnected from mains prior to changing the voltage selector.

13. **POWER OFF/ON Switch**  
Switching on applies power to the unit. To switch off this unit completely, set to "OFF".
14. **ADAPTOR Cable**  
Connect it to ADAPTOR Terminal of the recorder.

# OPERATION

## ■ To use as a power source

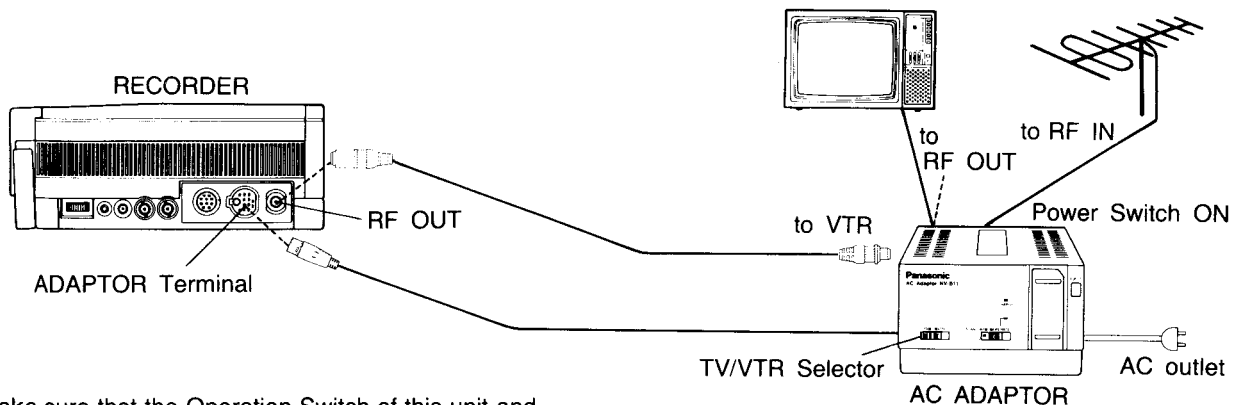

●Make sure that the Operation Switch of this unit and of the recorder are off, and that the Voltage Selector is adjusted to your local voltage.


1. Connect the DIN RF Cable to RF OUT of the recorder and VTR of the unit.
2. Connect the ADAPTOR Cable to ADAPTOR Terminal of the recorder.
3. Plug in the unit.
4. Switch Power OFF/ON to "ON".
5. Set the Operation Switch to "OPERATE". The Pilot Lamp will light up to indicate that the preparations for power supply are completed.

6. Set the TV/VTR Switch to "VTR" to view playback of video recording. Set the TV/VTR switch to "TV" to watch TV normally.

●When the Operation Switch is set to "STANDBY", "TV" mode is automatically selected.


# BATTERY CHARGING

## 1. To charge the battery pack of the recorder.

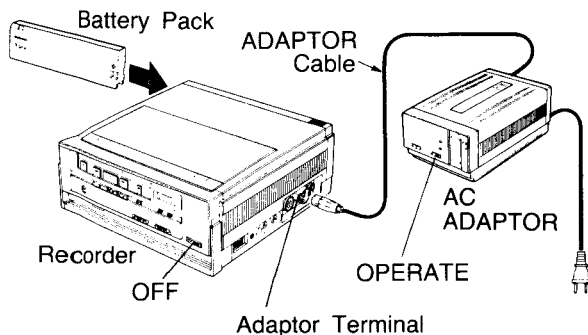

1. Insert the battery pack into the recorder and connect the ADAPTOR Cable on the unit to ADAPTOR Terminal.
  2. Turn the unit on.
  3. The Charging Indicator Lamp will light up and charging of the battery pack in the recorder will start.
- It is recommended to continue recharging for 3 or 4 hours after the lamp goes off (1.5 hours) to prolong the life of the battery pack.
- If the recorder is turned on during recharging, recharging will stop and the Charging Indicator Lamp will go off.

## 2. Charging the battery pack in the battery compartment.

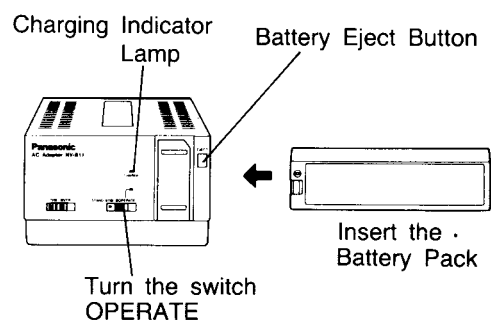

1. Insert the battery pack to the battery compartment.
2. Turn the unit on, and charging will start.

The recharging time for two battery packs (one in the recorder and one being recharged in the AC ADAPTOR at the same time) is about twice the time required for one battery pack.

# DISASSEMBLY METHOD

1. unscrew the 2 screws (A) and remove the handle. Then lift the top case and remove it.

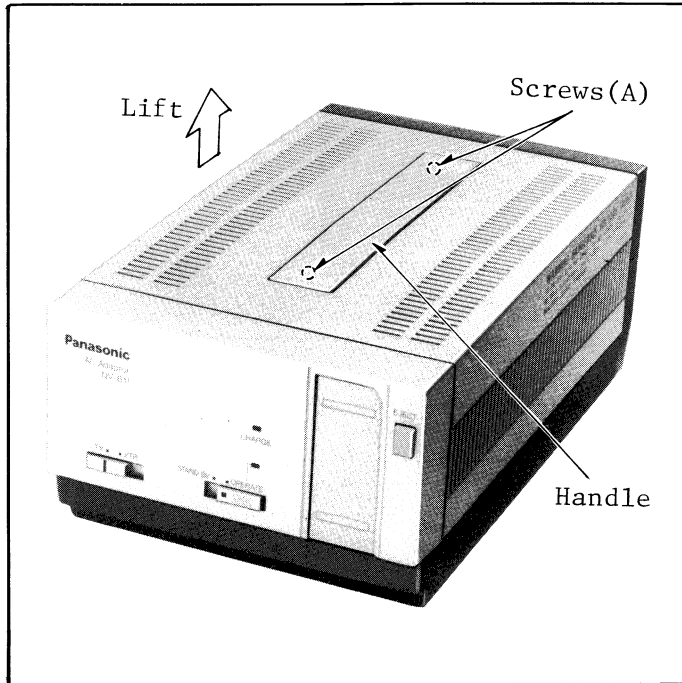


Fig. 1

2. Unscrew the 4 screws (B) and remove the bottom case.

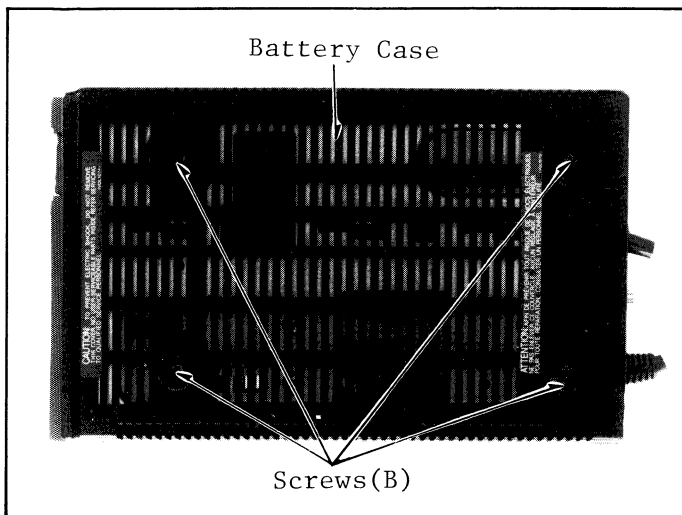


Fig. 2

3. Unscrew the screw (C) and remove the battery case.


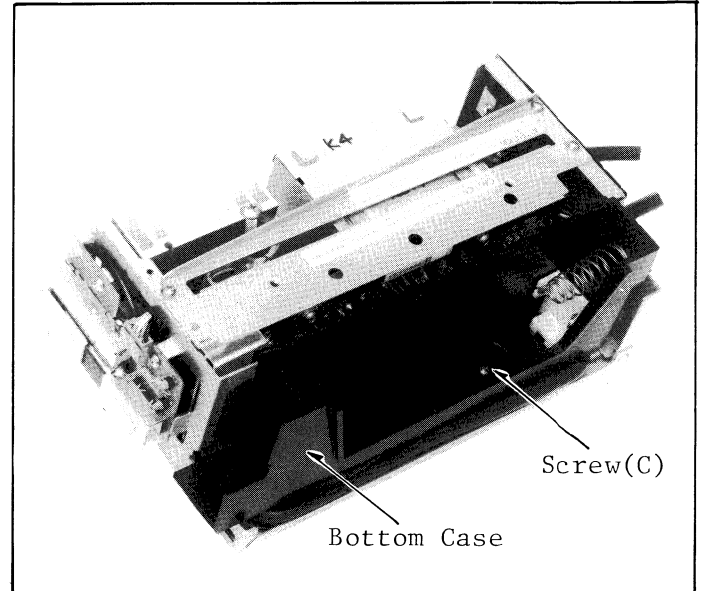


Fig. 3

# ELECTRICAL ADJUSTMENT PROCEDURES

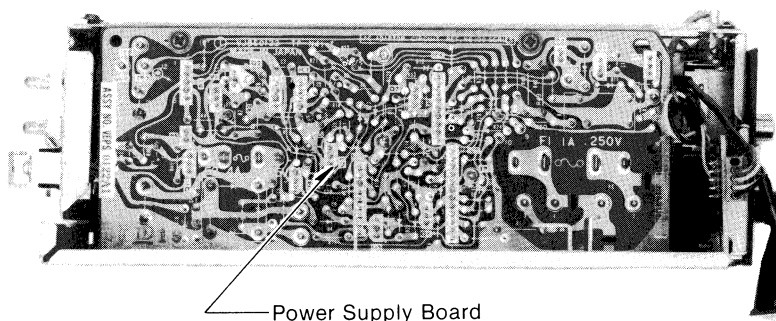

Power Supply Board

Fig. 4

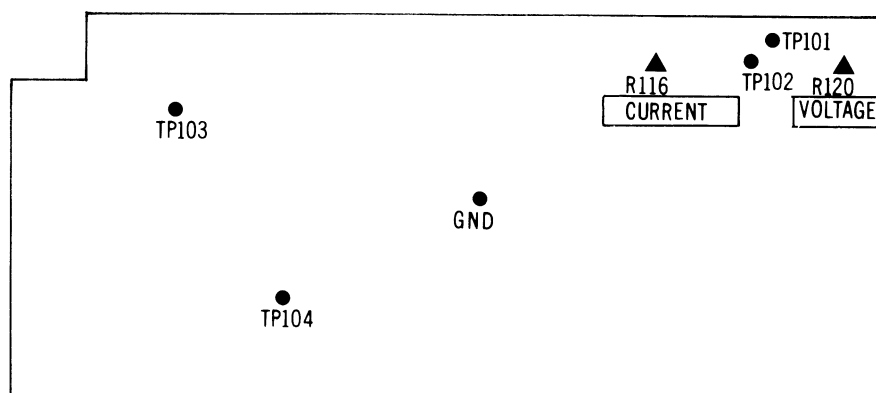


Fig. 5

This section provided complete electrical adjustment procedure which may be required for electronic circuits of MULTI-VOLTAGE AC ADAPTOR UNIT.

## Test Equipment

To perform the electrical adjustment completely, the following equipments are required.

1. VTVM (Vacuum Tube Volt Meter) or DVM (Digital Volt Meter)  
Voltage Range: 0.001 - 50V
2. Dual-Trace Oscilloscope  
Voltage Range: 0.005 - 50V/div.  
Frequency Range: DC - 10MHz  
Probes: 10:1 or 1:1
3. DC Currentmeter  
Current Range: 0 - 10A
4. Plastic Tip Driver

### 1. Charge Current (1.6A) Adjustment

Test Point: D120

Adjustment: R116

1. Do not connect the Multi-connector to the deck.
2. Connect the DC Currentmeter and battery as shown below.

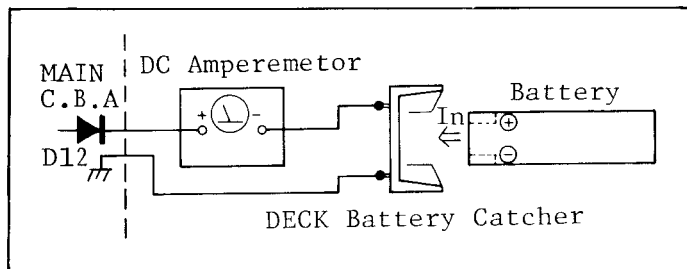


Fig. 6

The output voltage of the battery should be about 10.6V DC.

It can be made as following process.

- 1) Discharge the battery by using the VCR which has already had performed the Under Cut Adjustment. Refer to NV-8420 Service Manual Vol. 2 (Electrical Adjustment Procedures).
- 2) The VCR automatically turn into the STOP mode because the Under Cut function works.
- 3) At this time the output voltage of the battery is approx. 10.6V DC.
3. Connect the scope to TP102 on the Main P.C. Board.
4. Adjust Charge Current Adjustment (R116) so that the current is 1.6A 0.02A.
5. Confirm that the voltage at TP102 is High during the adjustment.

### 2. Width of Hysteresis Loop Adjustment

Test Point: TP102

Adjustment: R120

1. Do not connect Multi-connector to the deck.
2. Connect a 50kΩ variable resistor (1/4W) to parallel with R106 on the Main P.C. Board as shown below.


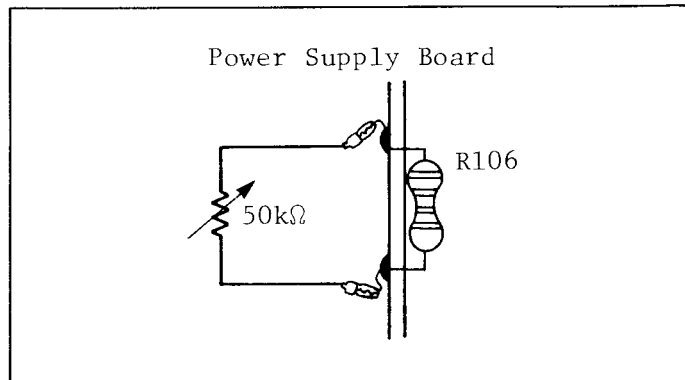


Fig. 7

3. Short both end of R119 on the Main P.C. Board.
4. Turn the Power on switch and adjust a 50kΩ variable resistor so that the voltage of Battery Catcher is +14.10V.
5. Connect the scope to TP102 on the Main P.C. Board and confirm that the voltage is "High" (+15.0V ± 1V).
6. Adjust Charge Volt Adjustment (R120) just to the point that the DC voltage is changed "Low" to "High" on the oscilloscope.


# CIRCUIT BOARD LAYOUT

---

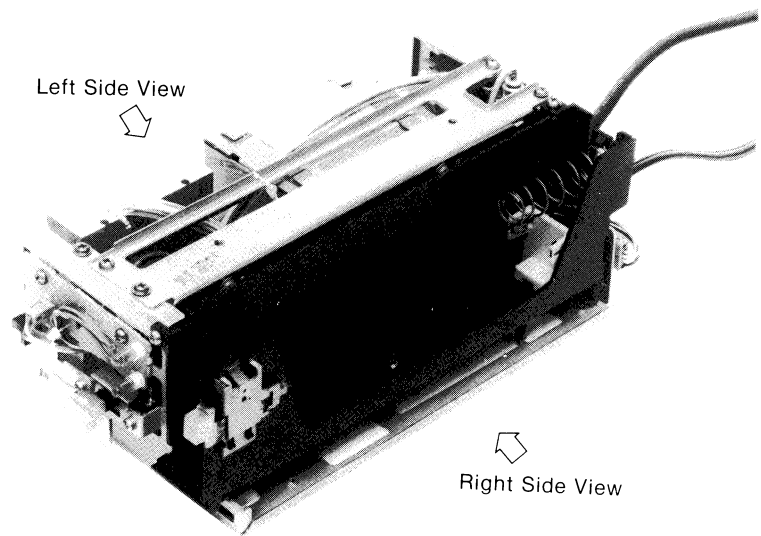


---

## RIGHT SIDE VIEW

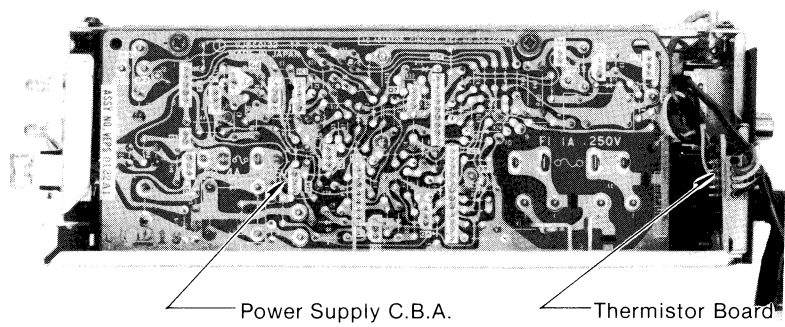


---

## LEFT SIDE VIEW

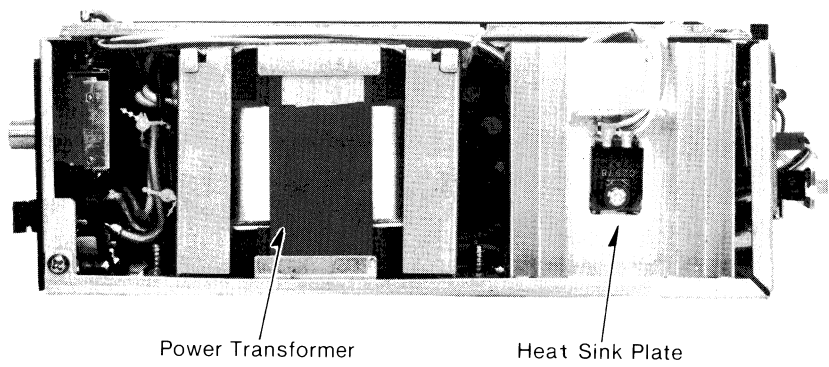



# AC ADAPTOR BLOCK DIAGRAM

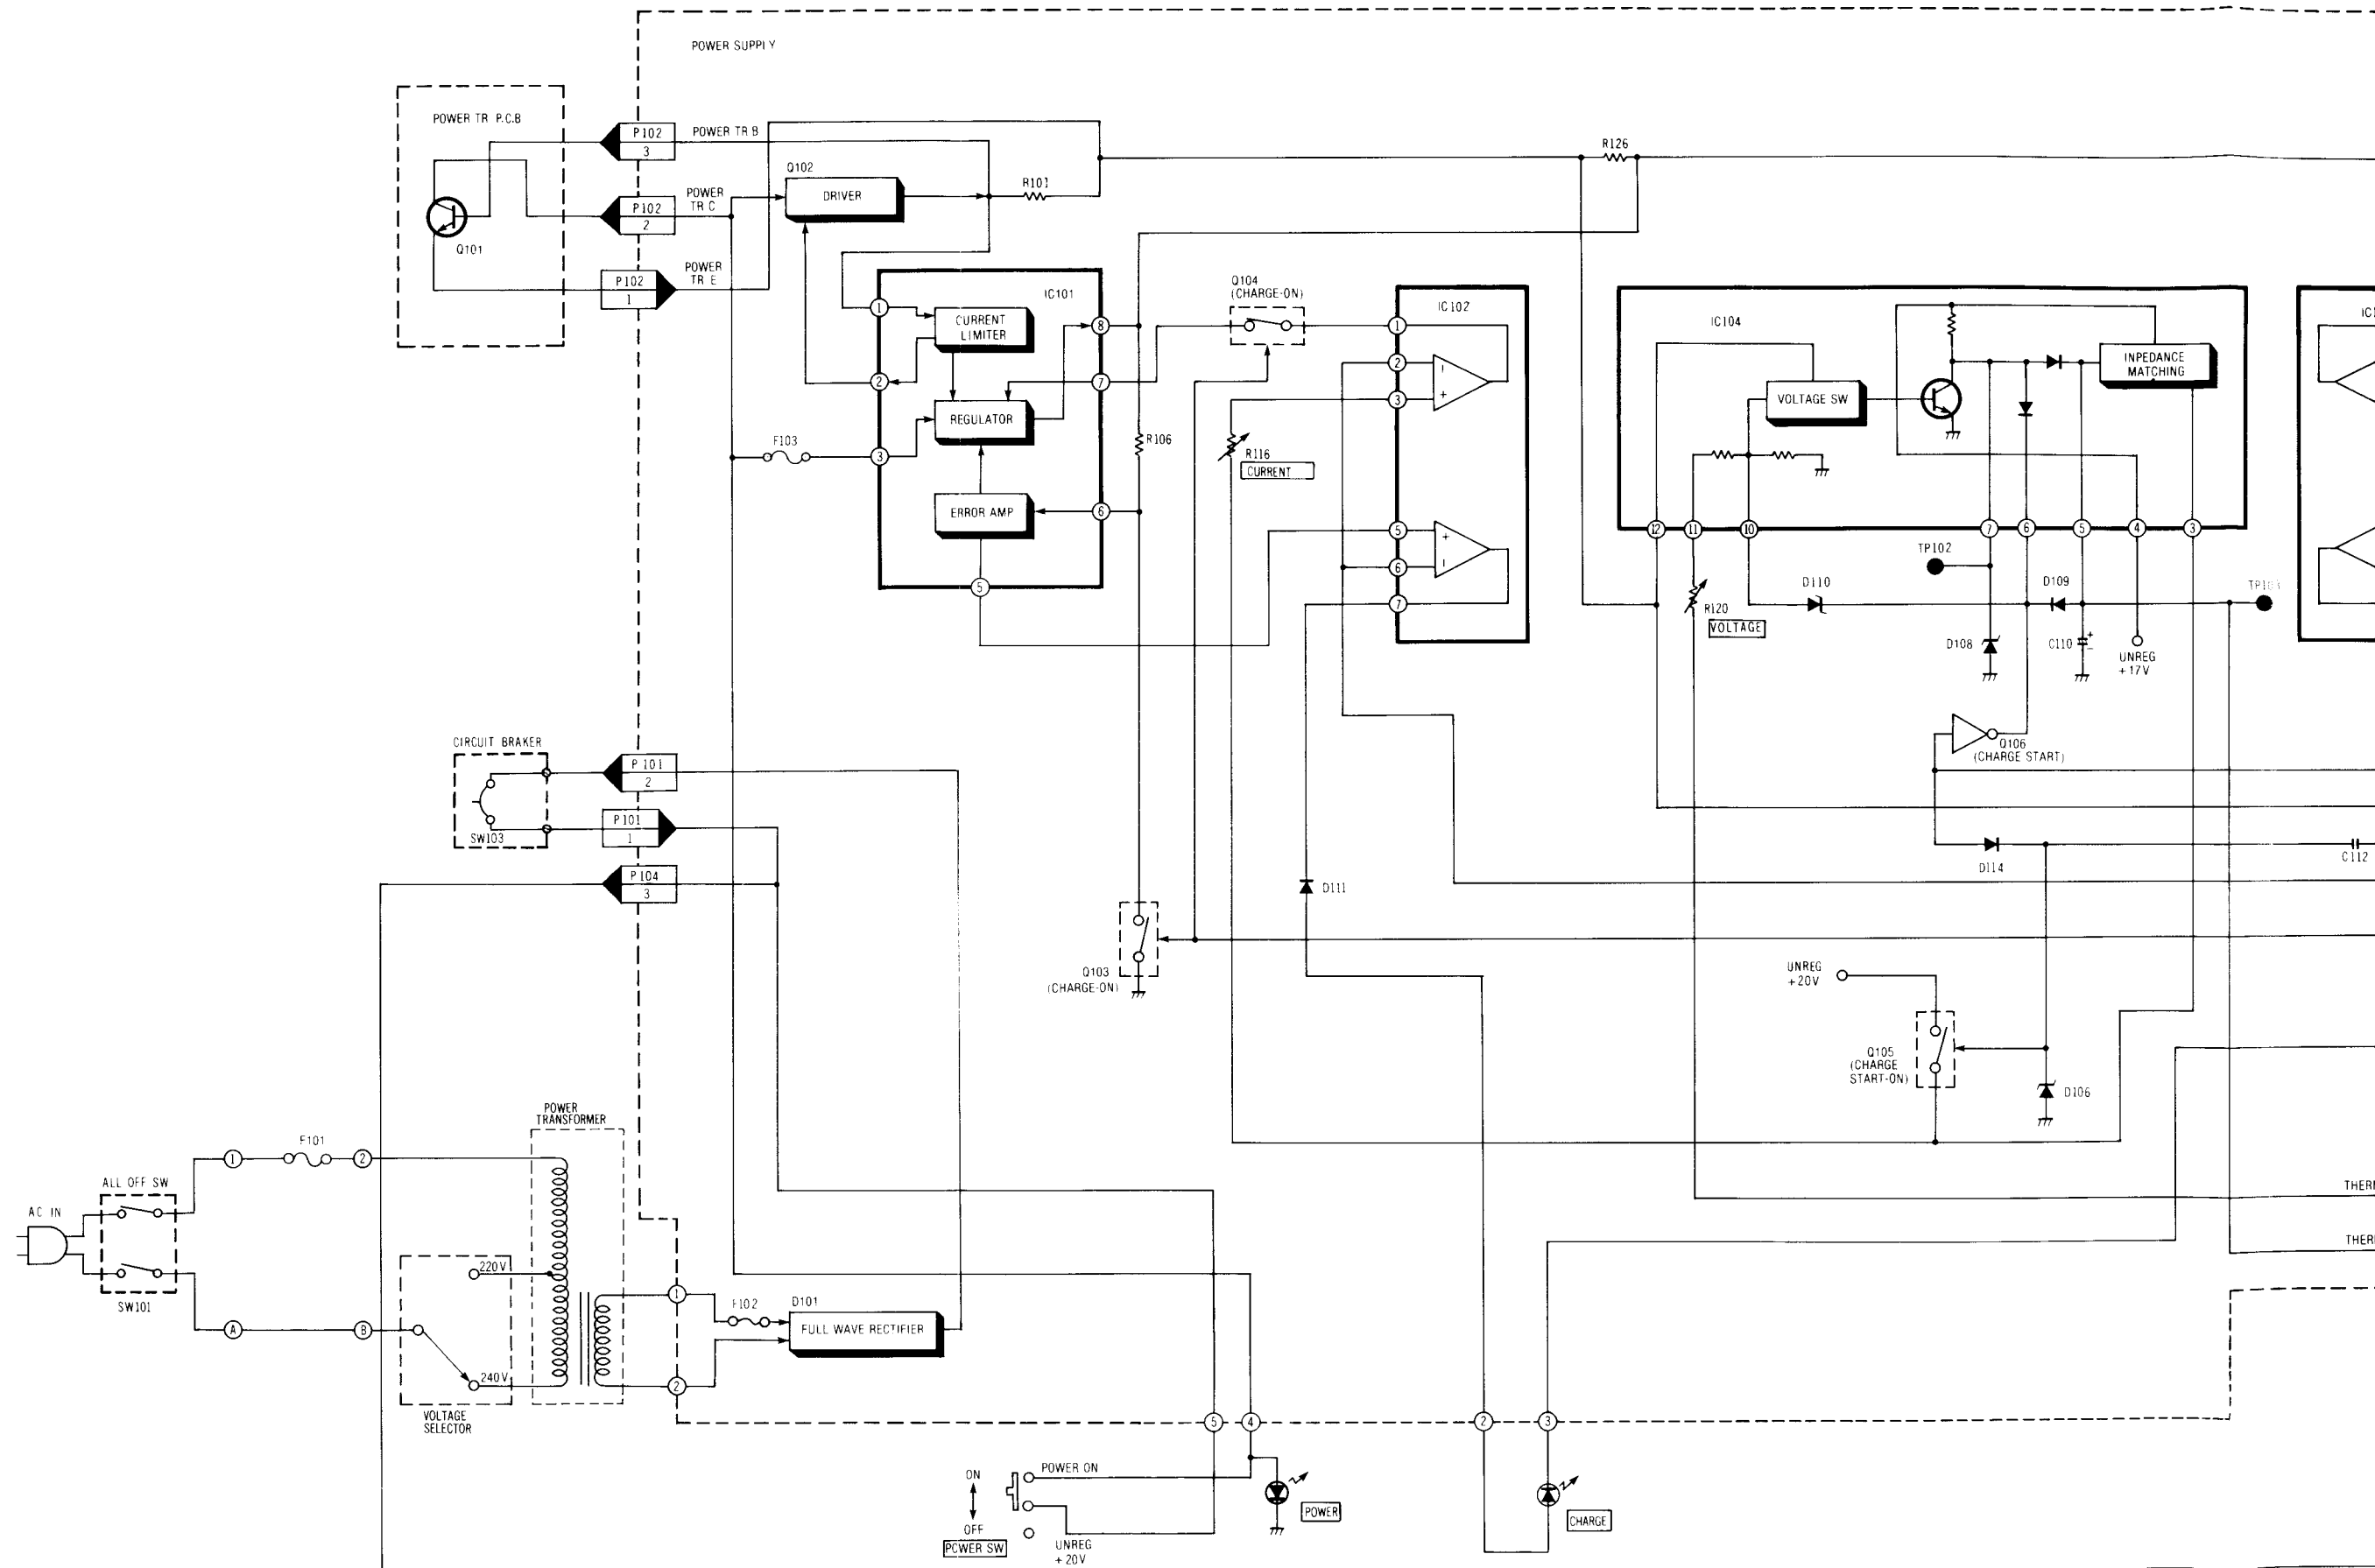

# GRAM

R SUPPLY

R TR B

F102

ON


OFF

POWER ON

UNREG +20V


POWER

CHARGE

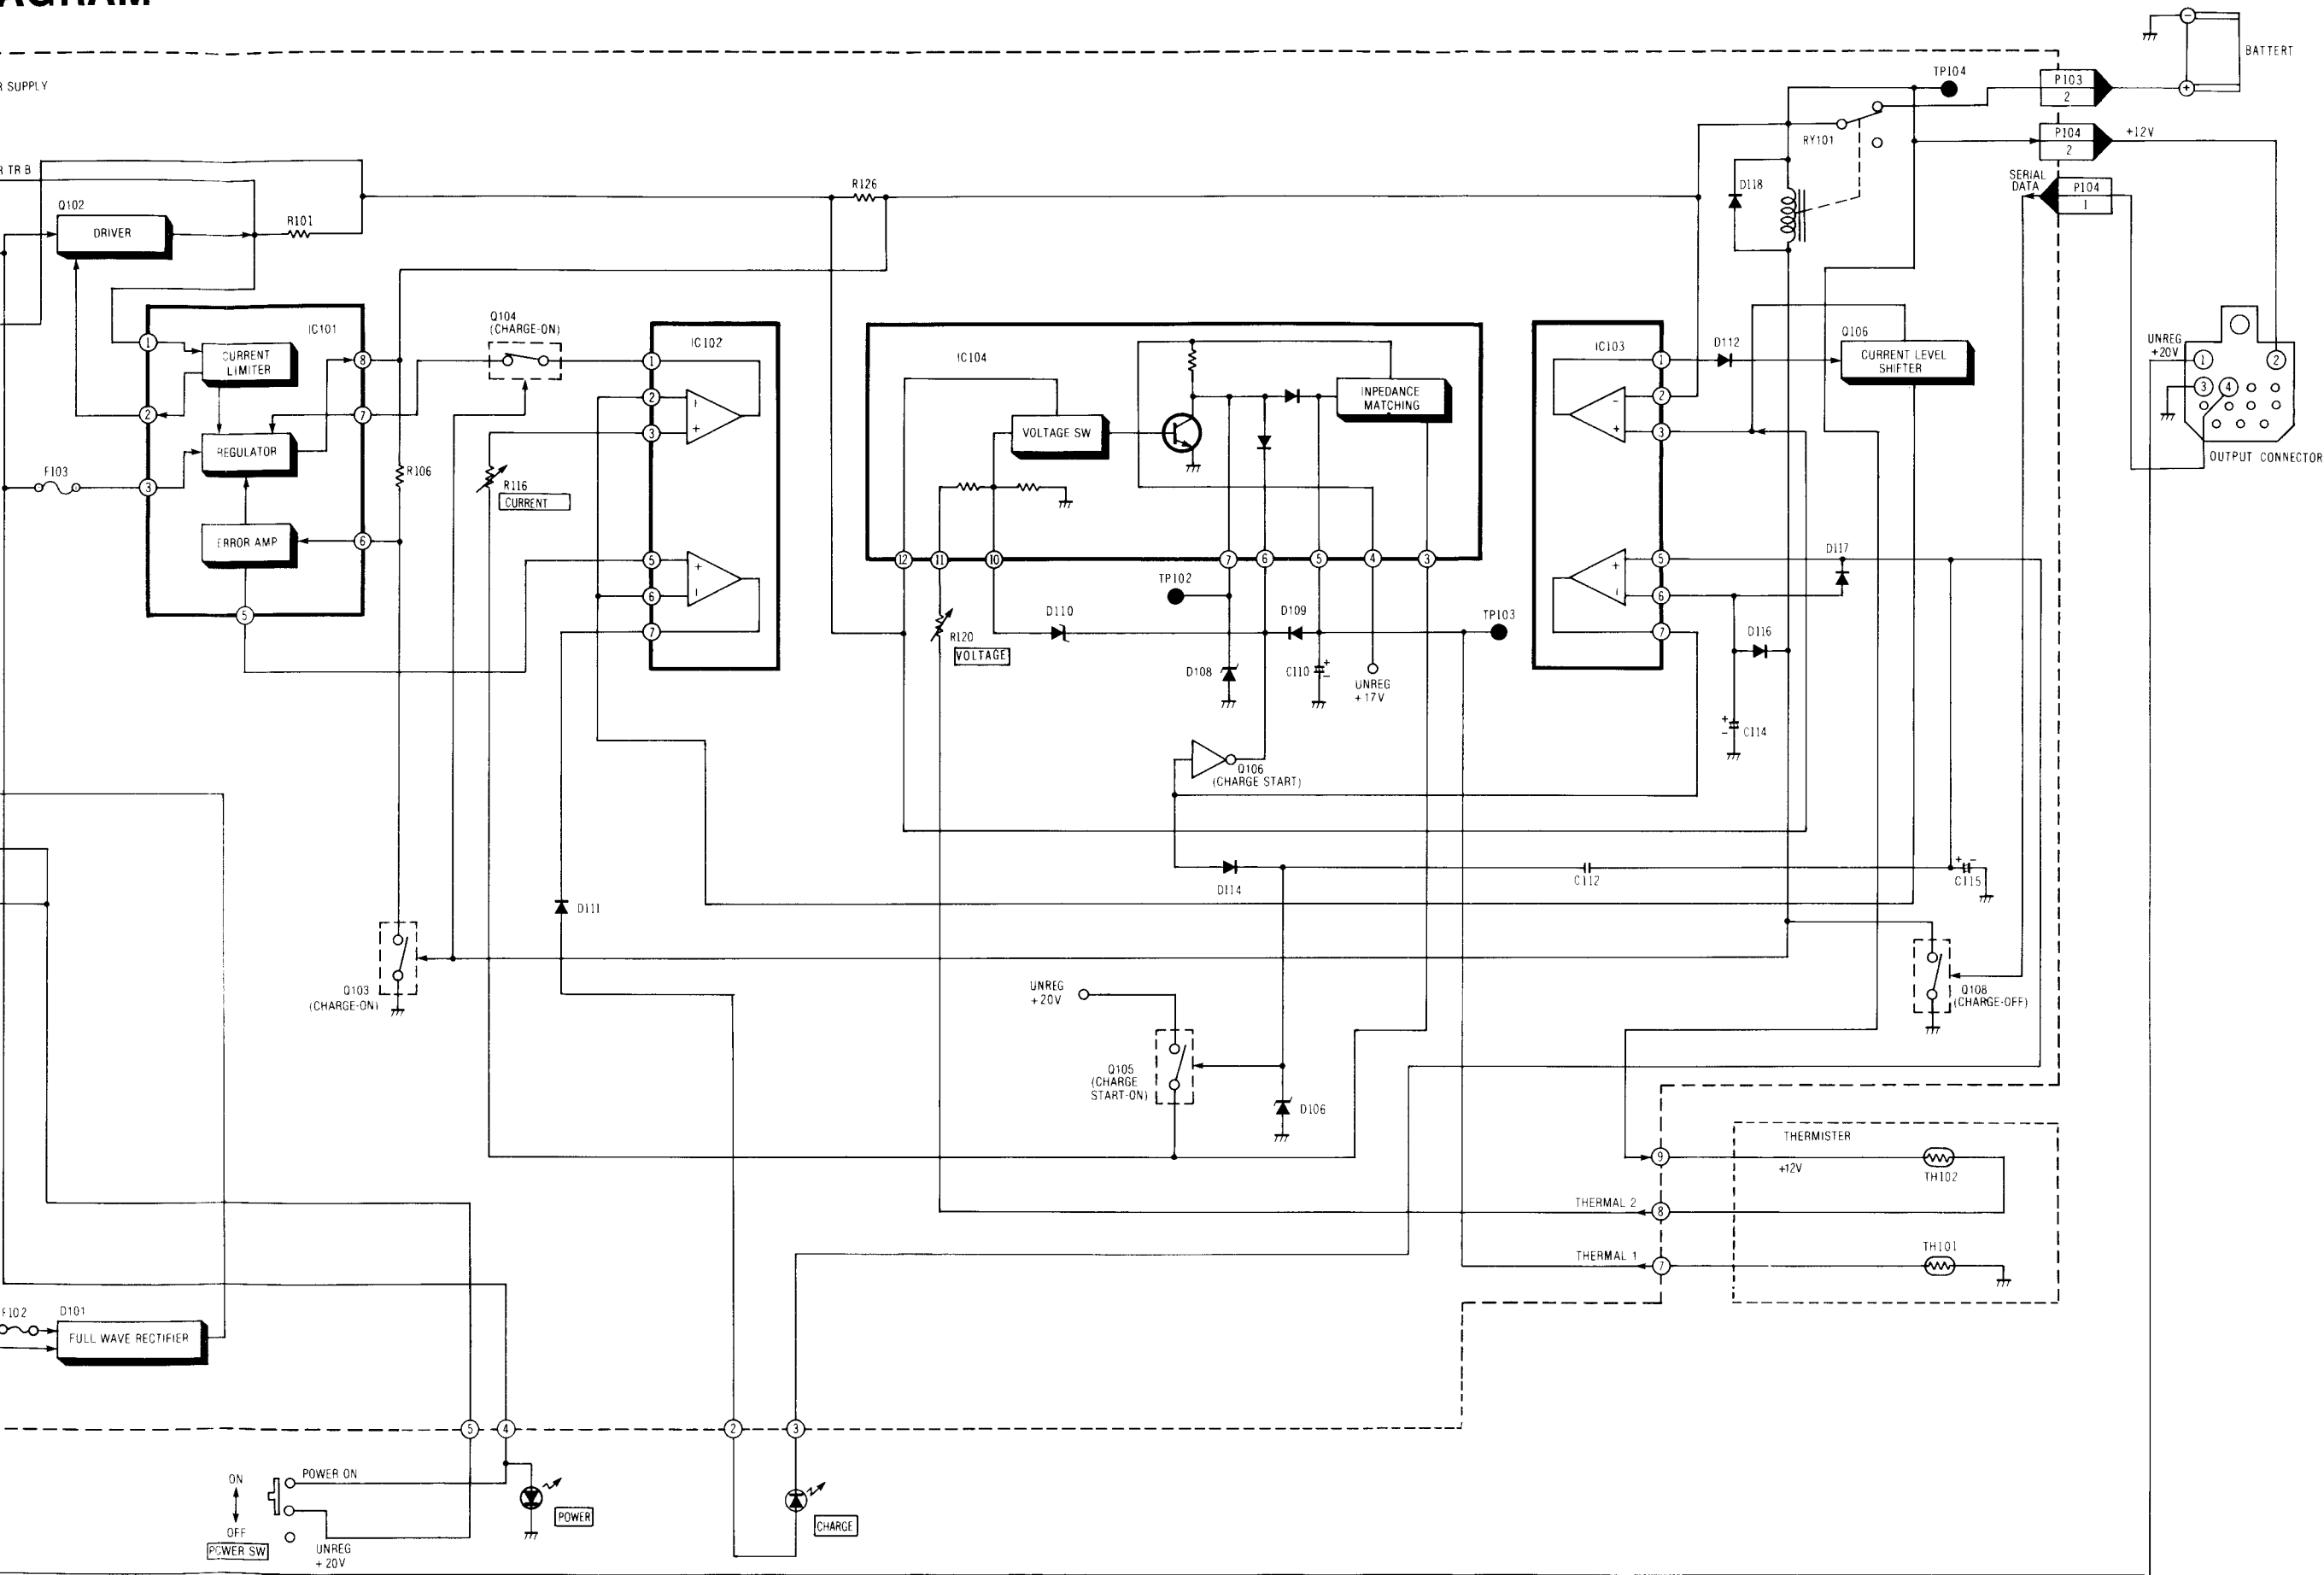





## C ADAPTOR SCHEMATIC DIAGRAM

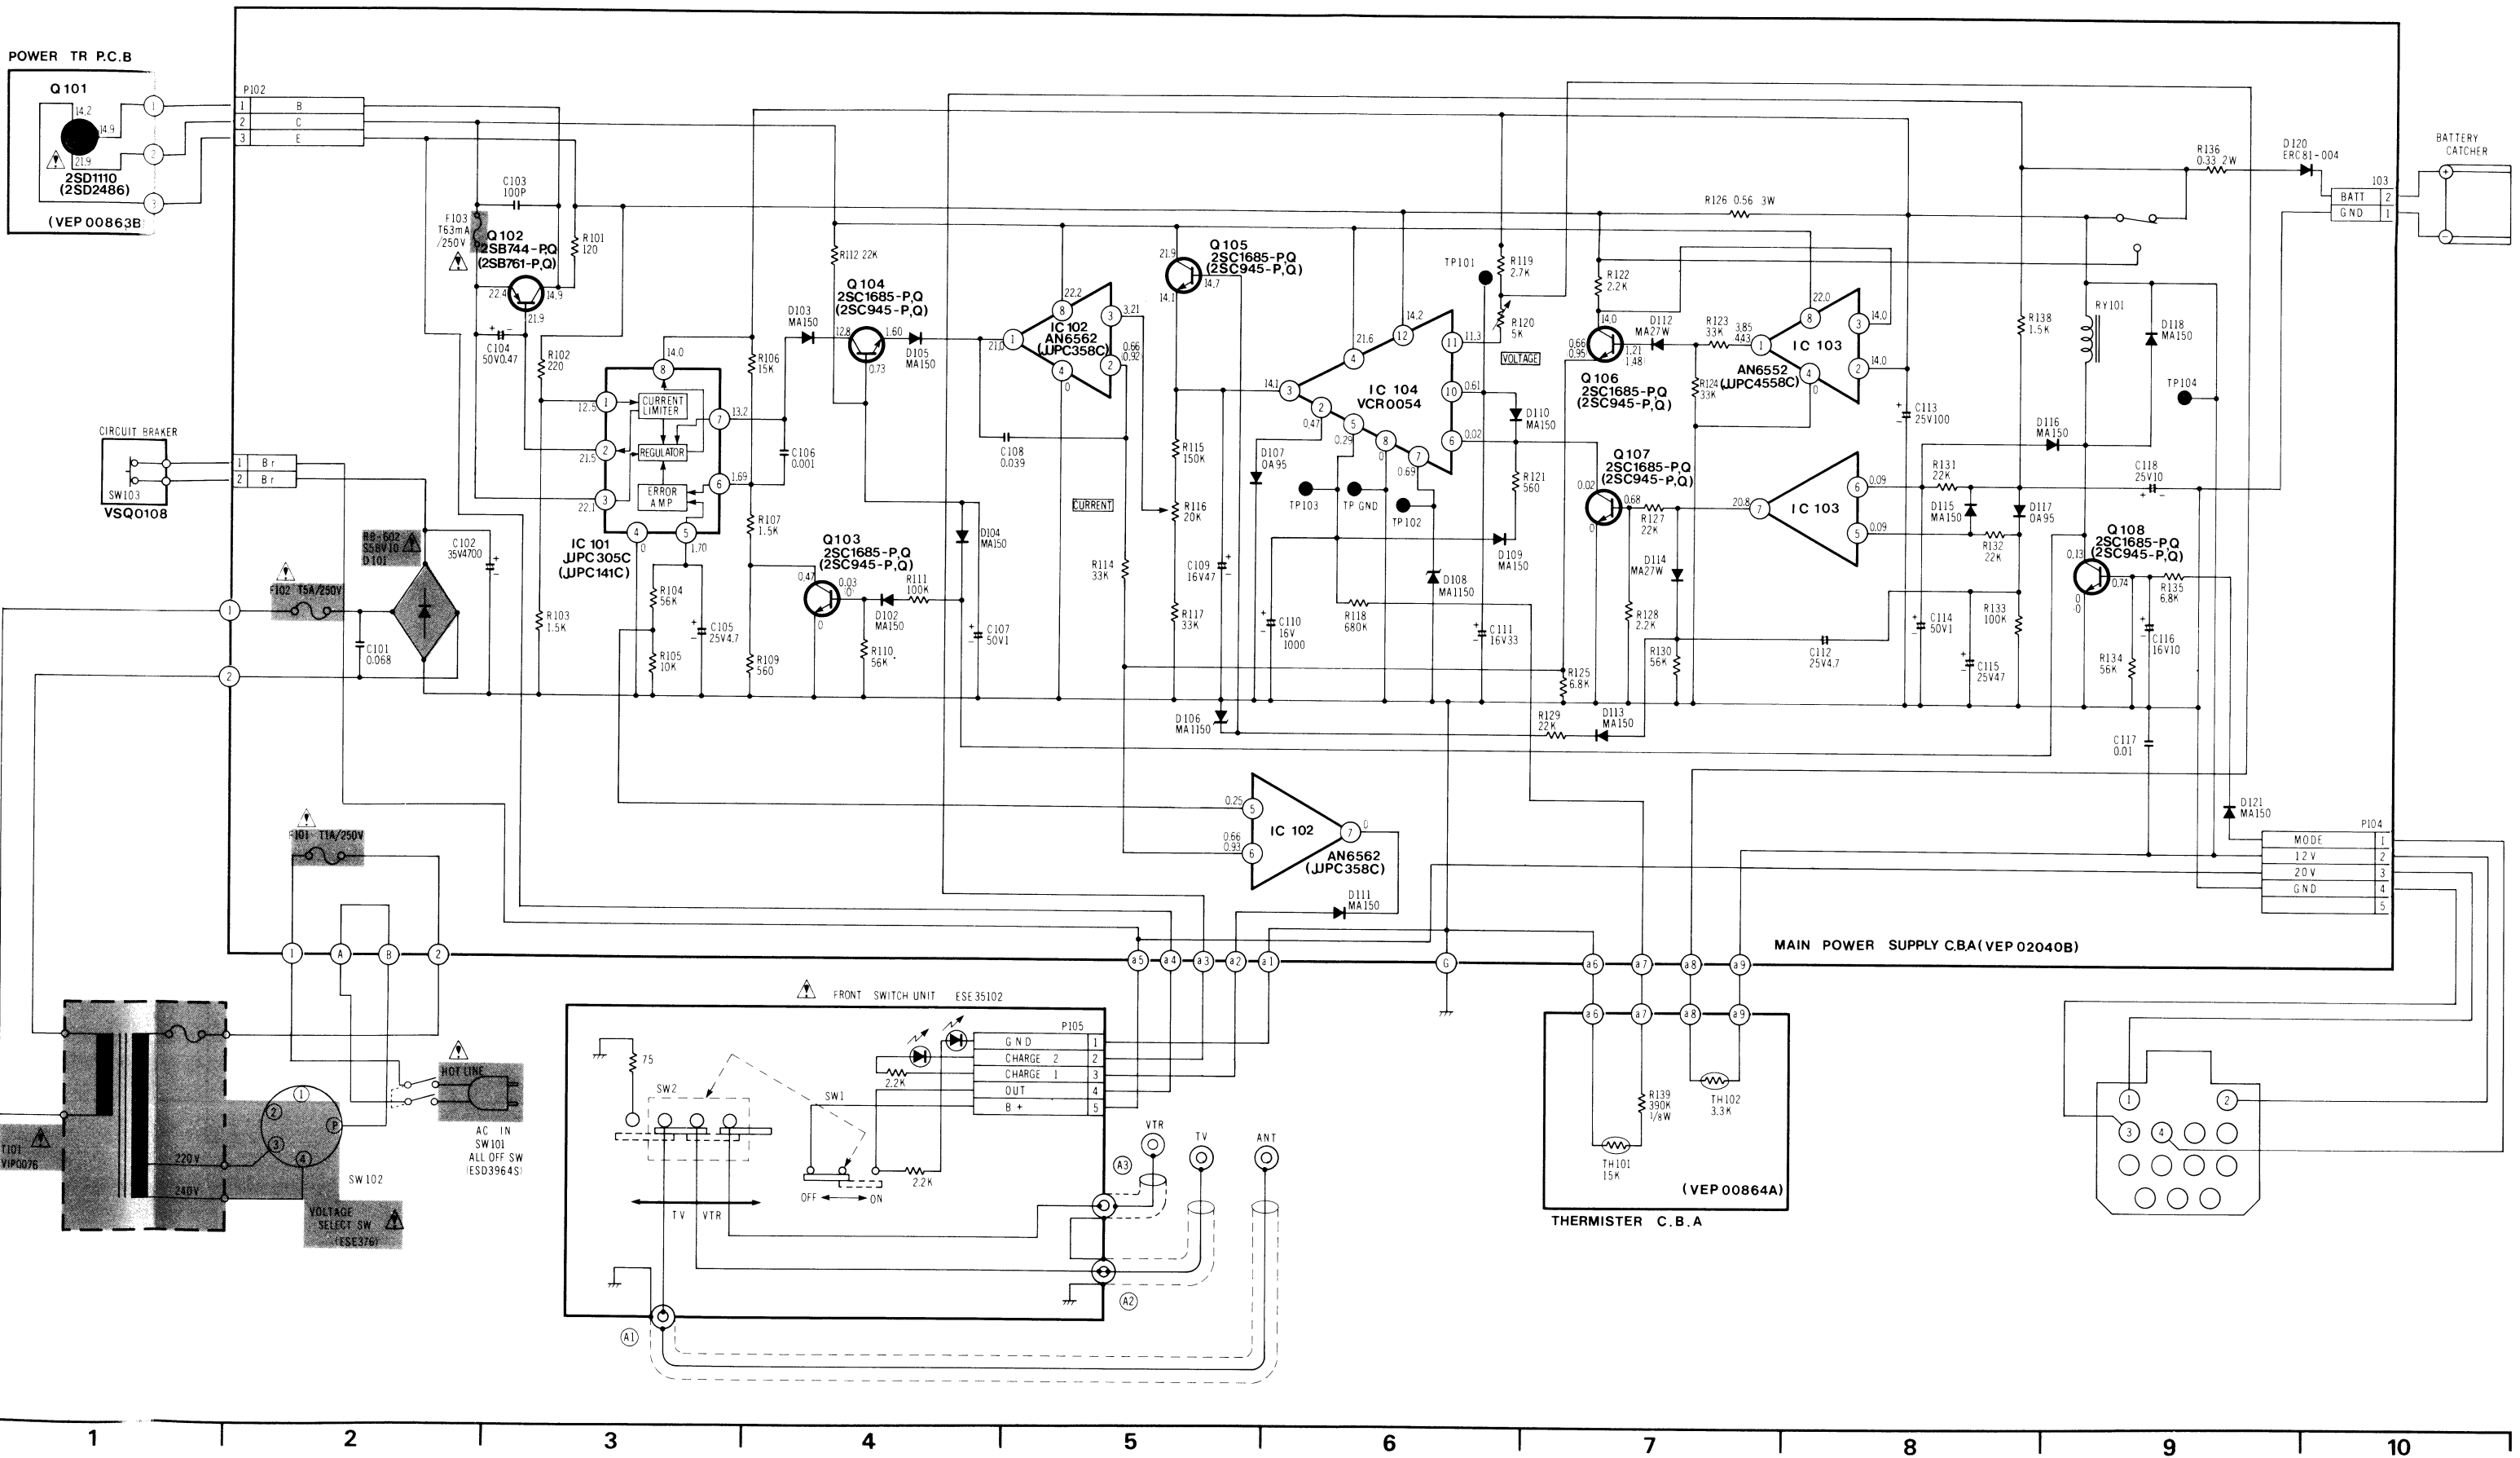

MAIN POWER SUPPLY C.B.A  
(VEP02040B)

FRONT SWITCH UNIT

| Power Supply P.C.B |     |
|--------------------|-----|
| Q102               | B-2 |
| Q103               | B-2 |
| Q104               | B-2 |
| Q105               | B-3 |
| Q106               | B-4 |
| Q107               | B-3 |
| Q108               | B-3 |
| IC101              | B-1 |
| IC102              | B-3 |
| IC103              | B-3 |
| IC104              | B-4 |

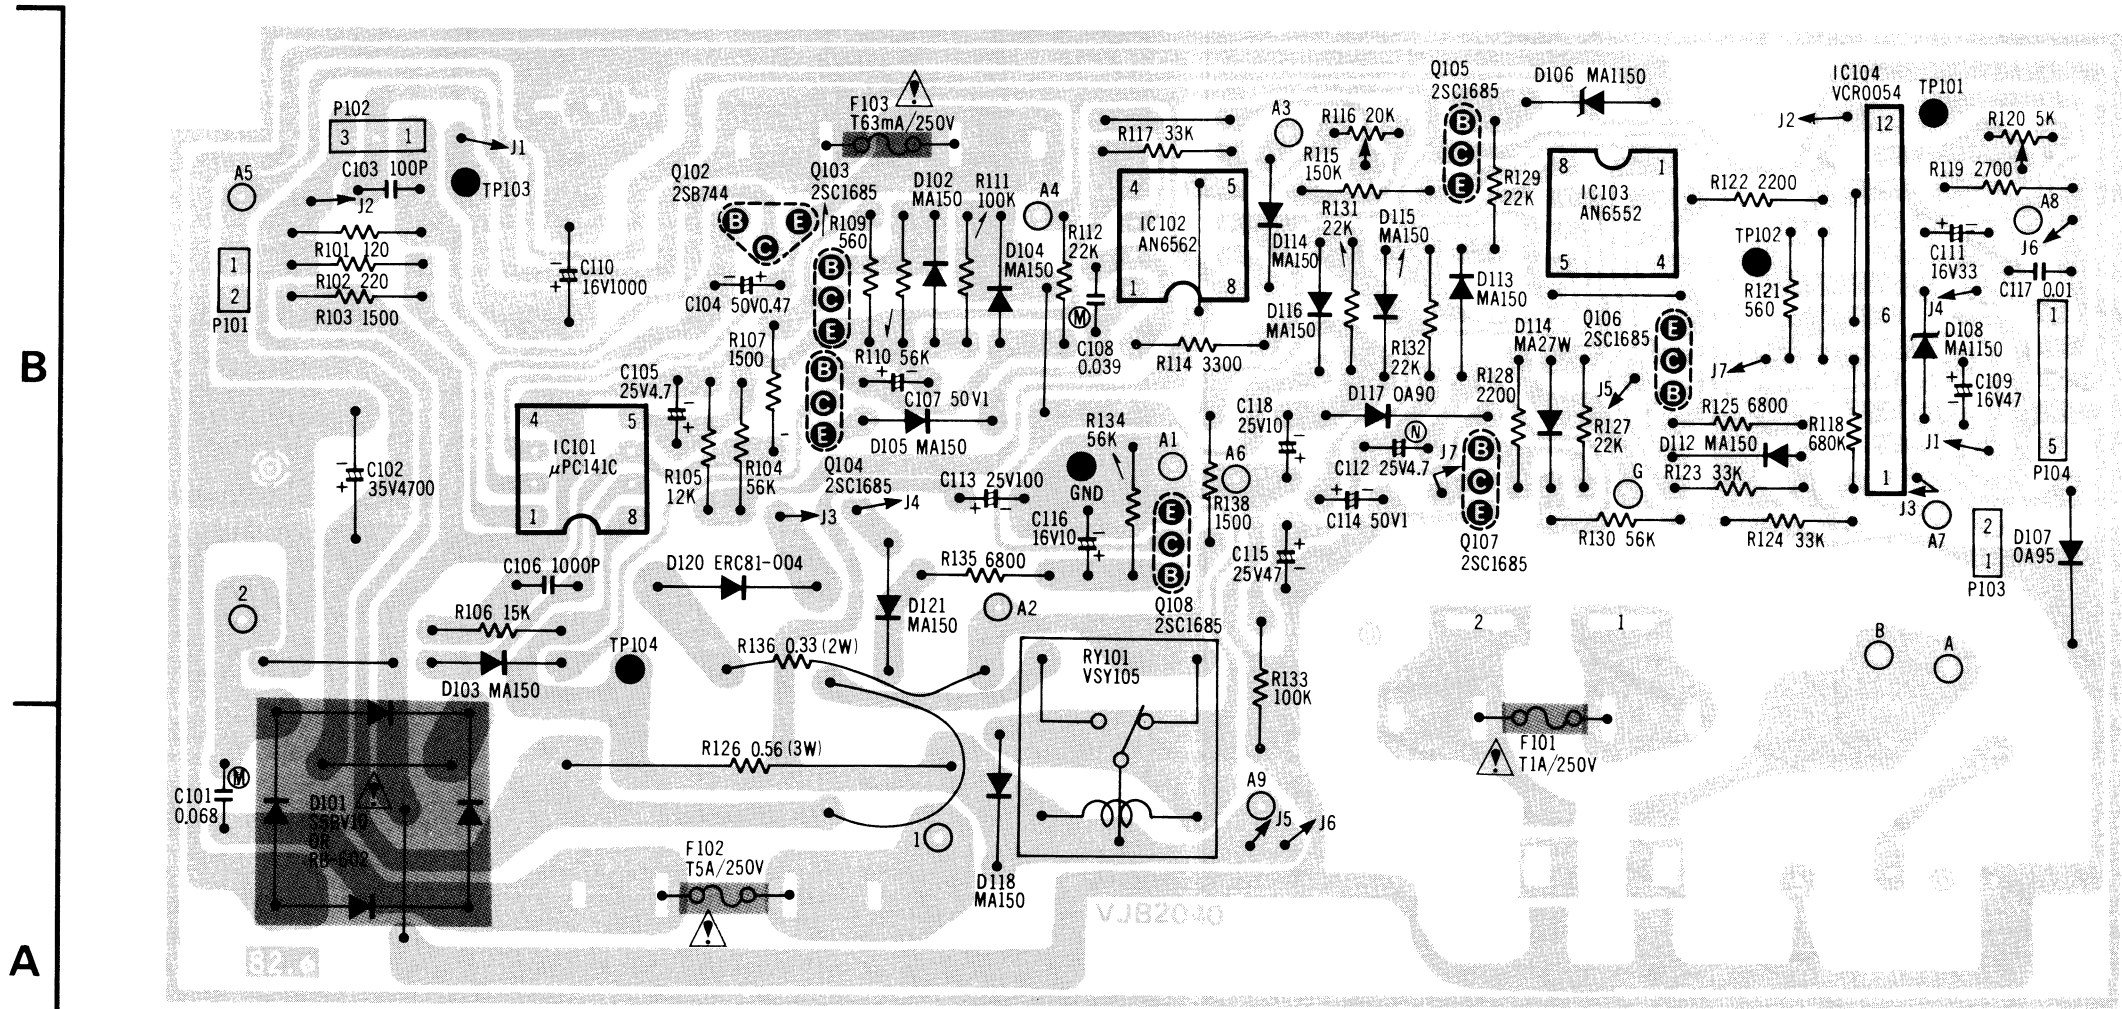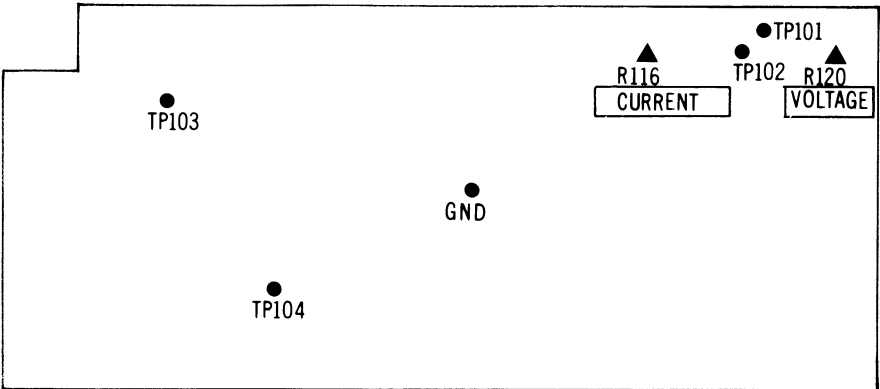


| P101 |                |
|------|----------------|
| 1    | CIRCUIT BRAKER |
| 2    | CIRCUIT BRAKER |

| P102 |   |
|------|---|
| 1    | B |
| 2    | C |
| 3    | E |


| P103 |         |
|------|---------|
| 1    | GND     |
| 2    | BATTERY |

| P104 |      |
|------|------|
| 1    | MODE |
| 2    | 12V  |
| 3    | 20V  |
| 4    | GND  |


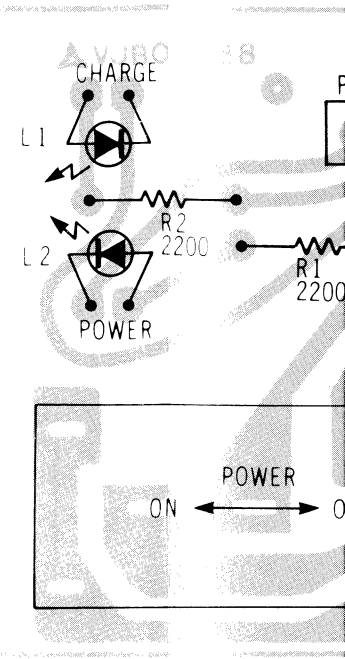


POWER

## FRONT SWITCH UNIT (ESE35102)

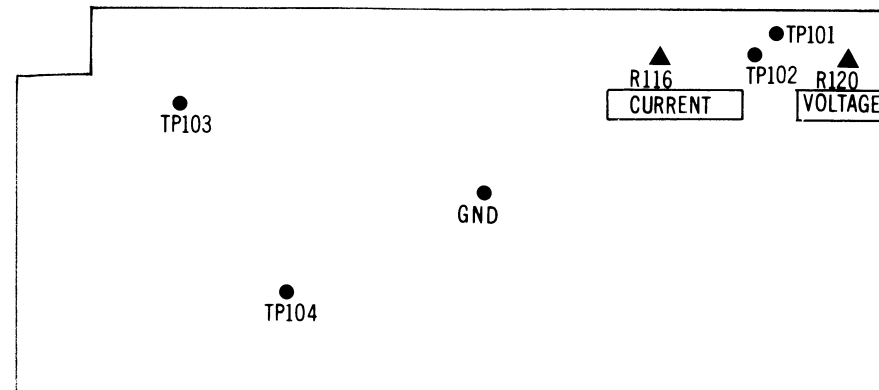


| P105 |       |
|------|-------|
| 1    | GND   |
| 2    | CHG 2 |
| 3    | CHG 1 |
| 4    | OUT   |
| 5    | B +   |

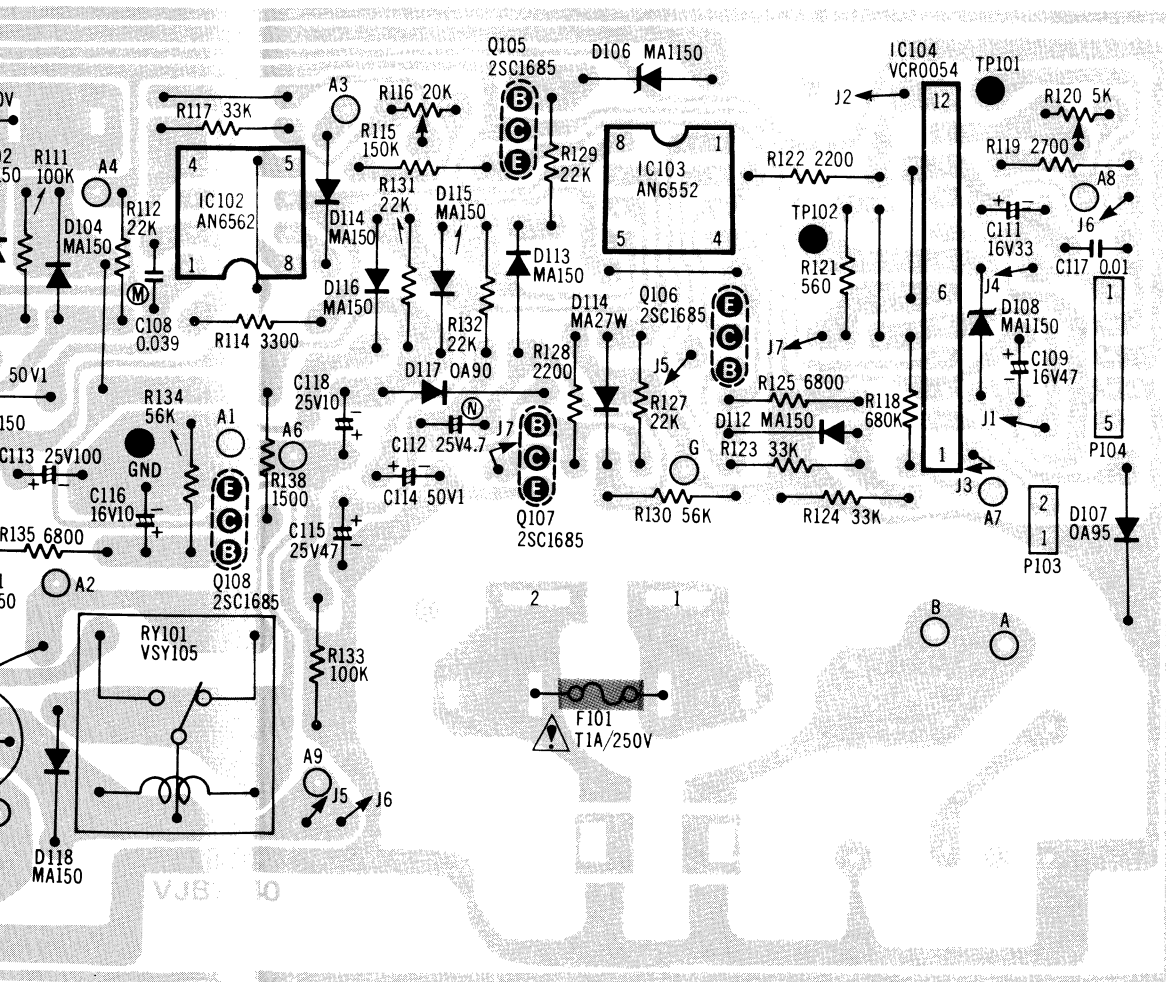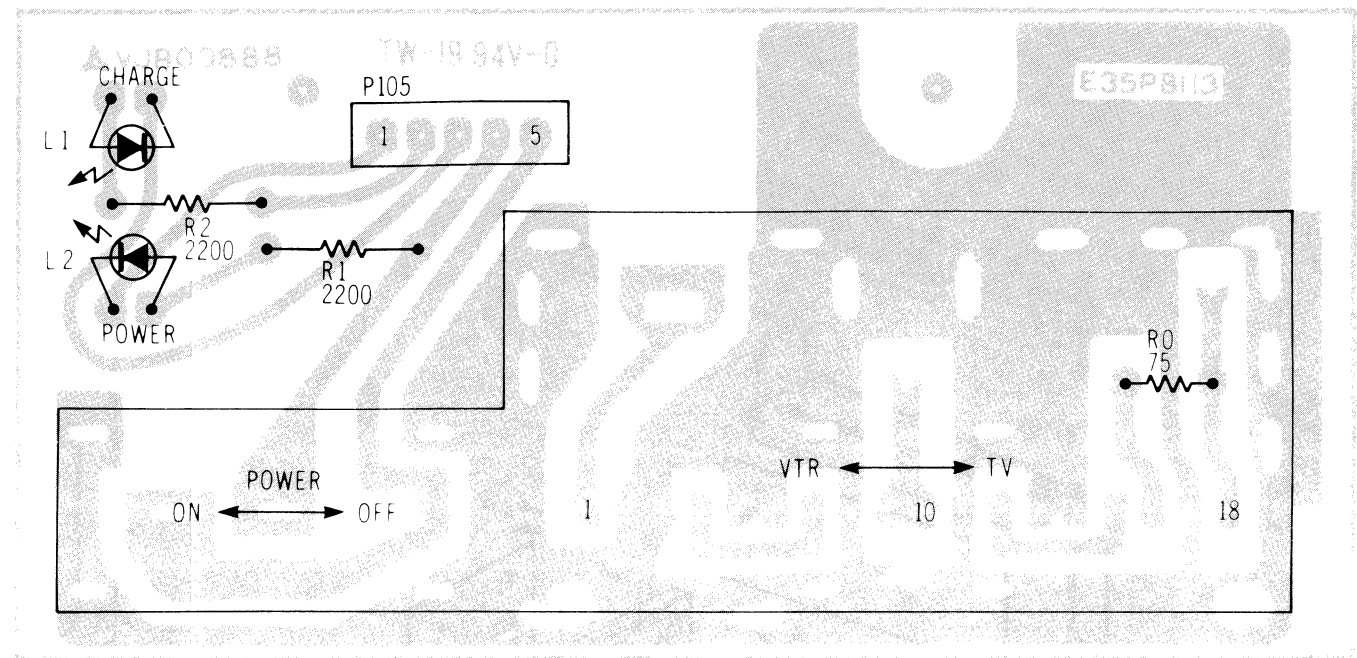


| P103 |         |
|------|---------|
| 1    | GND     |
| 2    | BATTERY |

| P104 |      |
|------|------|
| 1    | MODE |
| 2    | 12V  |
| 3    | 20V  |
| 4    | GND  |

**POWER TR C.B.A (VEP00863B)**

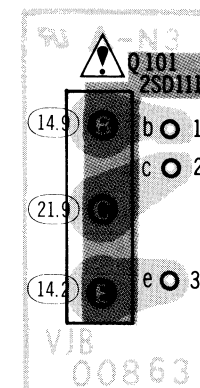


**THERMISTOR C.B.A (VEP00864A)**

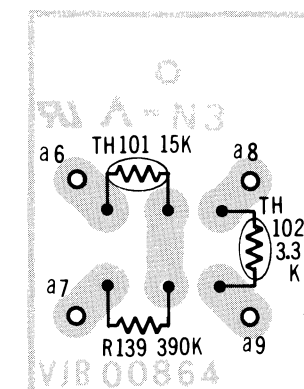




EXPLODED VIEWS ① AC Adaptor Section

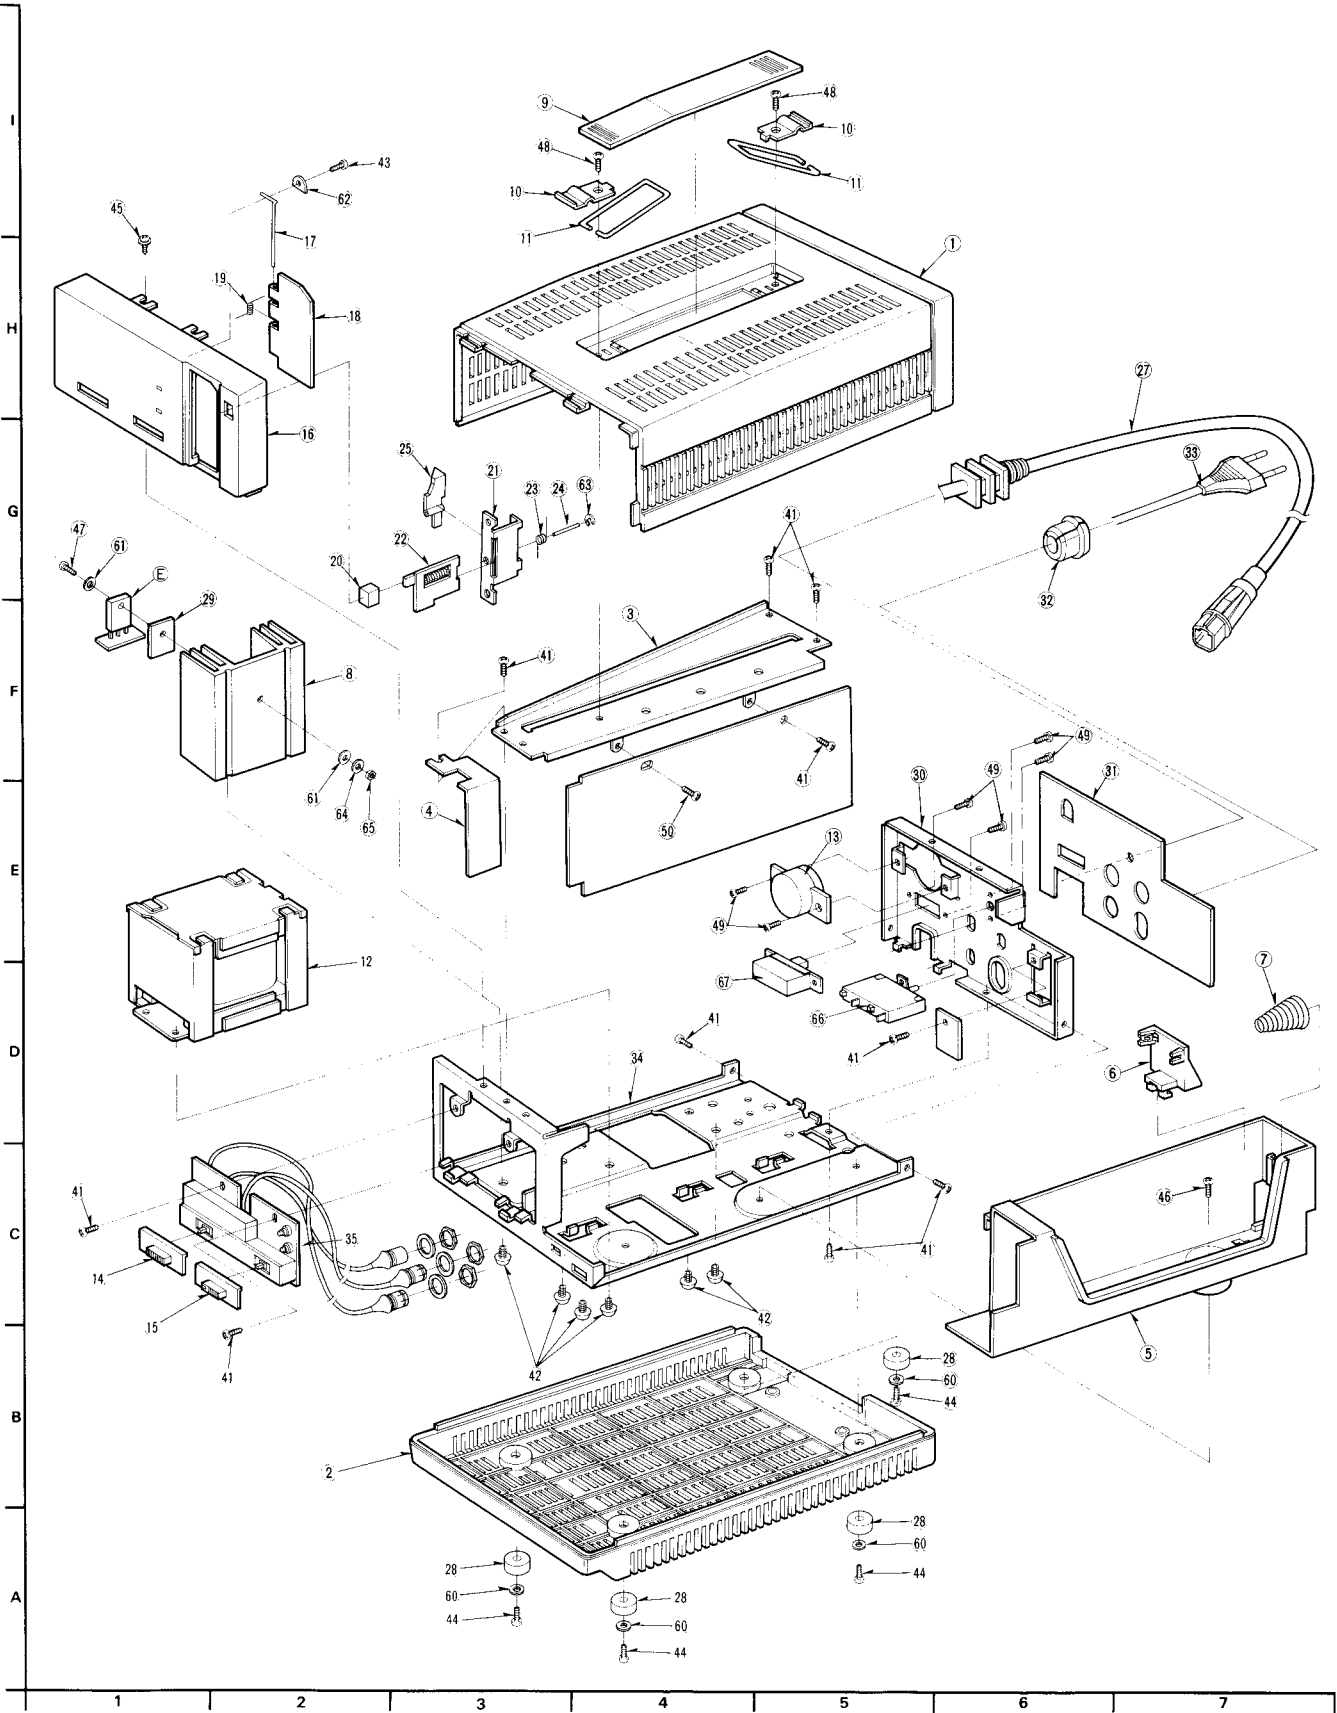

② Packing Parts & Accessories Section

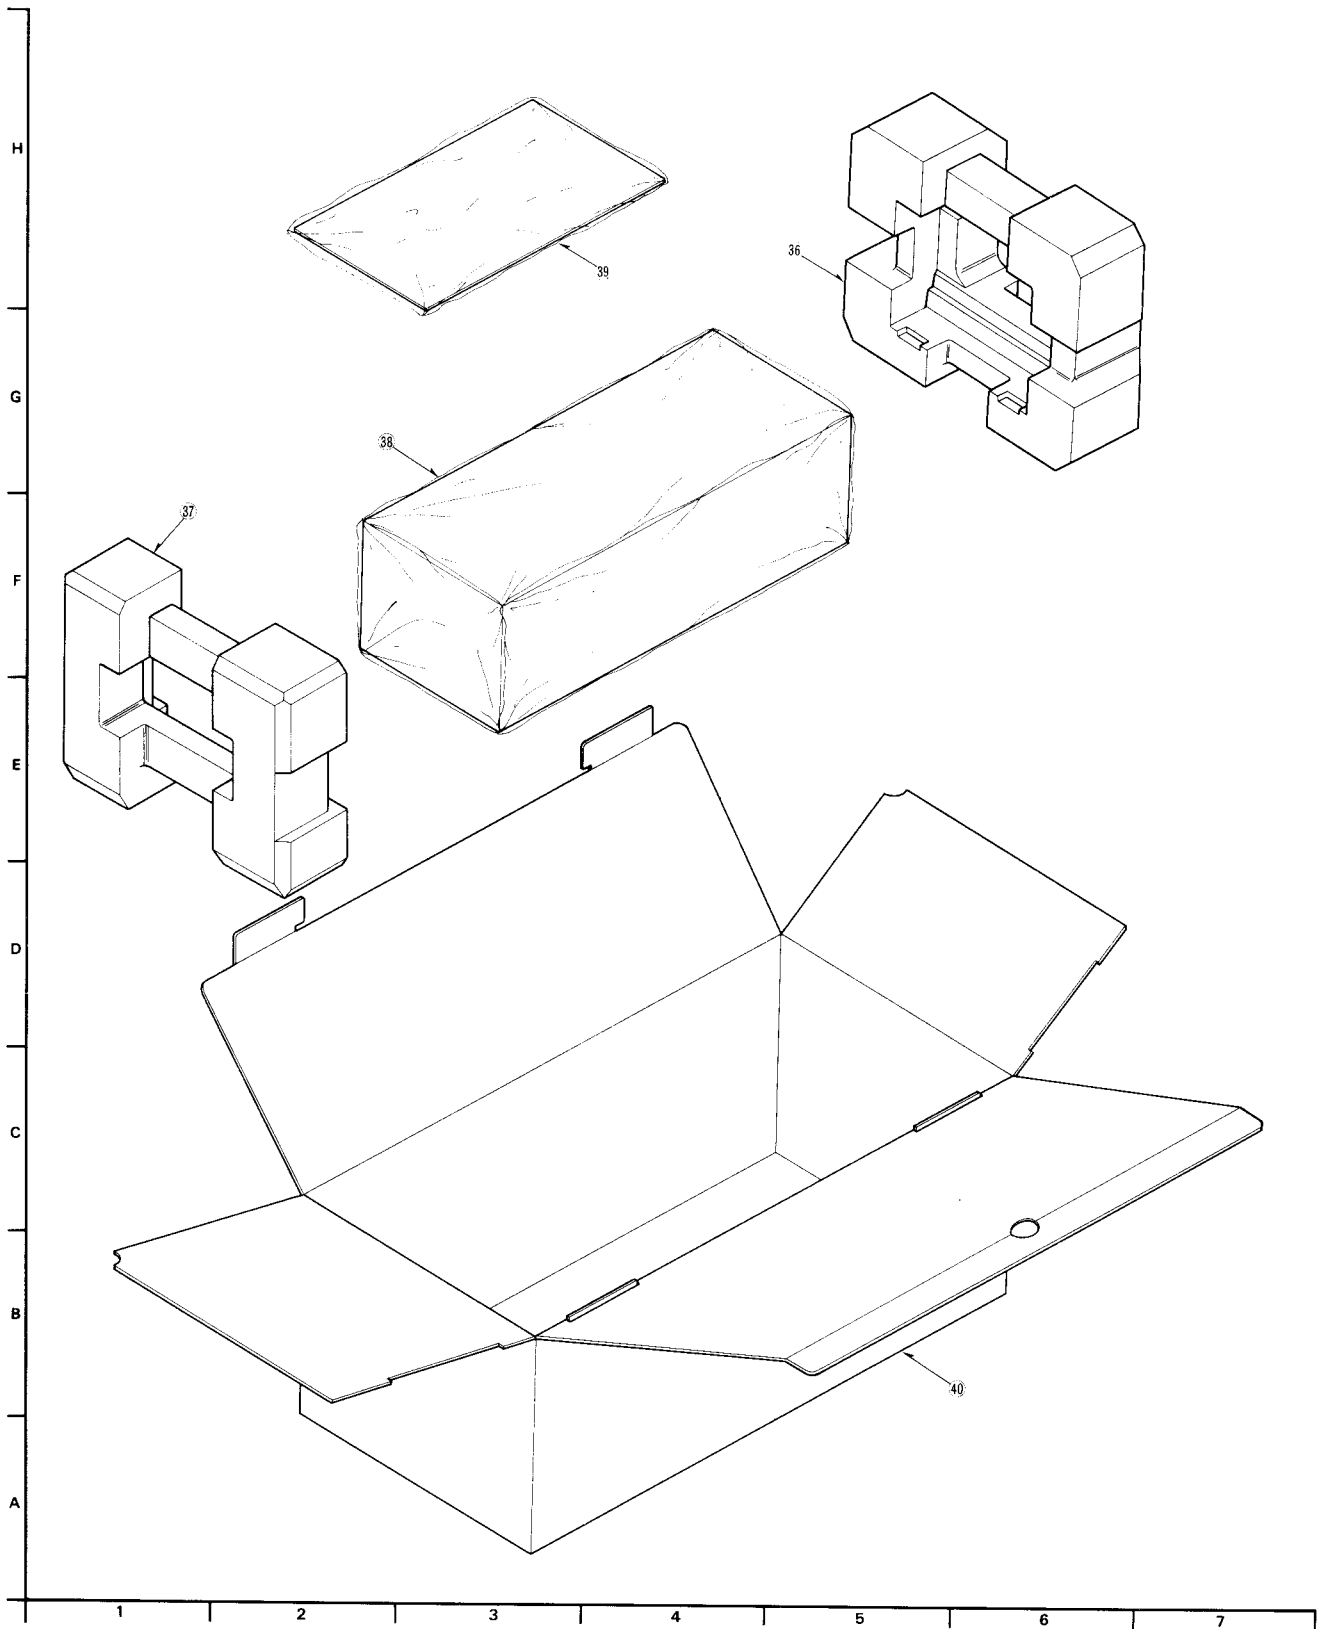


MECHANICAL  
Model No. NV-B11  
Notes:  
1. \* Be sure to make your ord

| Ref. No. | Part N   |
|----------|----------|
| 1 (1)    | VGP0523  |
| 2 (1)    | VKU0170  |
| 3 (1)    | VMA5777  |
| 4 (1)    | VHZ0315  |
| 5 (1)    | VKM0125  |
| 6 (1)    | VJF0106  |
| 7 (1)    | VMB0969  |
| 8 (1)    | VSC0684  |
| 9 (1)    | VKH0069  |
| 10 (1)   | VMA5776  |
| 11 (1)   | VMA5775  |
| 12 (1)   | VTF0076  |
| 13 (1)   | ESB376   |
| 14 (1)   | VCT0244  |
| 15 (1)   | VGT0271  |
| 16 (1)   | VGP0716  |
| 17 (1)   | VMS2149  |
| 18 (1)   | VKF0115  |
| 19 (1)   | VMB0981  |
| 20 (1)   | VGU0319  |
| 21 (1)   | VMA5790  |
| 22 (1)   | VMB0099  |
| 23 (1)   | VMB0990  |
| 24 (1)   | VMS2150  |
| 25 (1)   | VML1360  |
| 27 (1)   | VJA0175  |
| 28 (1)   | VKA0023  |
| 29 (1)   | S-34     |
| 30 (1)   | VMA6023  |
| 31 (1)   | VGN1956  |
| 32 (1)   | VJF0017  |
| 33 (1)   | VJA0111  |
| 34 (1)   | VJA0112  |
| 35 (1)   | VMA0214  |
| 36 (2)   | VPR0728  |
| 37 (2)   | VPR0727  |
| 38 (2)   | VPR0165  |
| 39 (2)   | VQF0847  |
| 40 (2)   | VPG1148  |
|          | VPG1149  |
| 41 (1)   | XTV3+6FS |
| 42 (1)   | XTT4+6FS |
| 43 (1)   | XTV3+6J  |
| 44 (1)   | XSB3+10F |
| 45 (1)   | XTW3+6L  |
| 46 (1)   | XTV3+8FS |
| 47 (1)   | XSN3+14F |
| 48 (1)   | XSB4+8FC |
| 49 (1)   | XYN3+P8S |
| 50 (1)   | XTW3+6M  |
|          | XSB3+6FZ |
| 60 (1)   | XWG3E10F |
| 61 (1)   | XWG3FC   |
| 62 (1)   | XWT3     |



② Packing Parts & Accessories Section

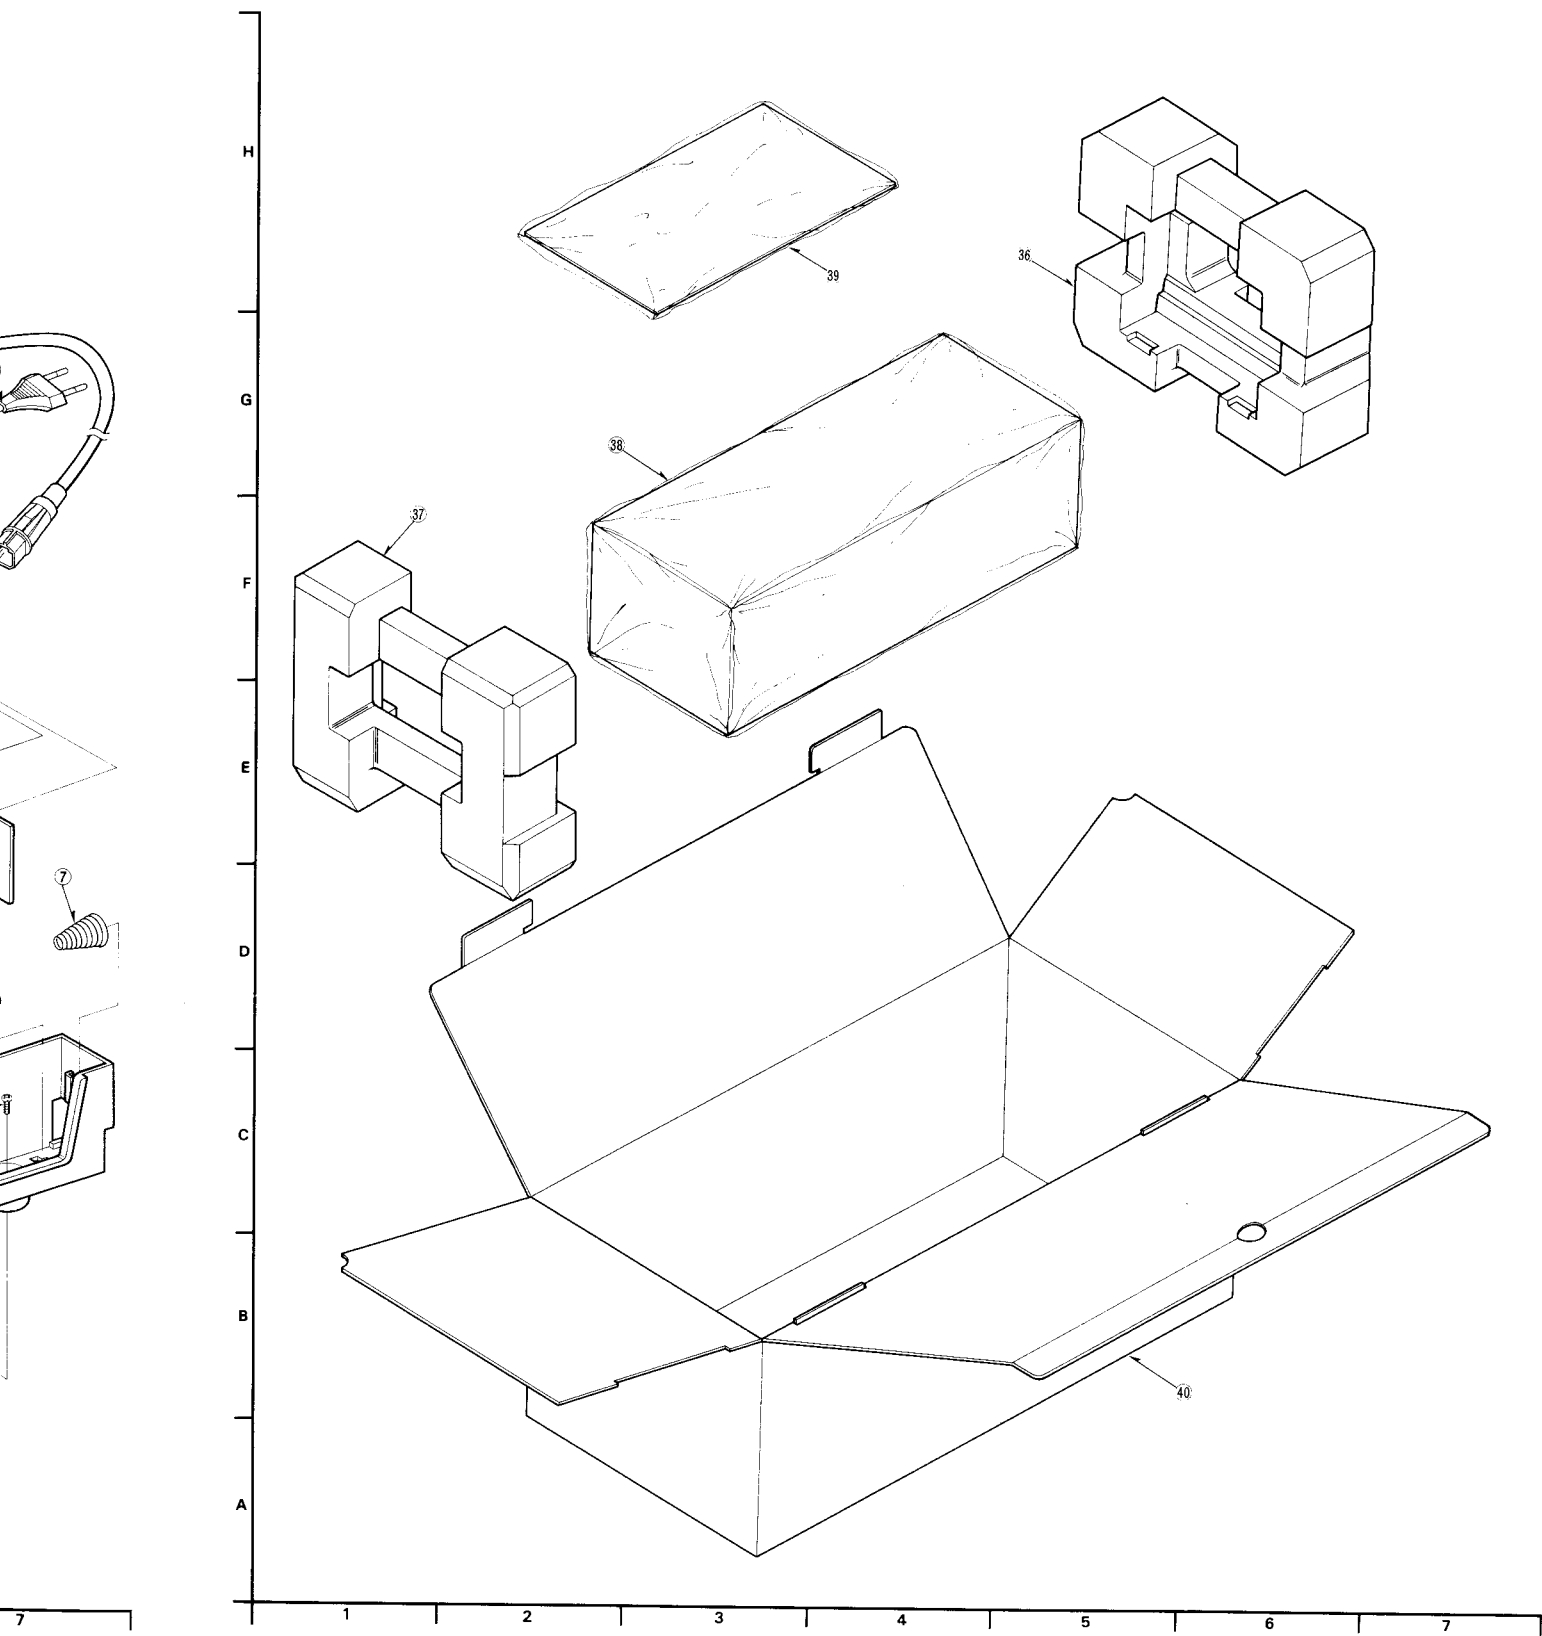

MECHANICAL REPLACEMENT PARTS LIST  
Model No. NV-B11

Notes:  
1. • Be sure to make your orders of replacement parts according to this list.



| Ref. No. | Part No.   | Part Name & Description   | Pcs / Set | Remarks   |
|----------|------------|---------------------------|-----------|-----------|
| 1 (1)    | VGP0523    | Top Panel                 | 1         |           |
| 2 (1)    | VKU0170    | Bottom Panel              | 1         |           |
| 3 (1)    | VMA5777    | Handle Angle              | 1         |           |
| 4 (1)    | VMZ0315    | Barrier                   | 1         | NV-B11E ⚠ |
| 5 (1)    | VKM0125    | Battery Case              | 1         |           |
| 6 (1)    | VJF0106    | Battery Catcher           | 1         |           |
| 7 (1)    | VMB0969    | Battery Push Spring       | 1         |           |
| 8 (1)    | VSC0684    | Heat Sink Plate           | 1         |           |
| 9 (1)    | VKH0069    | Handle                    | 1         |           |
| 10 (1)   | VMA5776    | Handle Mount Angle (B)    | 2         |           |
| 11 (1)   | VMA5775    | Handle Mount Angle (A)    | 2         |           |
| 12 (1)   | VTP0076    | Power Transformer         | 1         | ⚠         |
| 13 (1)   | ESE376     | Voltage Selector          | 1         | ⚠         |
| 14 (1)   | VGT0244    | TV/VTR Select Switch Knob | 1         |           |
| 15 (1)   | VGT0271    | Power Switch Knob         | 1         |           |
| 16 (1)   | VGP0716    | Front Panel               | 1         |           |
| 17 (1)   | VMS2149    | Battery Door Shaft        | 1         |           |
| 18 (1)   | VKF0115    | Battery Door              | 1         |           |
| 19 (1)   | VMB0981    | Battery Door Spring       | 1         |           |
| 20 (1)   | VGU0319    | Eject Button              | 1         |           |
| 21 (1)   | VMA5790    | Eject Angle               | 1         |           |
| 22 (1)   | VMM0099    | Eject Rod                 | 1         |           |
| 23 (1)   | VMB0990    | Eject Return Spring       | 1         |           |
| 24 (1)   | VMS2150    | Lock Lever Shaft          | 1         |           |
| 25 (1)   | VML1360    | Lock Lever                | 1         |           |
| 27 (1)   | VJA0175    | Multi Connector           | 1         |           |
| 28 (1)   | VKA0023    | Rubber Foot               | 4         |           |
| 29 (1)   | S-34       | Mica Seat                 | 1         |           |
| 30 (1)   | VMA6023    | Rear Frame                | 1         |           |
| 31 (1)   | VGN1956    | Rear Decoration           | 1         |           |
| 32 (1)   | VJF0017    | AC Cord Bushing           | 1         | ⚠         |
| 33 (1)   | VJA0111    | AC Cord                   | 1         | NV-B11E ⚠ |
|          | VJA0112    | AC Cord                   | 1         | NV-B11B ⚠ |
| 34 (1)   | VMK0214    | Chassis Frame             | 1         |           |
| 35 (1)   | ESE35102   | Front Switch Unit         | 1         | ⚠         |
| 36 (2)   | VPN0728    | Cushion (Rear)            | 1         |           |
| 37 (2)   | VPN0727    | Cushion (Front)           | 1         |           |
| 38 (2)   | VPP0165    | Polyethylene Bag          | 1         |           |
| 39 (2)   | VQP0847    | Fan Bag                   | 1         | NV-B11E ⚠ |
|          | VQP0848    | Fan Bag                   | 1         | NV-B11B ⚠ |
| 40 (2)   | VPG1148    | Packing Case              | 1         | NV-B11E   |
|          | VPG1149    | Packing Case              | 1         | NV-B11B   |
|          |            | Screws                    |           |           |
| 41 (1)   | XTV3+6FS   |                           | 10        |           |
| 42 (1)   | XTT4+6FS   |                           | 7         |           |
| 43 (1)   | XTV3+6J    |                           | 3         |           |
| 44 (1)   | XSB3+10FZS |                           | 4         |           |
| 45 (1)   | XTW3+6L    |                           | 1         |           |
| 46 (1)   | XTV3+8FS   |                           | 1         |           |
| 47 (1)   | XSN3+14FCS |                           | 1         |           |
| 48 (1)   | XSB4+8FCS  |                           | 2         |           |
| 49 (1)   | XYN3+F8S   | with spring washer        | 2         |           |
| 50 (1)   | XTW3+6M    |                           | 1         |           |
|          | XSB3+6FZS  |                           | 4         |           |
|          |            | Washers                   |           |           |
| 60 (1)   | XWC3E10FX  |                           | 4         |           |
| 61 (1)   | XWG3FC     |                           | 2         |           |
| 62 (1)   | XWT3       |                           | 1         |           |

| Ref. No. | Part No. | Part Name & Description    | Pcs / Set | Remarks   |
|----------|----------|----------------------------|-----------|-----------|
| 63 (1)   | XUC2FTK  | Retaining Ring (E-Type)    | 1         |           |
| 64 (1)   | NO 70    |                            | 1         |           |
| 65 (1)   | NO 50    |                            | 1         |           |
| 66 (1)   | VSQ0108  | Circuit Breaker            |           | ⚠         |
|          | YEK10869 | Circuit Breaker Housing    |           |           |
| 67 (1)   | ESD3964S | All Off Switch             |           | ⚠         |
|          | VMB0425  | Leaf Lever Spring          |           |           |
|          | VMX0472  | Knob Spacer                |           |           |
|          | VGN1944  | Rated Label                |           | NV-B11E ⚠ |
|          | VGN1943  | Rated Label                |           | NV-B11B ⚠ |
|          | VPF3     | Polyethylene Bag (AC Cord) | 2         |           |
|          | VHN0011  | Plastic Revet              | 4         |           |

# ELECTRICAL REPLACEMENT PARTS LIST

Model No. NV-B11

## Notes:

- Be sure to make your orders of replacement parts according to this list.
- IMPORTANT SAFETY NOTICE  
Components identified by  $\Delta$  have special characteristics important for safety. When replacing any of these components, use only the original ones.
- Unless otherwise specified,  
All resistors are in OHMS ( $\Omega$ ), 1/8W  $\pm$  5% carbon. K=1,000 $\Omega$ , M=1,000K $\Omega$ .  
All capacitors are in MICROFARADS ( $\mu$ F),  $\pm$  10% P= $\mu$ F.

| Ref. No.  | Part No.     | Part Name & Description       | Pcs / Set | Remarks              |
|-----------|--------------|-------------------------------|-----------|----------------------|
|           | VEP2040A     | Main Power Supply P.C.B. Unit | 1         | NV-B11E              |
|           | VEP2040B     |                               | 1         | NV-B11B              |
|           | VEP00863B    | Power TR. P.C.B. Unit         | 1         |                      |
|           | VEP00864A    | Sub-Thermistor P.C.B. Unit    | 1         |                      |
|           |              | Integrated Circuits           |           |                      |
| IC101     | $\mu$ PC305C |                               | 1         | or $\mu$ PC141C      |
| IC102     | AN6562       |                               | 1         | or $\mu$ PC358C      |
| IC103     | AN6552       |                               | 1         | or $\mu$ PC4558C     |
| IC104     | VCR0054      |                               | 1         |                      |
|           |              | Transistors                   |           |                      |
| Q102      | 2SB744       |                               | 1         | (P,Q) or 2SB761(P,Q) |
| Q103-108  | 2SC1685      |                               | 6         | (P,Q) or 2SC945(P,Q) |
|           |              | Diodes                        |           |                      |
| D101      | S5VB10       | Rectifier Stack               | 1         | or R8602 $\Delta$    |
| D102-105  | MA150        |                               | 4         |                      |
| D106      | MA1150       | Zenner                        | 1         |                      |
| D107      | OA95         |                               | 1         |                      |
| D108      | MA1150       | Zenner                        | 1         |                      |
| D109-D111 | MA150        |                               | 3         |                      |
| D113      | MA150        |                               | 1         |                      |
| D114      | MA27W        |                               | 1         |                      |
| D115,116  | MA150        |                               | 2         |                      |
| D117      | OA95         |                               | 1         |                      |
| D118      | MA150        |                               | 1         |                      |
| D120      | ERC81-004    | Schottky                      | 1         |                      |
| D121      | MA150        |                               | 1         |                      |
|           |              | Resistors                     |           |                      |
| R101      | ERD25TJ121   | 120                           | 1         |                      |
| R102      | ERD25TJ221   | 220                           | 1         |                      |
| R103      | ERD25TJ152   | 1.5K                          | 1         |                      |
| R104      | ERD25TJ563   | 56K                           | 1         |                      |
| R105      | ERD25TJ123   | 12K                           | 1         |                      |
| R106      | ERD25TJ153   | 15K                           | 1         |                      |
| R107      | ERD25TJ152   | 1.5K                          | 1         |                      |
| R109      | ERD25TJ561   | 560                           | 1         |                      |
| R110      | ERD25TJ563   | 56K                           | 1         |                      |
| R111      | ERD25TJ104   | 100K                          | 1         |                      |
| R112      | ERD25TJ223   | 22K                           | 1         |                      |
| R114      | ERD25TJ332   | 3.3K                          | 1         |                      |
| R115      | ERD25TJ154   | 150K                          | 1         |                      |
| R116      | EVN50AA00B24 | Variable                      | 20K       | 1                    |
| R117      | ERD25TJ333   | 33K                           | 1         |                      |
| R118      | ERD25TJ684   | 680K                          | 1         |                      |
| R119      | ERD25TJ272   | 2.7K                          | 1         |                      |
| R120      | EVN50AA00B53 | Variable                      | 5K        | 1                    |
| R121      | ERD25TJ561   | 560                           | 1         |                      |
| R122      | ERD25TJ222   | 2.2K                          | 1         |                      |
| R123,124  | ERD25TJ333   | 33K                           | 2         |                      |
| R125      | ERD25TJ682   | 6.8K                          | 1         |                      |
| R126      | ERF3AKR56    | Cement 3W                     | 500K      | 1                    |
| R127      | ERD25TJ223   | 22K                           | 1         |                      |
| R128      | ERD25TJ222   | 2.2K                          | 1         |                      |
| R129      | ERD25TJ223   | 22K                           | 1         |                      |
| R130      | ERD25TJ563   | 56K                           | 1         |                      |

| Ref. No.  | Part No.     | Part Name & Description | Pcs / Set | Remarks          |
|-----------|--------------|-------------------------|-----------|------------------|
| R131,132  | ERD25TJ223   | 22K                     | 2         |                  |
| R133      | ERD25JT104   | 100K                    | 1         |                  |
| R134      | ERD25TJ563   | 56K                     | 1         |                  |
| R135      | ERD25TJ682   | 6.8K                    | 1         |                  |
| R136      | ERX2ANJR33   | Metal Oxide 2W          | 0.33      | 1                |
| R137      | ERC12ZGK275  | Solid 1/2W              | 270K      | 1                |
| R138      | ERD25TJ152   | 1.5K                    | 1         |                  |
|           |              | Capacitors              |           |                  |
| C101      | ECQM1H683KZ  | Mylar 50V               | 0.068     | 1                |
| C102      | ECEA35R472   | Electrolytic 35V        | 4700      | 1                |
| C103      | ECKFIH101KC  | Ceramic 50V             | 100P      | 1                |
| C104      | ECEA1HSK47   | Electrolytic 50V        | 0.47      | 1                |
| C105      | ECEA1ES4R7   | Electrolytic 25V        | 4.7       | 1                |
| C106      | ECKFIH102KB  | Ceramic 50V             | 1000P     | 1                |
| C107      | ECEA1HS010   | Electrolytic 50V        | 1         | 1                |
| C108      | ECQM1H393KZ  | Mylar 50V               | 0.039     | 1                |
| C109      | ECEA1CS470   | Electrolytic 16V        | 47        | 1                |
| C110      | ECEA16V102   | Electrolytic 16V        | 1000      | 1                |
| C111      | ECEA1CS330   | Electrolytic 16V        | 33        | 1                |
| C112      | ECEA1EN4R7   | Non-Polar 25V           | 4.7       | 1                |
| C113      | ECEA1ES101   | Electrolytic 25V        | 100       | 1                |
| C114      | ECEA1HS010   | Electrolytic 50V        | 1         | 1                |
| C115      | ECEA1ES470   | Electrolytic 25V        | 47        | 1                |
| C116      | ECEA1CS100   | Electrolytic 16V        | 10        | 1                |
| C117      | ECKFIH103ZF  | Ceramic 50V             | 0.01      | 1                |
| C118      | ECEA1ES100   | Electrolytic 25V        | 10        | 1                |
|           |              | Fuses                   |           |                  |
| F101      | XBA2C10TROG  | T1A/250V                | 1         | $\Delta$         |
| F102      | XBA2C50TROG  | T5A/250V                | 1         | $\Delta$         |
| F103      | XBA2C063TROG | T63mA/250V              | 1         | $\Delta$         |
|           |              | Connectors              |           |                  |
| P101      | VJP1141      | 2P                      | 1         |                  |
| P102      | VJP1142      | 3P                      | 1         |                  |
| P103      | VJP1141      | 2P                      | 1         |                  |
| P104      | VJP1143      | 5P                      | 1         |                  |
|           |              | Miscellaneous           |           |                  |
| RY101     | VY105-1      |                         | 1         |                  |
| TP101-104 | VJH23        |                         | 4         |                  |
| TP GND    | VJH23        |                         | 1         |                  |
|           | VM20429      | Fuse Cover              |           | NV-B11B $\Delta$ |
|           | XYE3+EP6F    |                         | 1         |                  |

**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

Wired Remote Control

**Vol. 7****NV-A13-E**

## SPECIFICATIONS

|               |                           |
|---------------|---------------------------|
| Weight:       | 180 g                     |
| Dimensions:   | 62(W) × 14(H) × 101(D) mm |
| Cable Length: | Approx. 5 m               |

Weight and dimensions shown are approximate.

Specifications are subject to change without notice.

**Panasonic**

**Matsushita Electric Trading Co., Ltd.**  
P.O. Box 288, Central Osaka Japan

# REMOTE CONTROL UNIT


The Control Unit NV-A13 is provided with the Portable Video Recorder NV-100, allowing you to operate the recorder from as far away as 5 meters. Simply plug the control unit cable connector into the remote control terminal on the recorder. Make sure that the power switch on both the power source and recorder are ON before operating the remote control unit.


## CONTENTS

|                                             |       |
|---------------------------------------------|-------|
| SPECIFICATIONS.....                         | Cover |
| REMOTE CONTROL UNIT.....                    | 7-1   |
| CONTROLS AND THEIR FUNCTION.....            | 7-2   |
| BLOCK DIAGRAM.....                          | 7-2   |
| WIRED REMOTE CONTROL SCHEMATIC DIAGRAM..... | 7-3   |
| WIRED REMOTE CONTROL UNIT.....              | 7-4   |
| EXPLODED VIEW.....                          | 7-5   |
| 1.Wired Remote Control Section.....         | 7-5   |
| 2.Packing Parts Section.....                | 7-5   |
| MECHANICAL REPLACEMENT PARTS LIST.....      | 7-6   |
| ELECTRICAL REPLACEMENT PARTS LIST.....      | 7-6   |

CONTROLS AND THEIR FUNCTION

Align the groove and insert

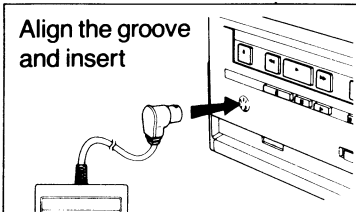

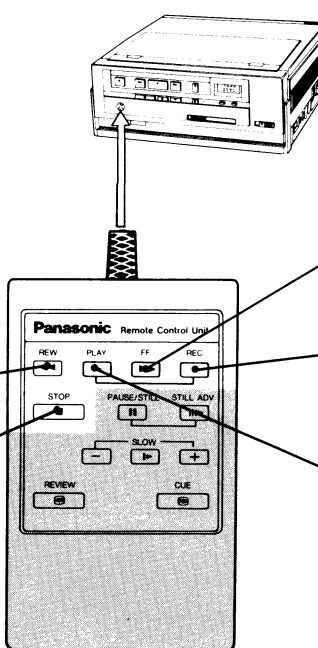


**Fast Forward Button**  
Press this button to move the tape forward rapidly.

**Record Button**  
Recording is started by pressing this button and the Play Button at the same time.

**Play Button**  
Press this button to playback recorded tapes.

**Rewind Button**  
Press this button to rewind tapes.

**Stop Button**  
Press this button to stop the tape.

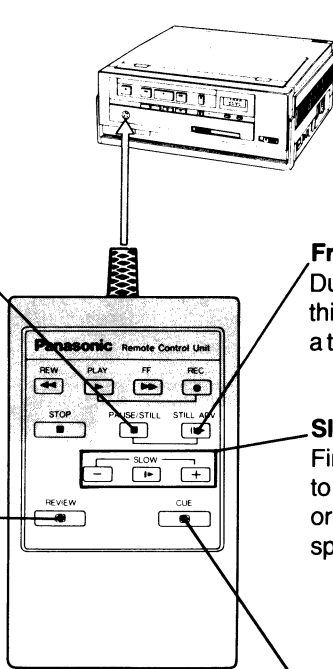

**Pause/Still Button**  
Press this button to temporarily stop the tape movement in either the recording or playback mode. During playback, a still-frame picture is produced when the pause is in use. Press again to release pause.

**Frame Advance Button**  
During viewing of a still-frame picture, press this button to advance the picture one frame at a time or hold it down for a slow-motion picture.


**Slow-Motion Buttons**  
First press the SLOW Button during playback to view a slow-motion picture. Press the "+" or "-" button to increase or decrease the speed of the SLOW-MOTION picture.

**Review Button**  
During the play mode pressing this button will allow you to view the tape in reverse at about 5 times the recorded tape speed.

**Cue Button**  
During the play mode pressing this button will allow you to view the tape in the forward direction at about 5 times the recorded tape speed.

|                  |   |   |
|------------------|---|---|
| -                | ▶ | + |
| 1/25 ~ 1/5 ~ 1/3 |   |   |

WIRED REMOTE CONTROL BLOCK DIAGRAM

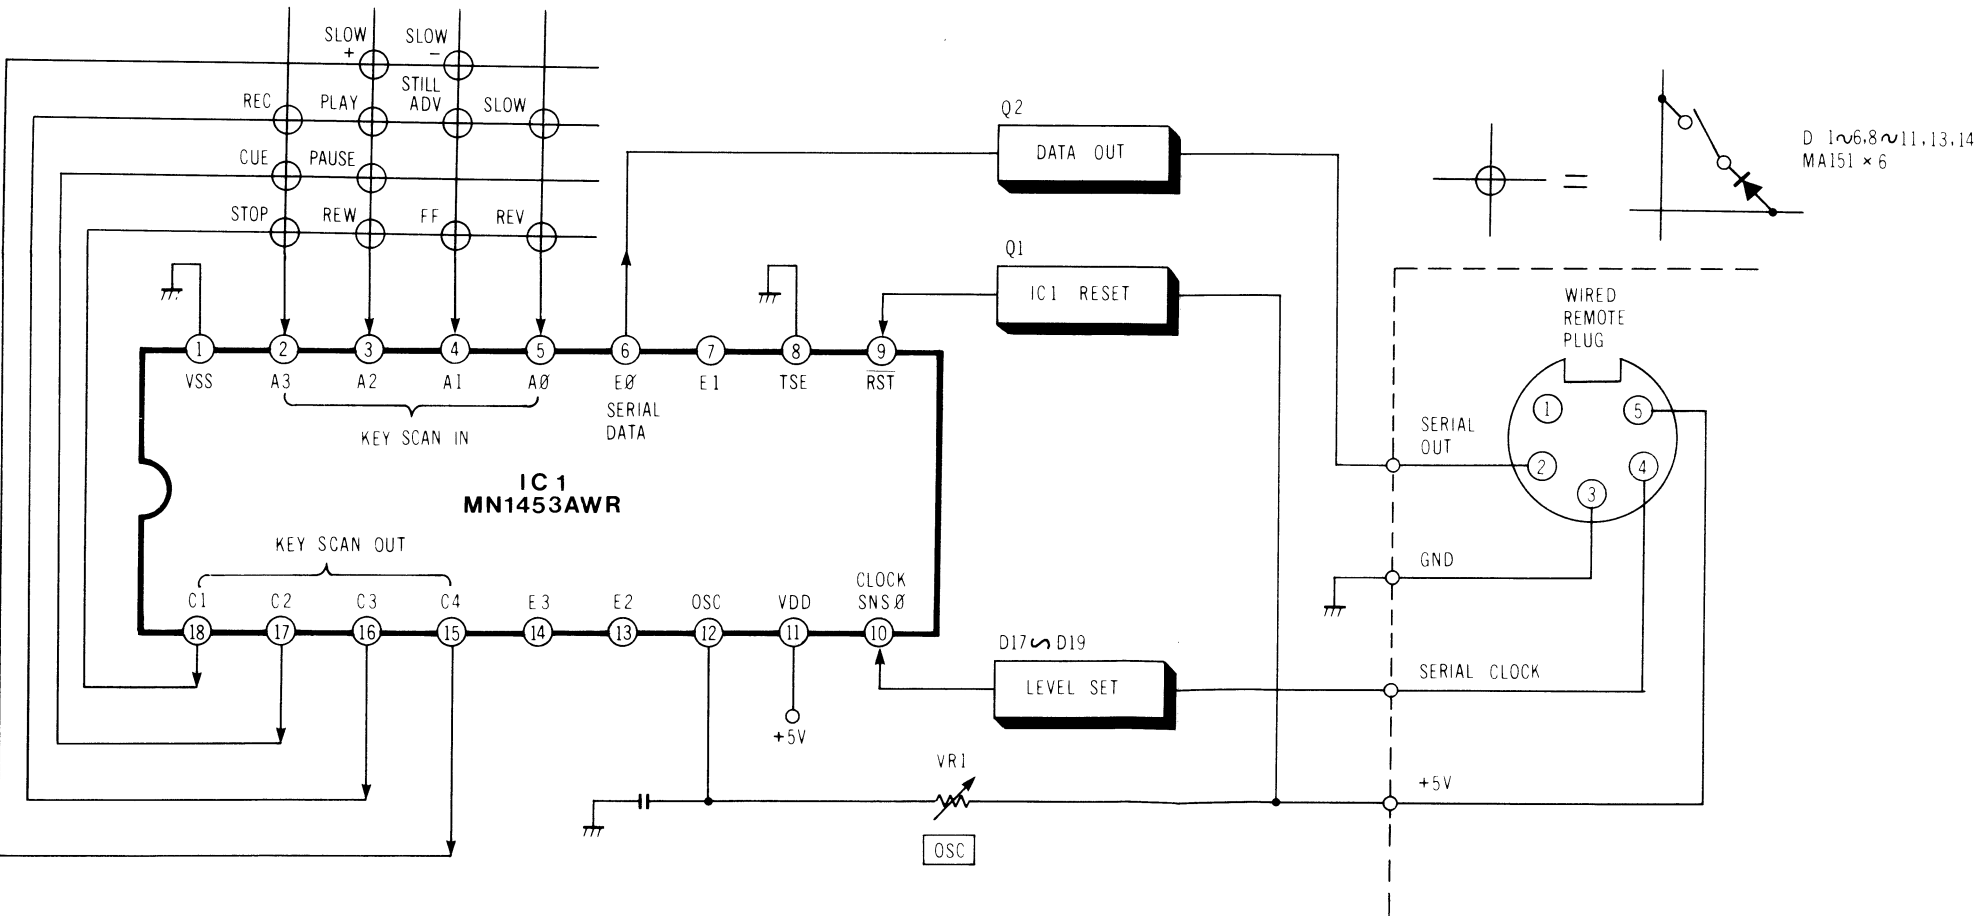


The diagram illustrates a VCR control system using the MN1453AWR microcontroller. The circuit is organized into four main sections:

- Section 1: Power and Oscillator**
  - Power supply: 16V47 capacitor (C1) connected to VDD.
  - Transistor Q1 (2SB710 or 2SB709) drives the oscillator.
  - Oscillator circuit: 5K variable resistor (VR1), 8.2K resistor (R4), and 39P capacitor (C3).
  - Other components: 100K resistor (R2), 5.6K resistor (R3), 50V2.2 capacitor (C2), and diode D16 (OA90G).
- Section 2: Microcontroller (IC1, MN1453AWR)**
  - Pins 1-18 are connected to various control lines and external components.
  - Control lines: A0-A13, C01-C04, E00-E03, RST, TST, SENS, VSS, TP.
  - Resistors: R5 (100K), R6 (100K), R7 (100K), R8 (100K x 4), R13 (680).
  - Capacitors: C2 (50V2.2), C4 (220P).
- Section 3: Output Driver**
  - Transistor Q2 (2SD602 or 2SD602(A.R or S)) drives the output.
  - Resistor R9 (15K) and capacitor C4 (220P) are connected to the base of Q2.
- Section 4: Output Stage**
  - Diodes D17, D18, D19, D20, and D21 (MA151) are connected to the output lines.
  - Resistors R10 (2.2K), R11 (10K), and R12 (10K) are connected to the output lines.
  - Output lines: S OUT, CLK, GND.


A legend at the top left defines the symbols for the microcontroller pins and the output lines.




# WIRED REMOTE CONTROL UNIT

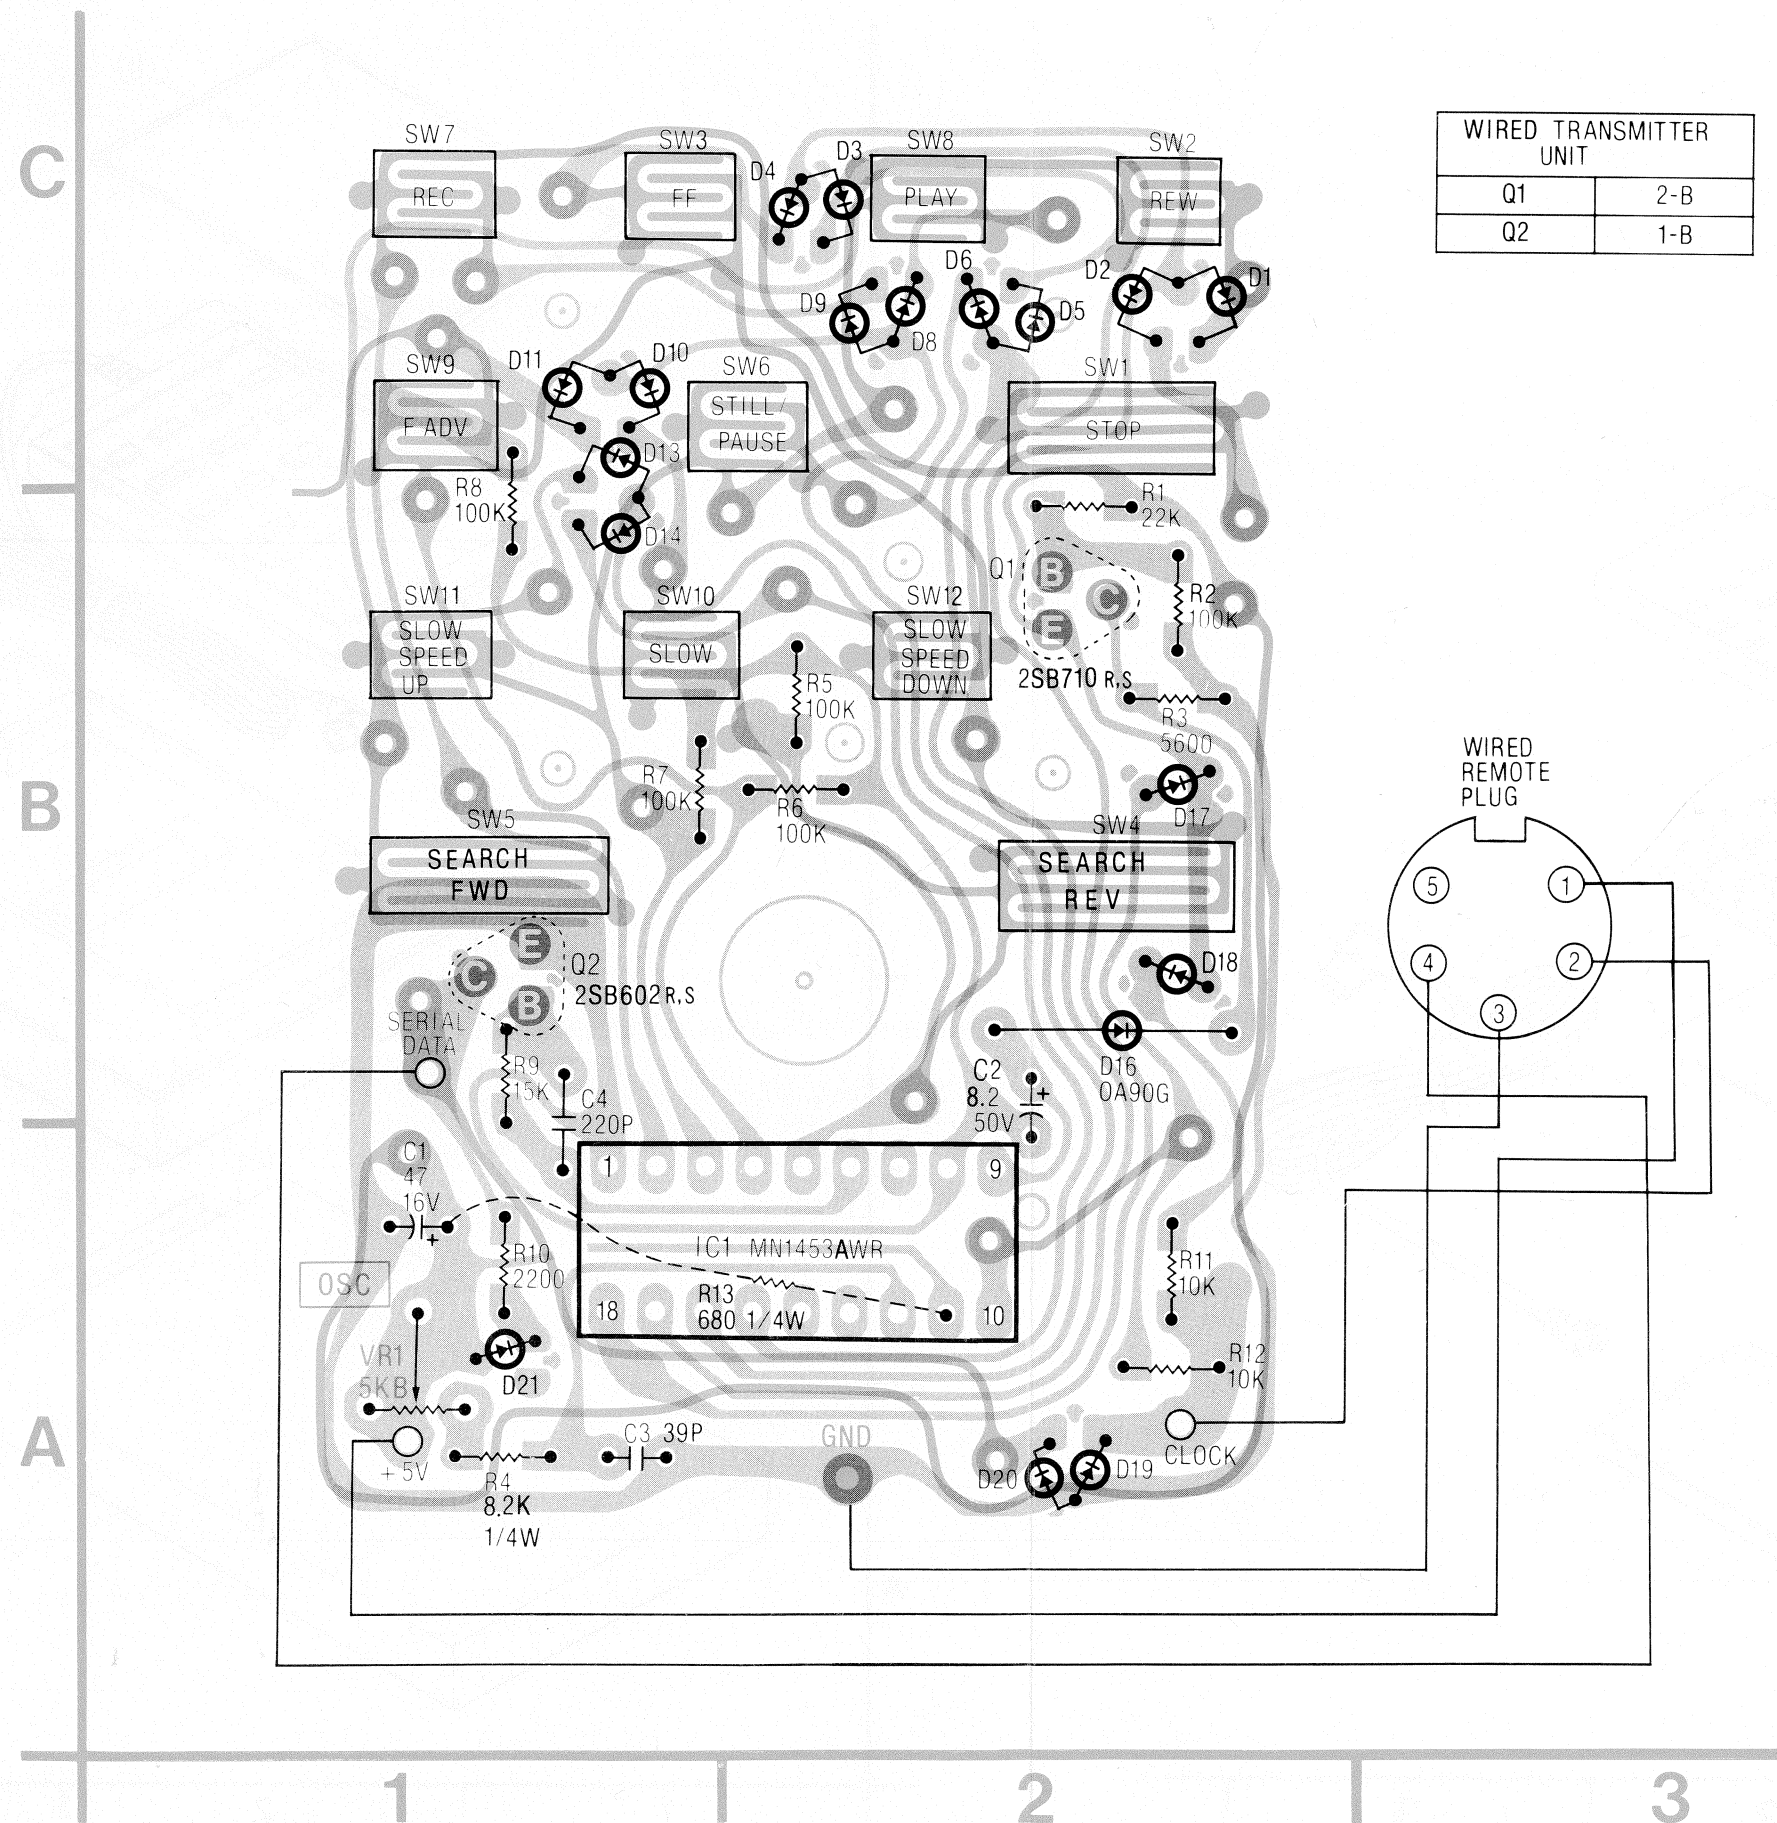

**EXPLODED VIEW ① *Wired Remote Control Section***

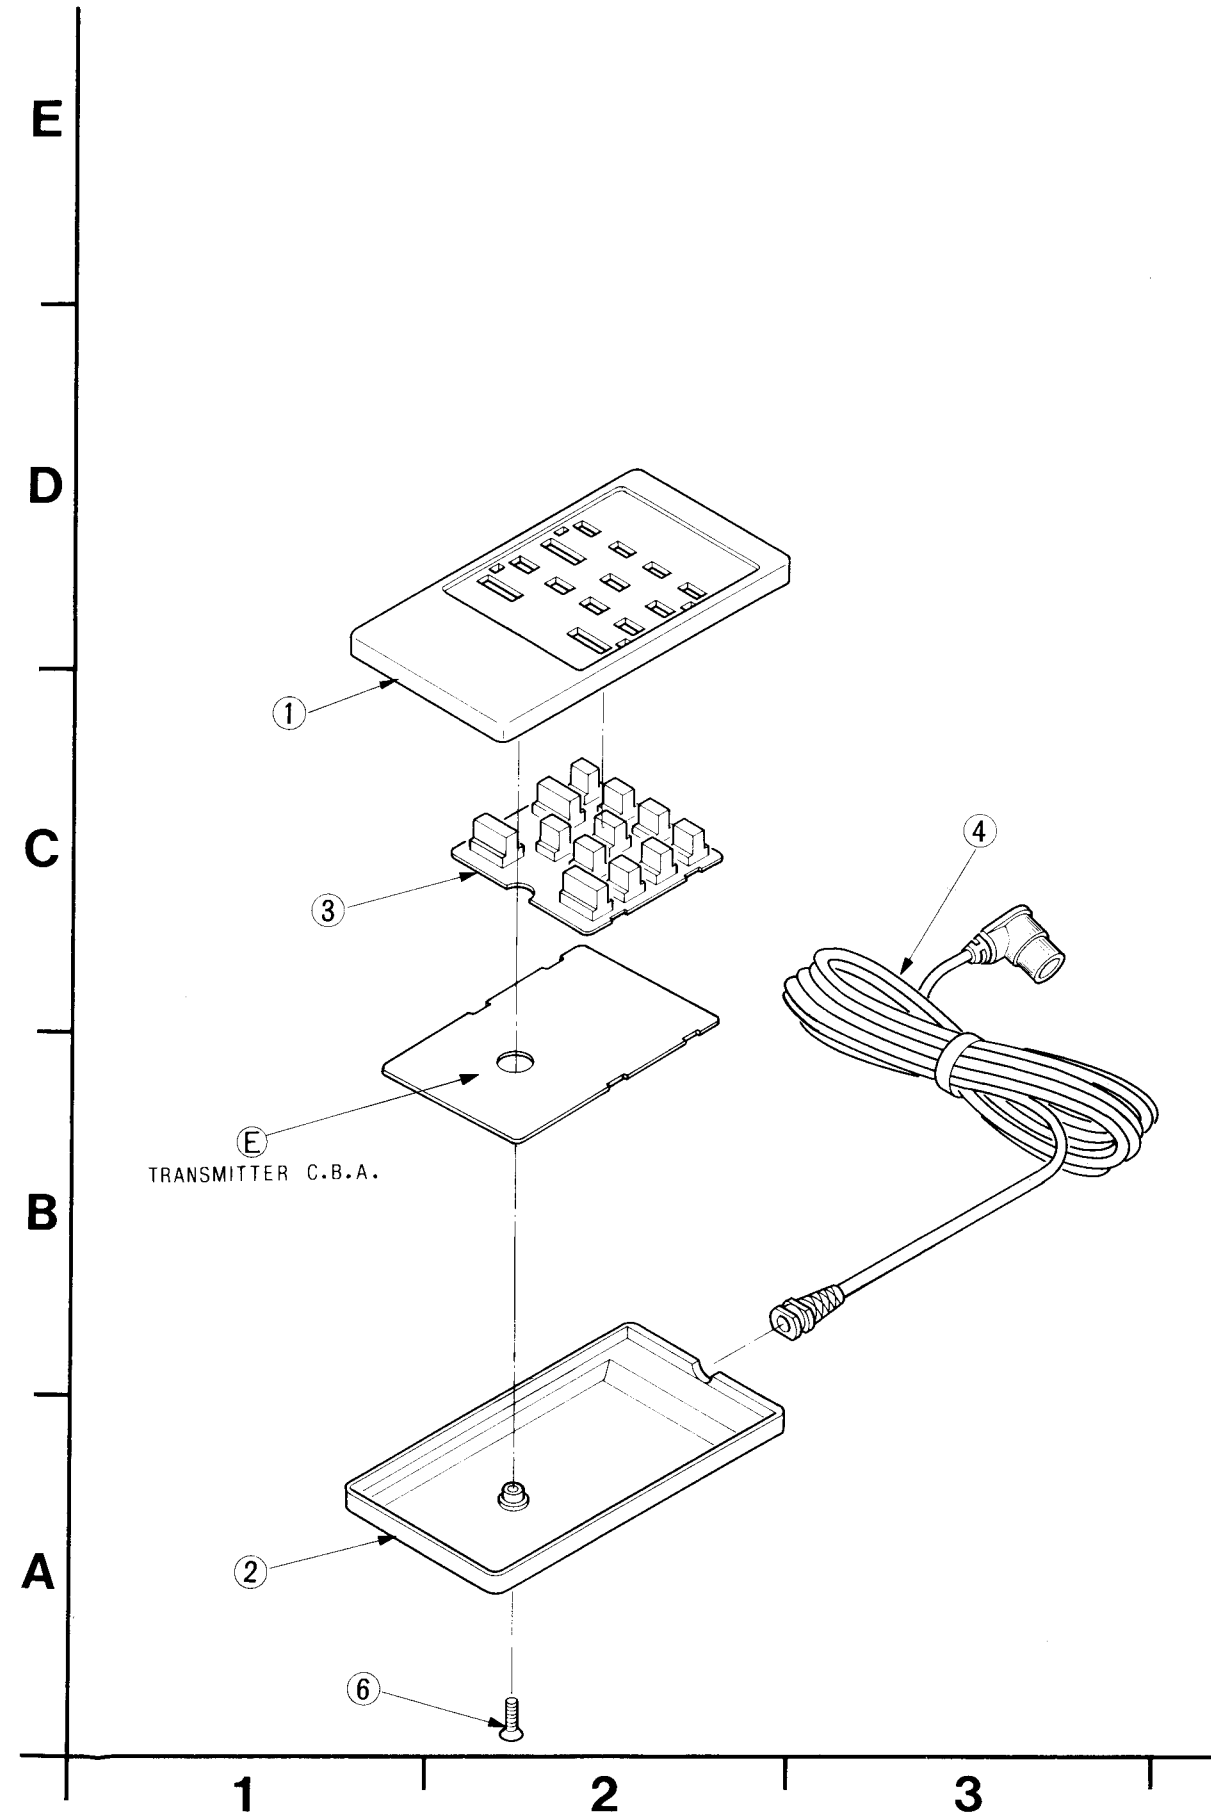

**② *Packing Parts Section***

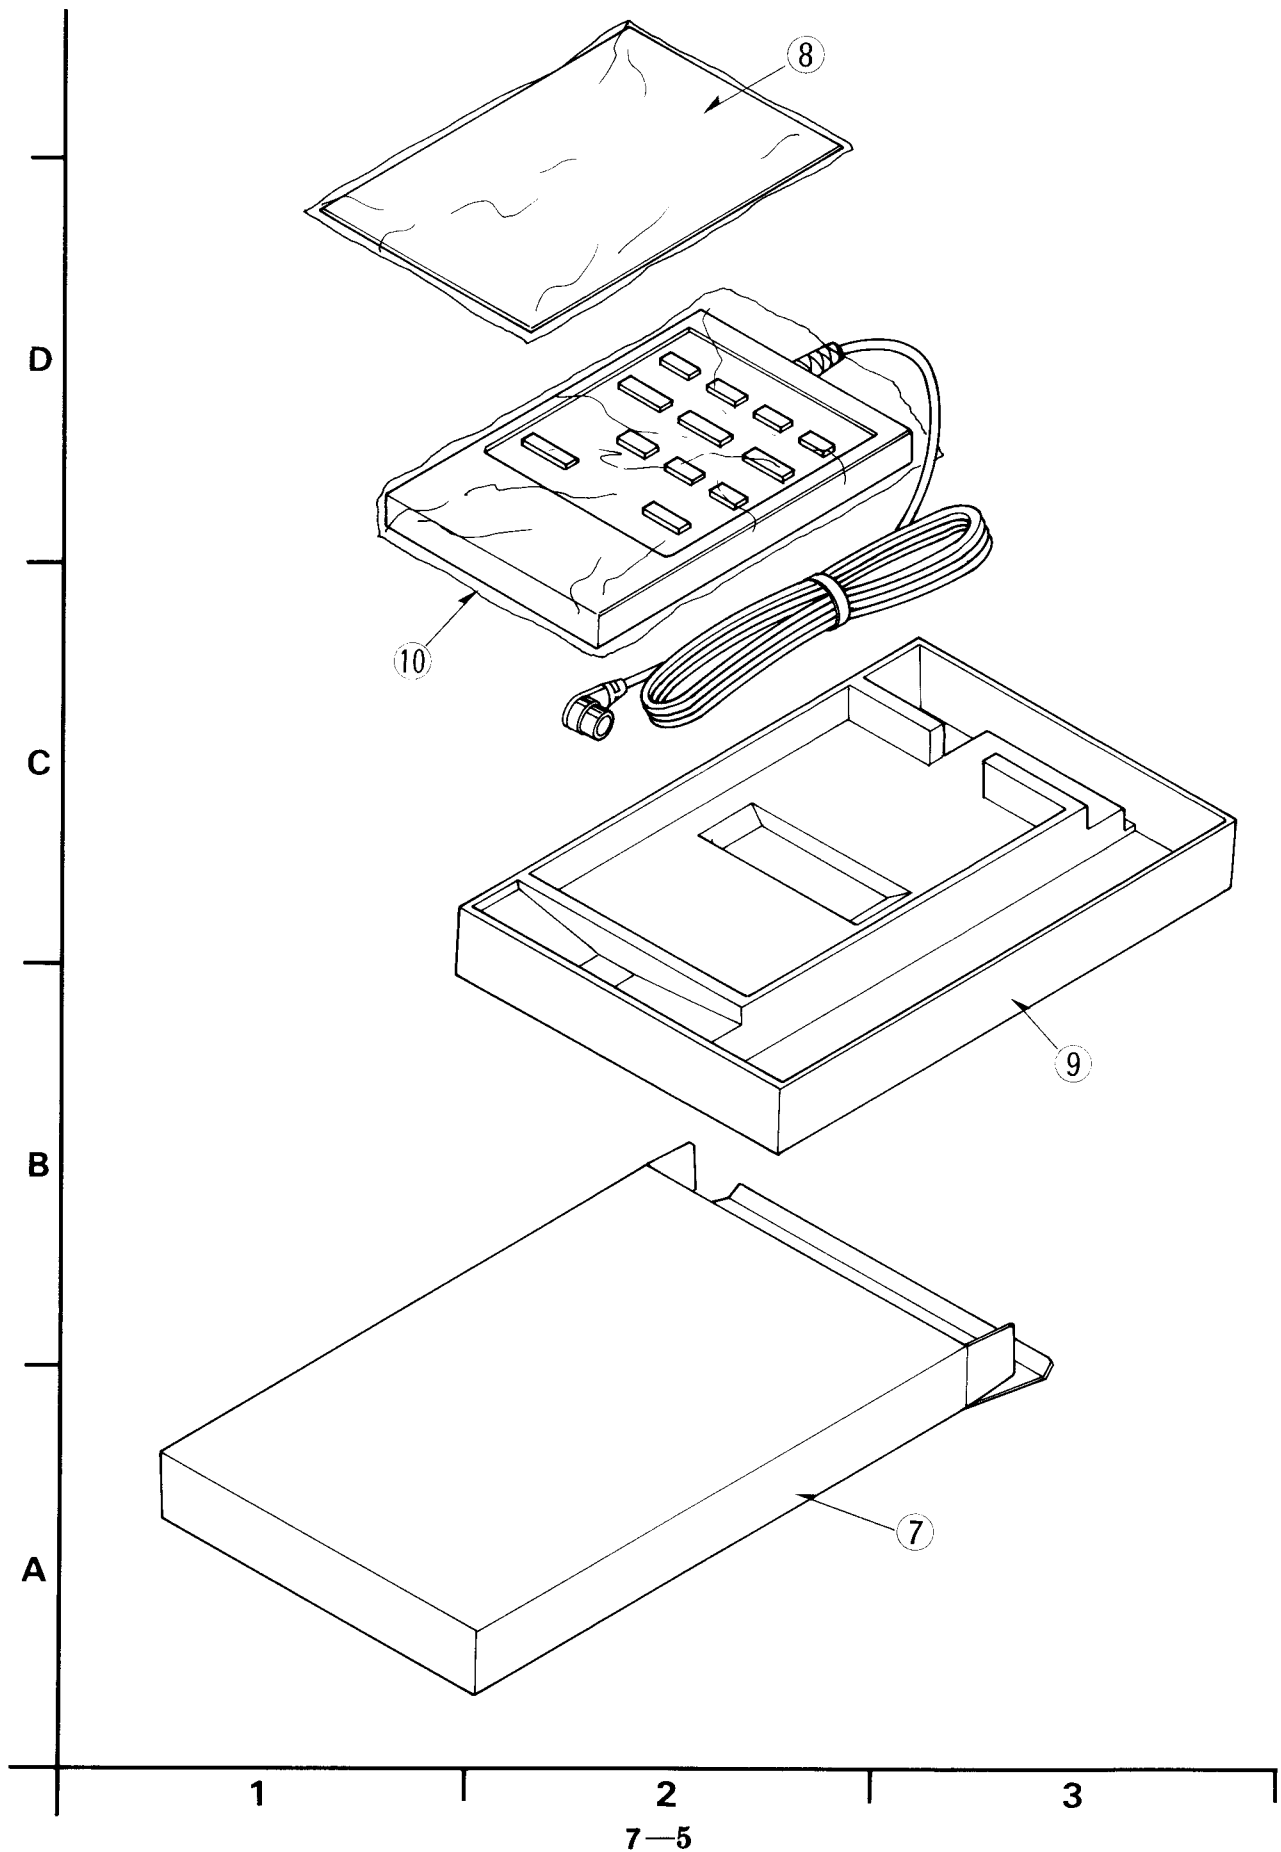

**Model No. NV-A13-E**

1. \* Be sure to make your orders of replacement parts according to this list.

[illegible]

## ELECTRICAL REPLACEMENT PARTS LIST

**Model No. NV-A13-E**

1. \* Be sure to make your orders of replacement parts according to this list.

**2. IMPORTANT SAFETY NOTICE**  
Components identified by **A** have special characteristics important for safety. When replacing any of these components, use only the original ones.

3. Unless otherwise specified,  
All resistors are in OHMS ( $\Omega$ ),  $1/8W \pm 5\%$  carbon.  $K=1,000\Omega$ ,  $M=1,000K\Omega$   
All capacitors are in MICROFARADS ( $\mu F$ ),  $\pm 10\%$   $P=\mu\mu F$ .

| Ref. No. | Part No.    | Part Name & Description    | Pcs / Set | Remarks |
|----------|-------------|----------------------------|-----------|---------|
|          |             | Transmitter P.C.B. Unit    | 1         |         |
| IC1      | MN1453AWR   | Integrated Circuit         | 1         |         |
| D16      | 0A90C       | Diode                      | 1         |         |
|          |             | Capacitors                 | 1         |         |
| C1       | ECEA1CK470  | Electrolytic 10V 47 $\mu$  | 1         |         |
| C2       | ECEA1HK2R2  | Electrolytic 50V 2.2 $\mu$ | 1         |         |
| C3       | ECCF1H390JV | Ceramic 39P                | 1         |         |
| C4       | ECKF1H221KB | Ceramic 220P               | 1         |         |
| R13      | ERD25TJ681  | Resistor 680               | 1         |         |
| VR1      | EVN84A00B53 | Variabel Resistor 5K       | 1         |         |

**Panasonic**  
**MATSUSHITA ELECTRIC**

# Service Manual

**Vol. 8**

Wireless Remote Control  
**NV-A17-E**



## SPECIFICATIONS

|             |                           |
|-------------|---------------------------|
| Power:      | DC. 3.2V ~ DC. 2.2V       |
| Weight:     | 100 g                     |
| Dimensions: | 64(W) × 22(H) × 155(D) mm |

Weight and dimensions shown are approximate.

Specifications are subject to change without notice.

**Panasonic**

**Matsushita Electric Trading Co., Ltd.**  
P.O. Box 288, Central Osaka Japan

# CONTENTS


|                                                 |       |
|-------------------------------------------------|-------|
| SPECIFICATIONS .....                            | Cover |
| BATTERY REPLACEMENT CAUTION .....               | 8- 1  |
| CONTROLS AND COMPONENTS .....                   | 8- 2  |
| INFRARED TRANSMITTER BLOCK DIAGRAM .....        | 8- 4  |
| IR WIRELESS TRANSMITTER UNIT .....              | 8- 5  |
| IR WIRELESS TRANSMITTER SCHEMATIC DIAGRAM ..... | 8- 6  |
| EXPLODED VIEWS .....                            | 8- 7  |
| 1. Transmitter Section .....                    | 8- 7  |
| 2. Packing Parts Section .....                  | 8- 7  |
| MECHANICAL REPLACEMENT PARTS LIST .....         | 8- 8  |
| ELECTRICAL REPLACEMENT PARTS LIST .....         | 8- 8  |

## BATTERY REPLACEMENT CAUTION


- The Wireless Remote Control is powered by two batteries (size IEC standard R6, UM-3 "AA"). The life of the batteries is about a year although this will depend on the number of times the unit is used. Replace or inspect the batteries once a year.
- The batteries should be replaced with fresh units even if a year has not elapsed since the previous replacement when the unit does not function even when operated near the tuner or video recorder or when the unit's wireless remote transmitter operational indicator fails to light or does not light properly even when function buttons are pushed.
- Load the new batteries with their polarities (⊕ and ⊖) aligned properly.
- Do not heat, disassemble or shortcircuit the old batteries.
- If you do not intend to use the remote control for a long period of time, remove the batteries and store them in a cool, dry place.
- Remove spent batteries immediately and dispose of them.
- Do not mix old and new batteries (Also never mix alkaline batteries with manganese batteries.)
- In the unlikely event that the dry batteries leak, wipe away all the leakage inside the battery compartment and then replace with fresh batteries.

### Load the batteries as follows:


- ① Remove the Battery Compartment lid.

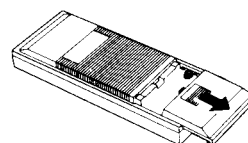

- ② Place two batteries in the Battery Compartment as indicated inside the Battery Compartment.

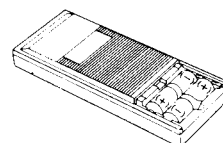

- ③ Replace the lid.

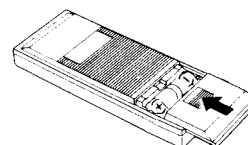

# CONTROLS AND COMPONENTS

Set the remote control selector switch to ON before a remote control operation.

## VTR Switch

When the video recorder's VTR switch is kept to ON, the power to the video recorder and tuner can be switched ON and OFF by this unit.

## Remote Control Selector Switch

Set this switch to ON when using the unit.

## Wireless Remote Transmitter Operational Indicator



## Channel Up Button

This changes over the channel every time it is pushed.

## Channel Selection Button

Push the button having a number corresponding to the desired channel to pick up stations.

- The remote control light-sensing angle is about 60°.
- The unit can be used within a range of about 7 meters from the front of the tuner.

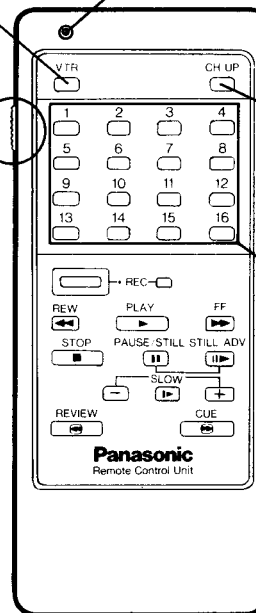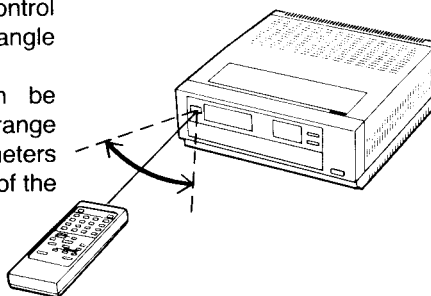

## Record Button

Recording begins when both buttons are pressed at the same time.

## Play Button

Press this button to playback recorded tapes.

## Rewind Button

Press this button to rewind tapes.

## Fast Forward Button


Press this button to move the tape forward rapidly.

## Stop Button

Press this button to stop the tape.

## Pause/Still Button

Press this button to temporarily stop the tape movement in either the recording or playback mode. During playback, a still-frame picture is produced when the pause is in use. Press again to release pause.

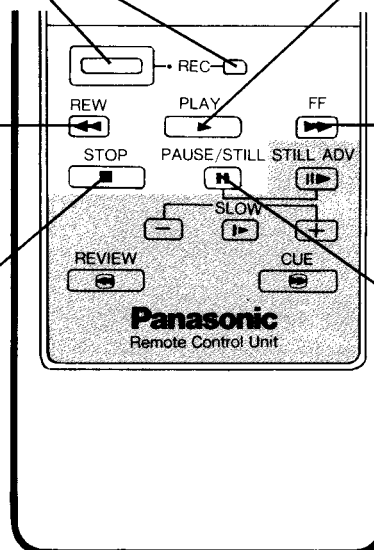



### Slow-Motion Buttons

First press the SLOW Button during playback to view a slow-motion picture. Press the "+" or "-" button to increase or decrease the speed of the SLOW-MOTION picture.


|                  |   |   |
|------------------|---|---|
| -                | ▶ | + |
| 1/25 ~ 1/5 ~ 1/3 |   |   |

### Review Button

During the play mode pressing this button will allow you to view the tape in reverse at about 5 times the recorded tape speed.

### Frame Advance Button


During viewing of a still-frame picture, press this button to advance the picture one frame at a time or hold it down for a slow-motion picture.

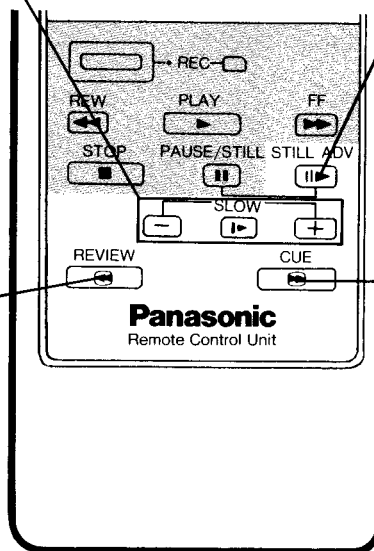



### Cue Button

During the play mode pressing this button will allow you to view the tape in the forward direction at about 5 times the recorded tape speed.

INFRARED TRANSMITTER BLOCK DIAGRAM

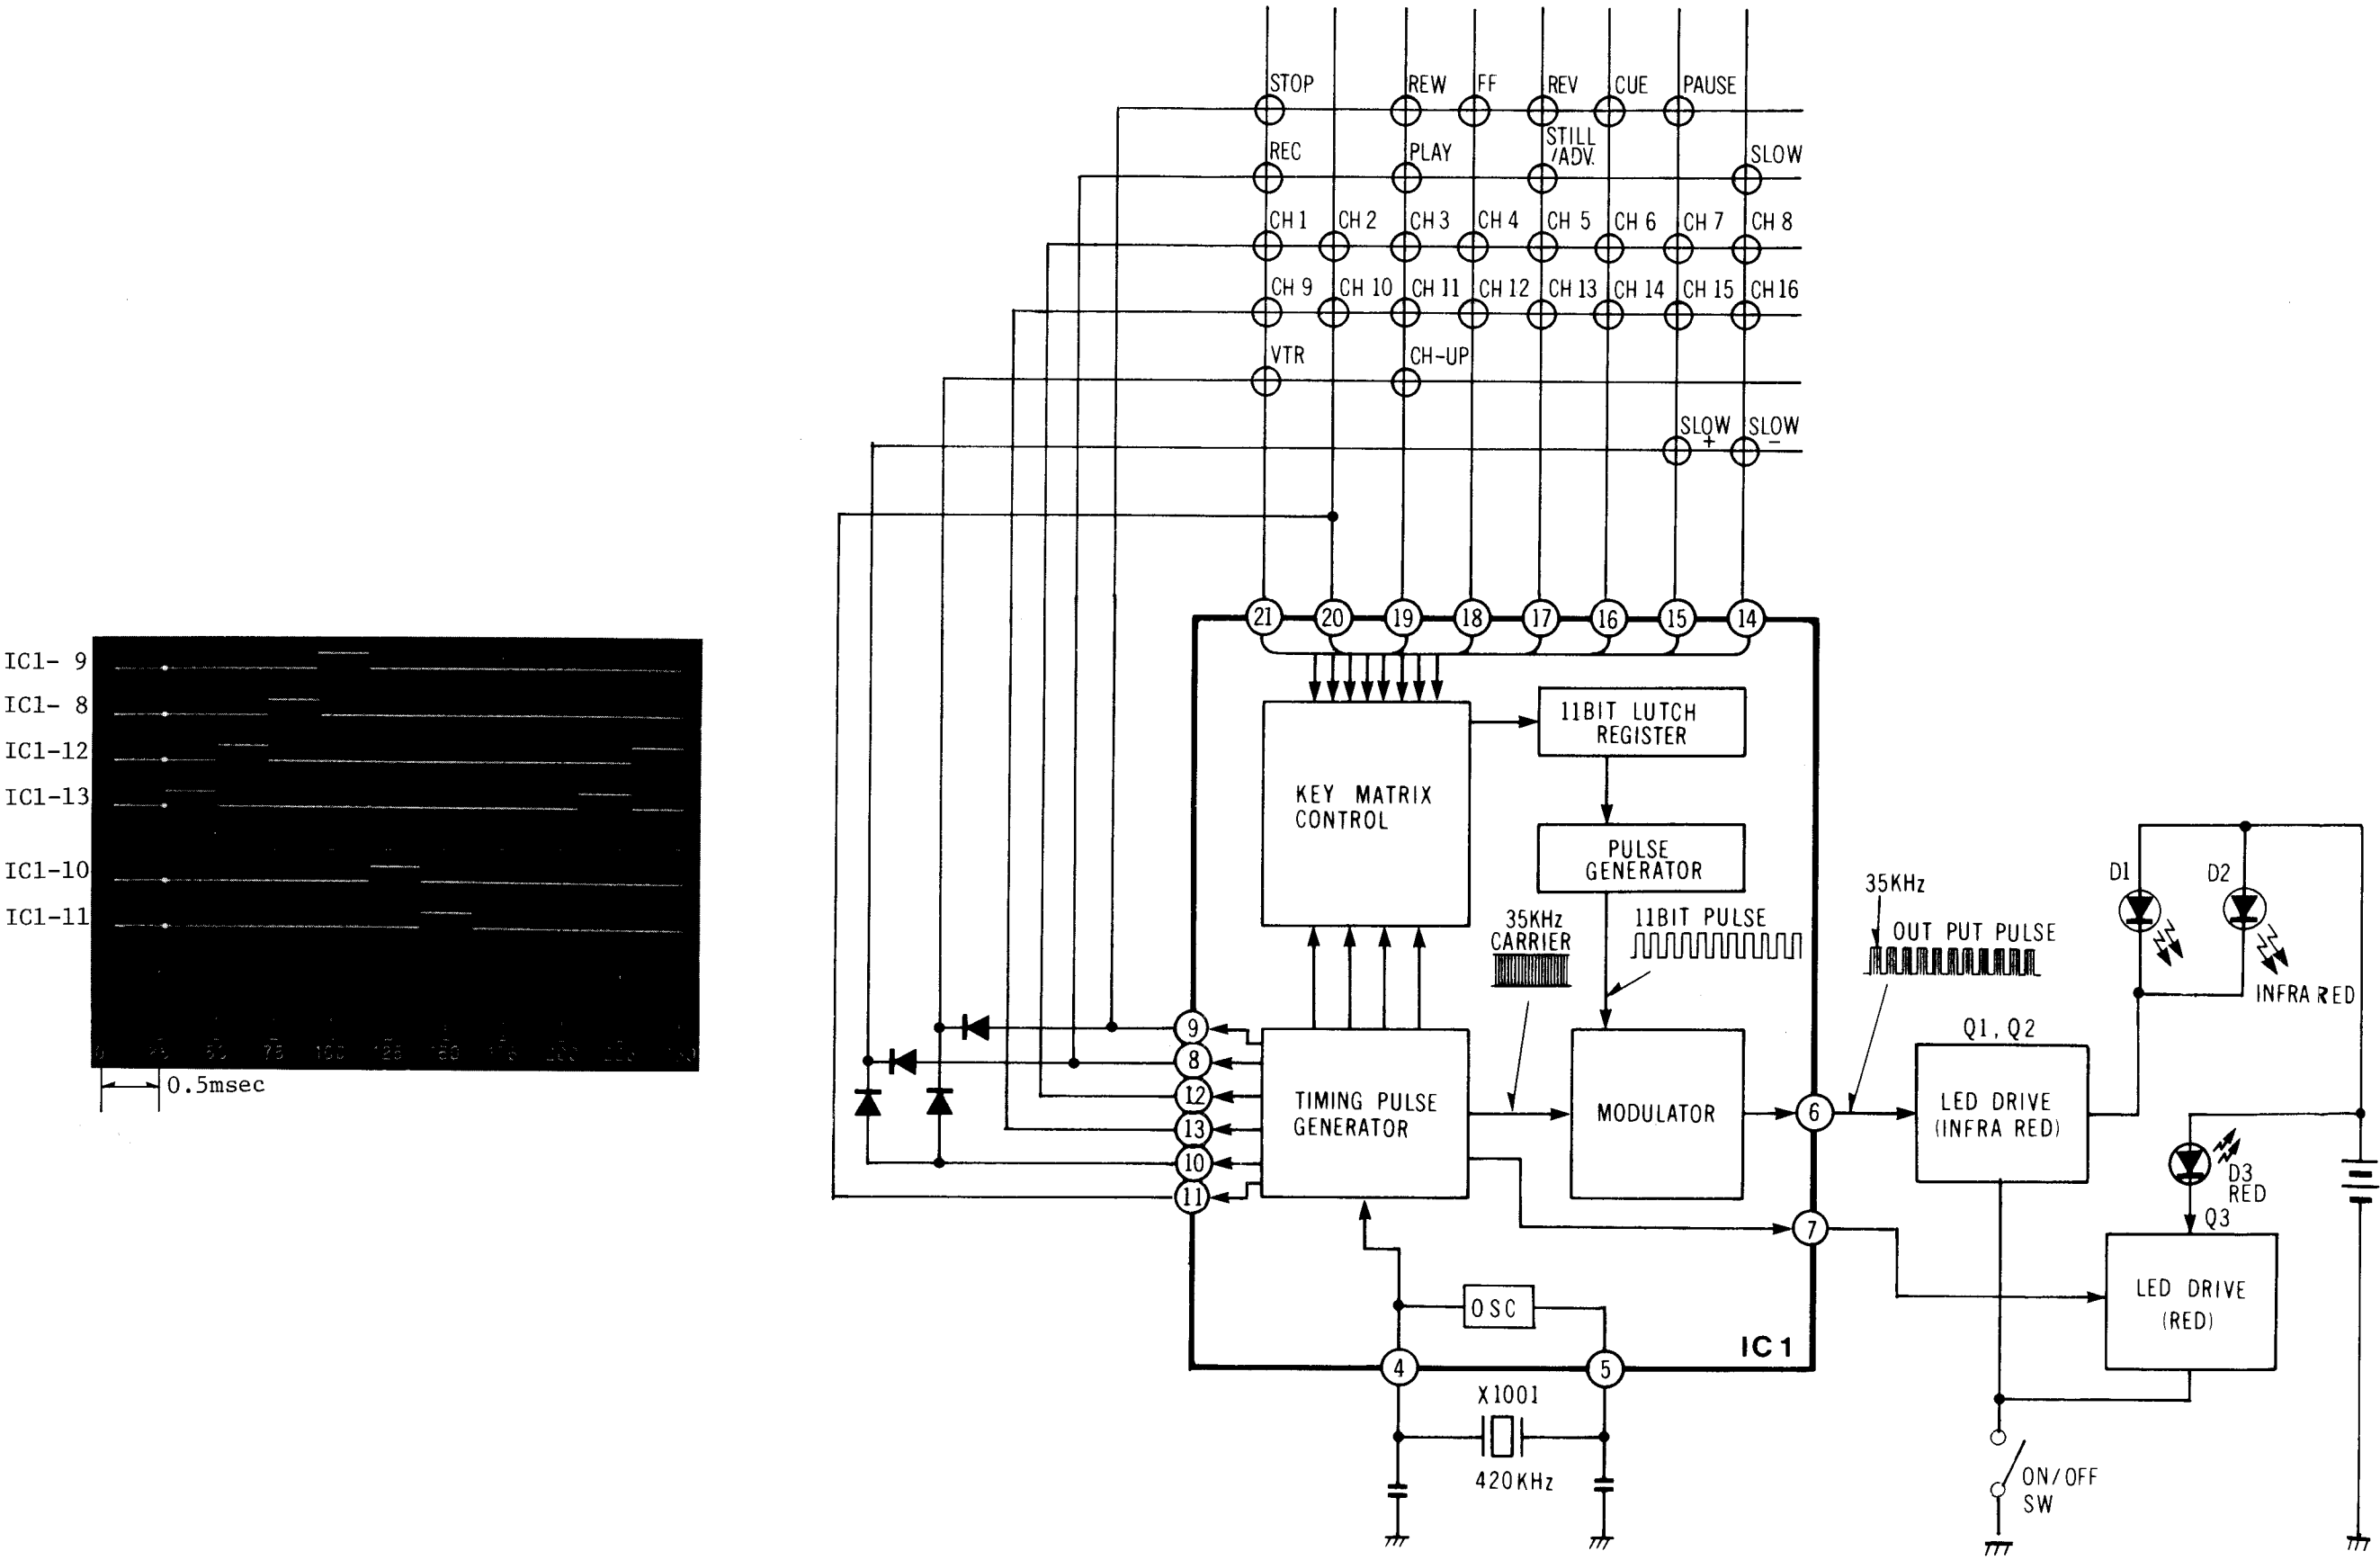


# IR WIRELESS TRANSMITTER UNIT

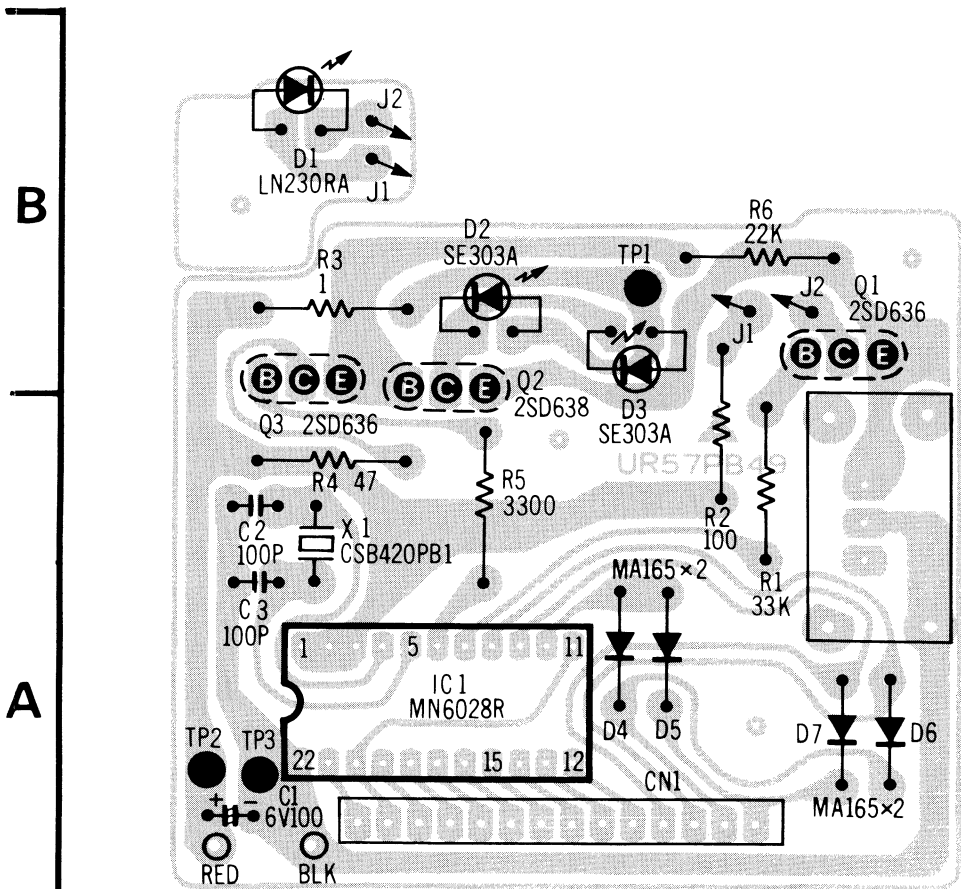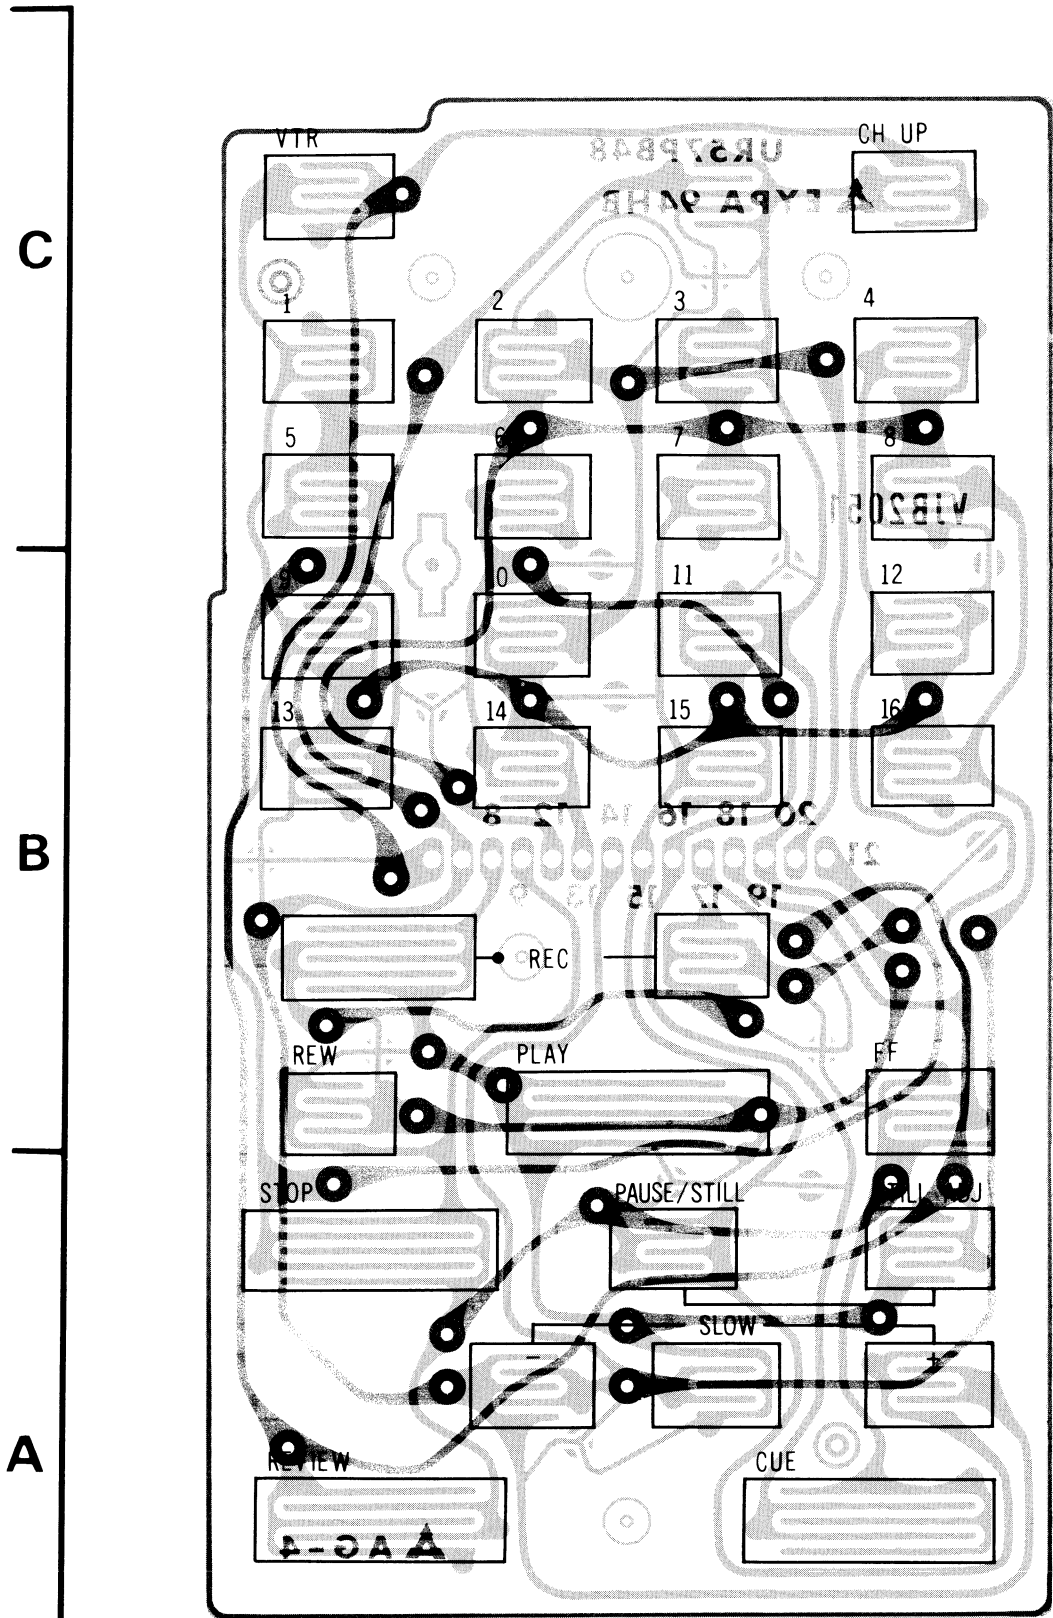


| FUNCTION NO. | FUNCTION              |
|--------------|-----------------------|
| 0            | STOP                  |
| 2            | REW                   |
| 3            | F.F                   |
| 4            | REV                   |
| 5            | CUE                   |
| 6            | PAUSE/STILL           |
| 8            | REC                   |
| 10           | PLAY                  |
| 12           |                       |
| 15           | SLOW ( $\times 1/2$ ) |
| 16           | CH1                   |
| 17           | CH2                   |
| 18           | CH3                   |
| 19           | CH4                   |
| 20           | CH5                   |
| 21           | CH6                   |
| 22           | CH7                   |
| 23           | CH8                   |
| 24           | CH9                   |
| 25           | CH10                  |
| 26           | CH11                  |
| 27           | CH12                  |
| 28           | CH13                  |
| 29           | CH14                  |
| 30           | CH15                  |
| 31           | CH16                  |
| 32           | VTR                   |
| 34           | CH UP                 |
| 46           | SLOW +                |
| 47           | SLOW -                |


# IR WIRELESS TRANSMITTER SCHEMATIC DIAGRAM

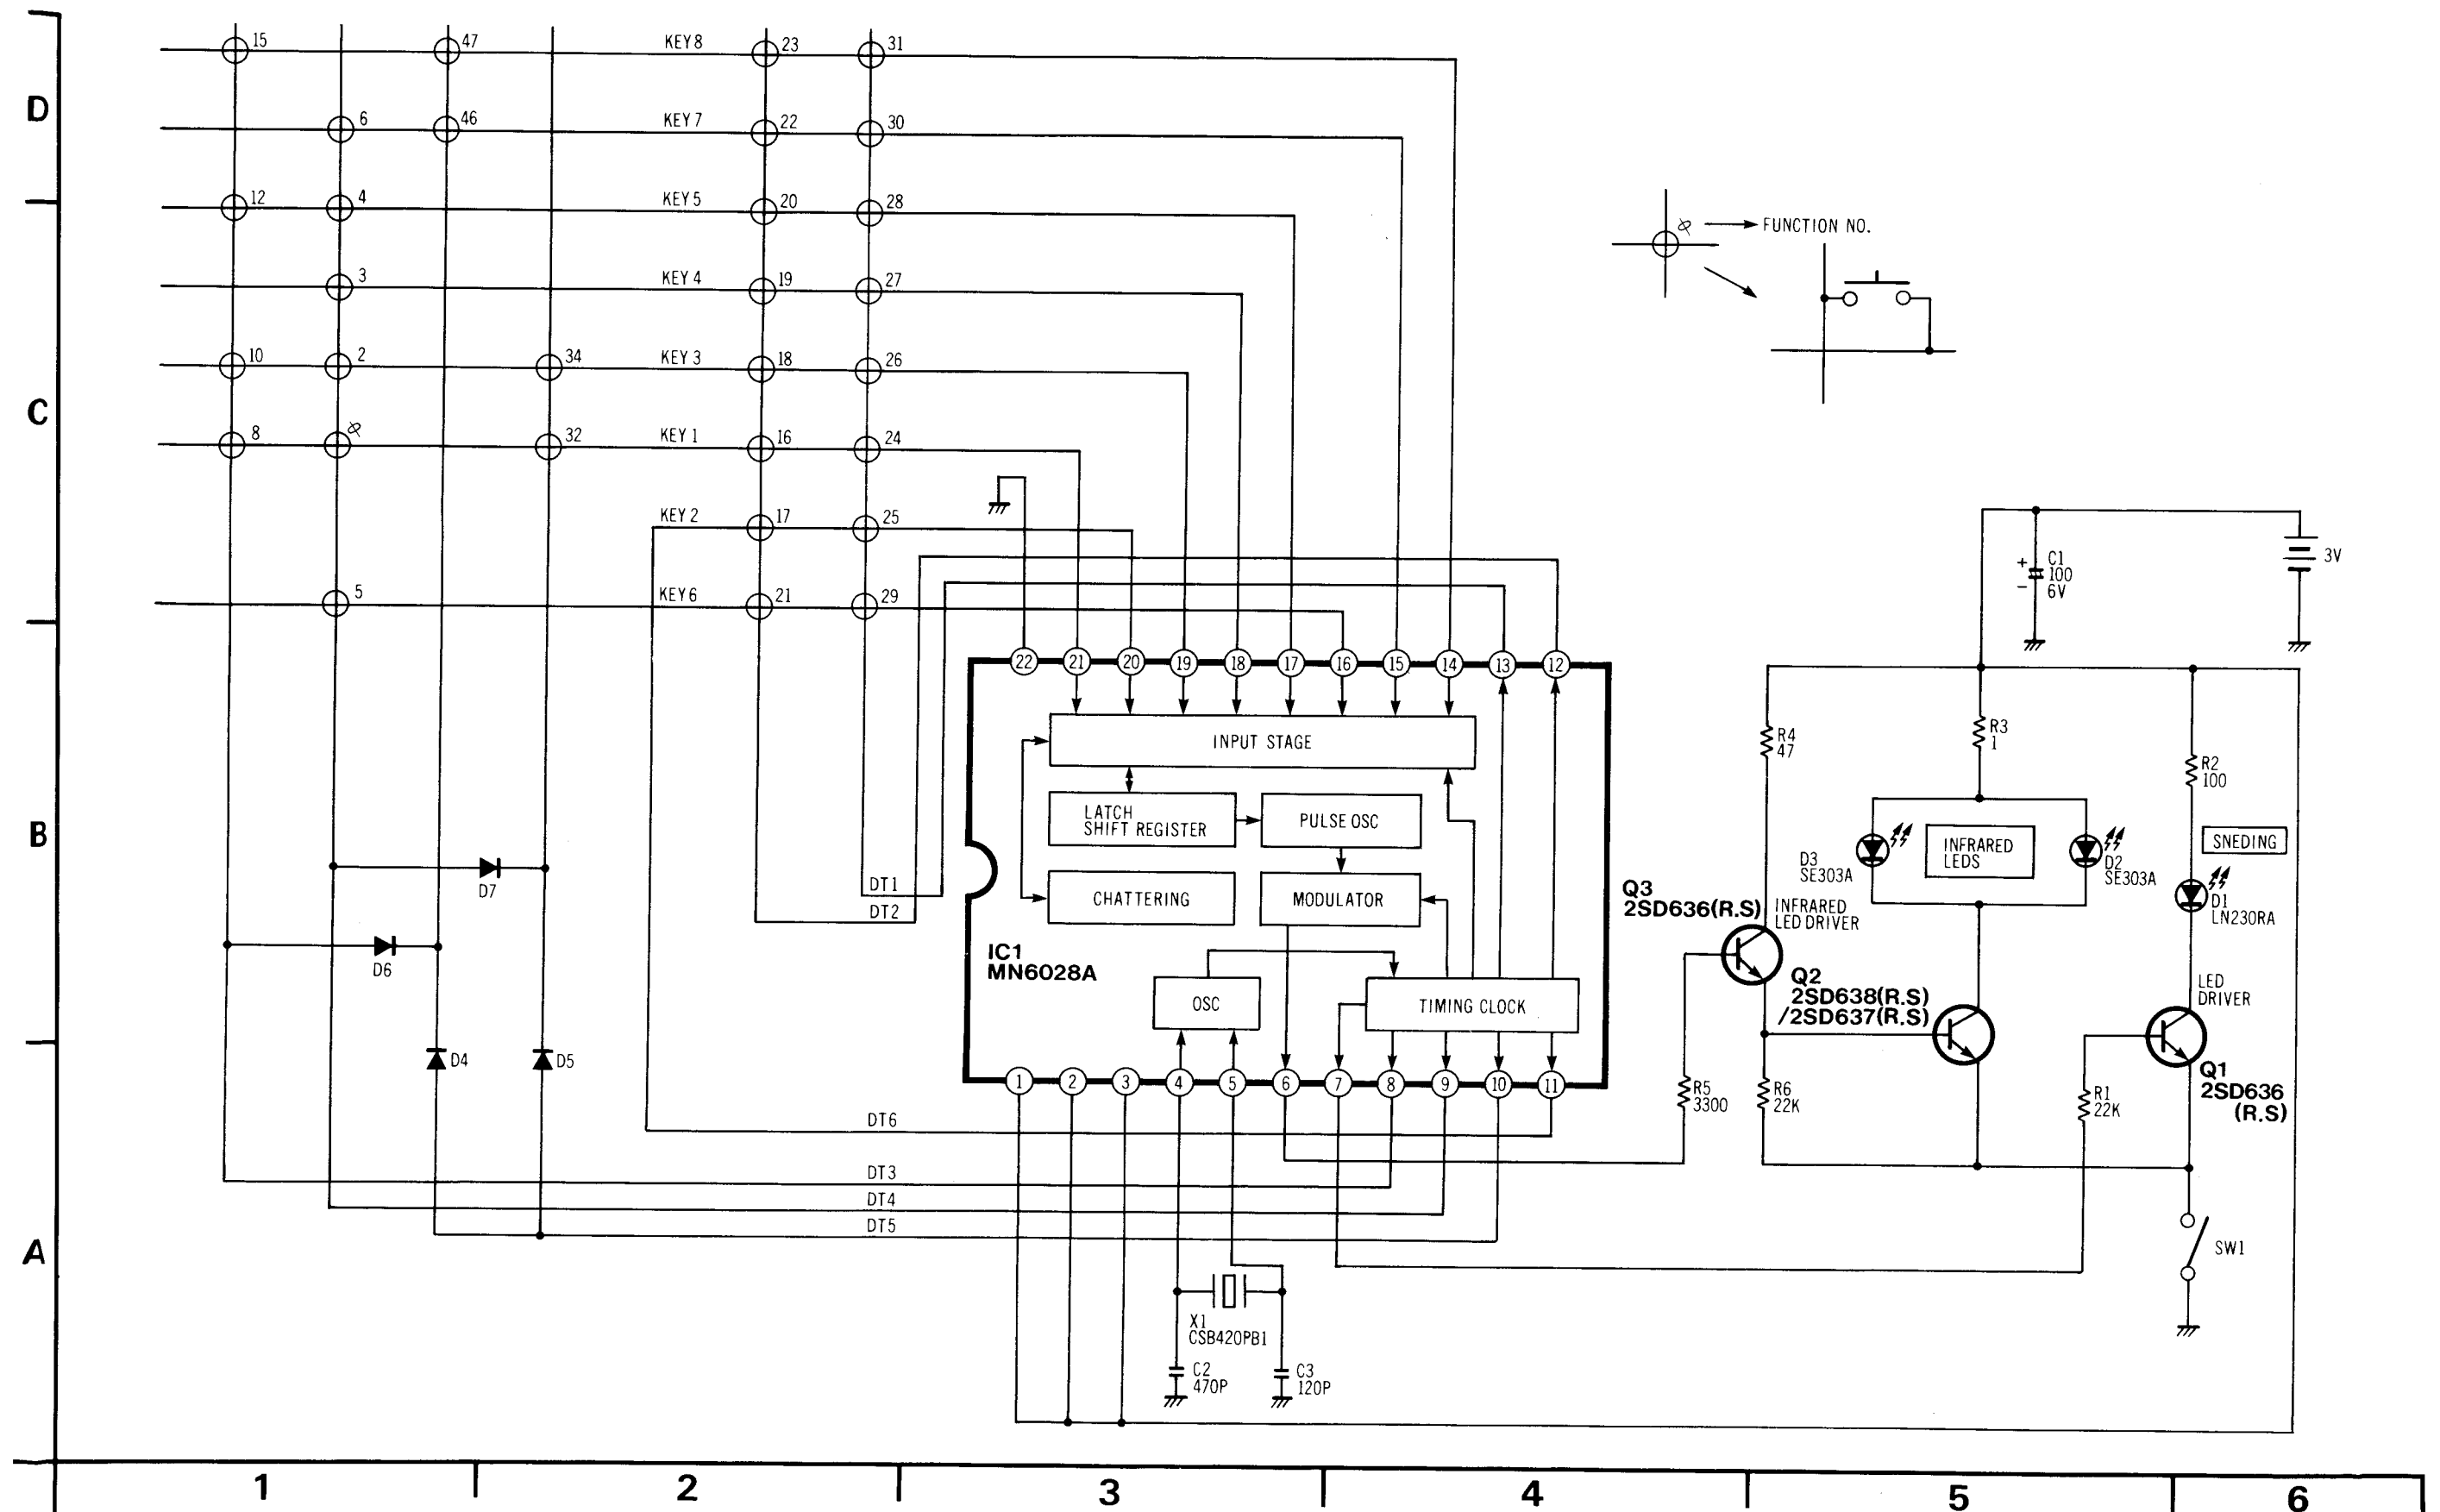

**EXPLODED VIEWS ① Transmitter Section**

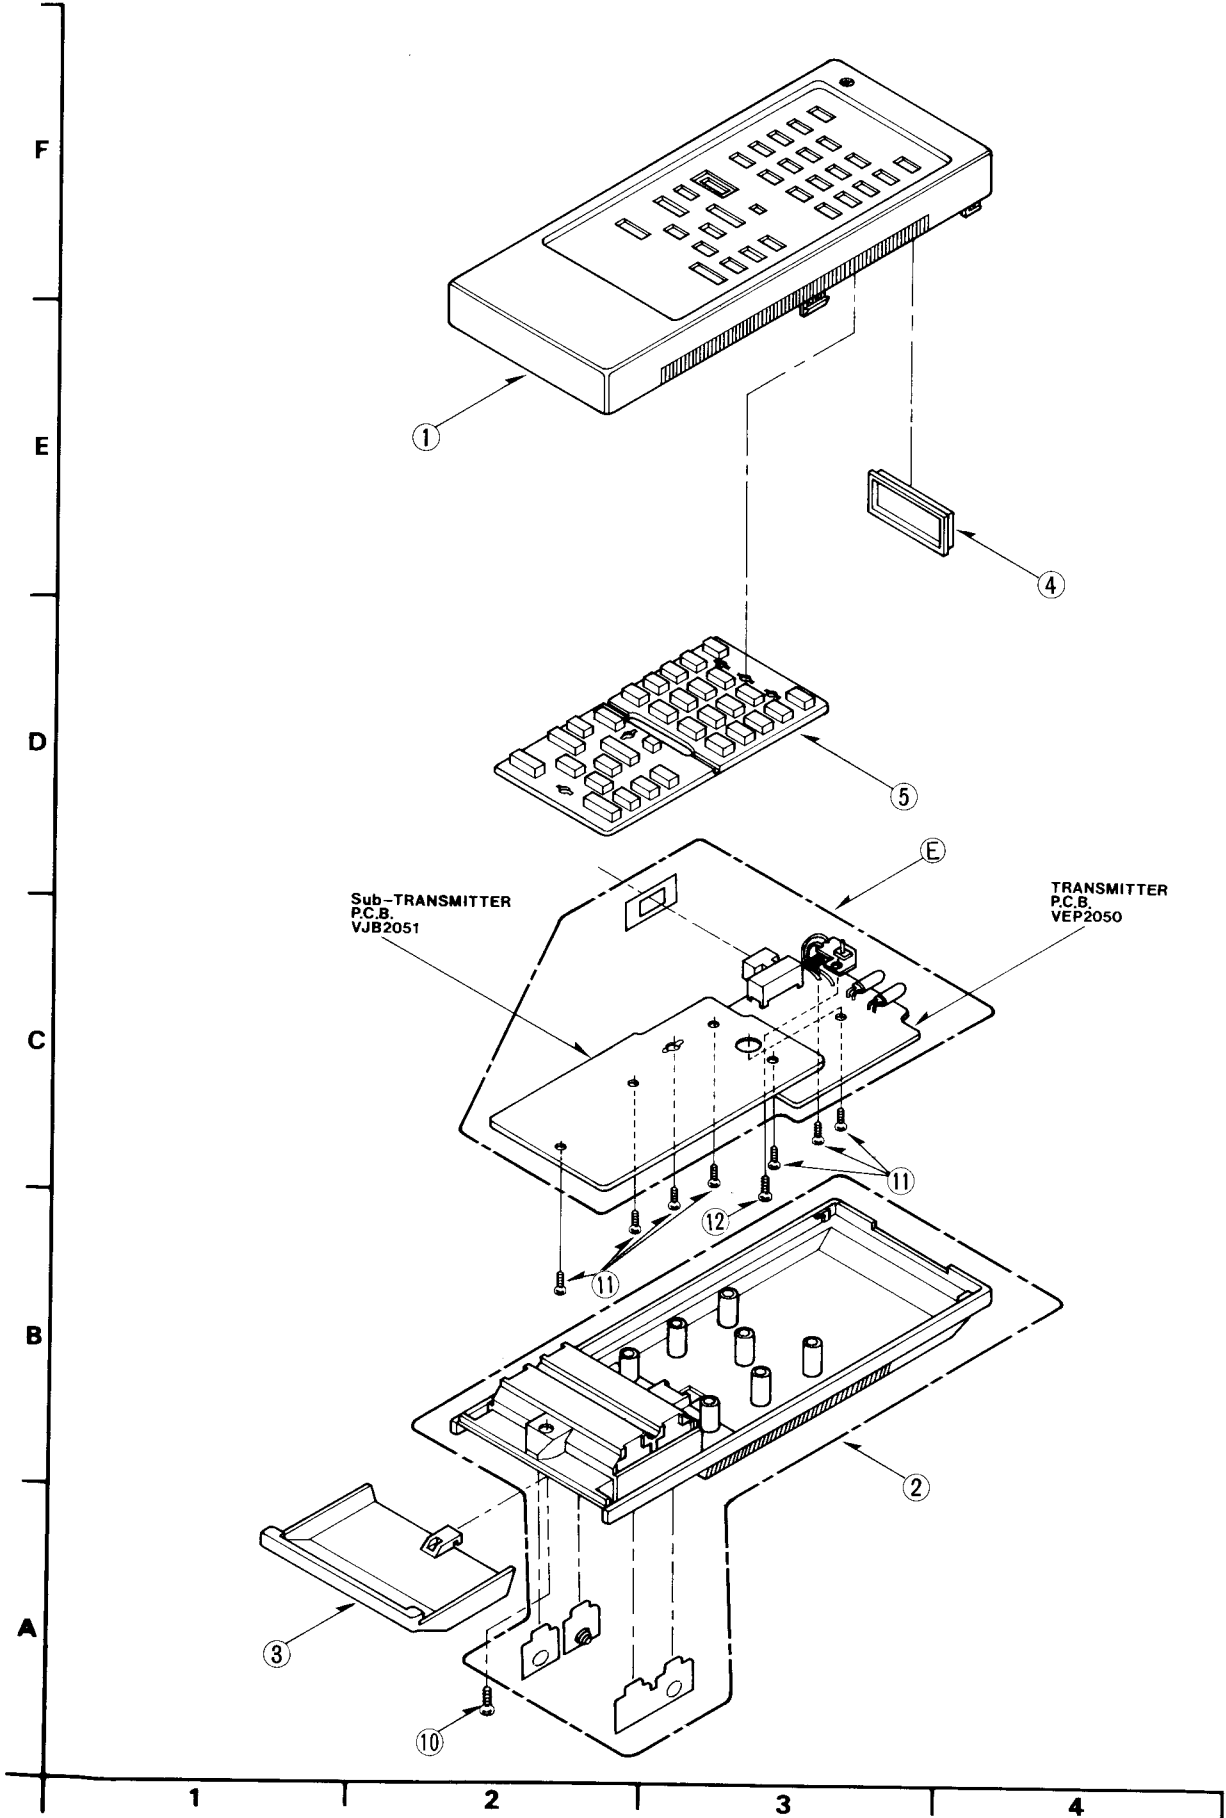

**② Packing Parts Section**

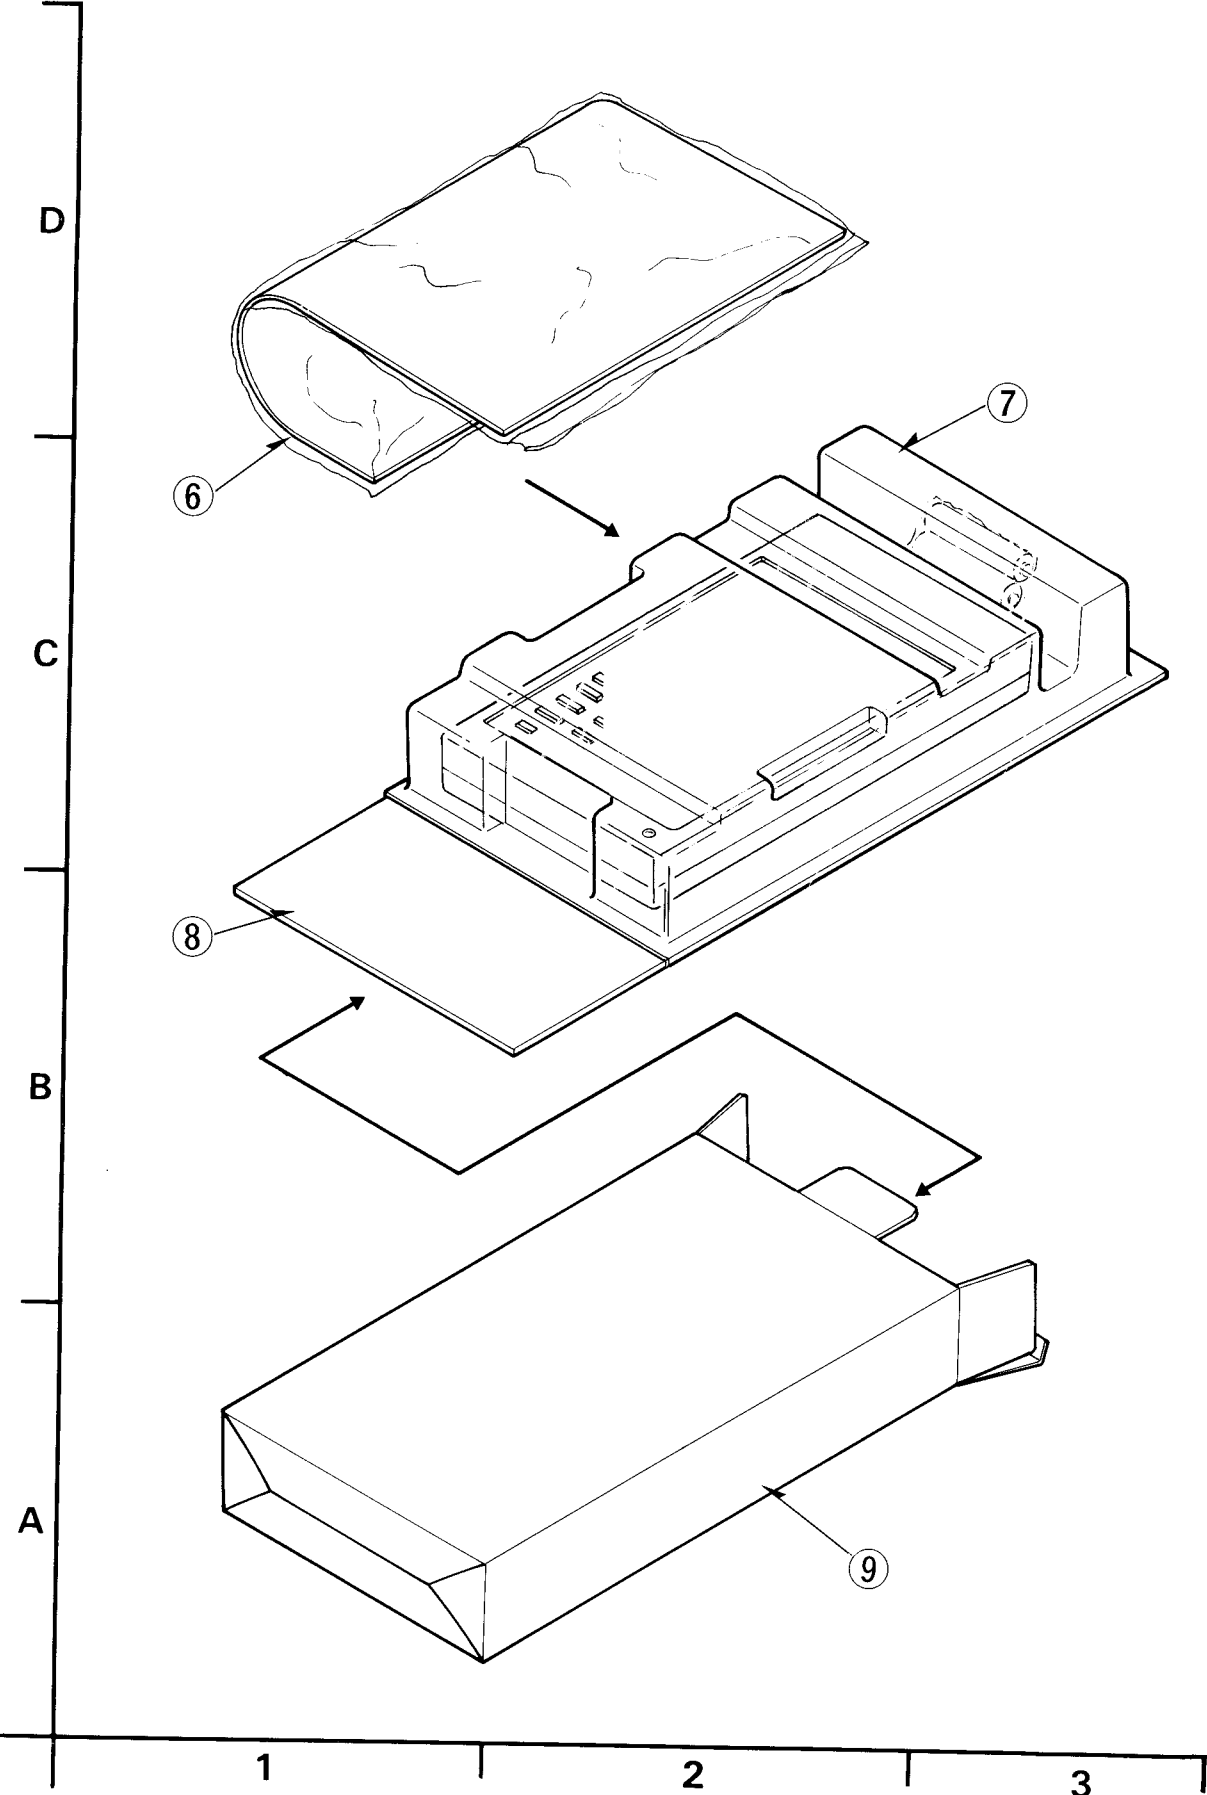

**Model No. NV-A17-E**

1. \* Be sure to make your orders of replacement parts according to this list.

[illegible]

**Model No. NV-A17-E**

1. \* Be sure to make your orders of replacement parts according to this list.

Components identified by  $\Delta$  have special characteristics important for safety. When replacing any of these components, use only the original ones.

3. Unless otherwise specified,  
All resistors are in OHMS ( $\Omega$ ), 1/8W + 5% carbon, K=1,000, M=1,000, K $\Omega$

All resistors are in OHMS ( $\Omega$ ), 1/8 W  $\pm 5\%$  carbon. K=1,000  
All capacitors are in MICROFARADS ( $\mu$ F),  $\pm 10\%$  P= $\mu$ F.

[illegible]

**Panasonic**  
MATSUSHITA ELECTRIC




# Technical Information

**VHS** Video Cassette Recorder

## Subject: Precautions During Services

To achieve higher integration in the installation of parts, this VTR uses the dual-face printed circuit boards: one based on the copper-through system (used for the System Control P.C. Board) and the other on the silver-through system (used for the Main P.C. Board). Various precautions needed to correctly perform servicing the silver-through P.C. Board are described below.

### (1) Construction of the silver-through dual-face P.C. Board.

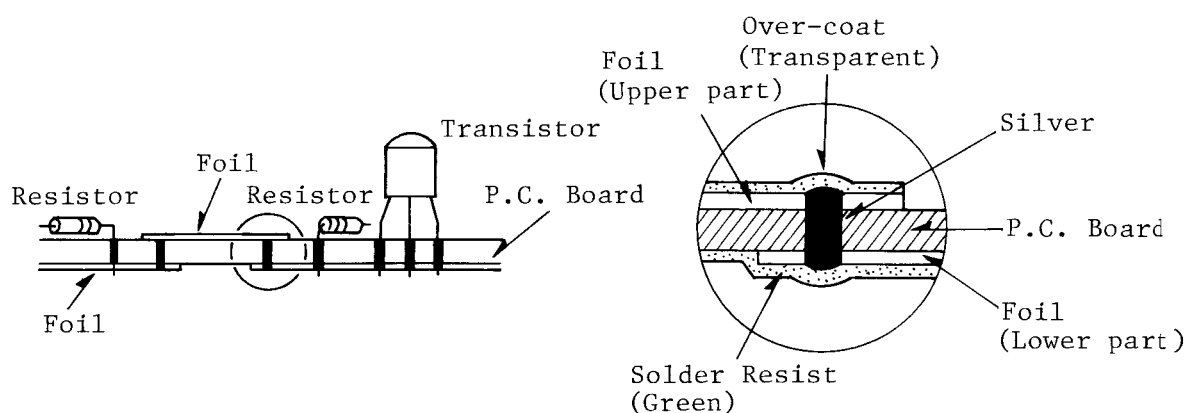


### (2) Precautions in handling the silver-through part.

- \* Do not bring the solder iron into direct contact with the silver-through part or insert the lead-wire of any part in it, especially when replacing any of the parts.
- \* During inspection, be extremely careful not to cause an excessive current to flow through the silver-through part by short-circuiting any of the parts or the printed foil. The silver-through part allows a maximum of 300mA of the current to flow through.
- \* Handle the silver-through part with extreme care not to cause any damage and/or dropout of the over-coat (transparent) and solder-resist (green) materials coated on both surfaces.
- \* Be extremely careful not to cause any drop of water or any bit of grease to adhere on the silver-through part.







(3) Repairing the silver-through part.



- \* Extrude silver from the silver-through part using any proper means such as the lead-wires of any part.
- \* Strip the coated materials such as the over-coat (transparent) and solder-resist (green) off from the silver-through part.
- \* Finally, carefully insert the lead-wires of the related parts and perform soldering as evenly as possible.

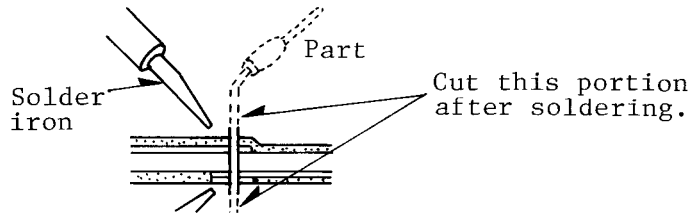


Method of replacing the FLAT Package-type Micro-computer.

The flat package-type microcomputer has the different form from any of the conventional micro-computers because of smaller size and lighter weight newly provided. The replacing method is described below, which will help you to effectively perform services when replacing it.
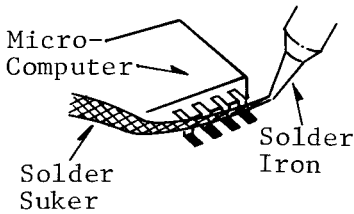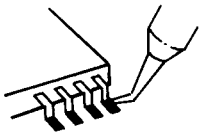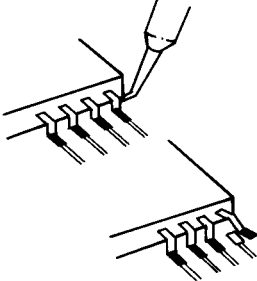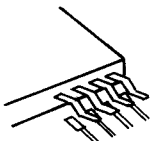
| Procedures in replacing the flat package-type micro-computer                                                                                                                                     |                                                                                     | Precautions                                                                                                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Removal                                                                                                                                                                                          |                                                                                     |                                                                                                                                                                                                             |
| Before removing the micro-computer from the P.C. board, absorb the solders deposited on the pins using a clean solder sucker shown in the drawing so that the residual solder will be minimized. |  | Use the solder iron (model VFK0248) specified for use with chip parts. Make sure to connect a 240V-AC transformer (model VFK0249) to the solder iron which is designed for use with 110V of the AC voltage. |
| Melt the solder on each pin (an electrode) with the top-end of the solder iron.                                                                                                                  |  | To prevent stripping of the printed foil, do not place the solder iron on any pin for a long while.                                                                                                         |
| While the solder is still melted, pull up each pin using the top-end of the solder iron and remove the pin from the foil.                                                                        |  | Pull up the pins as fast as possible while the solder is being melted. If the solder is solid, the printed foil may either drop off or be cut.                                                              |
| Repeat these operations in sequentially removing each pin from the foil.                                                                                                                         |  | Since the counter micro-computer (IC6001) has a back-up part to properly keep the counter-value, pull off this part (P6021) before starting to replace the micro-computer.                                  |
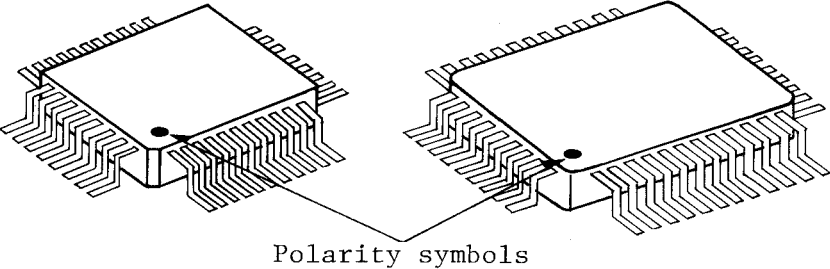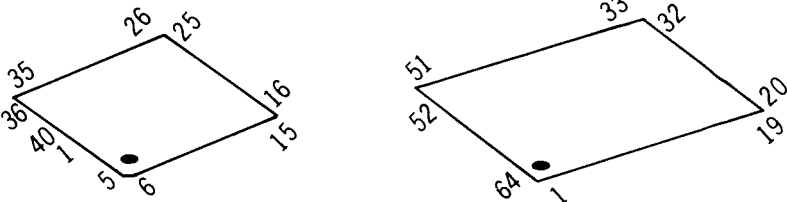
| Installation of a new micro-computer                                                                                                          |                                                                                                                                                                                                                                            |                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| First, evenly apply the solder element to the foil surface where the pins must be soldered.                                                   | When installing either MN1455AVA or MN1455AVB.                                                                                                                                                                                             | When installing $\mu$ PD7502G090. |
| Properly determine the positions of the foil and pins by correctly aligning the polarity symbols, then secure the micro-computer in position. |                                                                                                                                                          |                                   |
| Solder all pins to properly connect to the foil.                                                                                              |  <p>Correctly align the positions of these polarity symbols with the conor-cut portion as well as the polarity symbol on the printed circuit boards.</p> |                                   |

# SPECIFICATIONS

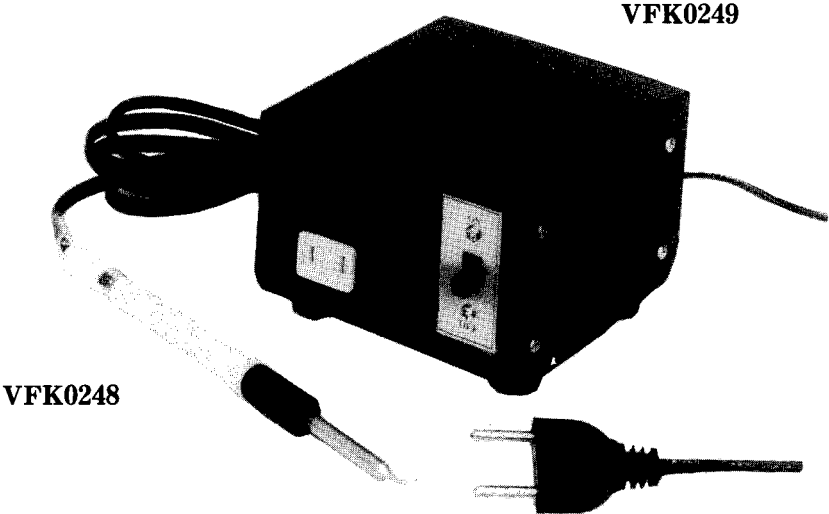

## Solder Iron

Rate: 100V—15W

Insulation

Resistance: 100M $\Omega$

Max. Temp.: 400°C

## Transformer

INPUT: 240V AC

OUTPUT: 100V AC

0.3A

# Memo